REPLACEMENT PARTS CATALOGUE

FOR

1981

BONNEVILLE 750 T140ES
BONNEVILLE 750 T140E
TIGER 750 TR7V
TIGER 750 TR7VS

INTRODUCTION

ENGINE AND FRAME NUMBERS

The engine number is located on the left side of the engine, immediately below the cylinder barrel to crankcase flange.

The frame number is located on the left side of the frame heading, beneath the fork top lug and forward of the gasoline tank.

Both the engine and frame number should be quoted in full in any correspondence relating to the machine.

British Only

MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. GARDEN CITY, MI 48135 USA WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

SPECIALIZING IN VINTAGE MOTORCYLCE PARTS



THE BIGGEST!

ENGINE REBUILDING PARTS
GASKET - SEALS - BEARINGS
BUSHINGS - PISTONS - RINGS
CLUTCHES - TUNE UP PARTS
SPEED EQUIPMENT

THE BEST!

STOCK AND CUSTOM PARTS
SEATS - HANDLEBARS - CHAINS
TIRES - TUBES - EXHAUST PIPES
MUFFLERS - GAS TANKS - FENDERS
RESTORATION PARTS

THE ONLY!

Central Wheel Components















JP PISTONS





VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

PARTS SHIPPED WORDLWIDE !!!





Discover 1



VISIT OUR EBAY STORE
http://stores.ebay.com/British-Only-Motorcycles-And-Parts

British Only

MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. GARDEN CITY, MI 48135 USA WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

SPECIALIZING IN VINTAGE MOTORCYLCE PARTS



THE BIGGEST!

ENGINE REBUILDING PARTS
GASKET - SEALS - BEARINGS
BUSHINGS - PISTONS - RINGS
CLUTCHES - TUNE UP PARTS
SPEED EQUIPMENT

THE BEST!

STOCK AND CUSTOM PARTS
SEATS - HANDLEBARS - CHAINS
TIRES - TUBES - EXHAUST PIPES
MUFFLERS - GAS TANKS - FENDERS
RESTORATION PARTS

THE ONLY!

Central Wheel Components















JP PISTONS





VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

PARTS SHIPPED WORDLWIDE !!!





Discover 1



VISIT OUR EBAY STORE
http://stores.ebay.com/British-Only-Motorcycles-And-Parts

INDEX

	Page	PETROL TANK	Page
AIR CLEANER	71	PETROL TANK	69
ALTERNATOR	13,41	PISTONS, OVERSIZE & RING SETS	11
ALIEMMATON	13,41	PISTONS	12
DATTERVOADDIED	07	FISTONS	13
BATTERY CARRIER BRAKE SWITCH	87	PROP STAND	45
BRAKE SWITCH	85	PUSH RODS ,	21,23
BRAKE SWITCH BREATHER PIPES	51		
		REAR BRAKE	63.65
CAMSHAFT INLET & EXHALIST	13	REAR WHEEL	61
CAPPLIPETOR	25 27	RECTIFIER	85
CENTRECTAND	25,27	DOCKERS	24 00
CENTRE STAND	45	PISTONS PROP STAND PUSH RODS REAR BRAKE REAR WHEEL RECTIFIER ROCKERS SERVICE TOOLS	21,23
CHAINS	41	. 22240000000000000000000000000000000000	
CHAINCASE	41	SERVICE TOOLS	10
CLUTCH	39	SIDE PANELS	71
CLUTCH LEVER ASSEMBLY	37	SILENCERS	43
COIL	85	SOI ENOID	89
CONDENSORS	95	SDARK DITIC	05
CONDENSORS	10	ODEED CHAFTED	00
CONNECTING RODS	13	SPEEDOMETER	83
CONTROL CABLES	79	SPEEDOMETER GEARBOX	61
CONTROL LEVERS	77	STARTER MOTOR	31
CRANKCASE	15	SUSPENSION UNITS	47
CRANKSHAFT	13	SWINGING FORK	47
CYLINDERS	21 23	SWITCHES	77 97
CYLINDER HEAD	21,23	SVVIICIES	11,01
CAMSHAFT, INLET & EXHAUST CARBURETOR CENTRE STAND CHAINS CHAINCASE CLUTCH CLUTCH LEVER ASSEMBLY COIL CONDENSORS CONNECTING RODS CONTROL CABLES CONTROL LEVERS CRANKCASE CRANKSHAFT CYLINDERS CYLINDER HEAD	21,23	SERVICE TOOLS SIDE PANELS SILENCERS SOLENOID SPARK PLUG SPEEDOMETER SPEEDOMETER GEARBOX STARTER MOTOR SUSPENSION UNITS SWINGING FORK SWITCHES TACHOMETER TACHOMETER TACHOMETER GEARBOX TAIL LAMP TAPPETS TIMING COVER TIMING GEARS TOOLKIT TWIN SEAT	
ELECTRICAL PARTS EXHAUST PIPES FLASHERS FOOTRESTS FRAME FRONT BRAKE FRONT FORKS FRONT WHEEL GASKET SETS GEARBOX		TACHOMETER	83
ELECTRICAL PARTS	85,87,89	TACHOMETER GEARBOX	83
EXHAUST PIPES	43	TAIL LAMP	75
		TAPPETS	19
FLASHERS	87	TIMING COVER	29,31
FOOTRESTS	19	TIMING GEARS	12
EDAME	45	TOOLKIT	13
FDONT DDAYE	45	TOOLKII	81
FRUNTBRAKE	59	IWIN SEAT	67
FRONT FORKS	53,55		
FRONT WHEEL	57	VALVES	21,23
		VALVE GUIDES	21,23
GASKET SETS	11	VALVES VALVE GUIDES VALVE GUIDE SETS	11
GEARBOX	33 35 37	WILVE GOIDE GETO	
dEA1100X	33,33,37	WIRING HARNESS	07
HANDLEDADE	77	WINING HANNESS	87
HANDLEBARS	77		
HEADLAMP	87	ZENER DIODE	85
HORN	85		
		T140 EXECUTIVE PARTS	90
KICKSTARTER	37		
MANIFOLD MOTOR PLATES MOTOR TORQUE STAY MUDGUARDS	19		
MOTOR PLATES	49		
MOTOR TOPOLIC CTAY	49		
MOTOR TORQUE STAY	49		
MUDGUARDS	73		
en ciere			
OIL PIPES	51		
OIL PUMP	17		
OIL PRESSURE RELEASE VALVE	17		



TIGER 750 (TR7) TECHNICAL DATA

Bore & Stroke Capacity Compression Ratio Spark Plugs Carburetter

Gearbox Sprocket

Main Jet Needle Jet Needle Throttle Valve

Capacities

Chains

Tyre Size

Front Rear Fuel Tank Oil Tank Gearbox

Front Forks Front Rear

76x82mm/2 · 992x3 ins. 747 cc/ 45 cu.ins. 7 · 9:1 Champion N5

Amal Concentric

270 106 STD

STD
No 3
20 Teeth
Triplex 3/8 in. pitch x 84 links
5/8 in. x 3/8 in. x 106 links
4 Galls (IMP)
4 Pints
7/8 Pint (500 cc)
1/3 Pint (190 cc)
4 10 x 19
4 10 x 18



U.S.C. TIGER 750 (TR7) TECHNICAL DATA

Bore & Stroke Capacity Compression Ratio Spark Plugs Carburetter

Amal Concentric Main Jet Needle Jet

Needle Throttle Valve

Gearbox Sproket Chains

Capacities

Front Rear

Gearbox

Tyre Size

Fuel Tank Oil Tank Front Forks

Front Rear

76x82 mm/2 · 992x3 · 228 ins. 747 cc/45 cu.ins. 7 . 9:1

Champion N5

270 106 STD No 3 20 Teeth

Triplex 3/8 in. pitch x 84 links 5/8 in. x 3/8 in. x 106 links 2 · 8 Galls (IMP)

4 Pints 7/8 Pint (500 cc) 1/3 Pint (190 cc) 4 · 10 x 19 4 · 10 x 18

5



BONNEVILLE (T140E) TECHNICAL DATA

Bore & Stroke Capacity Compression Ratio Spark Plugs Carburetter

Main Jet Needle Jet Needle Throttle Valve

Chains

Gearbox Sprocket

Capacities

Tyre Size

Fuel Tank Oil Tank Gearbox Front Forks

Front

Rear

Front Rear

76x82 mm/2 · 992x3 · 228 ins. 747 cc/45 cu.ins.

7 . 9:1

Champion N5 Amal Concentric MK II

200 105 2C3 No. 3 20 Teeth

20 Teeth
Triplex 3/8 in. pitch x 84 links
5/8 in. x 3/8 in. x 106 links
4 Galls (IMP)
4 Pints
7/8 Pint (500 cc)
1/3 Pint (190 cc)
4 · 10 x 19
4 · 10 x 18



USA BONNEVILLE (T140E) TECHNICAL DATA

Bore & Stroke Capacity Compression Ratio Spark Plugs

Carburetter

Needle

Oil Tank

Gearbox Front Forks

Gearbox Sprocket Chains

Capacities

Tyre Size

76x82 mm/2 · 992x3 · 228 ins. 747 cc/45 cu.ins.

7 . 9:1

Champion N5 Amal Concentric Mk II

Main Jet 200 105 2C3 Needle Jet No. 3 20 Teeth Throttle Valve

Triplex 3/8 in. pitch x 84 links Front 5/8 in. x 3/8 in. x 106 links 2 · 8 Galls (IMP) Rear **Fuel Tank**

4 Pints

7/8 Pint (500 cc) 1/3 Pint (190 cc) 4 · 10 x 19

Front 4 · 10 x 18 Rear

HOW TO USE THIS PARTS CATALOGUE

First Consult the index on Page 3 for the parts or group of parts which you wish to locate. When you have located the parts make sure from the end columns that the part you have located does apply to your machine.

List the quantities required as single units; do not ask for "2 pairs" or "3 dozen".

In case of painted items always state the colour required. Painted parts are available only in the colours or alternatives specified for that model of that particular year.

PLEASE NOTE

THROUGHOUT THIS LIST, ASSEMBLIES ARE PRINTED IN CAPITALS AND THE COMPONENTS INCLUDED IN THAT ASSEMBLY ARE INDENTED IN THE DESCRIPTION COLUMN, REVERTING TO THE ORIGINAL ALIGNMENT WHEN THE ASSEMBLY IS COMPLETE. TO ORDER THE COMPLETE ASSEMBLY IT IS NECESSARY ONLYTOQUOTE THE ASSEMBLY NUMBER. ANY COMPONENT PARTS LISTED MAY ALSO BE OBTAINED SEPARATELY IF REQUIRED. WHERE COMPONENTS ARE COMMON TO ALL MODELS ONLY ONE COLUMN APPEARS UNDER QUANTITY.

SPECIAL WORKSHOP TOOLS

A COMPLETE LIST OF WORKSHOPTOOLS CAN BE MADE AVAILABLE BY CONTACTING YOUR DEALER. IN MOST CASES THESE TOOLS ARE VERY COSTLY AS THEY ARE MADE ENTIRELY FOR WORKSHOP USE, AND THEREFORE, IT IS NOT RECOMMENDED THAT THE PRIVATE OWNER PURCHASES THE TOOLS IN ORDER TO AID SERVICING THE MACHINE ONCE OR TWICE ONLY. IN THESE CIRCUMSTANCES IT IS FAR MORE ECONOMICAL TO GET IN TOUCH WITH A RECOGNISED DEALER.

UNIFIED THREAD FORM

NEW PARTS HAVING THREADED FIXINGS INTRODUCED IN THIS CATALOGUE HAVE THE UNIFIED FORM OF SCREW THREADS. THIS CHANGEOVER WILL BE CONTINUED AS AND WHEN NEW PARTS ARE INTRODUCED. EVEN WHERE PARTS ARE SIMILAR IN APPEARANCE NEW PART NUMBERS WILL BE ALLOCATED TO IDENTIFY THE UNIFIED THREADS. ALL NUTS, BOLTS AND STUDS HAVING THIS THREAD ARE IDENTIFIED BY MARKINGS. BOLTS HAVE A CIRCULAR RECESS IN THEIR HEADS, STUDS A CIRCULAR GROOVE ON THE END, AND NUTS HAVE INTERLOCKING CIRCLES ON THE SIDE.

PARTS SPECIAL TO PARTICULAR MARKETS ARE IDENTIFIED IN 'REMARKS' COLUMN, OTHERWISE PARTS ARE COMMON TO ALL MARKETS.


WHERE MAKERS PART NUMBERS ONLY ARE SHOWN FOR REFERENCE, PARTS MUST BE OBTAINED DIRECT FROM THE MAKERS OR THEIR DISTRIBUTORS.

ESSENTIAL SERVICE TOOLS

Part No.	Description
61-6019	Crankshaft pinion extractor
61-7013	Camshaft oil seal spreader
61-7011	Gearbox assy tool - quadrant positioner
61-6125	Gearbox sprocket nut spanner
61-6008	Tappet guide block punch
61-7014	Clutch hub - extractor tool
61-6135	Piston ring clamp
61-7017	Mainbearing extractor - LH outer race
61-3768	Clutch locking plate
61-6132	Camwheel extractor
61-7019	Rocker spindle seal compressor
61-7022	Locator tool assy - flywheel 38 - T.D.C.
61-7012	Primary chain tensioner tool
61-6063	Valve guide removal & replacement tool
61-7023	Cam extractor 6CA
61-7010	Torque tool adaptor - cylinder head sleeve nut
61-7024	Peg spanner wheel bearing retainer
61-6121	Head race drift
61-6113	Fork damper tool
61-7025	Valve seat cutter (inlet and exhaust)
61-7027	Blending cutter (inlet and exhaust)
61-7029	Arbor pilot & tommy bars - valve seat cutters
61-6117	Swinging arm bearing - removal replacement tool
61-7035	Crankshaft balance weights (689 grms.)
61-7043	Camshaft replacement tool

CARTON PACK ASSEMBLIES

PISTONS (C/W RINGS GU 71-3995 71-3996 71-7090 71-7091		7 7 9:1 7 7 9:1 7 7 4:1	+0.010 +0.020 +0.010 +0.020
PISTON RING SETS (COM			
99-3789 71-3690 71-3695	RING SET TAPER RIN OIL CONTR	G .	STD. STD.
99-3790 71-3691 71-3696	RING SET TAPER RIN OIL CONTR	G OL RING	+0.010 +0.010 +0.010
99-3791 71-3692 71-3697	RING SET TAPER RIN OIL CONTR		+0.020 +0.020 +0.020
VALVE GUIDE SETS (COM	PRISING 2 INLET	2 EXHAUST 4 CIRC	CLIP)
99-7125 99-7126 99-7127	VALVE GUIDE VALVE GUIDE VALVE GUIDE	SET	STD. + 0 · 005 + 0 · 015
GASKET SET			
99-7001	DECOKE SET OVERHAUL S		,
VALVE SPRING SET			
99-7037	4 OFF INNER 4 OFF OUTER		
BEARING CONROD B/E			
99-7040 99-7041 99-7042	4 OFF 4 OFF 4 OFF		STD. -0.010 -0.020
OWNER HANDBOOK 198	31	SIDECAR CONV	ERSION KIT
60-7396		99-7112	T140, TR7
WORKSHOP MANUAL 19	979/80/81		
99-7059	T140 TR7		

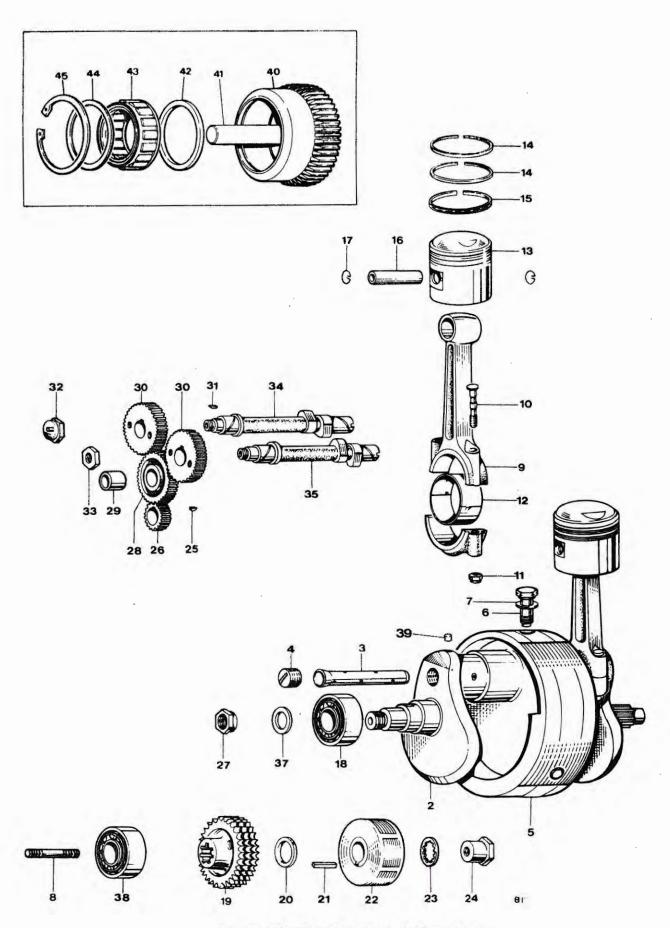


CRANKSHAFT AND CONNECTING RODS

CRANKSHAFT AND CONNECTING RODS

QUANTITY

COMMIN	1		TR7	T14	10	
			RV	E	ES	
Ref. No.	Part No.	Description				
1	71-7370	CRANKSHAFT AND FLYWHEEL ASSEMBLY	1	1	1	
2 3 4	71-3298	CRANKSHAFT C/W. OIL TUBE	1	1	1	
3	70-3903	Oil tube	1	1	1	
4	71-2800 71-7338	Screwed plug	1	1	1	
5	*71-3552	Flywheel bolt	1 3 3 1 2 4	1	1	
7	71-1003	Flywheel bolt Washer	3	3 1 2 4	3 1 2 4	
8	21-2183	Crankshaft stud (1 3/8 in. O.A.)	1	1	1	
9 .	71-3006	CONNECTING ROD	2	2	2	
10	70-9914	Connecting rod bolt	4	4	4	
11	60-3761	Self locking nut	4	4	4	
12	70-3586	Big end bearing (Available in - · 010 in.	4	4	4	
		and - · 020 in. undersizes)				
13	71-7085	PISTON COMPLETE (7 · 4:1)	Α	Α	Α	
13	71-3778	PISTON COMPLETE (7 · 9:1)	2	2	2	
14	71-3690	Taper compression ring	2 4 2 2 4	2 4 2 2	2 4 2 2 4	
15	71-3695	Oil control ring	2	2	2	
16 17	71-3354	Gudgeon pin Circlip	2	4	4	
18	71-3700 60-7362	Main bearing, right	1	1	1	
19	71-3542	Motor sprocket, 29 teeth Triplex	1	1	i	
20	71-3544	Distance piece	i	i	i	
21	71-0082	Rotor key	1	1	1	
22	99-7058	Rotor	1	1	1	
23	21-7024	Fan disc lock washer	1	1	1	
24	21-2182	Nut	1	1	1	
25	70-1580	Key	1	1	1	
26	70-4564	Timing pinion	1	1	1	
27	71-2877	Nut	1	1	1	
28	70-6159	INTERMEDIATE WHEEL	1	1		
29 30	70-0400 71-3666	Intermediate wheel bush	1	1	2	
31	70-1558	Camshaft pinion Camshaft key	2 2	2	2	
32	71-1007	Inlet camshaft nut	1	1	1	
33	70-6523	Exhaust camshaft nut	i	i	i	
34	71-7016	Inlet camshaft	1	1	1	
35	71-7017	Exhaust camshaft	1	1	1	
37	70-3300	Clamping washer	1	1	1	
38	70-2879	Main bearing, left (RM11L)	1	1	1	
39	70-3902	Plug, crankshaft oilway	1	1	1	
Not illus.		Spacer	1 -	, 1	1	
Not illus.		Shim (0 · 010 in.) - Engine sprocket		lequi		
Not illus.		Shim (0 · 030 in.)	As F	lequi	rea	
40	71-7246	Intermediate wheel c/w spindle	-	-	1	
41	71-7413	Spindle	_	-	1	
42	71-7245	Spacer Ring-inner		-	1	
43	60-7291	Sprag Clutch	-	-	1	
44	71-7244	Retainer Ring-outer	-	-	1	
45	60-7269	Circlip	-	-	1	

^{*} Use Loctite 270 Sealant

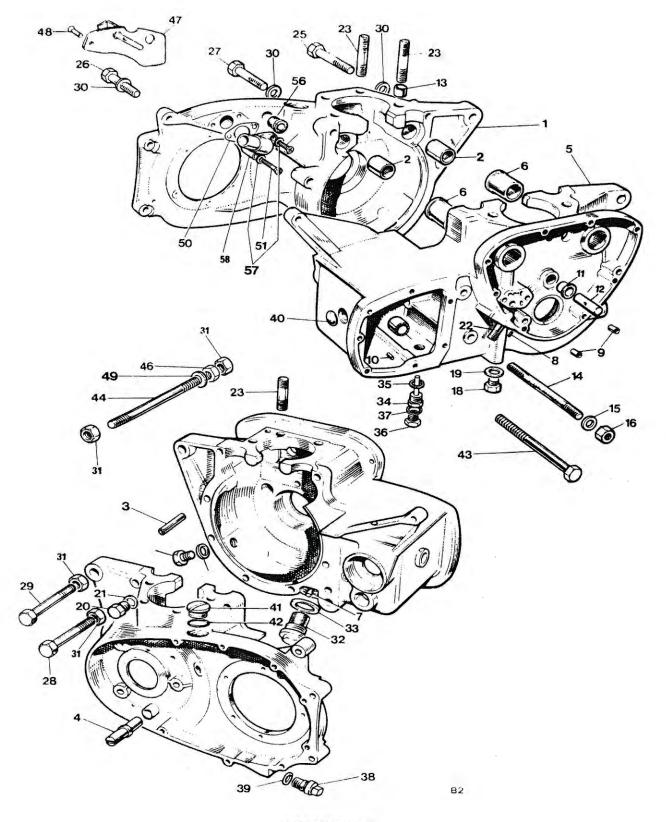

CRANKCASE

CRANKCASE

QUANTITY

TR7 T140 RV E Ref. No. Part No. Description *CRANKCASE DRIVE SIDE Reference Only 234567 71-0287 Camshaft bush L.H. 71-3989 Hollow dowel, crankcase joint 71-7258 Chain tensioner Privot Pin 1 *CRANKCASE TIMING SIDE Reference Only 71-0286 Camshaft bush R.H. 70-4538 Scavenge pipe 1 8 70-6386 Locating peg (at oil pipes) 1 1 9 57-0989 2 Hollow dowel 2 2 57-0912 Locating peg (L/S at thrust washer) 1 1 71-7492 Bush-intermediate spindle 12 Intermediate wheel spindle 13 70-8751 2 Hollow dowel, cylinder base 14 14-1445 Stud, rear 1 60-4246 15 Plain washer 2 16 14-1303 1 Nut 57-1606 17 Needle roller bearing layshaft 18 70-9330 Oilway plug 19 82-1880 Copper washer 20 21-1871 Tachometer drive plug (L.H. thread) 37-3761 O' ring, ignition timing hole plug 21-1863 Oil pipe stud 23 21-1865 Cylinder stud inner 71-3013 Cylinder stud outer 24 21-1872 Plug, timing hole 25 21-1870 Bolt, rear 26 14-6220 Bolt, top rear 1 1 27 14-6223 Bolt, top front 1 1 28 Bolt, long - crankcase halves Bolt, short - crankcase halves 14-0230 29 21-1823 2 2 2 30 60-2330 Plain washer 10 10 10 31 14-1302 Nut 5 5 32 70-9336 Crankcase filter 33 70-8782 'O' Ring 1 57-2167 Drain plug (with level tube) 35 57-1257 Fibre washer 36 21-0543 Level plug 60-7132 71-7259 37 Copper washer 38 Chain adjuster plug 39 70-6299 Washer adjuster plug 40 60-7268 Blanking plug 41 57-2166 Plug inspection 'O' ring 42 70-8782 43 14-6242 Bolt, rear - crankcase halves 44 21-0669 Stud, crankcase halves 2 46 14-0402 Nut, exhaust ties 2 2 1 47 70-9334 Breather cover plate assembly 48 71-1077 Screw 1 49 60-2428 Spring washer 2 2 2 50 71-1460 Joint washer 1 1 51 70-7354 Screw 2 2 2 71-1345 56 Grommet, alternator leads - external 57 70-6559 2 Washer, outlet stub screw 2 2 58 71-4044 Outlet stub

^{*} NOTE CRANKCASES ARE SUPPLIED ONLY AS MATCHED PAIRS PART No. 71-7491


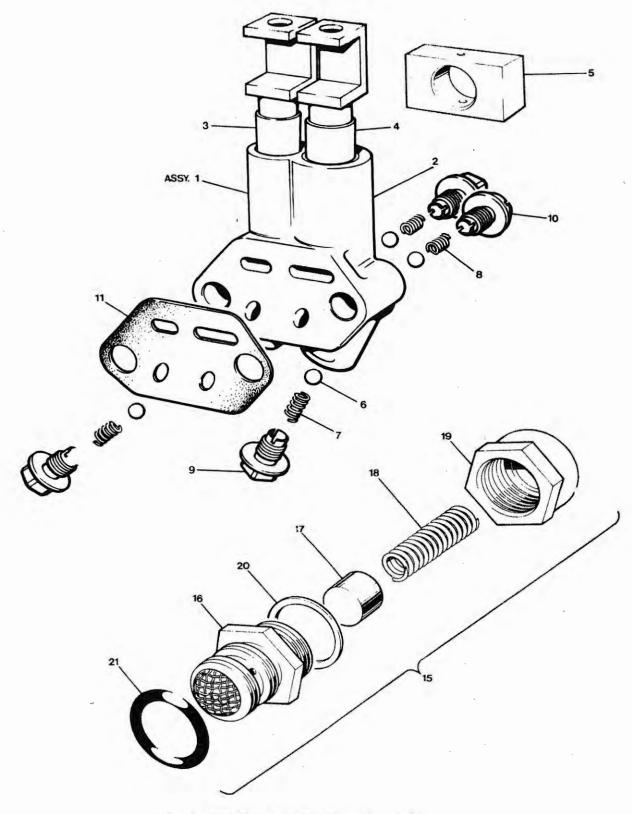


Fig. 3. OIL PUMP AND RELEASE VALVE

OIL PUMP AND RELEASE VALVE


						YTITY
				TR7 RV	T14 E	ES
Ref. No.	Part. No.	Description				
1 2 3 4 5 6	71-7317 71-7253 70-9269 70-6681 70-0495 60-2363	Oil pump complete Pump body Feed plunger Scavenger plunger Drive block Valve ball		1 1 1 1 1 4	1 1 1 1 1 4	1 1 1 1 1 4
8 9 10 11 NI NI 15 16 17 18 19 20 21	71-7260 71-7314 71-7254 71-3910 14-7007 14-7008 60-2417 71-3447 Ref only Ref only 70-6062 Ref only 70-8754 60-3355	Valve spring Screwed plug sq. head Screwed plug slotted head Joint washer Fixing screw short 11/4" U.H. Fixing screw long 11/2" U.H. Washer spring - Fixing screw Oil pressure release valve Body Piston Spring Cap Joint washer (cap to body) 'O' ring, release valve	-	4 3 1 1 1 1 2 1 1 1 1 1 1 1 1	4 3 1 1 1 1 2 1 1 1 1 1 1 1	4 3 1 1 1 2 1 1 1 1 1 1

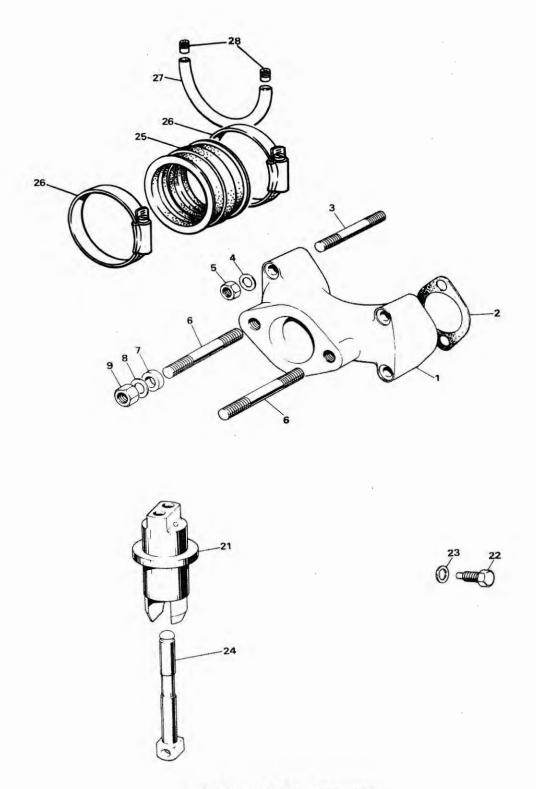

MANIFOLD AND TAPPETS

MANIFOLD AND TAPPETS


			(AUA	1TITY
			TR7 RV	140 E	ES
Ref. No.	Part No.	Description			
1 2 3 4 5 6 7 8 9	71-3556 70-5660 21-1876 60-4248 21-1877 21-1996 70-9554 70-9555 14-1301 71-7194	Inlet manifold Joint washer Stud Washer Manifold to head Nut Stud Insulation ring Cup Nut Tappet guide block	1 2 4 4 4 2 2 2 2 2	2	2
22 23 24	97-0200 70-2441 71-7008	Set bolt Washer Tappet	2 2 4	2 2 4	2 2 4
25 26 27 28	60-7076 60-7077 71-7051 71-7103	Connecting rubber carb to head Connecting rubber clip Connector pipe - balance Connector stub	-	2 4 1 2	2 4 1 2

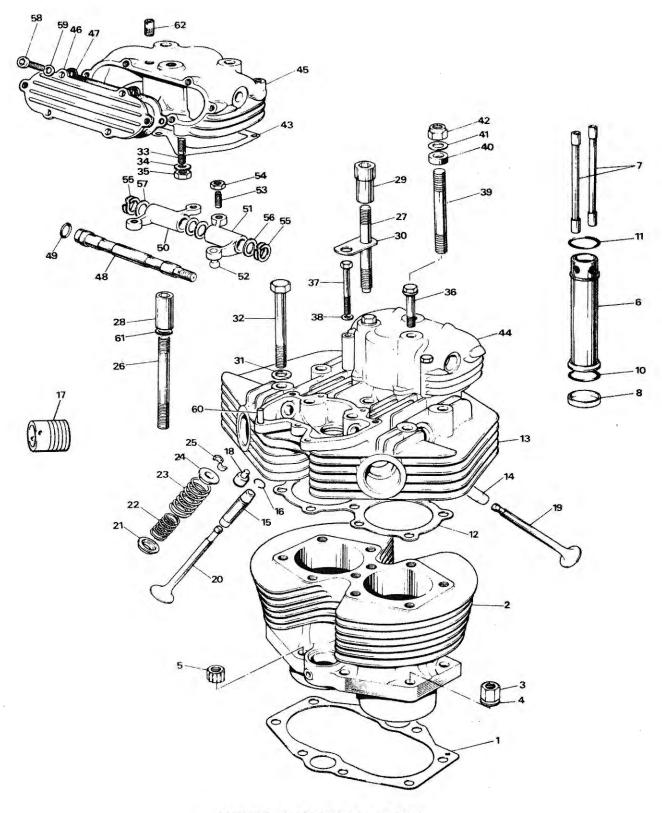

CYLINDER BLOCK AND HEAD

CYLINDER BLOCK AND HEAD


			RV VS	QUANTITY E E ES
Ref. No.	Part No.	Description	•0	
1 2 3 4 5 6 7 8 10 12 13 14 15 16 17 13 14 15 16 17	70-6309 71-4006 21-2177 70-3446 21-0692 71-7191 71-3330 71-7196 71-7505 71-7506 71-7506 71-7506 71-7503 71-7506 71-7506 71-7506 71-7506 71-7506 71-7506 71-7506	Cylinder base washer Cylinder block Cylinder base nut Washer Cylinder base nut (12 point) Push rod cover tube Push rod Sleeve 'O' ring Cylinder head gasket Cylinder head assy Inlet valve guide Exhaust valve guide Circlip valve guide Exhaust stub Cylinder head assy. Inlet valve guide Exhaust valve guide Circlip-valve guide Exhaust valve guide Exhaust valve guide Exhaust valve guide Exhaust valve guide Exhaust stub Seal-inlet valve	1 1 4 4 4 2 4 2 4 1 1 2 2 4 2 4 2 4 2 4	1 1 4 4 4 4 2 4 2 4 1 1 1 2 2 4 4 2 2 2 2 2
19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37	70-4603 70-2904 71-7203 70-4221 70-4221 70-1543 71-3748 21-2201 21-2200 21-2204 21-2205 71-3553 82-2184 14-0241 14-1401 70-3302 14-0301 21-2206 21-1875	Inlet valve Exhaust valve Bottom cup Inner valve spring Outer valve spring Top collar Split cotter Stud - cylinder head (3/8 in.) Stud - cylinder head (5/16 in.) Socket nut (3/8 in.) Socket nut (5/16 in.) Bridge plate Washer Bolt - cylinder head Stud - rocker box Washer Nut Bolt - rocker box Bolt - rocker box	2244448424214466644	2 2 4 4 4 4 4 8 4 2 4 2 1 4 4 6 6 6 6 4 4 4 4 4 4 4 4 6 6 6 6 7 8 7 8 7 8 7 8 7 8 7 8 7 8 7 8

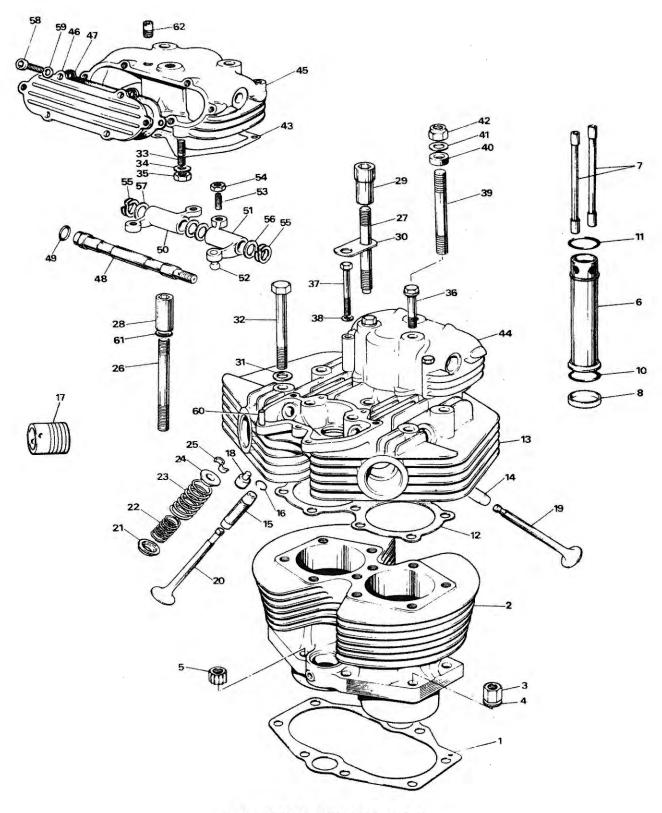

CYLINDER BLOCK AND HEAD

CYLINDER BLOCK AND HEAD


				GUANTITY
,			FR7 RV	T140 E
			RS	ES
Ref. No.	Part No.	Description		
38	60-4248	Washer	4 2 2 2 2 2	4 2 2 2 2 2 2
39	21-2197	Stud {	2	2
40	37-2338	Distance piece > Torque stay	2	2
41	60-2331	Washer	2	2
42	14-1303	Nut	2	2
43	71-2599	Rocker box gasket	2	2
44	71-3668	Inlet rocker box	1	1
45	71-7050	Exhaust rocker box	1	1
46	71-3671	Tappet inspection cover	2 2 2 2 2 2 2	2 2 2 2 2 2 4 4 4 4 6 2 12
47	71-3673	Gasket	2	2
48	71-3549	Rocker spindle	2	2
49	60-3548	Sealing ring	2	2
50	71-7044	Rocker (right exhaust, left inlet)	2	2
51	71-7043	Rocker (left exhaust, right inlet)	2	2
52	71-0070	Ball pin	4	4
53	71-7045	Adjuster pin	. 4	4
54	14-0402	Lock nut	4	4
55	70-1574	Spring washer	4 6 2 12 12	4
56	70-1575	Thrust washer (1/2 in.)	6	6
57	70-1330	Thrust washer (3/8 in.)	2	2
58	14-7004	Screw - socket head	12	12
59	60-3963	Washer		12
60	71-2361	Dowel, rocker box to head	4	4
63			4	4
02	71-3313	Connector - Breather	1	1
61 62	71-2598 71-3313	Plain washer Connector - Breather	4	4 4 1

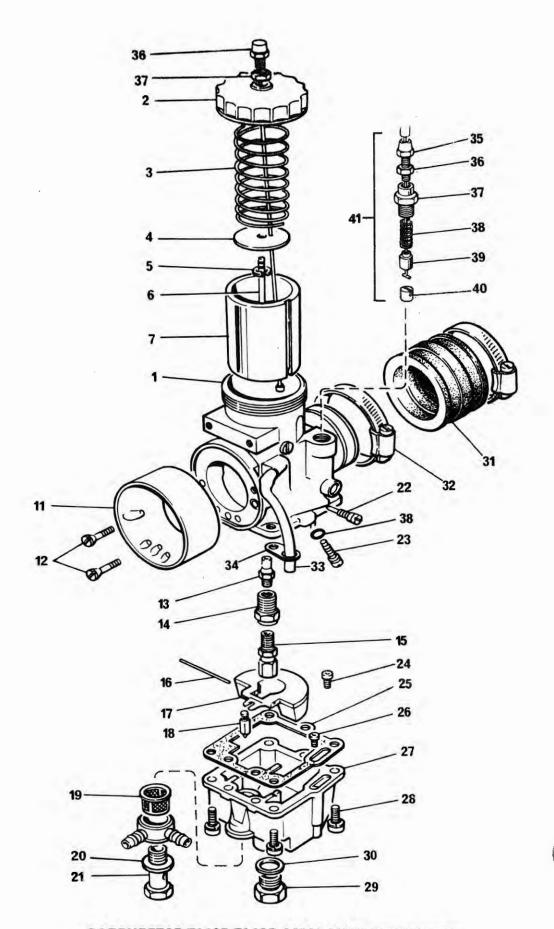

CARBURETOR T140E-T140D AMAL MK II CONCENTRIC

CARBURETOR T140E - T140D AMAL MK II CONCENTRIC


	Ref.	No.	Part No.	Makers Part No.	Description	Quantity	Remarks
N	ði.		60-7392	L930/9	CARBURETTOR, LEFT		
N 1 1 2 3 4 5 7			99-7068 99-7069 99-7070		CARBURETTOR, RIGHT CARBURETTOR BODY LEFT CARBURETTOR BODY RIGHT Mixing chamber top Throttle spring Needle retaining disc Needle clip Throttle needle 2C3 Throttle slide No. 3	1 1 1 1 1 1 1	
11 11 11 11 11 11 12 22 22 22 22 22 22 2	1 2 3 4 5 6 7 8 9 9 9 9 1 2 3 4 5 6 7 8 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9		99-7084 99-0512 99-7086 99-0438 99-1124 99-0517 99-0515	2928/062 2622/073 2928/122 622/128 376/100 2622/069 622/069 622/149 376/093 13/163 622/078 622/076 622/077 124/026/20 2622/070 124/026 2622/070 124/026 2622/065 2622/066 2928/123 2928/145 2622/134	Air intake adaptor Air intake adaptor screws Needle jet · 106 Jet holder Mainjet 200 Float spindle Float Float needle Filter Banjo bolt washer Banjo bolt Pilot air screw Throttle stop screw Pilot jet 20 Washer - float bowl Jet - cold start 35 Float bowl assy Float bowl drain plug Float bowl drain plug Float bowl drain plug washer Rubber connector Rubber connector clip Air vent pipe Clip vent pipe	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
337777 3333347	36 37 38 38 31 31 31 35 36 37 38 39 40 31		99-7096 99-7097 99-0520 71-7052 23-1031 60-2427 21-7028 A 4/035 A 5/077 A 2622/091 A 2622/094 A 2622/094 83-7545 2622/149		Throttle cable adjuster Throttle cable adjuster locknut 'O' ring for air & throttle screw Connector bracket Screw bracket to carb Washer Grub screw bracket to carb Adjuster-cable Adjuster locknut Screw Spring Plunger cap Plunger Petrol pipe Cold start kit-less cables		2

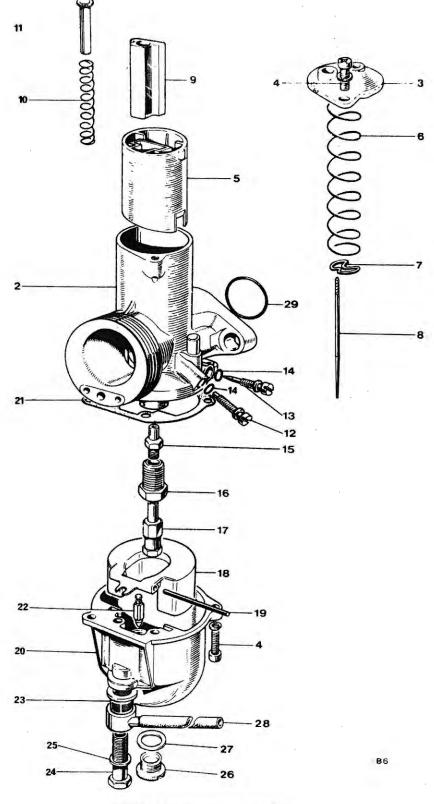


AMAL CARBURETOR, TR7RY

CARBURETOR TR7RV AMAL MK I CONCENTRIC

		Makers		Quantity	Remarks
Ref. No.	Part No.	Part No.	Description	,	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
1	19-2454	R930/94	CARBURETOR	1	
2	Amal.	930/005	Carburettor body	1	
3	Amal.	928/098	Mixing chamber top	1	
4	99-0521	622/086	Screw, float and mixing chamber to	ps4	
5	99-0527	928/060	Throttle valve (No. 3 cutaway)	1	
6	99-1033	622/131	Throttle return spring	1	
4 5 6 7 8 9	99-0510	622/067	Needle clip	1	
8	99-1036	622/124	Needle	1	
	99-0528	928/062	Air valve	1	
10	99-1038	622/129	Air valve spring	1	
11	99-1037	928/103	Air valve guide	1	
12	99-0516	622/077	. Throttle stop screw	1	
13	99-0515	622/076	Pilot air screw	1	
14	99-0520	622/082	'O' ring for air and throttle screws	2	
15	99-1035	622/122	Needle jet (· 106)	1	
16	99-1034	622/128	Jet holder	1	
17	99-0454	376/100	Main jet (270)	1	
18	99-0512	622/069	Float	1	
19	99-0513	622/071	Float spindle	1	
20	99-0506	622/055	Float chamber	1	
21	99-0514	622/073	Float chamber washer	1	
22	99-0511	622/068	Float needle	1	
23	99-0438	376/093	Filter	1	
24	99-0517	622/078	Banjo bolt	1	*
25	99-1124	13/163	Banjo washer	1	*
26	99-1152	622/147	Drain plug	1	1
27	99-1153	622/151	Drain plug washer	1	
28	83-7546		Petrol Pipe assembly	1	
29	70-9711	622/101	'O' ring for flange	1	
	Amal.	622/172	Tickler complete	1 Not ill	lustrated

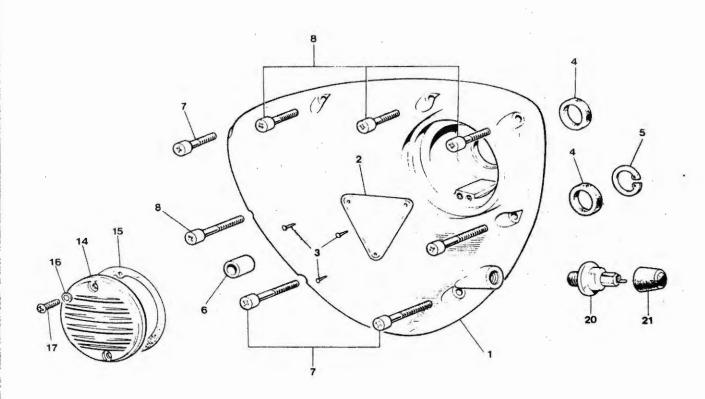


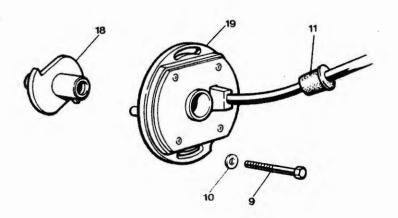


TIMING COVER AND CONTACT BREAKER

TIMING COVER AND PULSE SENSOR

			(AUL	YTITY
			TR7	T14	D T140
Ref. No.	Part No.	Description			
1	71-7318	Timing cover c/w Patent plate	1	1	1
2	70-4016	Patent plate	. 1	1	1
2 3 4 4	60-4255	Hammer - drive screw	. 3	3	3
4	70-4568	Oil seal	1	1	1
	70-6387	Oil seal (0 · 020 in. undersize)	A	A	A
NI	71-7263	Joint Washer - Timing Cover	1	1	1
5	70-4569	Circlip	1	1	1
6	57-0989	Hollow dowel	2	2	2
5 6 7 8 9	14-7007	Screw, long	2 2 6	2 6	2 2 6
8	14-7006	Screw, short	6	6	6
9	14-0207	Bolt	1	1	1
10	70-8163	Plain washer	1	1	1
11	70-4707	Rubber grommet	1	1	1
12	70-7680	Pillar bolt	2 2	2	2
13	70-6559	Plain washer	. 2	2	2
14	71-7238	Cover	-	-	1
14	71-7159	Cover	. 1	1	-
15	71-1462	Joint washer	1	1	1
16	97-0430	Fibre washer	2	2	2
17	70-7354	Screw (1/2 in. U.H.)	2	2	2 .
18	99-7043	Reluctor Lucas 54400905	1	1	1
19	99-7044	Pulse sensor c/w lead Lucas 54400766	1	1	1
20	60-3719	Oil pressure switch	1	1	1
21	71-2930	Cover pressure switch	1	1	1

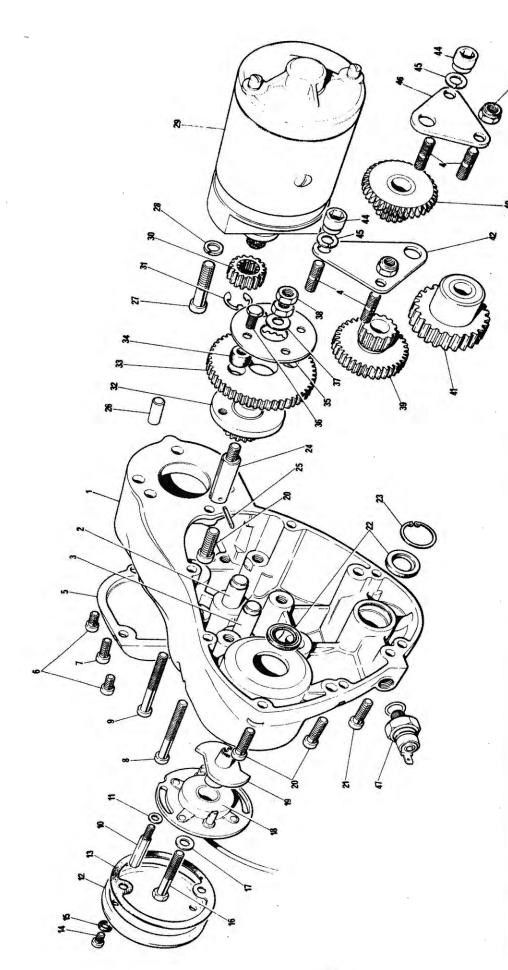

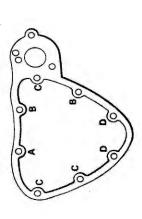


COVER	TO CRANKCA	COVER TO CRANKCASE SCREW INFORMATION	ORMATION
LETTER	PART No	LENGTH UH	ALITA
4m00	14-7012 14-7013 14-7006 14-7007	2½" 2¾" 1,"	-282

E/S TIMING COVER GEARS

REF No	PART No	DESCRIPTION	QUANTITY
1	71-7501	Timing Cover	1
2	71-7377	Spindle: 2nd stage	1
3	71-7376	Spindle: 3rd stage	1
4	21-7066	Stud-Outrigger plate	4
5	71-7327	Cover-starter motor	1
N1	71-7328	Joint washer-cover	1
6	14-7003	Screw-cover to case 5/8" UH	2
7	14 - 7006	Screw-cover to case 1" UH	ī
8	14-7012	Screw-timing cover to c/case 21/2" UH	1
9	14-7013	Screw-timing cover to c/case 23/4" UH	2
10	71-7400	Pillar bolt	2
11	70-6559	Washer-pillar bolt	4
12	71-7159	Cover-pulse sensor	1
13	71-1462	Gasket-cover	i
14	70-7354	Screw-cover fixing	
15	97-0430	Washer-fibre	2 2 1
16	14-0207	Bolt-reluctor fixing	1
17	70-8163	Washer-bolt	1
18	99-7044	· Pulse sensor	4
19		Reluctor	4
	99-7043		1
20	14-7006	Screw-timing cover to c/case 1" UH	3 2 2 2
21	14-7007	Screw-timing cover to c/case 11/4" UH	2
22	70-4568	Oil seal-at camshaft and crankshaft	2
23	70-4569	Circlip-oil seal at crankshaft	
24	71-7494	Spindle for gear 2/3	1
25	60-7385	Roll pin-spindle fixing	1
26	71-7383	Dowel-motor to cover	1
N1	60-7295	'O' Ring-motor to cover	1
27	14-7020	Screw-motor to cover	3
28	60-2428	Washer-spring for screw	3 3
29	60-7296	Starter motor	1
30	71-7226	Pinion-starter motor	1
31	60-7292	Retainer-pinion to starter motor	i
32	71-7416	Pinion no. 3 & coupling-16T	i
33	71-7417	Pinion no.2-54T	1
34	60-7340	Bush-shock absorber	2
35	71-7418	Face washer-bush retainer	1
36	21-7083	Screw-face washer	1
37	60-2330	Washer-thrust	2
38	14-0402	Nut-end float adjustment	2
39	71-7242	Gear no. 4/5 36-16T	1
40	71-7242	Gear no.6/7 36-11T	2
41		Gear no.8-24T	1
42	71-7436		1
	71-7379	Plate-upper outrigger	1
43	14-1202	Nut-plate fixing	2
44	21-7092	Nut-socket head	2 2 2
45	60-2428	Washer spring	2
46	71-7380	Plate-Lower outrigger	1
47	60-3719	Oil pressure switch	1

Note:- For Sprag clutch information see page 13

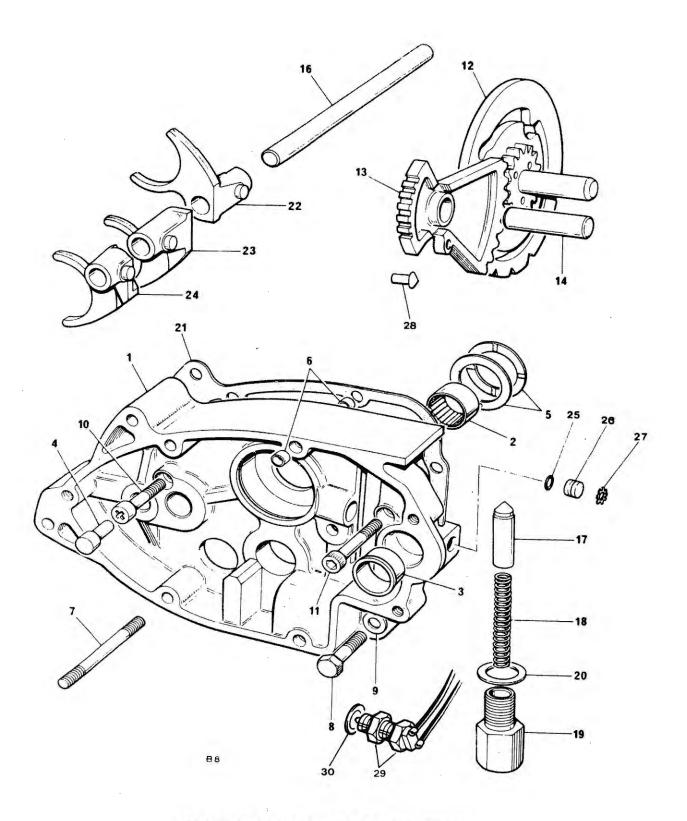

12. -

GEARBOX INNER COVER AND SELECTORS


GEARBOX INNER COVER AND SELECTORS

Ref. No.	Part No.	Description	Quantity	Remarks	
1	57-7049	GEARBOX INNER COVER	1	1	
2	57-1614	Layshaft bearing		i	
2 3 4 5 6 7 8 9	57-7009	Gearchange spindle bush	1		
4	57-0045	Kickstart stop	1	1	
5	57-1607	Thrust washer	2	2 4 2	
6	57-0989	Hollow dowel	4	1	
7	21-2149	Stud	2	2	
8	21-1907	Bolt			
9	70-3446	Washer	1	2	
10	14-6608	Screw	1	l	
11	14-7023	Screw			
12	57-4889	Camplate			
13	57-7052	Operating quadrant c/w pin	1		
14	57-7011	Quadrant spindle	1		
16	57-3989	Selector fork rod	į.	1	
17	57-7020	Index plunger	· ·	li.	
18	57-4459	Plunger spring	1		
19	57-4400	Housing, index plunger	1	1	
20	57-3978	Washer	1	1	
21	57-7012	Joint washer, inner cover to crankcase	- 1		
22	57-4364	Selector fork - mainshaft 4th gear	1		
23	57-4366	Selector fork - layshaft 3rd gear			
24	57-4660	Selector fork - layshaft 1st gear	16		
25	37-3761	'O' ring			
26	57-7015	Plug	1		
27	57-7016	Retainer		١,	
28	57-7041	Operating pin	1	l.	
29	60-7240	Switch neutral C/W lock nut	1		
30	70-1335	Washer - For Switch	.1	P.	
			1		

GEARBOX SHAFTS AND GEARS

GEARBOX SHAFTS AND GEARS


Ref. No.	Part No.	Description	Quantity	Remarks
1 .	60-3500	Oil seal, cover plate	1	
2	70-3789	Cover plate	1	
2 3 4	57-4779	MAINSHAFT HIGH GEAR ASSEMBLY	1	
4	60-3511	Needle roller bearing	2	2
5	60-3500	Oil seal, high gear	11	
6	57-4432	MAINSHAFT	1	
5 6 7 8 9	57-3988	Bush		
8	57-4376	Mainshaft 4th gear	1	0.0
9	57-4377	MAINSHAFT 3rd GEAR c/w bush	1	lan e
11	57-4653	Mainshaft 1st and 2nd gear		
12	57-4900	LAYSHAFT ASSY	•	
13	57-4791	Layshaft high gear	1	
14	57-4787	Layshaft 4th gear c/w bush	1	
14A	57-4790	Circlip for layshaft high gear	1	
15	57-4647	Layshaft 3rd gear		
16	57-4657	LAYSHAFT 2nd GEAR c/w bush		
18	57-4654	LAYSHAFT 1st GEAR c/w bush	1	
20	60-3494	Circlip		
21	57-4661	Driving dog		
22	57-4782	Gearbox sprocket - 20T		i
23	57-4396	Locknut		10
24	57-4909	Lock washer	19	i
25	70-0489	Circlip		
26	60-3552	Mainshaft bearing		Hoffman LS8
27	57-4113	Circlip		
28	57-1962	Washer		6
29	57-1963	Pinion sleeve		
30	57-1250	Pinion spring	4	
31	57-0730	Kickstart pinion		
32	57-0731	Kickstart ratchet	1	1
33	57-2240	Tab washer	1	
34	21-0594	Nut	,	1
35	57-1736	Clutch operating rod		1
36	71-1070	'O' ring, gearbox sprocket	1	
37	60-3512	Oil seal, gearbox sprocket		1
38	60-4100	High gear bearing		1

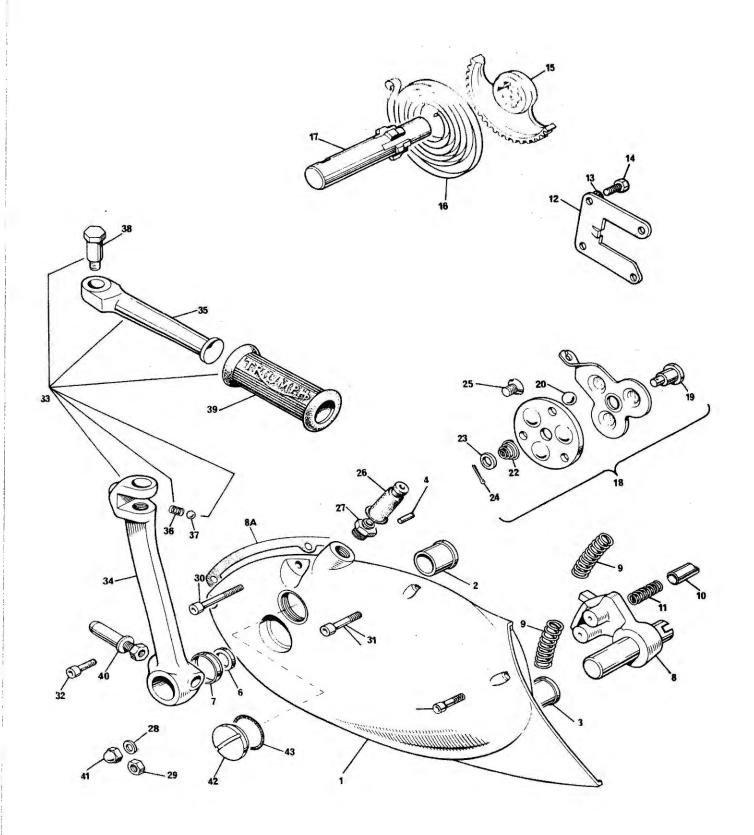

GEARBOX OUTER COVER

GEARBOX OUTER COVER

Ref. No.	Part No.	Description	Quantity Remarks
1	57-7050 57-0023	GEARBOX OUTER COVER	1
2	57-7008	Kickstarter spindle bush Gearchange spindle bush	i
4	57-0047	Kickstarter spring anchor pin	i
-	37-00-7	Nekstarter spring anerior pin	
6	57-1956	Oil seal	1
7	57-1955	Oil seal housing	1
8	57-7021	Gearchange quadrant assembly	1
8A	71-1448	Gasket outer cover	
9	57-7051	Quadrant return springs	2 2 2 1
10	57-4403	Gearchange quadrant plunger	2
11	57-0405	Plunger spring	2
12 13	57-0407	Guide plate	
14	70-1612 14-6103	Serrated washer	4 4
15	57-4117	Bolt - guide plate	1
16	57-0031	Kickstarter quadrant Kickstarter return spring	1
17	57-4756	Kickstarter axle	1
18	57-7033X	Clutch lever assembly	i
19	57-1710	Lever shaft	1
20	60-2368	Ball 3/8 in. diam.	3
,	00 2000	out of our diam.	
22	57-1712	Return spring	1
23	57-3673	Plain washer	1
24	60-2701	Split pin (5/64 in. x ½ in.)	1
25	21-1879	Countersunk screw	2 1
26	57-1646	Rubber cover	1
27	57-3762	Abutment for clutch cable	1
28 29	60-4247	Plain washer	2 1 2 2
30	14-1302 14-7013	Nut Screw cover to crankcase	1
31	14-7013	Screw outer cover to inner	2
32	14-7006	Screw outer cover to inner	1
02	147000	Solew Sater Cover to mile	
33	57-7018	FOLDING KICKSTARTER ASSEMBLY	1
34	57-2173	Kickstarter crank	i
35	57-7017	Kickstarter pedal	1
36	57-1167	Pedal locating spring	i
37	60-2324	Steel ball, 1/4 in. diam.	1
38	21-0541	Pedal bolt	1
39	57-2330	Pedal rubber	1
40	57-4356	Cotter pin c/w nut and washer	1
41	21-0544	Domed nut	1
42	57-2166	Filler plug	1
43	70-8782	'O' ring	. 1

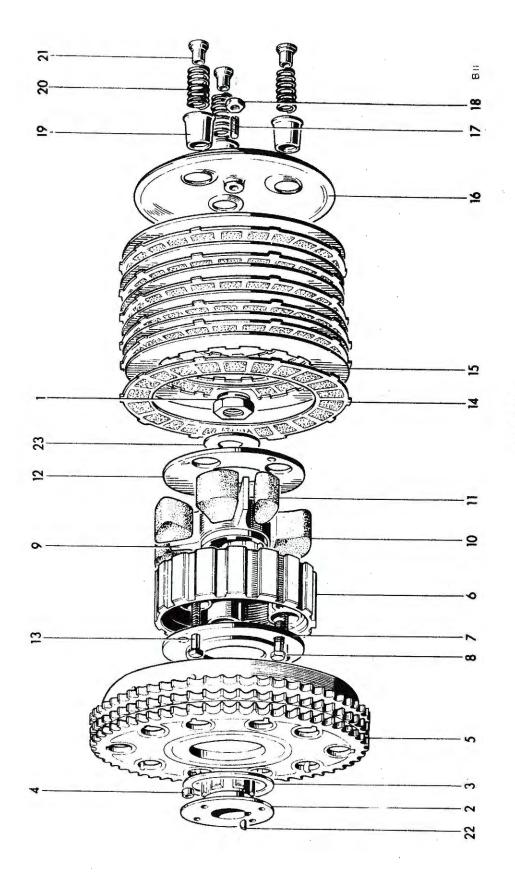

CLUTCH

CLUTCH

Ref. No.	Part No.	Description	Quantity Remarks
1	21-0586	Clutch securing nut	1
2	57-3929	Hub	1
3	57-3931	Thrust washer	1
2 3 4 5 6 7	57-0394	Roller	20
5	57-7065	Sprocket and housing	1
6	57-4438	Centre	1
7	57-4436	Inner plate	1
8	21-2157	Bolt	3
9	57-4636	Shock absorber spider	1
10	57-1722	Drive rubber (large)	3
11	57-1723	Rebound rubber (small)	. 3 . 3
12	57-4437	Outer plate	1
13	57-4754	Screwed pin	3 6 6
14	57-7058	Driving plate (bonded)	.6
15	57-7060	Driven plate	6
16	57-4590	Pressure plate	1
17	57-2159	Adjuster pin	1
18	14-0403	Nut	1
19	57-1931	Spring cup	3 ::
20	57-4644	Spring	3 :: 3 } 3
21	57-2526	Pressure nut	3
22	60-4253	Key	. 1
23	57-4794	Washer	1
Ni	57-7056	Clutch assembly complete	1
NI	57-4435	Clutch shock absorber assembly complete	1

CHAINCASE AND CHAINS


CHAINCASE AND CHAINS

Ref. No.	Part No.	Description	Quantity	Remarks	
1	70-3821	Countersunk screw	6	3	
2	71-1419	Joint washer	1		
2	70-5087	Trunnion	1		
4	71-7255	Tie rod - chain tensioner	1		
5	70-5085	Blade - chain tensioner	1	Ĭ.	
5 6	21-7064	Screw - chain adjuster	1		
7	14-0401	Nut - screw		i .	
8	71-7259	Plug - tensioner screw	-	i	
8	60-7268	Washer - for Nut	1.5	ĺ	
10	60-4125	Primary chain, 3/8 in. Triplex x 84 links	10	in .	
11	21-2199	Stator stud		1 2	
12	21-2198	Stator stud		i .	
13	47244	Stator		1	
14	70-9360	Sleeve nut		i	
15	70-4144	Rubber grommet		1	
16	60-4247	Plain washer		1 3 3	
17	14-0702	Self-locking nut		3	
18	71-7009	Joint washer	V	1	
19	71-7464	Chaincase		1	
20	71-3892	Timing pointer		1	
21	57-7055	Bush - footchange spindle		1	
22	57-7009	Bush - footchange spindle inner		1	
23	71-3895	Inspection plug		2	
24	71-3896	'O' ring	:	2	
25	14-7006	Screw	(6	
26	14-7019	Screw		2	
27	21-0544	Domed nut	- 3	1 2 2 6 2 2 2	
28	B2-1880	Copper washer		2	
29	57-7010	Gearchange pedal	,	1	
30	57-2450	Pedal rubber		1	
31	14-0201	Bolt		1	
32	57-1956	Oil seal-spindle		1	
33	14-7017	Drain plug - primary cover		1	
34	70-6299	'O' ring - drain plug		1	
35	60-2118	Rear chain 5/8 in. x 3/8 in. x 107 links	7	1	
36	57-7062	Footchange spindle		1	
37	70-6299	'O' Ring for plug - Ref. line 8		1	

EXHAUST PIPES AND SILENCERS


EXHAUST PIPES & SILENCERS

Ref. No.	Part No.	Description	
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18	71-7507 71-7508 71-0216 70-6744 70-8860 70-6857 14-0102 14-1301 70-9888 70-7512 70-3768 14-0217 14-1202 71-4159 83-7540 14-0102 14-1201 60-2338	Exhaust pipe - left Exhaust pipe - right Finned clip Bolt-finned clip Washer-spherical Stay-exhaust pipe Screw Nut Coupling pipe Clip 'D' washer Bolt Nut Silencer Hanger - Silencer Bolt Nut Silencer Bolt Nut Silencer Hanger - Silencer Bolt Nut Silencer Hanger - Silencer Bolt Nut Silencer to hanger	1 1 2 2 2 2 2 2 2 2 1 2 4 2 2 2 2 2 4 4 4 4
19 20 21 22	70-5874 70-3768 14-0219 60-4247	Clip 'D' Washer Ex pipes to silencer Bolt Washer	2 4 2 2
23	14-1202	Nut _	2

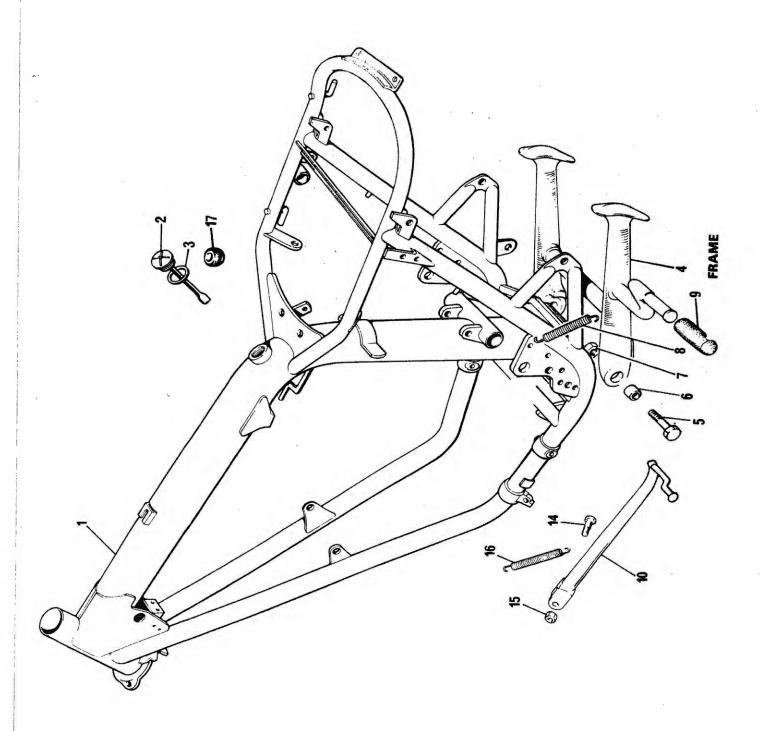

FRAME

			TR7	Quant F140	
Ret. No.	Part No.	Description			
1 2 3 4	83-7537 71-3463 60-3616 83-7532	Frame Oil filler cap 'O' ring Centre stand	1 1 1 1	1 1 1 1	
5 6 7 8 9	14-0147 83-7460 14-1305 83-3793 57-2331 83-7553	Pivot bolt Pivot bearing bush Nut - Pivot bolt Return spring Pedal rubber Prop stand	2 2 2 1 1	2 2 2 1 1	
.14 15 16 N I N I 17	82-7021 14-1303 82-8382 60-3361 60-7168 82-6784	Pivot buit Nut - bolt Return spring Transfer - "made in England" Transfer - "ratio suppression" Grommet-battery leads	1 1 1 1 1 2	1 1 1 1 1 2	ES Only

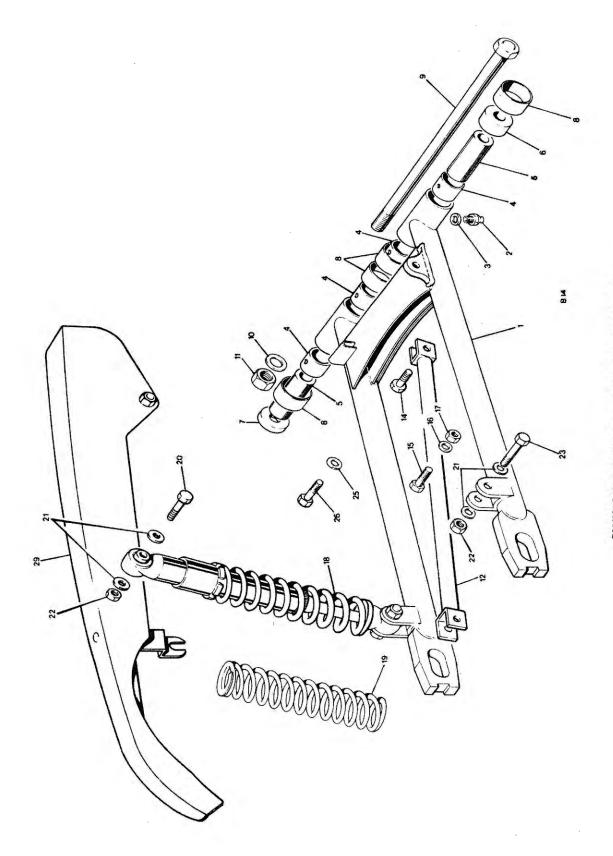


SWINGING ARM AND SUSPENSION UNITS

Ref. No.	Part No.	Description	Quantity Remarks
1 2 3 4 5 6 7 8 9 10 11 12 14 15 16 17 18	83-7510 83-2521 60-7336 21-7097 83-2691 83-2690 83-2689 83-2687 83-2266 14-1307 83-7534 21-7047 21-7065 60-2331 14-1803 60-7037	SWINGING ARM Bush Grease nipple Washer for nipple Sleeve, swinging arm pivot Distance piece R.H. Distance piece L.H. Dirt excluder Pivot bolt - swinging arm Washer, swinging arm pivot Nut, swinging arm pivot Brake torque stay Bolt torque stay - swinging arm Bolt, torque stay - caliper Washer, torque stay Nut, torque stay SUSPENSION UNIT	1 4 2 2 2 1 1 1 4 1 2 1 1 1 1 2 2 2
19	99-1048	Spring chrome 110lbs. Bolt, damper - top Washer,damper-top and bottom Nut,damper-top and bottom Bolt, damper, lower	2
20	14-0235		2
21	60-2331		8
22	14-1303		4
23	14-0234		2
24	83-2641	Chainguard	. 1
25	60-2347	Washer, chainguard fixing - front	1
26	14-0206	Bolt, chainguard fixing front	1

MOTOR UNIT FITTINGS AND FOOTRESTS


MOTOR UNIT FITTINGS AND FOOTRESTS

Ref. No.	Part No.	Description		Quantity	Remarks
1 2 3 4 5 5 6 7 8	83-7040 14-0261 14-0259 60-2333 83-7256 83-7259 83-7695 83-7059 82-9054	Footrest - left and right Footrest bolt, right Footrest bolt, left Washer Footrest rubber LH Footrest rubber RH PILLION FOOTREST ASSEMBLY Pedal Pedal Rubber	/ L.H. & R.H.	2 1 1 2 1 1 2 2 2 2	
9 10 11 12 13	14-0216 82-9089 14-1302 14-0128 60-2419 83-7694	Bolt Washer Nut Bolt Washer Hanger P/F-C/W peg	,	2 2 2 2 2 2 2 2	
17 18 19 20 21 22 23 24 25 25 25 26 27	14-1305 83-7011 83-7009 14-0115 14-0116 14-1302 60-2330 14-0221 14-0221 14-0221 14-1302 60-2321	Footrest boil nut Rear motor plate right Rear motor plate left Bolt Bolt Nut Washer Bolt-LH upper and lower Bolt-RH upper and lower Bolt-RH upper Bolt-RH lower Nut Washer	es to frame Motor to motor plates	1	K/S only ES only ES only
28 29 30 31 32 33 34 35	83-2846 83-2847 21-2112 14-0304 60-4251 60-2332 83-2848 83-2849	Distance piece - left Distance piece - right Bolt Nut Washer Washer Distance piece - left Distance piece - right	Motor to frame centr bottom	1	
36 37 38 39 40 42 43	14-0254 14-1304 60-2332 83-7467 14-0128 60-2331 83-4086	Bolt Nut Washer Steady bracket motor to frame Bolt Washer Attachment plate	Motor fixing front Bracket to frame	1 1 1 1 1 1 1	
44	83-7737	Solenoid mounting bracket		1	ES only

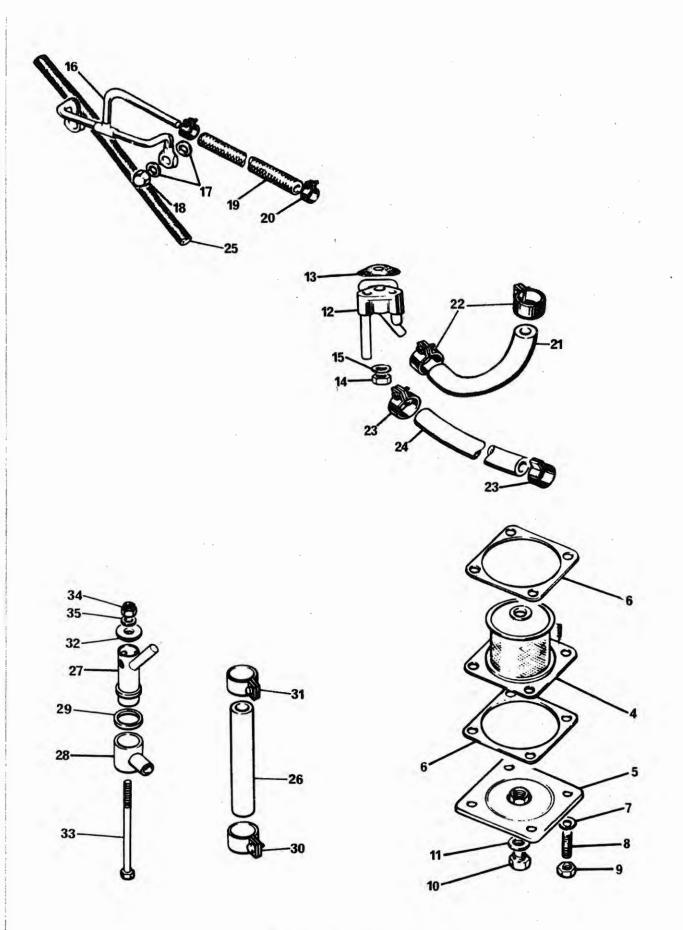

OIL AND BREATHER PIPES


Ref. No.	Part No.	Description		
4	83-4783	Oil filter	1	1
5	71-3316	Sump plate	1	1
6	83-2829	Gasket	2	2
7	60-2330	Washer 7	4	4
8 .	21-2109	Stud sump plate to frame	1	4
5 6 7 8	14-1302	Nut Summer Summer	4	4
10	82-5343	Drain plug	1	1
11	70-1335	Copper washer - Drain plug	- ;	1
12	71-7176	Oil junction block	1	1
13	71-3754	Joint washer	1	1
14	21-1908	Nut 7	i	1
15	70-3446	Washer Junction to block to crankcase	i	1
16	71-3550	Rocker oil pipe	1	1
17	70-1335	Washer	4	4
18	21-0550	Nut	2	2
19	71-3551	Rocker feed pipe	1	2
20	70-6848	Clip - rocker feed pipe	2	2
21	71-7058	Oil return pipe		1
22	70-6848	Clip - return pipe	2	2
23	82-9073	Clip - feed pipe	1 2 2	2
24	71-7015	Oil feed pipe	1	. 1
25	83-7154	Oil tank vent pipe - to rocker box	1	1
26	83-7323	Breather pipe - crankcase to air box	1	1
27	83-7703	Breather tower	1	1
28	83-7148	Banjo union	1	1
29	70-1465	Washer - banjo union	1	1
30	60-2252	Clip - breather pipe to adaptor	1	1
31	60-7117	Clip - breather pipe to banjo	1	. 1
32	83-7151	Cap - breather tower top	1	1
33	14-0213	Bolt - breather tower to air box	1	1
34	14-1901	Nut - breather tower to air box	1	1
35	70-2441	Washer - breather tower to air box	1	1

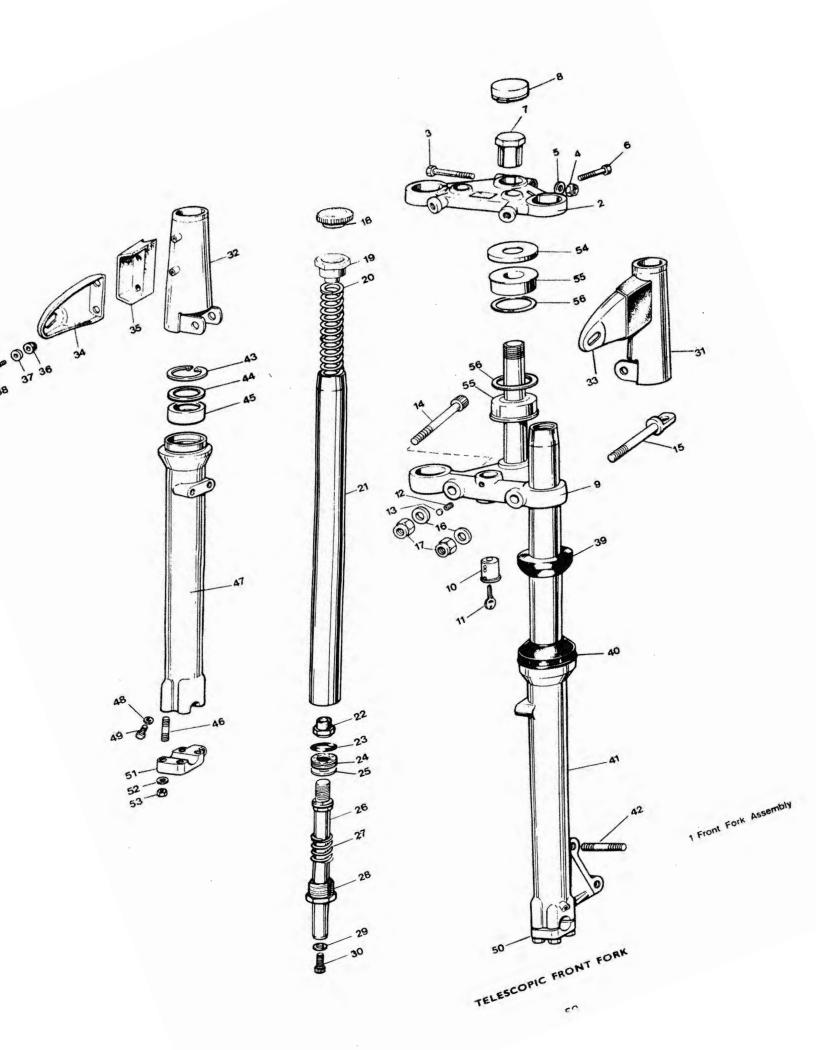

TELESCOPIC FRONT FORK

QUANTITY TR7 T140


Ref. No.	Part No.	Description	
1	97-7111 97-7107	Fork Assy - less Gaiter Fork assembly - c/w gaiters	i 1
2 3 4 5 6 7 8	97-7081 14-0234 14-1303 60-2331 14-1034 97-7070 97-7071	Top yoke Pinch bolt Nut Washer Cap screw Steering stem nut Cap steering stem nut	1 1 1 1 1 1 1 1 2 2 1 1
9	97-7071	Bottom yoke & stem	1 1
10 11 12 13 14 15 16	60-7271 60-0623 21-0578 97-2266 14-0237 97-4476 83-2184 14-1303	Lock c/w 2 keys neiman type Key (state serial no.) Grub screw lock fixing Sealing washer Pinch bolt - right Eye bolt - left Washer Nut	1 1 As required 1 1 1 1 1 1 1 1 4 4 2 2
18 N/I 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33	97-7034 97-4259 97-4387 97-4011 97-4380 97-4012 97-4003 97-4020 97-4010 97-4325 97-4009 97-4076 97-4004 14-1019 97-4480 97-4481	Cap screw assembly c/w insert Insert self adhesive Top nut Main spring Stanchion Nut - damper valve 'O' ring Damper valve Plain washer - damper valve Damper tube Recoil spring End plug Sealing washer Damper fixing screw Outer cover left Outer cover right Headlamp bracket left	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2

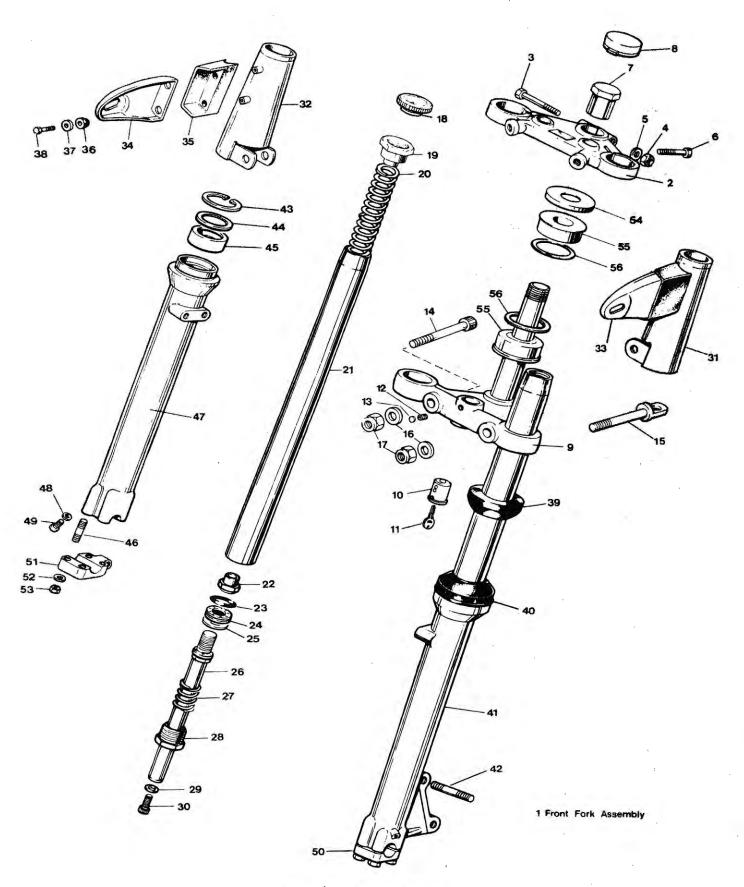

TELESCOPIC FRONT FORK

TELESCOPIC FRONT FORK

					T140
Røf. No.	Part No.	Description			
34	97-4203	Headlamp bracket		1	1
35	97-2208	Rubber mounting		2	ż
36	97-2209	Rubber buffer		4	Ā
37	97-2210	Backing washer		2	2
38	21-2095	Bolt - attachment		2	2
39	97-4461	Rubber ring outer		2	2
40	97-4002	Scraper sleeve		2	2
N/I	97-1510	Gaiter		2	2
41	97-7088	Bottom member LH		1	1
42	21-2189	Stud - caliper		24222212	ż
43	60-7269	Circlip		1	1
44	97-7093	Retainer		1	i
45	97-7079	Oil seal		1	2 4 2 2 2 2 1 2 1 1 1 1 2 2 2 1
46	21-2102	Stud - spindle		2	ż
47	97-7089	Bottom member RH		ī	1
43	60-7269	Circlip		1	1
44	97-7093	Retainer	,	1	1
45	97-7079	Oil seal	•	1	1
46	21-2102	Stud - spindle		2	2
48	97-3893	Washer - drain plug		2	2
49	97-3894	Drain plug		2 2 2	2
50	97-4456	Cap wheel spindle L.H.		1	1
51	97-4457	Cap wheel spindle R.H.		1	1
52	60-2428	Washer - cap		8	8
53	14-0302	Nut - cap		8	8
54	97-4028	Dust cover		1	1
55	97-4031	Bearing		8 1 2 2	8 8 1 2 2
56	83-2007	Backing ring		2	2
N/I	82-6784	Grommett throttle cable		1	1

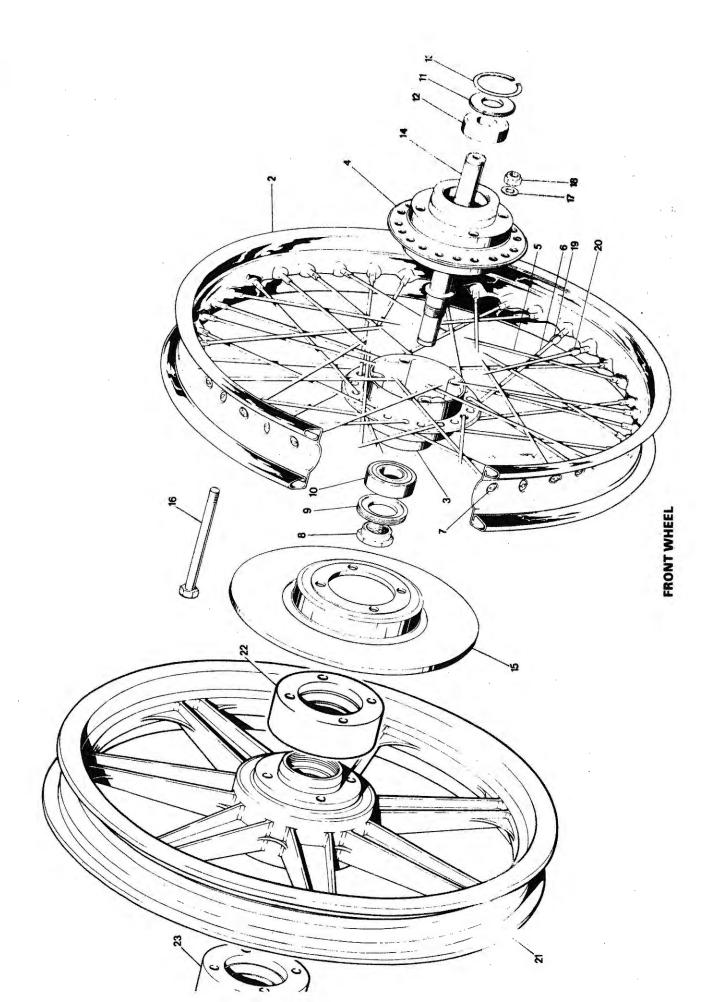

FRONT WHEEL


QUANTITY


Ref. No.	Part No.	Description	
1	37-7057	Rim, spokes and hub assy	1 1
2	37-4129	Rim WM2 x 19	1 1
3	37-7058	Hub - left half	1 1
4	37-7059	Hub - right half	1 1
5	37-4131	Spoke - outer	20 20
4 5 6	37-4130	Spoke - inner	20 20
7	37-2294	Nipple	40 40
8	37-4133	Nut - wheel spindle	1 1
8 9	37-4134	Lock ring - left	i i
10	37-7041	Bearing - left	1 1
11	37-1237	Dust cover - right	i i
12	37-7042	Bearing - right	1 1
13	57-0280	Circlip - right	1 1
14	37-4132	Spindle	1 1
15	37-4275	Disc	1 1
16	21-2207	Bolt 7	1 1
17	70-8770	Washer Disc to hub	8 8
18	14-1203	Nut J Disc to Hub	4 4
19	37-3969	Balance weight - short	As required
20	37-3970	Balance weight - long	As required
	0, 33,0	balance weight - long	As required

FRONT WHEEL-CAST ALLOY

21	37-7165	Front wheel less fittings	As Rea.
-22	37-7161	Bearing carrier L.H	1
23	37-7162	Bearing carrier R.H.	i

 
ALL OTHER PARTS AS SPOKED WHEEL.



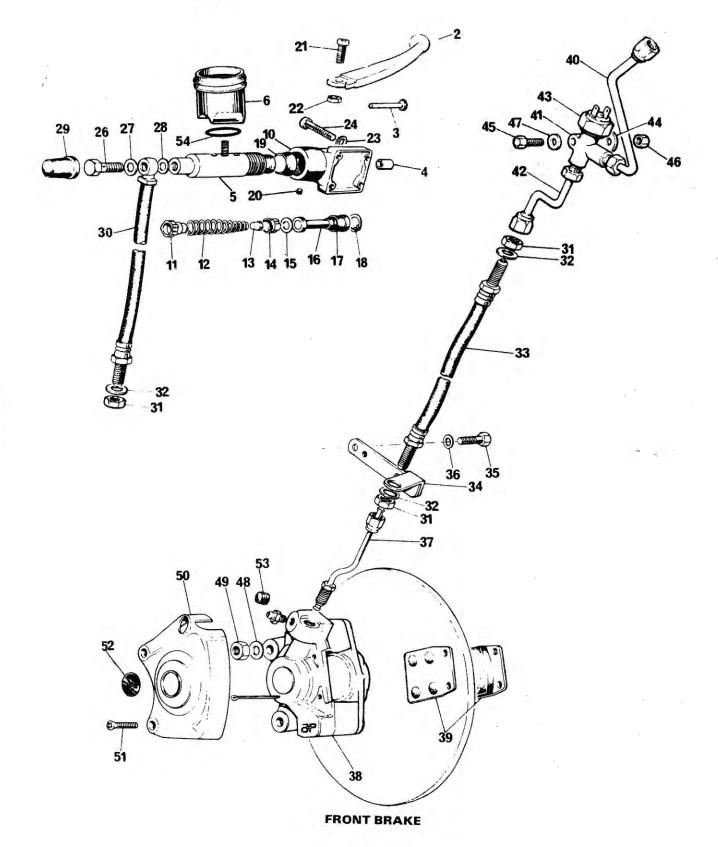

FRONT BRAKE

		Makers			
Ref. No.	Part No.	Part No.	Description	Quantity	Remarks
1	60-7163	4222-986	MASTER CYLINDER ASSY		1
2	97-5074	4222-300	Brake lever		
3	60-7158		Push rod		
4	60-7165		Bush for pushrod		
2 3 4 5 6 7 8	99-7027	4211-134	Barrel & stud assembly		i
6	60-4397	3251-821	Body Reservoir		i
7	60-4365	3847-248	Cap		i
8	60-4328	3853-238	Washer		1
9	60-4366	3818-747	Diaphragm		1
10	60-7164		Master cyl mtg body	- 1	1
1.1	AP.LTD	Use 99-2768	Trap valve		1—
12	AP.LTD		Spring	1.3	1 /
12	AP.LTD		Spring	10	1 /
13	AP.LTD		Spring retainer	9.0	1 /
14	AP.LTD	Use 99-276	8 Primary cup		1
15	AP.LTD	Use 99-276	8 Piston washer		1
16	AP.LTD		Piston	110	1 Refonly
17	AP.LTD	Use 99-276	8 Secondary cup		1
18	AP.LTD	K29103	Circlip		! \
19	AP.LTD	Use 99-276	8 Rubber boot] }
20	AP.LTD	3476-209	Grub screw	٠	!
21 22	21-2191 14-1201		Pivot screw		!
23	23-1555		Nut Washer		4
24	21-7038		Screw		4
26	60-4183	30420	Banjo bolt		7
27	60-4182	KL44518	Sealing washer		i
28	60-4184		Sealing washer		i
29	60-4626	3817-811	Rubber boot		i
30	60-7174		Hose, master cylinder/top yoke c/w boot		1 for high handlebar
30	60-4177	KL100717L	Hose, master cylinder/top yoke		1 For low handlebar
24	00 4400	W04400	v-9	9,	
31 32	60-4180		Locknut		3 3
33	70-2288	K19407	Washer		3
34	60-4175 83-7064	KL100613L	Hose, bottom yoke/fork leg		1
35	14-0103		Bracket - pipe support Bolt		Pracket to fork le
	14-0103		BOIL		Bracket to fork le and bridge piece
36	60-2427		Washer	1	4 Carla bridge prese
37	60-4178	ZTA2070N	Pipe, fork leg/caliper		1
38	60-4101	4261-476	CALIPER		1
39	99-2769	LDB750DC	230 Brake pad kit		1
Not illus.	99-7006	KL71594	Caliper seal kit		1
40	60-7177	0705 047	Pipe - top lug to 'T'		1
41	60-7176	3725-617	T piece		1
42 43	60-7178	201124610	Pipe - 'T' to middle lug		1
Not illus.	60-7155 70-1335	25H34619	Brake switch		1
44	97-7042		Washer brake switch Bracket 'T' piece		1
45	14-0105		Screw - bracket to 'T'		1
46	14-1301		Nut - bracket to 'T'		1
47	60-2329		Washer - bracket to 'T'		1
48	60-2331	_	Washer		2 D Colinarta auto
49	14-1303	_	Nut		2 Caliper to outer member
50	37-4263		Cover, caliper		2 / member
	21-2196		Screw, cover attachment		2
					-
51 52		-	Decal, caliber cover		1
51 52	60-4156 60-4266	363-400	Decal, caliper cover Cover, bleed nipple		1
51 52 53 Not illus. 54	60-4156	363-400 SSB930	Cover, bleed nipple Front master cyl. seal kit		1 1 1 · ·

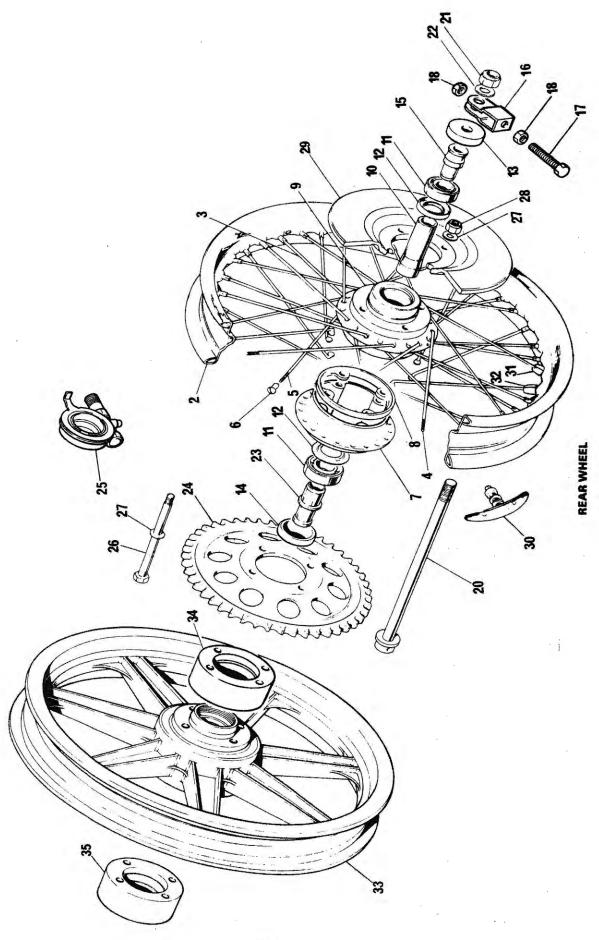


REAR WHEEL

QUANTITY


Ref. No.	Part No.	Description	
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 22 22 23	37-7061 37-7030 37-7031 37-7032 37-7034 37-7063 37-7062 37-7062 37-7051 37-7055 37-7055 37-7054 37-7111 37-7117 14-0118 14-0302 37-7113 14-1307 83-2266 37-7052	RIM, SPOKES AND HUB ASSY Rim WM3 x 18 Spoke Spoke Spoke Nipple Hub - left Centre spacer - hub Hub - right Spacer tube bearing Bearing left & right Retaining washer Lock ring RH Dust cover RH Spacer RH bearing Chain adjuster Screw - chain adjuster Nut - chain adjuster Spindle Nut - spindle Washer - spindle nut Spacer LH bearing	1 1 1 1 20 20 10 10 10 40 40 1 1 1 1 1 1 1 1 1 1 1 1
24 24 25 26 27 28 29 30 31 32	37-7064 37-7072 60-7091 21-7041 70-8770 14-1203 37-4275 37-3468 37-3969 37-3970	Sprocket 47 tooth Sprocket 45 tooth Speedo drive gearbox Bolt - disc/sprocket to hub Washer - bolt and nut Nut - bolt Disc Securing bolt Balance weight - short Balance weight - long	1 1 A A 1 1 4 4 8 8 4 4 1 1 1 1 As required As required
33 34 35	37-7166 37-7163 37-7164	REAR WHEEL - CAST ALLOY Rear wheel less fittings Bearing carrier L.H. Bearing carrier R.H.	As Req. 1 1

ALL OTHER PARTS AS SPOKED WHEEL

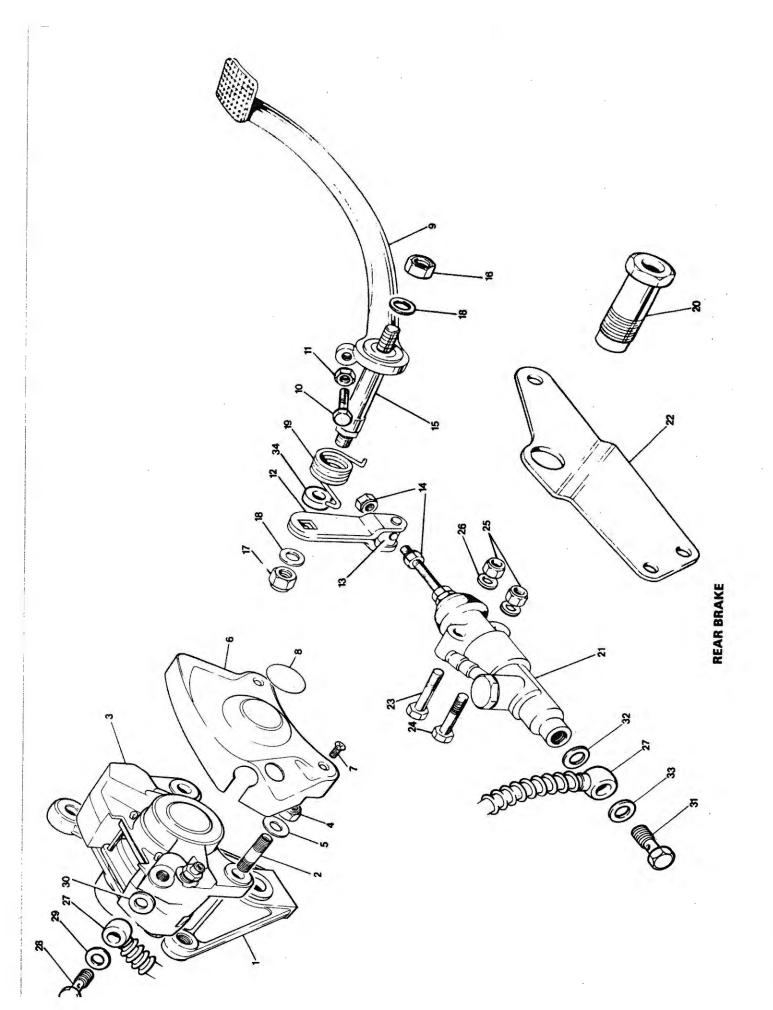


REAR BRAKE

Ref. No.	Part No.	Description	Quantity	Remarks
1	37-7124	Rear caliper mounting plate	1	
1 2 3 4 5 6 7 8 9	21-2189	Stud - caliper to plate	3	2
3	60-4101	Caliper		
4	14-1303	Nut - caliper to mounting plate stud		2
5	60-2331	Washer, for nut		2
6	37-4263	Cover - caliper	1	
7	21-2196	Screw - cover	2	2
8	60-4156	Decal - cover		
9	83-7560	Brake pedal		
10	14-0103	Screw, adjuster - stop light	1	
11	14-0301	Nut, adjuster screw	4	
12	83-7003	Trunnion lever		I.
13	83-7024	Trunnion		
14	21-7006	Adjuster nut, push rod		5/16" UNF shouldered
15	83-7046	Spindle, rear brake pedal		
16	14-1903	Nut, brake pedal spindle, outer		:
17	14-1303	Nut, brake pedal spindle, inner		
18	60-2331	Washer, for nut		2
19	83-7016	Return spring, brake pedal		i .
20	83-7163	Pivot bolt		İ
21	60-4401	Master cylinder complete		ĺ
22	83-7567	Mounting plate, master cylinder		ĺ
23	14-0221	Bolt master cylinder fixing - top		1
24	21-7007	Bolt, master cylinder fixing - bottom		1
25	14-1302	Nut,		2
26	60-2330	Washer for nut		2
27	60-7233	Brake hose	7	1
28	60-7236	Banjo bolt - caliper		1
29	60-4184	Sealing washer - thin		1
30	37-7100	Sealing washer - thick		1
31	60-4183	Banjo bolt - master cylinder		1
32	60-4182	Sealing washer		1
33	60-4184	Sealing washer under head		1
34	83-7015	Boss-spring retainer		1

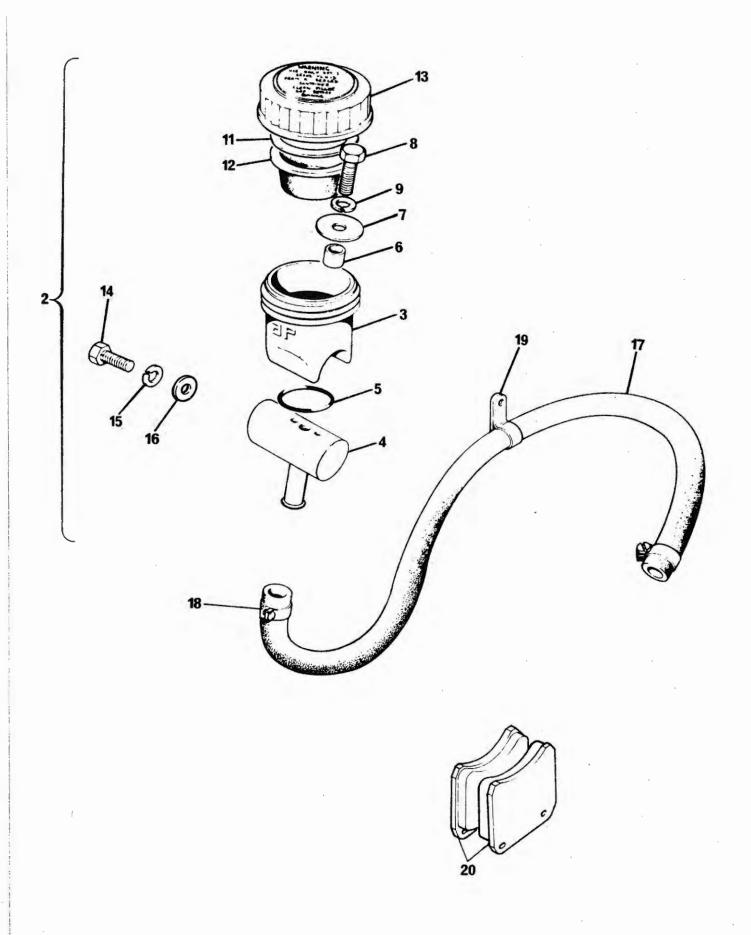


REAR BRAKE (continued)

	4000	Makers			
Ref. No.	Part No.	Part No.	Description	Quantity	Remarks
2	83-7521		Reservoir assy		1
2 3 4 5 6 7	60-4397		Reservoir Body		1
4	83-7501		Mounting, reservoir c/w pipe		i
5	60-4374	3855/814	'O' ring		1
6	83-7533		Distance piece		1
	60-4399	3512/305	Washer	1.5	1
8 9	14-0102		Bolt, body to mounting		1
9	60-2427		Spring washer for bolt		1
11	60-4328		Washer, paper		1 .
12	60-4366	3818/747	Diaphragm		
13	60-4365	3847/240	Filler cap		i
14	14-0101		Bolt, mounting to side panel		
15	60-2427		Washer, spring		
16	60-2338		Washer, plain		i `
17	60-7248		Hose, reservoir to master cylinder		i
18	60-7030		Clip, hose		ż
19	83-7049		Clip, hose retaining		ī
NI	99-2768		Master cylinder seal kit		
20	99-2769		Brake pad kit		
NI	99-7006	KL71594	Caliper seal kit		

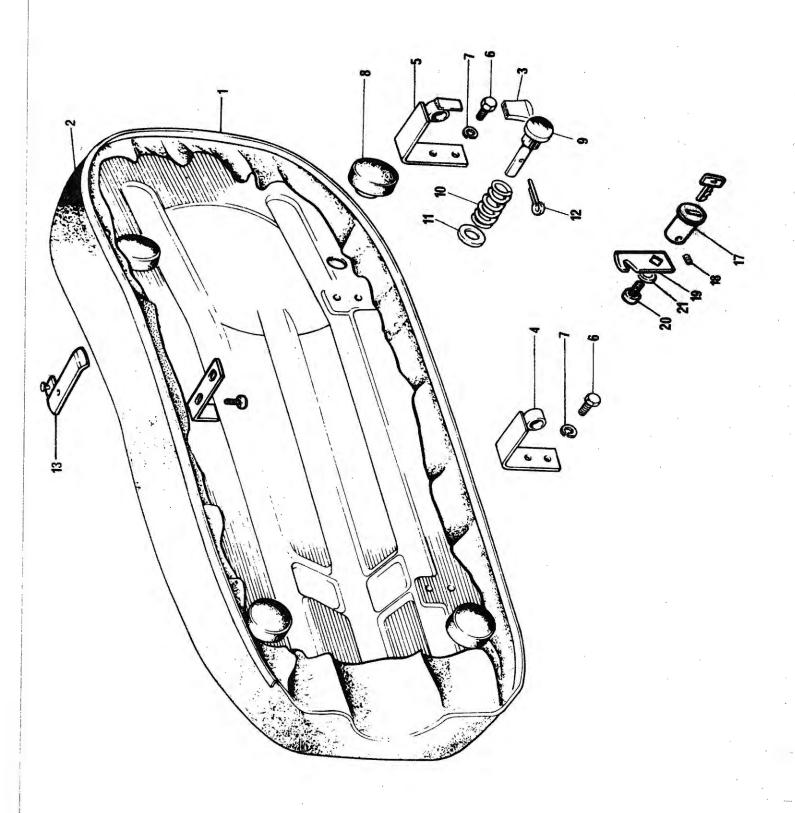


TWIN SEAT

Part No. Descriptio	II.
1 83-7391 Twinseat-use with 2 · 8 gallor	tank K/S 1
1 83-7726 Twinseat-use with 2 · 8 gallor	tank E/S
1 83-7598 Twinseat-use with 4 · 0 gallor	tank K/S
2 83-7893 Twinseat-use with 4 · 0 gallor	tank F/S
	nailon tank 1
2 83-7595 Cover twinseat use with 4 · 0	gallon tank 1
3 83-7544 Plastic sleeve - seat hinger rea	ganon tank
4 83-4782 Hinge - twinseat front	" i
5 83-1542 Hinge - twinseat rear	. 1
2 83-7793 Cover twinseat use with 2 · 8 2 83-7595 Cover twinseat use with 4 · 0 3 83-7544 Plastic sleeve - seat hinger rea 4 83-4782 Hinge - twinseat front 5 83-1542 Hinge - twinseat rear 6 14-0101 Bolt - hinge 7 60-2417 Washer - spring 8 82-9093 Rubber buffer 9 82-7560 Plunger & knob	4
7 60-2417 Washer - spring	4
8 82-9093 Rubber buffer	4
9 82-7560 Plunger & knob	7
10 82-4228 Spring	. 1
11 71-3749 Plain washer	i
12 60-2720 Split pin	i
NI 60-7159 Transfer neg earth	i
N1 60-7226 Data label	
13 83-7329 Catch plate seat	1
14 83-7276 Screw plate fixing	1
NI 14-1301 Nut	i
NI 60-2329 Washer	1
17 60-7215 Twinseat lock assy c/w keys	1
18 21-7049 Grub screw - lock retaining	1
19 83-7328 Catch plate - lock	1
20 97-3894 Screw - catch plate to lock	1
21 97-1388 Washer	1
NI 60-7071 Data label	. 1

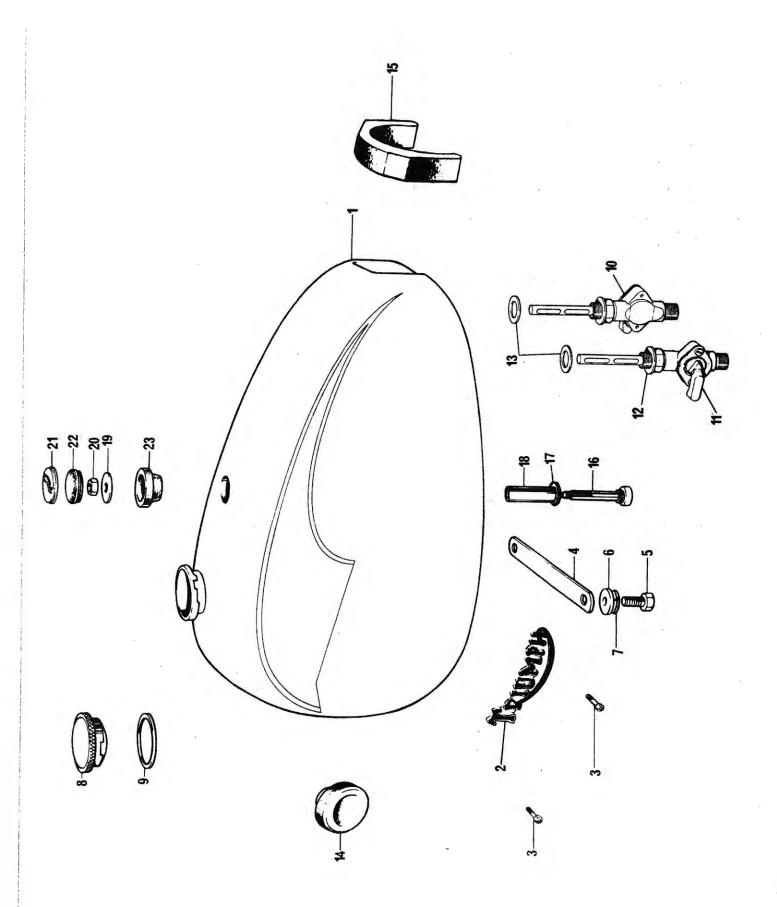


PETROL TANK

Ref. No.	Part No.	Description	
1	83-7949	Petrol tank 2 · 8 gallSilver blue-black	1
1	83-7950	Petrol tank 2 · 8 gall - Black-Candy Apple	1
1	83-7951	Petrol tank 2: 8 gallSteel Grey-Black Petrol tank 2: 8 gallBlack-Gold line	1
1	83-7 952	Petrol tank 2; 8 gallBlack-Gold line	1
1	83-7898	Petrol tank 2 · 8 gall - Smokey Flame-Ivory	1
1	83-7899	Petrol tank 2 · 8 gallSmokey Blue-Silver	1
1	83-7592	Petrol tank 4 · O gallSilver Blue-Black	1
i	83-7297 83-7591	Petrol tank 4 · O gallBlack-Candy Apple	1
1	83-7597	Petrol tank 4 O gallSteel Grey-Candy Apple	1
i	83-7900	Petrol tank 4 · 0 gallBlack-Gold line Petrol tank 4 · 0 gallSmokey Flame-Gold line	1
1	83-7901	Petrol tank 4 · 0 gallSmokey Blue-Gold line	1
	60-7412	Badge LH-use with 7949/7950/7951 Tanks	1
2 2 2 2 2 3	60-7413	Badge RH-use with 7949/7950/7951 Tanks	1
2	60-7303	Badge LH/RH use with all 4 · 0 gall, tanks	2
2	60-7414	Badge LH-use with 83-7952 tank	1
2	60-7415	Badge RH-use with 83-7952 tank	1
3	82-7888	Screw-chrome 3/8" UH-use with 83-7898/99, 7949,	
•	00 7000	7950, 7951	2 2 2 4
3	83-7960 83-1339	Screw-black 3/8" UH-use with 83-7949, 7950, 7951	2
3	83-7960	Screw-chrome 3/4" UH-use with 83-7898, 7899 Screw-black 3/8" UH-use with 83-7952	2
3 3 3 3	21-2064	Screw-chrome 3/8" UH use with all 4G tank except	-
		83-7597,	4
3 4	21-7048	Screw-black 3/8" UH use with 83-7597	4
4	B3-4395	Tie strap - tank use with 2 · 8	1
4	83-4118	Tie strap - tank use with 4 · 0	1 2 2 2 1
5 6	14-0113 60-2321	Bolt - tie strap	2
7	60-2428	Washer plain - bolt Washer spring - bolt	2
8	83-3875	Petrol filler cap	1
9	82-4048	Joint washer - filler cap	1
10	60-7266	Petrol tap - main	1
11	60-7267	Petrol tap - reserve	
NI	21-7023	Sealing tape - tap thread	2
12 13	70-7351	Washer bonded - tap seal	1 2 2 2 2 2 2 2 1
14	83-0002 83-4931	Washer plain tap nut	2
15	83-4932	Steady rubber Mounting rubber	2
NI	60-3538	Fixing tape - mounting rubber	5
16	83-4930	Centre fixing bolt	1
17	60-2320	Washer - lower	1
18	82-9063	Distance tube	. 1
19	83-3814	Washer - upper	1
20	14-0302	Nut - fixing bolt	1
21 22	83-4776 97-5061	Badge - centre Grommet for badge	1
	37-3001	Grommet for badge	- 10
23	83-4934	Rubber - centre mounting	1

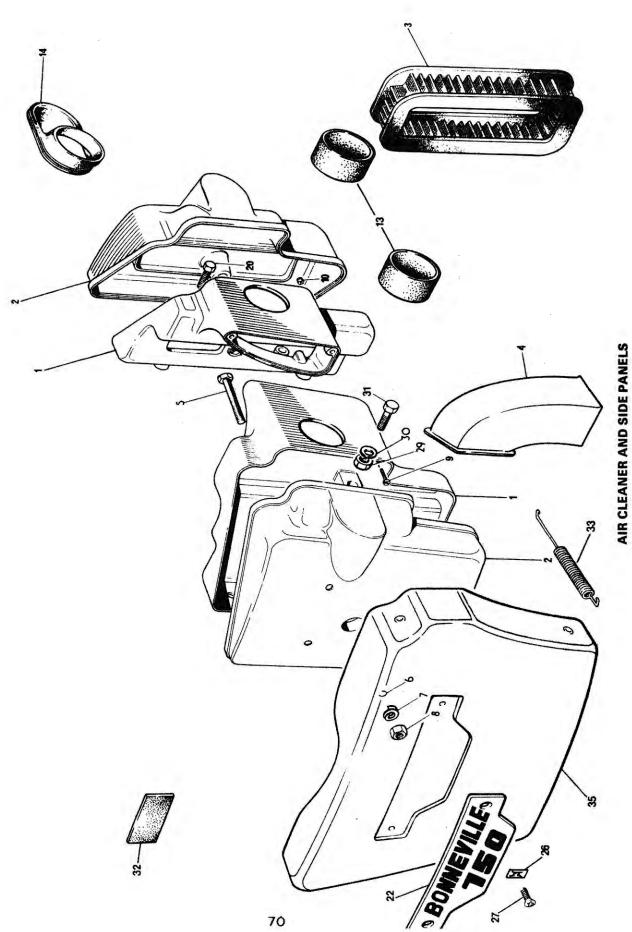

AIR CLEANER AND SIDE PANELS


			TR7 RV	QUANTITY T140 E
Ref. No.	Part No.	Description		
1 1 2 2 1 1 1 2 2 3 4 4 5 6 7 8 9 10 13 14 Not illus. Not illus. 17 18 19 20 22 NI	83-7888 83-7890 83-7204 83-7205 83-7885 83-7886 83-4807 83-4808 60-4265 83-5448 83-5449 14-0221 82-8245 60-2438 14-0302 60-3539 21-0501 71-7166 83-5161 71-1860 60-3975 83-7498 83-7495 82-6673 14-0102 83-7316 83-7334 60-7386	Body - left Body - right Cover - left Cover - right Body - left Body - right Cover - left Cover - left Cover - right Element Air intake tube, left Air intake tube, right Bolt Retainer Washer Nut Screw	1 1 1 1 1 1 2 2 2 2 2 2 2 1 1 1 1 1 1 2 4 2 2 2	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
26 27 29 30 31 32 33 34 35 34 35 31 31 31 31 31 31 31 31 31 31 31 31 31	21-7020 82-4129 14-1302 60-2321 14-0218 82-7380 83-7070 83-7896 83-7897 83-7305 83-7645 83-7891 83-7892 83-7910 60-7397	Spire nut Screw Nut Plain washer Bolt Rubber pad - under styling panel Spring - styling panel fixing Styling side panel LH Smokey Blue Styling side panel RH Smokey Blue Styling side panel L.H. Black Styling side panel LH Smokey Flame Styling-side panel LH Smokey Flame Styling-side panel RH Smokey Flame Styling-side panel RH Smokey Flame Rubber-panel fixing Retainer-rubber to frame	4 4 2 2 2 2 2 Asr Asr Asr Asr Asr 2 2	eq. eq. eq. eq.

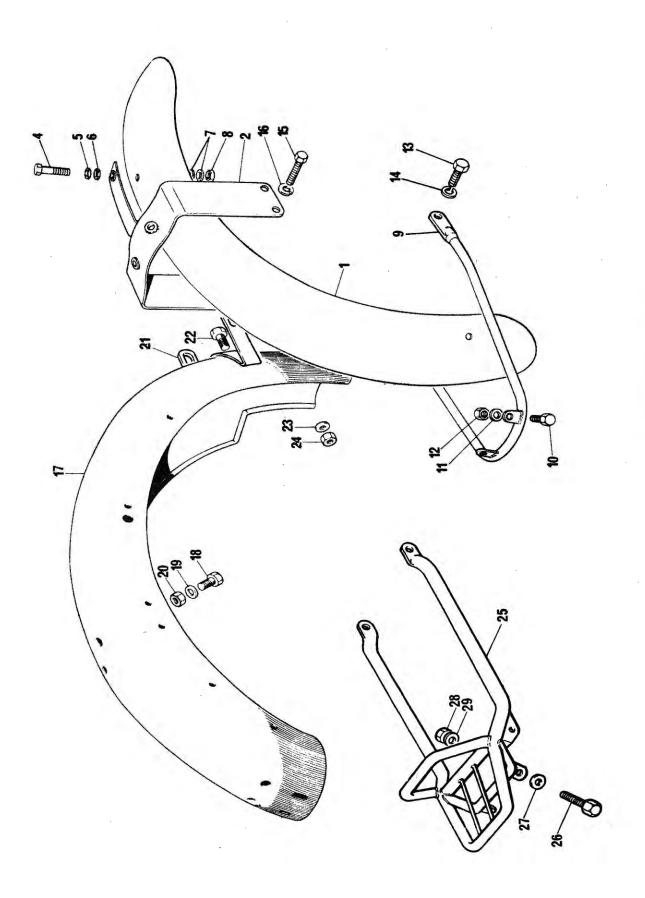

MUDGUARDS - FIXINGS


QUANTITY

Ref. No.	Part No.	Description	
1	97-7138	Front mudguard	1
2	97-7004	Bridge piece assembly	1
5	14-2205 21-7025	Screw, bridge piece to blade Washer plastic	3
8 9 10 11 12 13 14 15	14-1201 97-4552 14-0101 60-4245 14-1201 14-6114 60-2428 14-0103 60-2427	Nut - screw, bridge to blade Rear stay Bolt, rear stay to blade Washer Nut Bolt, stay to spindle cap Washer spring Bolt, bridge piece to fork leg Washer spring	3 1 2 2 2 2 2 2 4 4
17 18 19 20 21 22 23 24	83-7830 14-0101 60-2329 14-1301 83-2796 14-0114 60-2330 14-1302	Rear mudguard Bolt Washer Nut Lower front bracket Bolt Washer Mudguard front fixing Mudguard front fixing Nut	1 2 2 2 2 1 2 2 2 2
25 26 27 28 29 N/I	83-7547 14-0102 60-2329 14-1301 21-7025 60-7206	Grab rail Bolt Washer Nut Washer plastic Label - grab rail rack	1 2 2 2 2 1

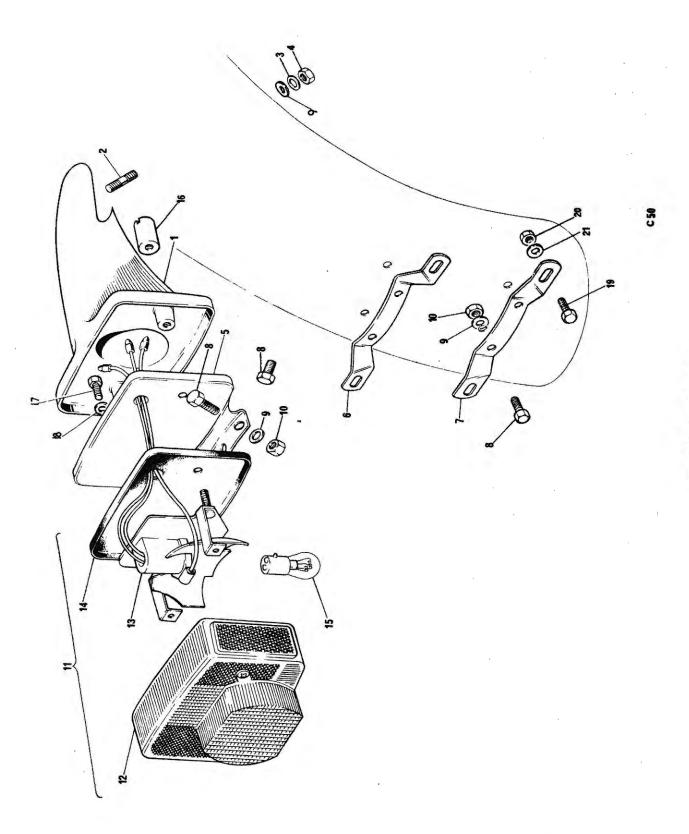


TAIL LAMP AND SUPPORT


		Makers			
Ref. N	o. Part No.	Part No.	Description	Quantity	Remarks
1	83-7094		Tail lamp carrier	1 _	
2	21-2225	-	Stud	1 7	Tail lamp support
3	60-4250	-	Washer	1 (to fender
2 3 4 5 6 7 8 9	14-0301	-	Nut	ر 1	
5	83-5001		Support plate	1	
6	83-4784	-	Rear No. plate bracket - top	1	
7	82-6850	-	Rear No. plate bracket - bottom	1	
8	14-0102	-	Bolt	4 ¬	No. plate brackets
9	60-2329		Washer	5	and support plate
10	14-1301		Nut	4 1	to fender
11	06-8029	56515	STOP TAIL LAMP	1	less side reflex
12	06-8058	54585314	Lens	1	Less side reflex
13	99-7065	54584931	Base assembly	1	
14	99-7066	54583924	Gasket	1	
15	99-0542	380	Bulb	1	
16	83-4800	-	Cleeve nut, lamp to back plate	2	
17	14-7804	-	Screw support plate to carrier	1	
18	70-1612	-	Serrated washer	1	
NI	83-4806	-	Wiring protector	1	
NI	60-4103	-	Grommet, flasher wire	1 /	
				1	Not illustrated
NI	83-5105	-	'U' grommet, lamp carrier	2 (
NI	97-0961	-	Grommet, mudguard for wiring	2 2	
NI	60-4440	-	Grommet, flasher wires	2 —)
19	14-0101		Bolt - number plate attachment	4	
20	14-1301		Nut	4	
21	60-2329		Washer	4	
11	99-7045	56513	STOP TAIL LAMP	1	c/w side reflex
12	99-7046	54584930	Lens	1	c/w side reflex
13	99-7056	54584931	Base assy.		
14	99-7066	54583924	Gasket		
15	99-0542	380	Bulb		

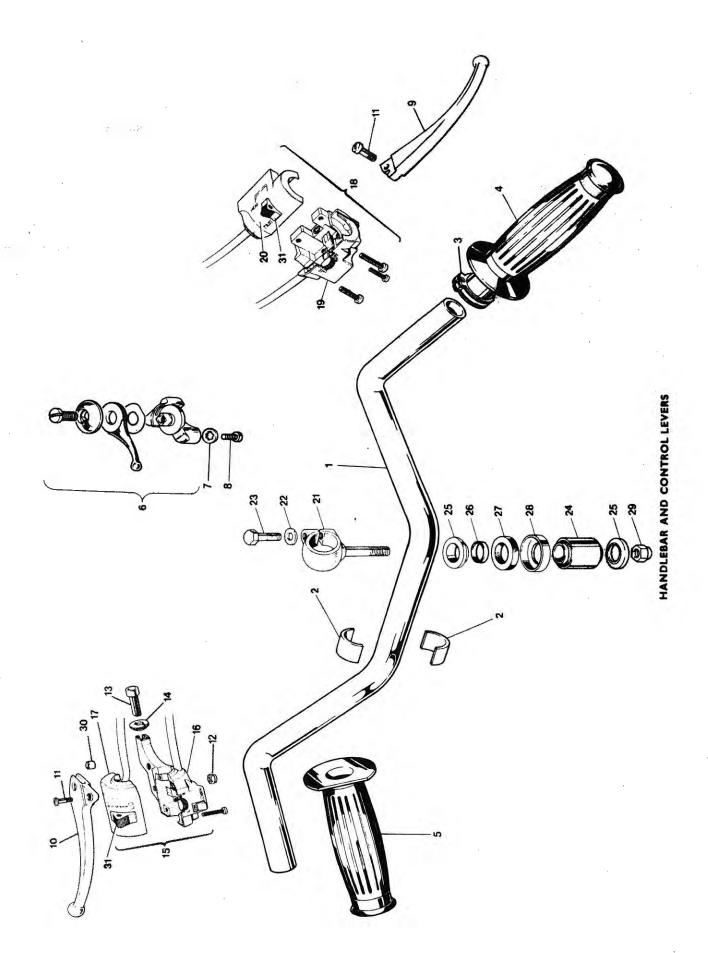


HANDLEBARS AND CONTROL LEVERS

Ref. No.	Part No.	Makers Part No.	Description	Quantity	Remarks
	97-7040		Handlebar	1	HIGH BAR
1	97-7040		Handlebar	. 1	LOW BAR
2	97-1425		Sleeve, handlebar mounting	4	
2	60-7144		TWIST GRIP c/W GRIP	1	
3	97-2125		Grip, right hand	1	
5	97-2142		Grip, left hand	. 1	
1 2 3 4 5 6 6A	60-3567		AIR CONTROL LEVER	1	
64	60-3246		Cold start control lever		10 only
7	70-1612	•	Shakeproof washer	2 2 1	
7 8	60-3896		Screw	2	
9	97-5074		Front brake lever blade	, 1	
10	97-7035		Clutch lever blade	. 1	
11	21-7036		Pivot pin - clutch lever	1	
11	21-2191		Pivot pin - brake lever	<u>1</u>	
12	14-1901		Nut-Pivot pin	2	
13	60-3585		Adjuster	1	
14	60-3586		Lockring	1	
15	60-7329		Handlebar switch L.H.	1	
16	99-7137		Switch bottom half L.H.		
17	99-7136		Switch top half L.H.	1 K/S	only .
18	60-7327		Handlebar switch R.H.	1 K/S	
19	99-7135		Switch bottom half R.H.	1	Only
20	99-7134		Switch top half R.H.	2	**
21	97-2291		Handlebar eye bolt		
18	60-7328		Handlebar switch RH	1 E/S	
19	99-		Switch bottom half RH	1 E/S	only
22	82-1335		Washer	2 2 2 4 2 2 2 2 1	
23	21-0589		Bolt	2	7
24	97-1527		Metalastik bush	2	A 24
25	97-1529		Hemispherical washer	4	
26	97-1581		Distance piece	2	.47"
27	97-1580		Rubber washer	. 2	
28	97-2221		Cup	. 2	. 4.
29	14-1303		Nut	1	
30	97-7053		Pivot bush - clutch lever	1	
NI	60-7249		Mirror L & R.H.	4	
N/I	60-7201		Cable tie	2	
31	99-7138		Knob c/w screw and slider	2	

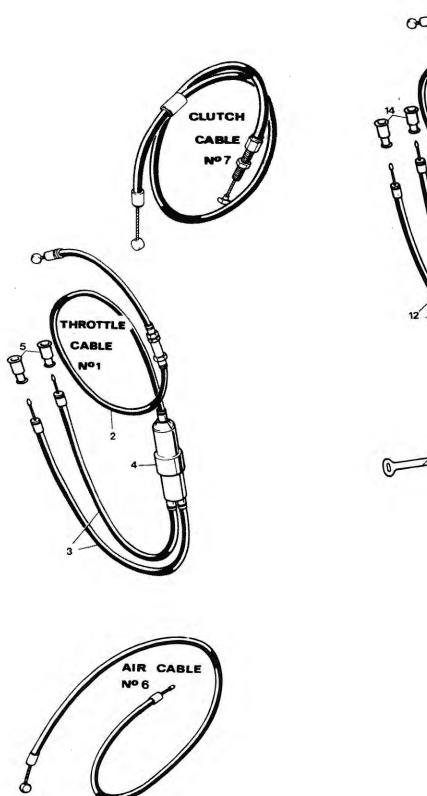

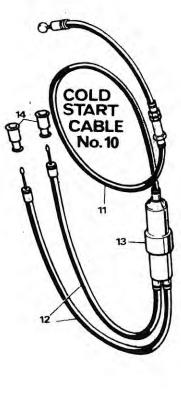


 

CONTROL CABLES

CONTROL CABLES


Ref. No.	Part No.	Description	Quantity	Remarks
1	60-7151	Throttle cable cte	1	T140 High bar
2	60-7149	Throttle cable T/Grip to jucnt block	1	T140 High bar
3	60-7084	Throttle cable junct block to carb	2	T140 High bar
1	60-7145	Throttle cable cte	1	T140 Low bar
2	60-7150	Throttle cable T/Grip to junct block	1	T140 Low bar
3	60-7084	Throttle cable junct block to carb	. 2	T140 Low bar
2 3 4 5	60-0685	Throttle cable Junction block	1	T140
5	60-7118	Sheath - Throttle cable adjstr	2	T140
Not Illus.	60-7184	Throttle cable cte	1	TR7 High bar
Not Illus.	60-7183	Throttle cable cte	1	TR7 Low bar
6	60-4194	Air control cable	1	TR7 universal
7	60-3925	Clutch cable	1	T140-TR7 High bar
7	60-4168	Clutch cable	1	T140TR7 Low bar
8	60-4254	Cable clip aluminium	8	
9	60-7202	Cable clip plastic	21	
NI	60-4258	Cable clip rubber	1	
10	60-4194	Cold start cable CTE	1	T140 Universal
11	60-7388	Cold start cable-lever to junction box	i	T140 Universal
12	60-7084	Cold start cable-junction box to carb.	2	T140 Universal
13	60-0685	Junction box	1	T140 Universal
14	60-7118	Sheath-cable adjuster	2	T140 Universal

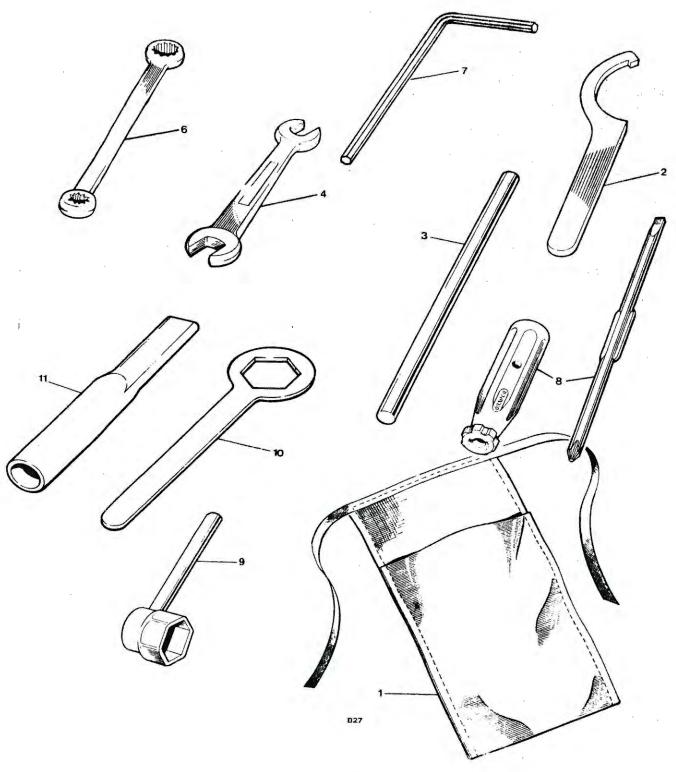

TOOLKIT


TOOLKIT

Ref. No.	Part No.	Description	Quantity Remarks
1 1 2 3 4 6 7 8 9 10	60-7166 60-0291 60-2184 60-7041 60-2084 60-1907 60-7167 60-0767 60-1050 60-7068 60-7069	TOOLKIT COMPLETE Tool roll Damper unit spanner Tommy bar, for rear wheel Spanner - open end Ring spanner Key for hex socket screw Screw driver Plug spanner Rear wheel spanner Lever for spanner	1 1 1 1 1 1 1 1 1

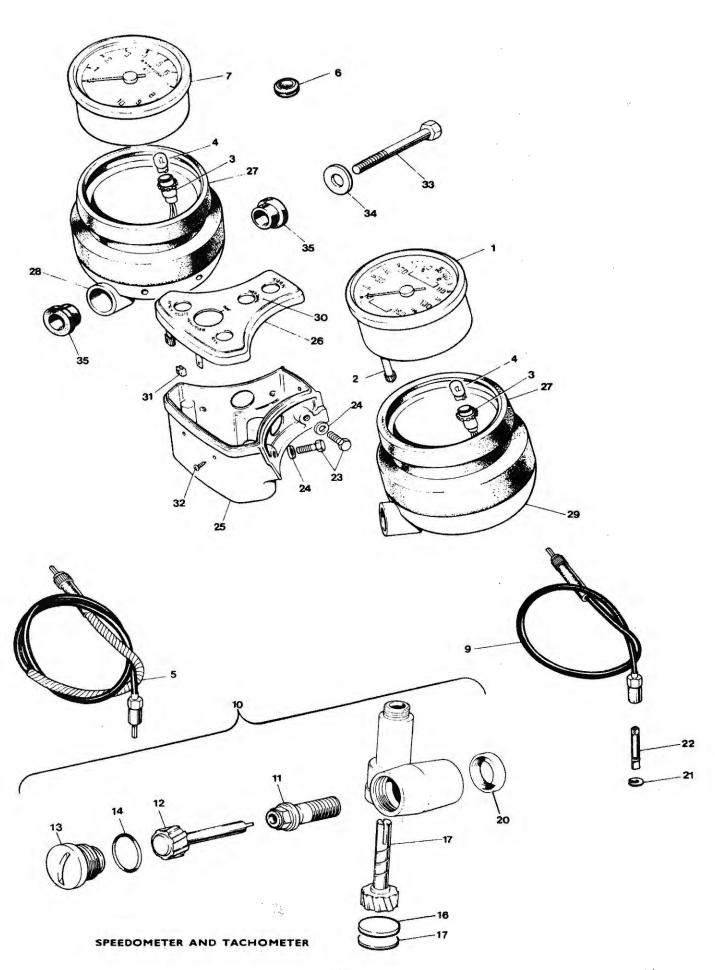

SPEEDOMETER AND TACHOMETER


Ref. No.	Part No.	Makers Part No.	Description	Quantity	Remarks
1 1 1 2	60-7272 60-7222 60-7270 60-7207		Speedometer head MPH85 - veglia Speedometer head MPH150 - veglia Speedometer head KPH250 - veglia Trip control	1 1 1 1	
4 5 6 7 9 10 11 12 13 14 15 16 17 20 21 22	99-7050 60-3376 60-7221 60-7223 60-0578 71-7011 70-9332 70-5157 71-2480 60-3355 71-2481 71-7012 71-2481 70-7351 60-0494 99-0173	31-371-39	Bulb Speedo cable assy Grommet - bulb holder Tachometer head - veglia Tachometer cable TACHOMETER GEARBOX Securing screw assy Driving gear End plug driving gear 'O' ring Driven gear Thrust cup Welch plug Sealing washer Circlip	1 1 2 1 1 1 1 1 1 1 1 1 1	
23 24 25 26 27 28 29 30 31 32 33 34 35	14-6104 60-2427 97-4577 97-5000 97-4573 97-4574 97-4575 60-4622 60-4503 21-0762 14-0235 60-2340 97-4588	31-371-39	Bolt carrier to s/w box Spring washer Switch box Panel assy - includes line 30 Rubber cup Instrument carrier LH Instrument carrier RH Identification sheet Spire nut Screw - panel to s/w box Bolt Plain washer Rubber bush	4 4 1 1 2 1 1 3 3 2 2 4	

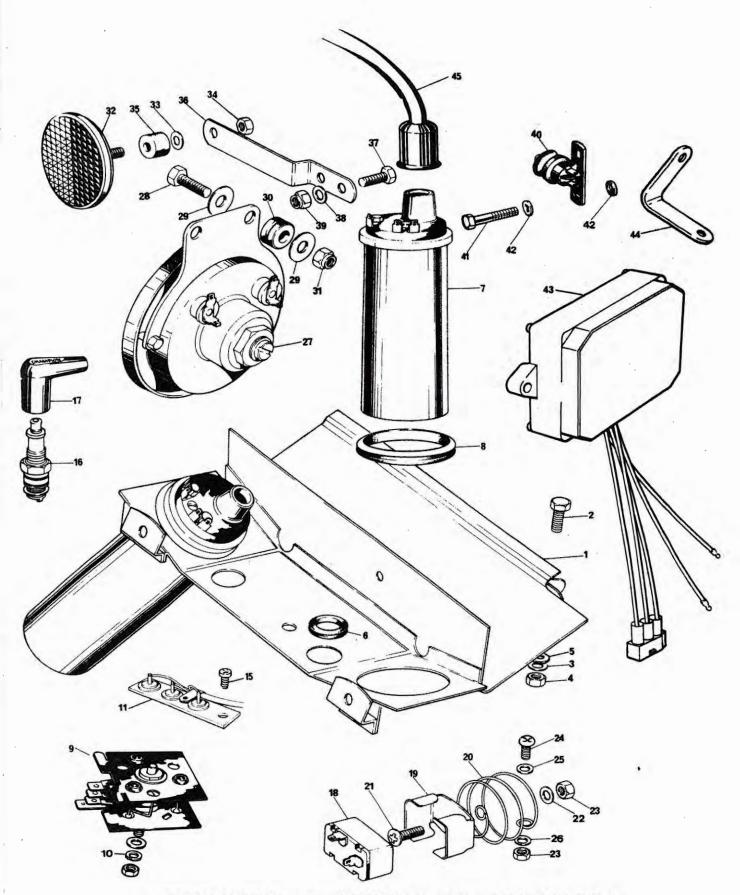

COIL, CAPACITOR PACK, FLASHER UNIT, ZENER DIODE AND HORN


ELECTRICAL COMPONENTS

Ref. No.	Part No.	Makers Part No.	Description	Quantity	Remarks
1	83-7502	-	Coil and tool tray assembly	1	
2	14-0102		Bolt	1 7	
2 3 4 5 6 7 8 9	60-2329		Washer	2 (Coil and tool tray
4	14-1301		Nut	1 }	attachment, rear.
5	70-7554		Rubber washer	iJ	attacimient, rear.
6	82-6784	-	Grommet, wiring harness		
7	60-7131	45220	Ignition coil (17-M-6)	5	*
Ŕ	82-9561	45220	Coil grommet	2 2 2	·
ă	99-7051	83539	Rectifier complete with nut	1	negative earth
10	70-3887	00000	Shakeproof washer	i	negative calti
11	60-7326		Diode pack-zener	1	
15	21-7084	49589	Screw-zener fixing	2	
16	60-7237	N5	Sparking plug	2	
17	60-0262	WC200	Plug cover	2 2 2	
17	60-7124		Plug cap - screened	2 2	
17	60-7125		Cover - for cap screened	2	
18	99-1201	35048	Flasher unit	1	
19	99-1204	54385091	Clip, flasher unit	1	
20	60-3614	54386637		17	
21	21-2079	-	Screw	1 }	Flasher unit
22	60-2391	-	Washer	1 (attachment
23	21-7009	-	Nut	2)	
24	21-2079		Screw - spring to tool tray	1	
25	97-1388	-	Plain washer	1	
26	60-2416	21522	Washer	2	
27	60-7067	70276	Horn		
28	14-0103	-	Bolt	27	Andrew Company
29	60-2347	-	Washer	4	Horn attachment
30	60-3161	•	Grommet	2	
31	14-1301	F7400	Nut	4 2 2 2 2 2 2 2 2 2	
32	99-1161	57183	Reflector - amber	2 -	
33	60-2416	•	Washer	2 1	Difference
34	82-3799	-	Nut	<i>2</i> }	Reflector
35	83-3522		Mounting subbox	2)	Mounting
36	83-3764	_	Mounting rubber Reflector bracket	2	Llee with A gall
30	03-3704	-	Herrector bracket	2	Use with 4 gall tank
37	21-2120		Bolt	27	Lank
38	60-2391		Washer	$\begin{bmatrix} 2 \\ 2 \\ 2 \end{bmatrix}$	Bracket to frame
39	21-0778		Nut	5	Bracket to frame
40	99-1028	34815A	Rear stop light switch 118SA	1	
41	21-7010	-	Screw, rear stop switch	2	
42	97-1388		Plain washer	2 4	
43	60-7130	-	Amplifier unit	1	
44	83-7869		Bracket-amplifier unit fixing		
NI	14-0102		Bolt-bracket fixing	2 2 2 2 2 2 2	
NI	60-2329		Washer-bracket fixing	2	
Ni	14-1301		Nut	2	
Ni	14-0102		Bolt-amplifier to bracket	2	
NI	14-1301		Nut-amplifier to bracket	2	
45	60-3923		HT cable	2	Non-screened
45	60-3923			2	C/W rubber sleeve
10	00-7120		HT cable-use with screened cap	2	S, 11 100001 01001C

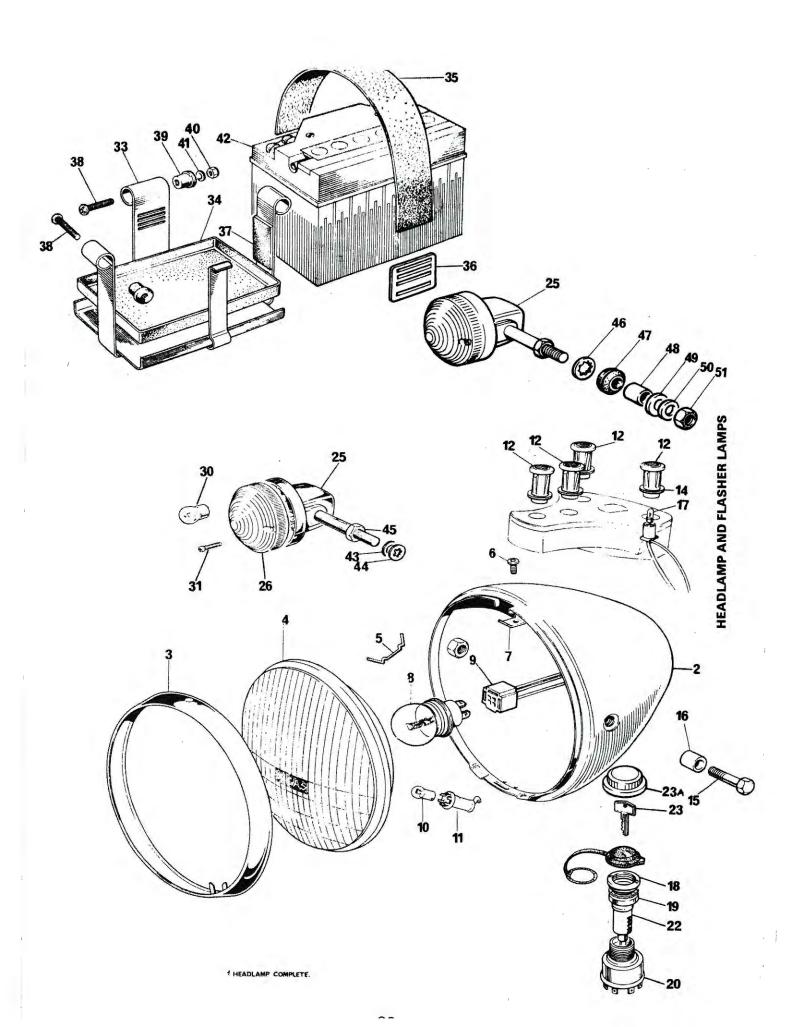

ELECTRICAL COMPONENTS

Her. No.	Part No.	Makera Part No.	Description	Quantity	Remarks
1 (99-7052	61386	Headlamp cte LH dip	1	left hand dip
1	99-7053	61387	Headlamp cte RH dip	1	right hand dip
2	99-7098	FF0040	Headlamp shell only	. 1	
3	99-0692	553248	Headlamp rim	1	latabased dis-
4	99-7010	54512672	Light unit		left hand dip
4	99-7060 99-0683	54522680 504665	Light unit	6	Right hand dip
5 6 7	99-1189	144921	Fixing wire Screw	1	
. 7	99-0690	534296	Plate	i	
8	06-8019	410	Main bulb 45/40 w	i	
9	99-7061	553738	Adaptor	1	
8 9 10	99-0584	989	Pilot bulb	1	
11	99-7064	54573590	Pilot bulb holder	1	
12	99-1208	54363454	Warning light, red	1	
12	99-1209	54363455	Warning light, green	1	
12	99-1207	54363453	Warning light, amber	1	
12 14	99-7054	54361250 54140331	Warning light, blue	2	
15	99-1210 99-7012	54115106	Sealing washer Bolt - headlamp mounting	2	
16	97-4125	54115100	Distance piece, headlamp bolt	2	
17	99-0537	281	Bulb, warning light	3 2 2 3	
18	97-7120		Ignition switch nut	1	
19	97-4596	143086	Ignition switch spacer	1	
20	99-7055	54531899	Ignition switch	1	
22	82-6981	-	IGNITION LOCK WITH KEY	1	Activities and activities
23	60-0622	-	Ignition key	1	State serial No.
23A	97-7123		Cap-ignition key	1	
24	60-7335	-	Cover, ignition switch	1	
25 25	60-4104 60-7172		FLASHER LAMP FRONT FLASHER LAMP REAR	2 2 1	
26	19-1191	54581638	Lens	1	
30	99-1192	382	Bulb	1	
31	99-1193	54123401	Screw	2	
33	83-7504		Battery carrier assembly	2	
34	82-8091		Battery tray moulding	2	E/S model
34	82-8091	-	Battery tray moulding	1	K/S model
35	82-9353	-	Retaining strap	1	
36	82-9355	-	Buckle	1	
37	83-7235	-	Protective strip	2 -	
38 39	83-2508 82-6039	-	Shoulder screw	. 3	Potton, parior
40	14-1301	Ī	Rubber bush Nut	3 3 1	Battery carier mounting
41	60-2329	_	Plain washer	1 -)
42	60-7088		Battery	1	K/S model
-	60-7317		Battery	1	E/S model
43	60-2332	4	Plain washer	1 2 2 4 1)
44	37-2331		Serrated washer	. 2	Flasher lamp
45	14-0404		Nut	4 -	stanchion Front.
NI	99-7056		Main wiring harness		
NI	60-7199		Earth lead - amplifier box	1	
NI	60-7198		Rear sub harness	2	
NI 46	60-7279		Earth lead - rear dir indicator	2 -	
46	83-7558 82-5753		Dimpled washer Grommet	2)
47 48	83-7559		Distance tube	2	
49	60-2350		Washer plain	2	Flasher lamp
50	60-2332		Washer plain	1 2 2 2 2 2 2 2 4	stanchion Rear.
51	14-0404		Nut	4)
-				_	

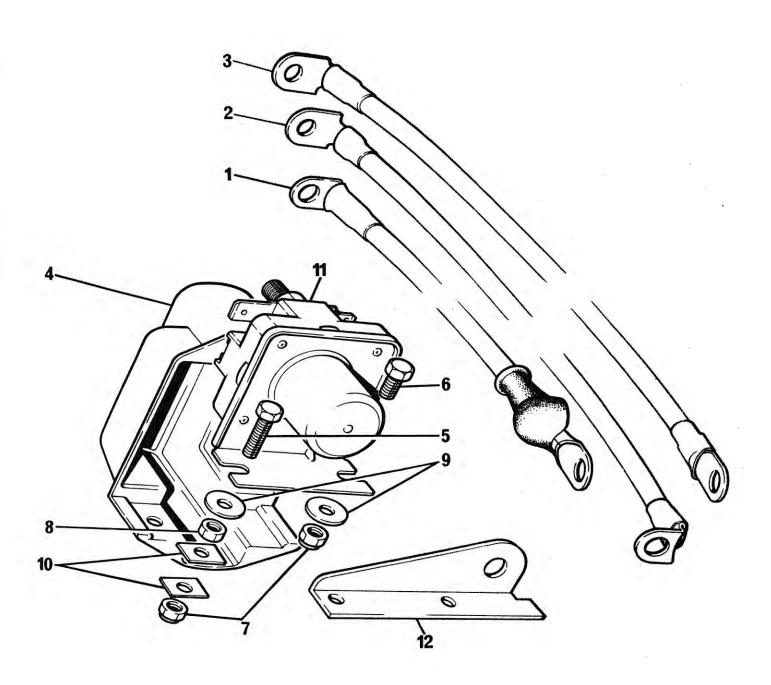

ELECTRICAL COMPONENTS

			Quantity
			TR7 T140
Ref. No.	Part No.	Description	VS ES
1	60-7320	Lead-starter to solenoid	1
2	60-7321	Lead-battery to solenoid	1
3	60-7322	Lead-battery to earth	1
4	83-7644	Cover-solenoid switch	1
5	23-1015	Screw-upper solenoid fixing	í
6	23-1012	Screw-lower solenoid fixing	i
7	23-2161	Nut-Solenoid cover and fixing	2
8	23-2001	Nut	1
9	97-1388	Washer	ż
10	21-7105	Washer-cover fixing	5
11	60-7318	Solenoid starter switch	1
12	83-7737	Bracket-solenoid fixing	i

EXECUTIVE TI40 E.S.

Parts additional or different from STD T140

PART NO.	DESCRIPTION	QUANTITY	REMARKS
	STYLING PANEL	s	
83-7760 83-7761 83-7923 83-7924 60-7364 83-7317	Styling panel L.H. red c/w transfer Styling panel R.H. red c/w transfer Styling panel L.H. blue c/w transfer Styling panel R.H. blue c/w transfer Transfer 'Limited Edition' Name plate for panel	1 1 1 2 2	
	FRONT MUD GUA	RD	
97-7126 97-7145	Front guard red Front guard blue	1	
	REAR MUD GUA	RD	
83-7759 97-7926	Rear guard red Rear guard blue	1	
	TWIN SEAT		
83-7911 83-7826	Twin seat Twin seat cover	1	
	PETROL TANK		
83-7762 83-7925 60-7358 21-7048	Petrol tank 4 gall red Petrol tank 4 gall blue Badge-petrol tank Screw for badge	1 1 2 4	
	FRONT FAIRING	G	
60-7359 60-7360 60-7404 60-7405 97-7127 97-7139 94-0236 97-7128 97-7129 21-1043 21-7098 83-7775	Fairing red c/w screen & fittings Fairing red c/w screen Fairing blue c/w screen & fittings Fairing blue c/w screen & fittings Fairing blue c/w screen Bracket-fairing top fixing L.H. Bracket-fairing top fixing R.H. Bolt L & R.H. bracket to top yoke Bracket-fairing bottom fixing L.H. Bracket-fairing bottom fixing R.H. Bolt fairing to bottom bracket Nut-dome for bolt Bracket-Indicator mounting	1 1 1 1 1 1 1 1 2 2	

EXECUTIVE T140 ES (Continued)

		-	
PART No.	DESCRIPTION	QUANTITY	REMARKS
	PANNIERS & TOP	BOX	
83-7766 83-7927 83-7767 88-7768 83-7770 83-7771 83-7772 83-7773 83-7774 83-7775 23-1040 23-1557 23-1033 23-1556 83-7776 83-7777 83-7928 83-7929 83-7778	Pannier set & top box c/w fittings red Pannier set & top box c/w fittings blue Pannier frame c/w lock L.H. Pannier frame c/w lock R.H. Bridge stay-pannier frame Side rail Bottom stay Top box support L.H. Top box support R.H. Frame-top box c/w lock Bracket-Indicator mounting Bolt pannier assy top Bolt pannier assy bottom Washer for bolt Bolt-top box to frame Washer for bolt Pannier case red L.H. Pannier case blue L.H. Pannier case blue R.H. Top box red	1 1 1 1 2 2 1 1 1 2 10 4 4 4 4 1	
83-7390 60-7172	Top box blue	į	
60-7361	Direction indicator Lead-Direction indicator rear	2 2	

FOR ALL OTHER COMPONENTS. REFER TO T140ES AT APPROPRIATE PAGES.

British Only

MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. GARDEN CITY, MI 48135 USA WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

SPECIALIZING IN VINTAGE MOTORCYLCE PARTS



THE BIGGEST!

ENGINE REBUILDING PARTS
GASKET - SEALS - BEARINGS
BUSHINGS - PISTONS - RINGS
CLUTCHES - TUNE UP PARTS
SPEED EQUIPMENT

THE BEST!

STOCK AND CUSTOM PARTS
SEATS - HANDLEBARS - CHAINS
TIRES - TUBES - EXHAUST PIPES
MUFFLERS - GAS TANKS - FENDERS
RESTORATION PARTS

THE ONLY!

Central Wheel Components















JP PISTONS





VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

PARTS SHIPPED WORDLWIDE !!!





Discover*



VISIT OUR EBAY STORE
http://stores.ebay.com/British-Only-Motorcycles-And-Parts

British Only

MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST GARDEN CITY, MI 48135 USAPHONE: **800-278-6659**FAX: **734-422-9253**

Year:	Make:	Model:
Engine #		
Frame #		

WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

Quantity	Part #	Description	Each	Amount
Date/_	/ c	ustomer# Salesperson		
			total	
			ırance	
			pping	
		Tota		
		Michi Add 6	gan Residents 3% Sales Tax	
Signature		Amou Enclo		

	FOLD	
Name		
Address		USE FIRST CLASS
City		LETTER POSTAGE
State 7in		FOSTAGE



FOLD

British Only

MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST GARDEN CITY, MI 48135 USAPHONE: **800-278-6659**FAX: **734-422-9253**

Year:	Make:	Model:
Engine #		
Frame #		

WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

Quantity	Part #	Description	Each	Amount
Date/_	/ c	ustomer# Salesperson		
			total	
			ırance	
			pping	
		Tota		
		Michi Add 6	gan Residents 3% Sales Tax	
Signature		Amou Enclo		

	FOLD	
Name		
Address		USE FIRST CLASS
City		LETTER POSTAGE
State 7in		FOSTAGE



FOLD