

CATALOGUE OF

20-10471 C

PRICE 5/-



for 1948

**BSA** *Motor Cycles*

All communications relating to Spare Parts or Repairs to Motor Cycles to be addressed to B.S.A. Cycles Ltd., Birmingham, 11  
For addresses of B.S.A. Stockists see pages 4 to 11

**B.S.A. CYCLES LTD.**

*Directors:* SIR BERNARD DOCKER, K.B.E., J.P. (Chairman).

J. LEEN, C.B.E.

J. A. T. DICKINSON.

*Registered Offices and Works*

*Telephones:* BIRMINGHAM VICTORIA 2381 (20 lines)

*Service, Spares and Repairs Department*

SMALL HEATH, BIRMINGHAM, 11

*Telegrams and Cables:* "SELCYC, BIRMINGHAM"

*Telephone:* VICTORIA 2234 (3 lines)

Contractors to His Majesty's Government, the War Office, the Admiralty, the Post Office, the Colonial and Foreign Governments

MC 91-5

Copyright B.S.A. Co. Ltd.

Printed in England



## How to Order

1. Quote Engine and Frame numbers, including prefix letters.

THE ENGINE NUMBER IS STAMPED ON THE NEAR SIDE OF THE CRANKCASE IMMEDIATELY BELOW THE CYLINDER BASE, THE FRAME NUMBER ON THE BALL HEAD LUG.

2. State model number of machine, with part number of component required and the catalogue description.
3. Address to B.S.A. CYCLES Ltd., Service Dept., Birmingham. 11.  
Telephone Birmingham Victoria 2234 (3 lines)

Owners of B.S.A. Motor Cycles are strongly recommended to order spares from the nearest B.S.A. Dealer. All B.S.A. Motor Cycle Dealers carry stocks, but a comprehensive range of B.S.A. spares is maintained by the officially appointed B.S.A. Spare Parts Stockists whose names and addresses are given in the illustrated spare parts list.

## Specimen Order

WRITE  
IN BLOCK  
CAPITALS  
PLEASE

**H. JAMES**  
143. THORNLEA RD.  
RUISLIP, MIDDLESEX

*Jan 15<sup>th</sup> 1945*

*B.S.A. Cycles Ltd.  
Service Dept.  
Birmingham 11.*

MOTOR CYCLE ENGINE NO. XB31-10557  
FRAME NO. AB31-9555  
MODEL NO. B31.

*Please supply per C.O.D. -*

6 65-3911 CLUTCH BALL RACE  
INNER RINGS  
1 65-2619 OIL PUMP COMPLETE

*H. James*



# British Only

## MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM  
GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

**WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS**

45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

SPECIALIZING IN  
VINTAGE MOTORCYCLE PARTS

**TRIUMPH**

**Norton**

**BSA**

**THE BIGGEST!**

ENGINE REBUILDING PARTS  
GASKET - SEALS - BEARINGS  
BUSHINGS - PISTONS - RINGS  
CLUTCHES - TUNE UP PARTS  
SPEED EQUIPMENT

**THE BEST!**

STOCK AND CUSTOM PARTS  
SEATS - HANDLEBARS - CHAINS  
TIRES - TUBES - EXHAUST PIPES  
MUFFLERS - GAS TANKS - FENDERS  
RESTORATION PARTS

**THE ONLY!**

**Central Wheel  
Components**

**Barnett**  
Clutches & Cables

**CLASSIC  
TRANSFERS**  
ROBERT DERRICK LTD

**RENOLD**

**Lucas**

**AMAL**

**IEMIGO**  
Your Powersport Supplier

**BRITURO**  
ENGLAND

**JP PISTONS**

**HASTINGS**

**UH**

VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORG  
ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S  
L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL  
ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING  
TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

**PARTS SHIPPED WORLDWIDE !!!**

**VISA**

**MasterCard**

**Discover**

**AMERICAN  
EXPRESS**

VISIT OUR EBAY STORE

<http://stores.ebay.com/British-Only-Motorcycles-And-Parts>



# British Only

## MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM  
GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

**WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS**

45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

SPECIALIZING IN  
VINTAGE MOTORCYCLE PARTS

**TRIUMPH**

**Norton**

**BSA**

**THE BIGGEST!**

ENGINE REBUILDING PARTS  
GASKET - SEALS - BEARINGS  
BUSHINGS - PISTONS - RINGS  
CLUTCHES - TUNE UP PARTS  
SPEED EQUIPMENT

**THE BEST!**

STOCK AND CUSTOM PARTS  
SEATS - HANDLEBARS - CHAINS  
TIRES - TUBES - EXHAUST PIPES  
MUFFLERS - GAS TANKS - FENDERS  
RESTORATION PARTS

**THE ONLY!**

**Central Wheel  
Components**

**Barnett**  
Clutches & Cables

**CLASSIC  
TRANSFERS**  
ROBERT DERRICK LTD

**RENOLD**

**Lucas**

**AMAL**

**IEMIGO**  
Your Powersport Supplier

**BRITURO**  
ENGLAND

**JP PISTONS**

**HASTINGS**

**UH**

VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORG  
ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S  
L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL  
ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING  
TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

**PARTS SHIPPED WORLDWIDE !!!**

**VISA**

**MasterCard**

**Discover**

**AMERICAN  
EXPRESS**

VISIT OUR EBAY STORE

<http://stores.ebay.com/British-Only-Motorcycles-And-Parts>



SUFFIX NUMBERS TO BE USED TO IDENTIFY VARYING FINISHES.

- |  |                          |
|--|--------------------------|
| /1 Cadmium.                                    | 6 Rust proof Black.      |
| /2 Dull Chrome.                                | 7 Black Enamel.          |
| /3 Bright Chrome.                              | 8 Service Green (Matt.). |
| /4 Dull Green Dutch.                           | 9 Green Enamel.          |
| /5 Sand (Egyptian).                            | 10 Khaki Green.          |
| /11 Khaki Green (No. 3 Gas proof).             |                          |
| /12 Chrome Plate and Devon Red, lined Gold.    |                          |
| /13 Chrome Plate and Matt Silver, lined Black. |                          |
| /14 Chrome Plate and Blue, lined Gold.         |                          |
| /15 Chrome Plate and Green, lined Gold.        |                          |
| /16 Matt Silver, lined Black.                  |                          |
| /17 Chrome Plate and Black, lined Gold.        |                          |

When ordering components with varying finishes—i.e., Petrol tanks, wheels, rims, brake rods, front fork oil seal holder—please state finish required by adding the appropriate suffix number to the part number.

EXAMPLE. C11 Petrol Tank.

Chrome Plate and Matt Silver, lined Black, 29-7920,13.

Chrome Plate and Blue, lined Gold, 29-7920,14.



## SPARES AND REPAIRS

Please carry out the following in order to ensure prompt attention and correct execution of orders.

### SPARES

1. Parts forwarded as patterns and all orders for spares should be addressed to "Spares," B.S.A. Cycles Ltd., Birmingham 11.
2. When ordering parts the frame and engine numbers must be quoted. The former will be found stamped on the seat or the head tube lug and the latter on the nearside of the crankcase immediately below the cylinder base. It is essential that the component numbers of the parts required be clearly stated.

**IMPORTANT.**—In quoting engine and frame numbers the full number, including prefix letters, **MUST BE GIVEN.** See specimen order.

3. To avoid delay orders for spare parts should be written on a separate order form or sheet of paper to correspondence on other matters.

### REPAIRS

4. All motor cycles, engines, sidecars, or components for repair, must be consigned to 'Repairs,' B.S.A. Cycles Ltd., Birmingham 11.
5. In cases where we are simply instructed to "overhaul," the machine or component will be entirely dismantled and all worn parts renewed, re-assembled and tested in a suitable manner.
6. When sending complete motor cycles to us such accessories as lamps, horns, speedometers, tools, etc., should be removed, as they are liable to be damaged or lost in transit, for which we cannot accept liability.
7. In the case of telephone enquiries relating to the supply or repair of motor cycle or sidecar parts customers are requested to communicate with the Repairs Department. Telephone number: Birmingham Victoria 2234.
8. It frequently happens that parts are forwarded to us which do not bear the sender's name and address. Care in this respect will prevent delay and annoyance.
9. All goods must be consigned to us carriage paid.
10. All prices quoted in the price list do not include the cost of postage or carriage and packing, and are subject to alteration without notice. B.S.A. Cycles Limited reserve the right to charge for all goods supplied at prices ruling at time of delivery.
11. It must be understood that when no Ledger Account is open with the Company orders must be accompanied by a remittance. At the same time instructions should be given as to the method of despatch (either post, passenger or goods train), and such charges should be included in the remittance. All cheques and Postal Orders should be made payable to B.S.A. Cycles Limited.
12. Complaints relative to defects in tyres, saddles, and electrical equipment should be sent direct to the manufacturer of such articles as these goods are only guaranteed in accordance with the respective makers' warranty.
13. On pages 4 to 11 will be found a list of Dealers who maintain a comprehensive stock of B.S.A. spare parts. You will save time and expense by ordering direct from the nearest Stockist.

*B.S.A. Cycles Ltd. reserve the right to alter the designs or any constructional details of their manufactures at any time without giving notice.*



## COPY OF B.S.A. MOTOR CYCLE SPARE PARTS GUARANTEE

We give the following guarantee with B.S.A. Motor Cycle Spare Parts, instead of the guarantee implied by statute or otherwise, as to the quality or fitness of such parts for the purpose for which they are intended, any such implied guarantee being in all cases excluded, nor can any claim for consequential damages be entertained.

WE GUARANTEE, subject to the conditions mentioned below, that all precautions which are usual and reasonable have been taken by us to secure excellence of materials and workmanship, but this guarantee is to extend and be in force for six months only from the date of purchase, and the damages for which we make ourselves responsible under this guarantee are limited to the replacement of any part which may have proved defective.

WE UNDERTAKE, subject to the conditions mentioned below, to make good at any time within six months any defects in these respects. As motor cycles are easily liable to derangement by neglect or misuse, this guarantee does not apply to defects caused by wear and tear, misuse, or neglect. The term "misuse" shall include among others the following acts: The attaching of a sidecar to the motor cycle in such a manner as to cause damage or calculated to render the latter unsafe when ridden; the use of a motor cycle or a motor cycle and sidecar combined when carrying more persons or a greater weight than they were designed to bear. (The 250c.c. and the 350c.c. in the "B" group of machines are not designed for sidecar work.)

### REPAIRS AND RENOVATIONS GUARANTEE

Any B.S.A. motor cycle sent to us to be replated, re-enamelled, or repaired will be treated upon the same conditions as if it were a new motor cycle, i.e., we guarantee that all precautions which are usual and reasonable have been taken by us to secure excellence of material and workmanship, such guarantee to extend and be in force for six months only from the time such work shall have been executed, and this guarantee is in lieu and in exclusion of any Common Law or statute warranty, and the damages recoverable are limited to the cost of any further work which may be necessary to amend and make good the work found to be defective.

### CONDITIONS OF GUARANTEE

If a defective part should be found in our motor cycles it must be sent to our Works at Small Heath, carriage paid, and be accompanied by an intimation from the sender that he desires it repaired free of charge under our guarantee, and he must also furnish us at the same time with the number of the machine and engine, which will be found stamped on the seat or head tube lug and crankcase respectively, the name of the Dealer from whom he purchased, and the date of the purchase.

Failing compliance with the above no notice will be taken of anything which may arrive but such articles will lie here at the risk of the sender, and this guarantee or any implied guarantee shall not be enforceable.

We do not guarantee the specialities of other firms, such as tyres, electrical equipment, saddles, etc., or of any component part supplied to the order of the purchaser differing from our standard specifications, whether supplied with our motor cycles or otherwise.

### THE TERM "AGENT"

We do not appoint agents for the sale of our Motor Cycles or other goods. We assign to Motor Cycle Dealers (styled "Regional" Dealers), who carry on business on their own account, areas in which they have the exclusive or other right to sell goods purchased from us. A Regional Dealer purchasing from us, or a Sub-Dealer purchasing from him, may, on our behalf (as our agent for the purpose only) give the guarantee printed above. Any such dealer is not authorised to advertise, incur any debts, or transact any business whatsoever on our account, nor is he authorised, so as to bind us to give any warranty or make any representation on our behalf or to sell subject to or with any conditions other than those contained in such guarantee.



## LIST OF B.S.A. STOCKISTS

Save time and postage by contacting your nearest B.S.A. Stockist for B.S.A. Spare Parts, Spare Part Catalogues, Instruction Books, Transfers, etc.  
All B.S.A. Dealers carry stocks of B.S.A. Spare Parts but the following appointed Stockists maintain a comprehensive range.

<i>Town.</i>	<i>Name of Stockist.</i>	<i>Address.</i>	<i>Telephone No.</i>	<i>Telegraphic Address.</i>
Aberdeen .. ..	J. Dawson .. ..	24-26, Thistle Street .. ..	1272	
" .. ..	George Cheyne (Cycles) Ltd. .. ..	147, Holborn Street .. ..	6027	Westgar, Aberdeen.
Aldershot .. ..	Phillips Bros. (Aldershot) Ltd. .. ..	Birchett Road .. ..	1111/2	Phillips Cycles, Aldershot
Andover .. ..	Andover Motor & Cycle Co. .. ..	Weyhill Road .. ..	2991	
Banbury .. ..	Trinder Bros. .. ..	2 and 3, Broad Street .. ..	2546	
Bedford .. ..	The Imperial Cycle Co. .. ..	58, St. Lyes .. ..	2374	
Belfast .. ..	W. J. Chambers .. ..	106 and 108, Donegall Pass .. ..	27253/4	Fastmote, Belfast.
Biggleswade .. ..	Bryants .. ..	25, 27, 72 and 74, Shortmead Street .. ..	3108	
Birmingham .. ..	County Cycle & Motor Co. Ltd. .. ..	266, Broad Street (closed Wed. 1 p.m.) 104, Bath Row (Repairs) (closed Sat. 1 p.m.)	Mid. 2671	
" (Edgbaston 17)	C. E. Cope & Sons Ltd. .. ..	13-15, Upper Hagley Road .. ..	Bearwood 2246/7	
" (Sparkbrook 12)	Shovelbottoms Ltd. .. ..	376, Ladypool Road .. ..	South 2212	
Birkenhead .. ..	Bob Simister Ltd. .. ..	540, New Chester Road, Rock Ferry .. ..	Rock Ferry 1452	
Blackburn .. ..	Shuttleworth & Geldart .. ..	15, Great Bolton Street .. ..	6678	
Blackpool .. ..	J. Hall & Son .. ..	143, Church Street .. ..	785	
Bolton .. ..	Charlie Robinson .. ..	119, Higher Bridge Street .. ..	3931	



<i>Town</i>	<i>Name of Stockist.</i>	<i>Address.</i>	<i>Telephone No.</i>	<i>Telegraphic Address.</i>
Boscombe, Bournemouth	Craze Bros. .. ..	475, Christchurch Road .. ..	Boscombe 63	
Bridgwater	.. .. Anderson & Wall .. ..	18, St. Mary Street .. ..	2416	Anderson & Wall, Bridgwater.
Brighton	.. .. Redhill Motors (Brighton) Ltd. ..	104, North Road .. ..	5281	
Bristol	.. .. S. J. Fair Motors Ltd. .. ..	201/3, Cheltenham Road.. ..	46238	
Bury	.. .. Arthur Coyle (Prop. W. Hudson)	30-32, Walmersley Road .. ..	714	Coyle Motors, Bury.
Bradford	.. .. C. Sidney Ltd. .. ..	140-142 Manningham Lane .. ..	3116	
Cambridge	.. .. King & Harper Ltd. .. ..	Milton Road Corner .. ..	3201	Motors, Cambridge.
Canterbury	.. .. Marcel Hallet .. ..	St. Dunstan's Street .. ..	3046	
Cardiff	.. .. Car Distributors (Cardiff) Ltd. ..	155, City Road .. ..	3422	
"	.. .. Robert Bevan & Son .. ..	29, 35, Castle Street .. ..	1808	
Carlisle	.. .. W. T. Tiffin & Son .. ..	Irishgate Brow .. ..	314	Tiffin, Irishgate, Carlisle.
Carmarthen	.. .. W. Edwards & Sons (Carmarthen) Ltd.	Towy Garage .. ..	482 3	Edwards Garage, Carmarthen.
Chapel-en-le-Frith	.. .. E. W. Bowers .. ..	129, Town End .. ..	144	
Chelmsford	.. .. Hadlers Garage Ltd. .. ..	New Street .. ..	2227	Hadler, Chelmsford.
Cheltenham	.. .. Leslie Paynter .. ..	Bath Street .. ..	2887	Paynters Garage, Bath Street, Cheltenham.
Chester	.. .. Davies Bros. .. ..	34, Bridge Street .. ..	510	
Chichester	.. .. W. Goodridge & Co. Ltd. .. ..	East Street .. ..	2033	
Colchester	.. .. S. S. Motor & Cycle Supply Co. ..	63a, High Street .. ..	Central 2632	



<i>Town.</i>	<i>Name of Stockist.</i>	<i>Address.</i>	<i>Telephone No.</i>	<i>Telegraphic Address.</i>
Coventry .. ..	Coventry Motor Mart Ltd. .. ..	London Road .. ..	2145/7,8	Coventry Motor Mart.
Croydon .. ..	Godfrey's Ltd. .. ..	228, 234, London Road .. ..	Croydon 3641/2	Gofrabike, Croydon.
Colwyn Bay .. ..	Gilbert Emery .. ..	Post Office Chambers, Penrhyn Road ..	2815	
Darlington .. ..	The Duplex Motor & Cycle Co. ..	Grange Road .. ..	Darlington 2071	Duplex, Darlington.
Derby .. ..	Ingle's Provincial Garages Ltd. ..	Wallbrook Road .. ..	45289	
Doncaster .. ..	Edwards Motors (Doncaster) Ltd. ..	7, Hall Gate .. ..	2431/2,3	Cars, Doncaster.
Dorchester .. ..	Tilleys .. ..	31, South Street .. ..	367	Motors, Dorchester.
Dudley .. ..	Chas. E. Cope & Sons Ltd. .. ..	193, High Street .. ..	Dudley 3464 5 6	
" .. ..	James Parkes & Son .. ..	7, King Street .. ..	Dudley 2889	
Dundee .. ..	G. McLean .. ..	Riverside Drive .. ..	5088	Vehicles, Dundee.
Dunstable .. ..	B. C. England (Dunstable) Ltd. ..	Half Moon Hill, London Road ..	843/4	
Edinburgh .. ..	J. R. Alexander & Co. Ltd. .. ..	10 14, Lothian Road .. ..	21176	Motor Cycles, Edinburgh.
Enfield .. ..	D. J. Shepherd & Co. (Enfield) Ltd. ..	434-6, Hertford Road, Enfield Highway	Howard 1631	
Exeter .. ..	P. Pike & Co. Ltd. .. ..	Alphington Street .. ..	3031	Piko, Exeter.
Frome .. ..	P. Difazio .. ..	25, Catherine Street .. ..	2913	
Gateshead, 8 .. ..	O. Carmichael & Son .. ..	75, 83 and 87, High Street West ..	71815	
Glasgow .. ..	Bell Bros. (H.P.) Ltd. .. ..	215-223, St. Georges Road .. ..	Douglas 6414	Douglas 6414 Glasgow.
" .. ..	J. R. Alexander & Co. Ltd. .. ..	264/280, Gr. Western Road .. ..	Douglas 3802/3,4	Alex Moto, Glasgow.



<i>Town.</i>	<i>Name of Stockist</i>	<i>Address.</i>	<i>Telephone No.</i>	<i>Telegraphic Address.</i>
Gloucester .. ..	Harpers .. ..	23a, Worcester Street .. ..	3187	Gloucester 3187.
Grimsby .. ..	Harry Wardall Ltd. .. ..	13-15, Osborne Street .. ..	2202	
Guernsey .. ..	Millard & Co. Ltd. .. ..	Victoria Road .. ..	777	Millard Motors, Guernsey
Guildford .. ..	E. Pascall (Guildford) Ltd. .. ..	11/12, Woodbridge Road .. ..	Guildford 2274 5 3400	Halifax 3400.
Halifax .. ..	Halifax Motor Exchange .. ..	25, Horton Street .. ..		
Hampton-in-Arden .. ..	J. Pearson .. ..	The Garage, Barston .. ..	Hampton-in-Arden 30 5125	
Harrogate .. ..	H. Acland ( <i>Prop.</i> H. Bayes) .. ..	11, Bower Road .. ..		
Harrow .. ..	E. T. Pink (Harrow) Ltd. .. ..	Station Road .. ..	0044 5	Pink, Harrow.
Haywards Heath .. ..	Dinnages Garages Ltd. .. ..	Wivelsfield Road .. ..	1146	
Hereford .. ..	A. Kear & Co. .. ..	52b, Commercial Street .. ..	2239	Kear, Hereford.
Holbeach .. ..	Gordon Woodman Ltd. .. ..	34, Fleet Street nr. Spalding .. ..	Holbeach 3221	
Hove .. ..	Bradshaws .. ..	6, Western Road .. ..	Hove 5252/3	
Huddersfield .. ..	Earnshaw .. ..	Manchester Road .. ..	1232	
Hull .. ..	Browns (Witham) Ltd. .. ..	43, 47, 48, Witham .. ..	31417	
Ipswich .. ..	Revetts Ltd. .. ..	Clarkson Street .. ..	2822	
Jersey .. ..	Colebrooks (Peter Perrio) .. ..	1 and 11, New Street .. ..	Cent. 642	Colebrooks, Jersey.
Kirkcaldy .. ..	The County Motors .. ..	Junction Road .. ..	2568	
Keighley .. ..	Dick Ratcliffe .. ..	Coldshaw Garage, Haworth .. ..	Haworth 3133	



<i>Town.</i>	<i>Name of Stockist.</i>	<i>Address.</i>	<i>Telephone No.</i>	<i>Telegraphic Address.</i>
Launceston .. ..	J. Wooldridge & Son .. ..	Western Road .. ..	21	
Leeds .. ..	Watson-Cairns & Co. Ltd. .. ..	Lower Briggate .. ..	23379	Watson-Cairns, Briggate, Leeds
Leicester .. ..	E. W. Campion & Son Ltd. .. ..	Welford Place .. ..	58054	
Lincoln .. ..	West's (Lincoln) Ltd. .. ..	116, High Street .. ..	762	
Liverpool .. ..	Cundles .. ..	41, Byrom Street .. ..	Central 6160	Cundles, Central 6160.
Llawhaden, Pem. ..	James Bowen & Sons .. ..	Llawhaden, nr. Narberth, Pem. ..	Llawhaden 6	
London, N.W.1 .. ..	Godfreys Ltd. .. ..	Eden Street .. ..	Euston 4046, 7	Gofra Bike, London
„ N.W.1 .. ..	J. Grose Ltd. .. ..	379-381, Euston Road .. ..	Euston 5231	
„ W.5 .. ..	Kays of Ealing .. ..	8-10, Bond Street.. ..	Ealing 2387	Sparesokay, Ealux, London.
„ S.E.13 .. ..	F. Parks & Son Ltd. .. ..	404, High Street, Lewisham .. ..	Lee Green 0535	
„ S.E.18 .. ..	Cleare & Co. Ltd... ..	1 and 125, High Street, Woolwich .. ..	Woolwich 0174	
„ E.7 .. ..	Lovett's Ltd. ... ..	418, Romford Road, Forest Gate .. ..	Grangewood 1234	Lovemoto, London.
„ N.12 .. ..	George Grose Ltd. .. ..	834, High Road, Finchley .. ..	Hillside 2149	
„ S.E.11 .. ..	Writers Ltd. .. ..	161/5, Kennington Lane .. ..	Reliance 1562	
„ S.W.11 .. ..	Owen Bros. .. ..	19, Battersea Rise, Clapham Junction .. ..	Battersea 1299	
„ S.W.6 .. ..	Claude Rye Ltd. .. ..	897-921, Fulham Road .. ..	Renown 4246 7, 8	Ryebikes, Walgreen, London
„ W.12 .. ..	Turners Stores .. ..	81-83, Goldhawk Road, Shepherds Bush .. ..	Shepherds Bush 2436	
„ W.3 .. ..	Whitby's of Acton Ltd... ..	273, The Vale, Acton .. ..	Shepherds Bush 5355-6	



<i>Town.</i>	<i>Name of Stockist.</i>	<i>Address.</i>	<i>Telephone No.</i>	<i>Telegraphic Address.</i>
Maidstone .. ..	Redhill Motors (Maidstone) Ltd.	The Broadway .. ..	3096	
Mansfield .. ..	W. Henstock .. ..	128, Chesterfield Road .. ..	778	
Manchester .. ..	Colmore Depot .. ..	17-18, Watson Street .. ..	Blackfriars 3322	
" .. ..	Tom Davies (Motors) Ltd. .. ..	233, Deansgate .. ..	Blackfriars 0681	
" .. ..	Fred Fearnley Ltd. .. ..	692-4, Ashton Old Road .. ..	East 1445/6	East Manchester, 1445.
" .. ..	Webb & Waitt Ltd., Stretford Garage..	Chester Road, Stretford .. ..	Longford 2223/4	
Middlesbrough .. ..	Pallister, Yare & Cobb Ltd. .. ..	124, Marton Road .. ..	2873	Payacob, Middlesbrough.
Newcastle-on-Tyne .. ..	Dene (Newcastle) Motor Co. Ltd.	Haymarket .. ..	Newcastle 21857	Ened, Newcastle-on-Tyne
Northampton .. ..	P. C. Spokes & Son .. ..	1, Henry Street .. ..	1160	
Norwich .. ..	Chapmans (Norwich) Ltd. .. ..	42, Duke Street .. ..	24727	
Nottingham .. ..	E. W. Campion & Son Ltd. .. ..	Station Street .. ..	2961	
Oxford .. ..	H. F. Temple .. ..	69, High Street. St. Thomas .. ..	2485	
Perth .. ..	M. Shaw & Sons .. ..	143, High Street .. ..	483	
Peterborough .. ..	Burrows Bros. .. ..	55-57, Westgate .. ..	2154	
Plymouth .. ..	P. Pike & Co. Ltd. .. ..	26-28, Union Place .. ..	3108	Piko, Plymouth.
Portsmouth .. ..	Percy Kiln Ltd. .. ..	63/67, Elrn Grove, Southsea .. ..	Portsmouth 4793	
" .. ..	G. E. Minnell .. ..	19, Cuthbert Road, Kingston .. ..	---	
Preston .. ..	Loxhams Garages Ltd. .. ..	Central Garage, Chanley St..	Fishergate Sales Dept. 4242	Loxhams, Preston. Service Dept. 4243



<i>Town.</i>	<i>Name of Stockist</i>	<i>Address.</i>	<i>Telephone No.</i>	<i>Telegraphic Address.</i>
Pulborough .. ..	Gray & Rowsell .. ..	Bury Gate .. ..	Bury 4	
Reading .. ..	Fortescue Bros. Ltd. .. ..	1-2, West Street .. ..	4143	4143 Reading.
Redhill .. ..	The Redhill Motor and Cycle Works Ltd. .. ..	50, Brighton Road .. ..	327	
Romford .. ..	G. H. Wilson .. ..	George Street .. ..	2660	
St. Austell .. ..	Kellaway (Cycles & Motors) Ltd. .. ..	34, South Street .. ..	102	
Sheffield .. ..	Walter Wragg Ltd. .. ..	Stanley Works, Wellington Street .. ..	26098	Sheffield 26098.
Shetland .. ..	Thomson's Garage.. ..	Esplanade, Lerwick .. ..	85	Thomson's Garage, Lerwick.
Sittingbourne .. ..	Scoones' Garage .. ..	9, West Street .. ..	66	Scoones, Sittingbourne.
Southampton .. ..	Alec. Bennett Ltd. .. ..	152, Portswood Road .. ..	74081/2	
Southport .. ..	H. F. Brockbank .. ..	62, King Street .. ..	5054	
Stockport .. ..	Theobald & Coppack .. ..	6, Chestergate .. ..	2843	Theobald, Coppack.
Stockton-on-Tees .. ..	Stan Jones (Automobile Engineers) Ltd .. ..	7a, Bridge Road .. ..	66179	Stockport
Stoke-on-Trent .. ..	J. & N. Bassett .. ..	Howards Place, Shelton .. ..	2890	
Sunderland .. ..	Dunns Garage Ltd. .. ..	53-4, North Bridge Street .. ..	4994	
Sutton-in-Ashfield .. ..	W. Henstock .. ..	Forest Street Garage .. ..	90	Henstock, 90, Sutton-in-Ashfield.
Swansea .. ..	Bert James .. ..	216, Picton Lane .. ..	2958	
Taunton .. ..	W. P. Edwards (Motors) Ltd. .. ..	58, East Street .. ..	2943	Edwards Motor Cycles, Taunton.
Thetford .. ..	W. & C. Lambert Ltd. .. ..	Castle Street .. ..	2217	



<i>Town.</i>	<i>Name of Stockist.</i>	<i>Address.</i>	<i>Telephone No.</i>	<i>Telegraphic Address.</i>
Tunbridge Wells	C. E. Tunbridge	2, Vale Road	416	Tunbridge Motor, Tunbridge Wells
Twickenham	C. A. Blay	192, Heath Road	Popesgrove 2103 & 1435	
Wainfleet	C. S. Wilkinson	Market Place	378	
Watford	Lloyd Cooper & Co.	61, Queens Road	2125	
Warrington	Frodsham Jack. Ltd.	37a, Winnick Street	471	
Westcliff-on-Sea	J. Costin & Sons	233-5-7, London Road	Southend 2215	
Weybridge	W. L. Lewis & Sons	51, Church Street	210	
Weymouth	T. leys	9, Frederick Place	72	
Winchester	Winchester Cycle & Motor Co.	Jewry Street	2728	
Worcester	W. J. Bladder & Son	52, Sidbury	2438	Bladder, Sidbury Worcester.
Wolverhampton	C. E. Cope & Sons	168-9, Stafford Street	22850	
Worthing	Wheatlands	56, Broadwater Street (West)	1224	
Yeovil	The Yeovil Motor Mart	Hendford	267	Motor Mart, Yeovil.
York	C. S. Russell (York) Ltd.	Lawrence Street	3793	Russell, Lawrence Street York.



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## ENGINE.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Cylinder Barrel ... ..	—	29-2255	65-1062	65-1229	—	67-50
Do. with valve guides ... ..	29-2544	—	—	—	—	—
Do. with liner and valve guides ... ..	—	—	—	—	66-88	—
Cylinder Head ... ..	29-2547	—	—	—	66-57	—
Do. complete with valve guides and studs.	—	29-2256	65-1156	65-1226	—	67-24
Cylinder Head Washer ... ..	65-93	29-2265	—	—	66-58	67-28
Do. Timing Bolt ... ..	24-8328	—	—	—	24-8328	—
Cylinder Base Paper Washer ... ..	29-2111(2)	29-2262	66-92	66-92	66-93(2)	67-70
Cylinder Head Bolt (long) ... ..	27-5156(5)	—	—	—	36-11(5)	67-72(7)
Do. (short) ... ..	27-6260(3)	—	—	—	35-1086(5)	—
Do. Washer ... ..	F21(8)	—	—	—	EB76A(9)	—
Cylinder Head Stud ... ..	—	29-2259(5)	—	—	—	67-71(2)
Do. (short) ... ..	—	3-1381(2)	—	—	—	—
Do. Nut ... ..	—	E19(5)	—	—	—	67-75(2)
Do. Nut ... ..	—	EAS0(2)	—	—	—	—
Do. Shakeproof Washer ... ..	—	36-399(5)	—	—	—	66-4707(2)
Do. Do. ... ..	—	36-382(2)	—	—	—	—
Inlet Manifold ... ..	—	—	—	—	—	67-35
Do. Stud ... ..	—	—	—	—	—	15-1367(4)
Do. Nut ... ..	—	—	—	—	—	24-563(4)
Do. Shakeproof Washer ... ..	—	—	—	—	—	36-382(4)
Inlet Manifold Joint Washer ... ..	—	—	—	—	—	67-36(2)
Cylinder Head Securing Bolt complete ... ..	—	—	66-115(4)	66-115(4)	—	—
Cylinder Head Cover (inlet) ... ..	—	—	65-1159	65-1159	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

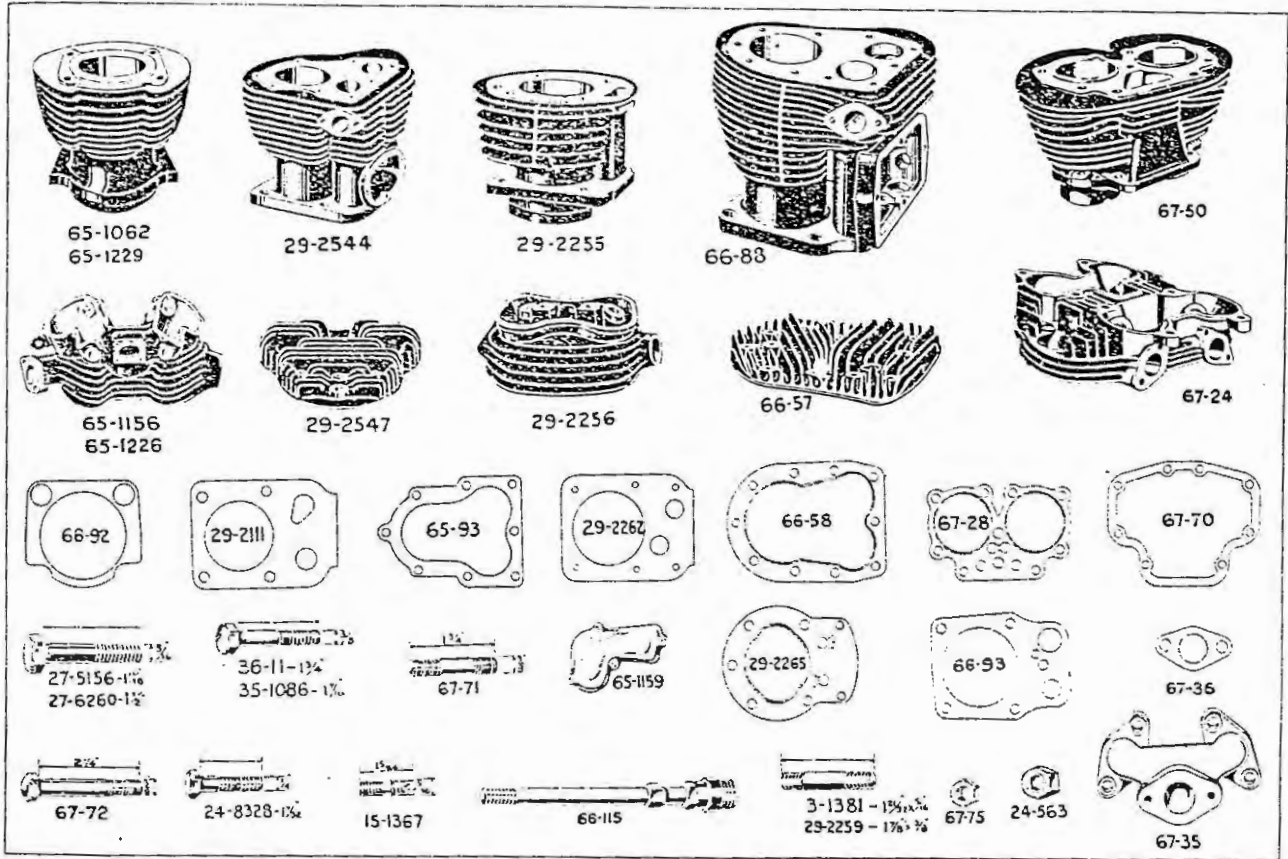



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown, one part constitutes a set.

DESCRIPTION	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Cylinder Head Cover (exhaust) ...	—	—	65-1160	65-1160	—	—
Do. Do. Screw ...	—	—	65-1166(8)	65-1166(8)	—	—
Do. Do. Shakeproof Washer ...	—	—	29-541(8)	29-541(8)	—	—
Do. Do. Washer (paper) ...	—	—	65-1164(2)	65-1164(2)	—	—
Spark Plug ...	65-112	65-114	65-114	65-114	65-112	67-110(2)
Spark Plug Waterproof Cover ...	65-213	65-213	65-213	65-213	65-213	65-213(2)
Spark Plug Washer ...	66-102	66-102	66-102	66-102	66-102	66-102(2)
Carburettor Flange Stud ...	15-1387(2)	24-5205(2)	24-5205(2)	15-1120(2)	15-1367(2)	—
Do. Stud Nut ...	EAS0(2)	EAS0(2)	EAS0(2)	24-6040(2)	EAS0(2)	—
Do. Stud Shakeproof Washer ...	36-382(2)	36-382(2)	36-382(2)	36-382(2)	36-382(2)	—
Do. Stud Washer (plain) ...	—	—	—	—	15-5155(2)	—
Do. Joint Washer (Hallite) ...	66-127	66-127(2)	—	—	66-127	—
Do. Paper Washer ...	—	—	65-1162(2)	65-1232(2)	—	65-1162(2)
Do. Packing Washer ...	—	—	65-1163	65-1238	—	—
Carburettor Fixing Bolt ...	—	—	—	—	—	21-2902(2)
Do. Shakeproof Washer ...	—	—	—	—	—	36-382(2)
Carburettor Drip Shield ...	—	67-120	—	—	—	67-120
Cylinder Valve Guide (inlet) ...	29-2109	65-37	65-1145	65-1241	66-140	67-31(2)
Do. (exhaust) ...	29-2110	65-37	65-1144	65-1242	66-139	67-32(2)
Cylinder Valve (inlet) ...	29-2120	29-2124	65-1111	65-1239	66-235	67-29(2)
Do. (exhaust) ...	29-2121	65-208	65-1110	65-1240	66-236	67-30(2)
Valve Stem Cap (inlet) ...	—	—	65-209	—	—	65-209(2)
Do. (exhaust) ...	—	—	31-103	—	—	65-209(2)
Valve Spring (outer) ...	31-106(2)	31-106(2)	65-1147(2)	65-1147(2)	31-106(2)	31-106(4)
Do. (inner) ...	—	31-108(2)	65-1146(2)	65-1146(2)	—	31-108(4)

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

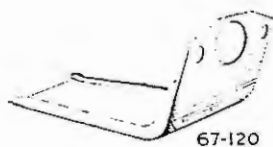

67-120



31-106  
65-1147



 
65-1146  
31-108




67-31  
67-32




66-139 - 3 7/8  
66-140 - 3 1/2



67-29 INLET.  
67-30 EXHAUST.

 


29-2120 29-2121 66-235  
66-236

 


65-1110 65-1111  
65-208 29-2124  
65-1239 65-1240



 65-1145 - 2 1/4  
65-37-1 1/4 65-1144 - 2 1/4  
65-1241 - 2 1/4 65-1242 - 2 1/4



29-2109 - 1 7/8  
29-2110 - 2 1/8

 

66-127  
65-1162  
65-1163  
65-1232  
65-1238



65-1160



65-1164



 
65-1166



65-213



21-2902



24-5205 - 1 1/4  
15-1120 1 1/8  
15-1367 1 1/8



31-103  
65-209



65-112  
65-114  
67-110



66-102



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Valve Spring (inner) (special order only)	—	—	65-1248(2)	65-1248(2)	—	—
Do. (outer) do.	—	—	65-1249(2)	65-1249(2)	—	—
Valve Retaining Split Collar (inlet) (2 parts)	29-410	29-410	29-410	15-1525	66-222	—
Do. (4 parts) ...	—	—	—	—	—	29-410(2)
Do. (exhaust) (2 parts) ...	29-410	29-410	15-1525	15-1525	66-222	—
Do. (4 parts) ...	—	—	—	—	—	29-410(2)
Valve Spring Collar ...	66-221(2)	31-111(2)	65-1149(2)	65-1149(2)	66-221(2)	67-34(4)
Valve Spring Cup ...	—	15-1215(2)	65-1148(2)	65-1243(2)	—	67-33(4)
Valve Spring Cover ...	—	—	—	—	66-242	—
Valve Cover Breather complete ...	—	29-2280(2)	—	—	—	—
Do. Washer (oilproof fibre) ...	—	—	—	—	66-243	—
Valve Spring Cover Securing Screw ...	—	—	—	—	66-1933(4)	—
Do. Washer ...	—	—	—	—	24-978(4)	—
Rocker Valve Cover ...	—	29-2260	—	—	—	—
Do. Joint Washer (Hallite) ...	—	29-2261	—	—	—	—
Rocker Valve Cover Bolt ...	—	65-109	—	—	—	—
Do. Washer ...	—	M814A	—	—	—	—
Rocker Valve Inspection Cover ...	—	—	65-1142	65-1142	—	—
Rocker Box Inspection Cap ...	—	—	—	—	—	67-67(4)
Do. Washer (fibre) ...	—	—	—	—	—	67-42(4)
Rocker Valve Inspection Cover Washer (paper).	—	—	65-1143	65-1143	—	—
Do. Screw ...	—	—	M168A(4)	M168A(4)	—	—
Rocker Box complete (inlet) ...	—	—	—	—	—	67-26
Rocker Box Joint Washer (Hallite) ...	—	—	—	—	—	67-39

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.



29-2260



67-26



66-242



65-1143



65-1149



31-111



29-2261



67-39



66-243



65-1142



 
67-33



65-1243



65-1249



65-109-1752



65-1248



66-1933



66-221



67-34



67-67



67-42



29-2280



29-410  
15-1525



15-1215  
65-1148



M-168A



66-222



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Rocker Box Bolt (inlet) ... ..	—	—	—	—	—	21-2903(3)
Do. Do. (inlet and exhaust) ...	—	—	—	—	—	67-44(4)
Do. Shakeproof Washer (inlet and exhaust).	—	—	—	—	—	36-382(6)
Do. Shakeproof Washer (inlet and exhaust).	—	—	—	—	—	66-4707(4)
Rocker Box complete (exhaust) ...	—	—	—	—	—	67-27
Rocker Inspection Plug ... ..	—	—	—	—	—	67-66(4)
Do. Washer ... ..	—	—	—	—	—	M552A(4)
Rocker Box Stud (exhaust) ... ..	—	—	—	—	—	67-43
Rocker Box and Steady Stay Stud Nut	—	—	—	—	—	EAS0
Do. Do. ... ..	—	—	—	—	—	24-6040(4)
Rocker Box Joint Washer (exhaust) ...	—	—	—	—	—	67-40
Rocker Box Steady Strap ... ..	—	—	—	—	—	67-63(2)
Exhaust Rocker Box Stud ... ..	—	—	—	—	—	67-1245(2)
Rocker Oil Feed Pipe complete ... ..	—	—	65-1119	65-1119	—	67-161
Do. Union Screw ... ..	—	—	65-306(2)	65-306(2)	—	65-306
Oil Return Pipe, complete with banjos ...	—	—	65-1215	65-1215	—	—
Oil Return Pipe Banjo Screw ... ..	—	—	26-1253(2)	26-1253(2)	—	—
Engine Steady Stay ... ..	—	—	65-1153	65-1153	66-98	67-79(2)
Do. (M33 only) ... ..	—	—	—	66-147	—	—
Do. Bolt ... ..	—	—	15-480	15-480	—	67-7007
Do. Bolt Nut ... ..	—	—	EAS0	EAS0	—	M263
Do. Bolt Washer (spring) ... ..	—	—	24-8784	24-8784	27-6043	—
Do. Do. (plain) ... ..	—	—	—	—	—	EB58
Do. Do. (Shakeproof) ... ..	—	—	—	—	—	29-541

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

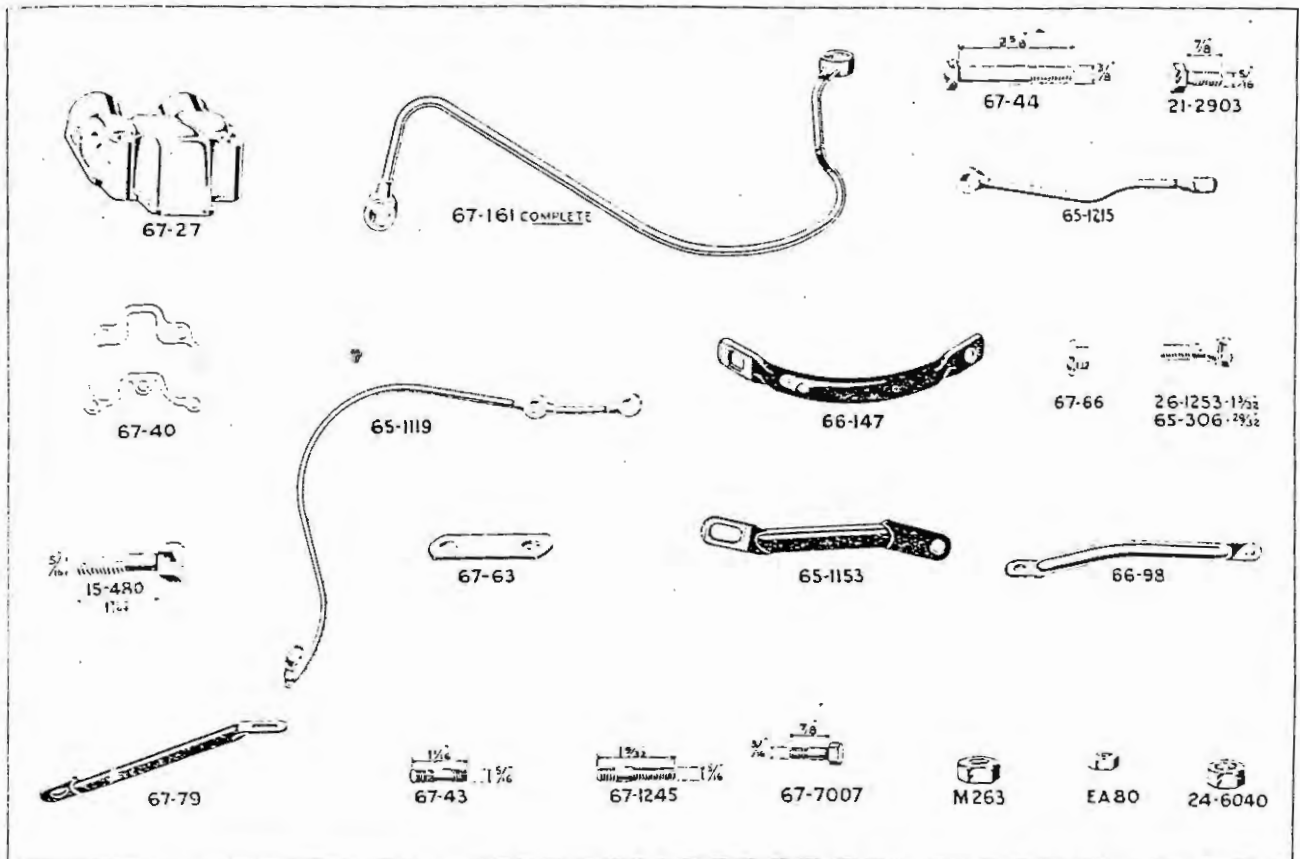



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Inlet Valve Rocker, complete with ball ends	--	---	65-1102	65-1102	--	---
Exhaust Do.	---	---	65-1100	65-1100	--	---
Inlet Valve Rocker (nearside) ...	---	---	---	---	--	67-45
Do. (offside) ...	---	---	---	---	--	67-46
Exhaust Valve Rocker (nearside)...	---	---	---	---	--	67-47
Do. (offside) ...	---	---	---	---	--	67-48
Rocker Adjusting Screw ...	---	29-2271(2)	---	---	--	67-56(4)
Do. Nut ...	---	24-563(2)	---	---	--	67-65(4)
Valve Rocker Fulcrum Pin ...	---	---	65-1161(2)	65-1161(2)	--	---
Do. (inlet) ...	---	---	---	---	--	67-59
Do. (exhaust) ...	---	---	---	---	--	67-64
Valve Rocker Thrust Washer ...	---	---	27-1111(2)	27-1111(2)	---	67-60(6)
Do. Do. ...	---	---	---	---	---	67-61(2)
Valve Rocker Spindle Spring ...	---	29-2270(2)	65-1117(2)	65-1117(2)	---	---
Do. Washer (plain) ...	---	---	65-1118(2)	65-1118(2)	---	36-481(2)
Washer (spring) ...	---	---	---	---	---	67-62(4)
Valve Rocker Spindle Nut ...	---	---	65-311(2)	65-311(2)	---	65-311(2)
Do. Nut Washer ...	---	---	36-481(2)	36-481(2)	---	---
Inlet and Exhaust Valve Rocker	---	29-2268(2)	---	---	---	---
Valve Rocker Trunnion ...	---	29-2266	---	---	---	---
Do. Bolt ...	---	29-2267(2)	---	---	---	---
Do. Bolt Locking Plate ...	---	29-2269(2)	---	---	---	---
Rocker Trunnion Washer ...	---	24-5914(2)	---	---	---	---
Do. Nut ...	---	28-118(2)	---	---	---	---
Do. Split Pin ...	---	35-698(2)	---	---	---	---

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

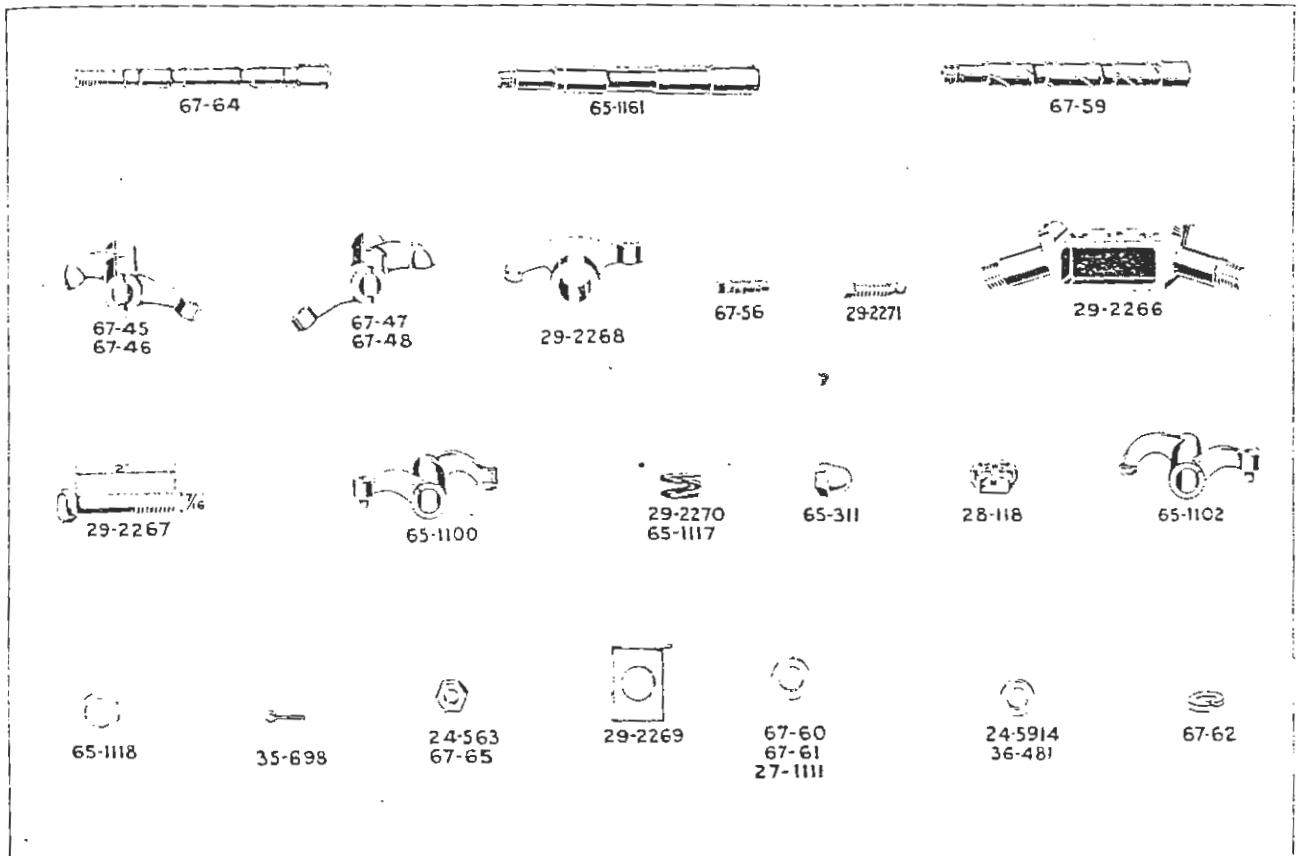



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31-B32.	B33 B34 M33	M20 M21.	A7.
Exhaust Lifter ... ..	—	—	65-1137	65-1137	66-1435	—
Do. Bush ... ..	—	—	65-387	65-387	66-1434	—
Do. Fibre Washer ... ..	—	—	M552A	M552A	—	—
Do. Spindle ... ..	—	—	65-1165	65-1165	—	—
Do. Nut ... ..	—	—	EB102(2)	EB102(2)	EB102	—
Do. Spindle Washer ... ..	—	—	65-402	65-402	—	—
Do. Split Pin ... ..	—	—	35-701	35-701	—	—
Do. Spindle Spring ... ..	—	—	65-403	65-403	66-1432	—
Do. Spindle Washer (felt) ... ..	—	—	65-401	65-401	—	—
Do. Washer ... ..	—	—	K234A(2)	K234A(2)	—	—
Exhaust Lever	—	—	66-1431	66-1431	66-1431	—
Exhaust Lever Washer ... ..	—	—	—	—	29-541	—
Exhaust Lifter Cable Holder ... ..	—	—	27-1163	27-1163	—	—
Do. Nut ... ..	—	—	EB102	EB102	—	—
Piston, complete with gudgeon pin, rings, and retaining springs.	29-2561	29-2568	65-758	65-1244	66-1190	67-81(2)
Do. (M21 only) ... ..	—	—	—	—	66-1198	—
Piston, complete (high compression) (ratio 7.5).	—	—	65-754	—	—	—
Piston only (high compression) (ratio 7.5)	—	—	65-721	—	—	—
Piston, complete (high compression) (ratio 7.75).	—	—	65-790	—	—	—
Piston only (high compression) (ratio 7.75)	—	—	65-791	—	—	—
Piston, complete (high compression) (ratio 12.5).	—	—	65-775	—	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

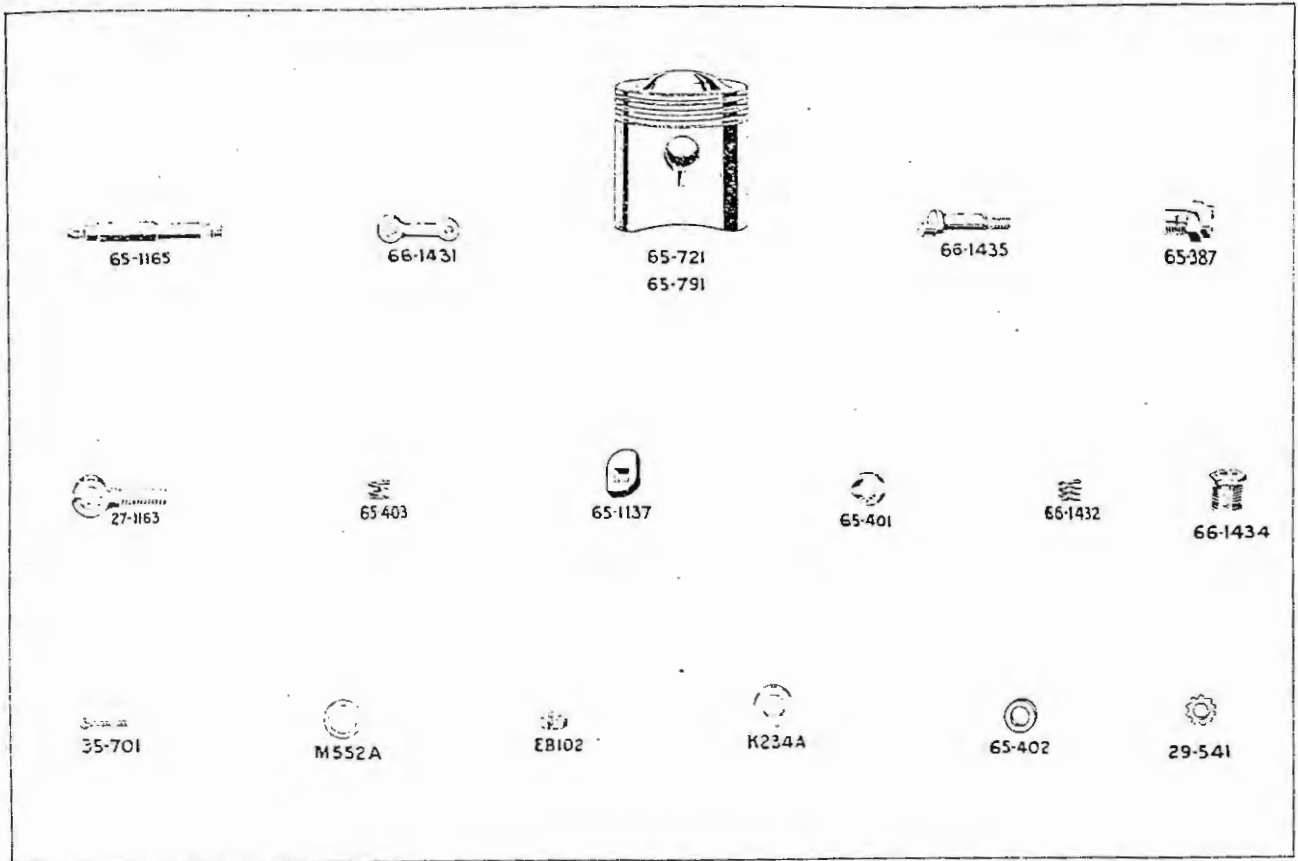



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Engine—continued.

When no figures in brackets are shown one part constitutes a set

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Piston only (high compression) (ratio 12.5)	—	—	65-776	—	—	—
Piston, complete (high compression) (ratio 8.5).	—	—	—	65-1256	—	—
Piston only (high compression) (ratio 8.5)	—	—	—	65-1257	—	—
Piston, complete (high compression) (ratio 7.4).	—	—	—	65-1264	—	—
Piston only (high compression) (ratio 7.4)	—	—	—	65-1265	—	—
Piston Scraper Ring (high compression; (Maxigroove).	—	—	65-490	24-1792	—	—
Piston only ... ..	65-405	29-2274	65-703	65-1245	66-1024	67-82(2)
Do. (M21 only) ... ..	—	—	—	—	66-1039	—
Piston Ring ... ..	29-2620(2)	29-2620(2)	65-744(2)	65-1250(2)	66-1090(2)	67-87(4)
Do. (high compression (plain) ... ..	—	—	65-783	—	—	—
Do. (high compression) (L. section) ... ..	—	—	65-786	—	—	—
Piston Scraper Ring... ..	65-730	65-730	65-735	65-1253	66-1100	67-90(2)

### SPARKING PLUGS.

Champion Sparking Plugs Ltd., Feltham, Middlesex.

MODELS.	TYPE.	COMPONENT NO.
C10 M20 M21	L10	65-112
C11 B31 B32	L10.S	65-114
B33 B34 M33	L11.S	67-110
A7	L11.S	67-110



# ENGINE.



65-1257  
65-1245



66-1039



66-1024



67-82



29-2274



65-1265  
65-703



65-405



65-776



65-490  
24-1792



65-730 67-90 65-735  
65-1253 66-1100



65-744 66-1090  
29-2620  
67-87 65-1250



65-783 65-786  
L SECTION



NOTE. - Figures in brackets denote number per set, e.g., (2), 2 per set.

### Engine—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Gudgeon Pin ... ..	65-437	65-437	65-440	66-953	66-953	67-100(2)
Do. Retaining Ring ... ..	65-438(2)	65-438(2)	66-954(2)	66-954(2)	66-954(2)	67-101(4)
Crankcase (gear side), complete with fixed fittings.	29-2326	29-2319	66-1616	66-1616	66-1601	67-1231
Crankcase (drive side), complete with fixed fittings.	29-2321	29-2321	—	—	—	67-1227
Crankcase (drive side) Shim ... ..	—	—	—	—	—	67-1239
*Crankcase (drive side), with fixed fittings	—	—	66-1631	66-1631	66-1603	—
† Do. (drive side) ... ..	—	—	66-1642	66-1642	66-1613	—
Crankcase Plug Screw ... ..	—	—	27-181	27-181	27-181	67-1247

Components marked \* on pages 26, 28 and 32 fitted up to and including the following engine numbers.


Models	Engine Numbers	Models	Engine Numbers
B31 ... ..	YB31-2456	M20 ... ..	YM20-423
B32 ... ..	YB32-237	M21 ... ..	YM21-602
B33 ... ..	YB33-2010	M33 ... ..	YM33-807
B34 ... ..	YB34-223		

Components marked † on pages 26, 32 and 34 fitted after the above engine numbers.


Quote Engine and Frame Numbers, with prefix letters, when ordering spares.




# ENGINE.

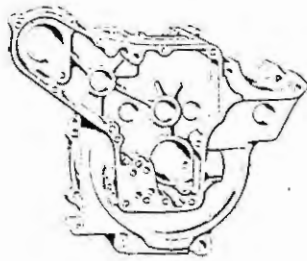

67-1231

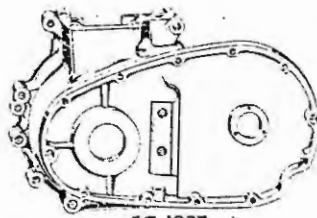


67-1227

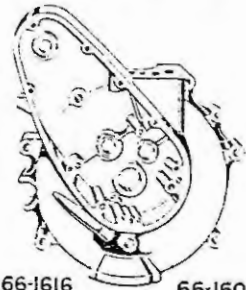


66-1616

66-1601

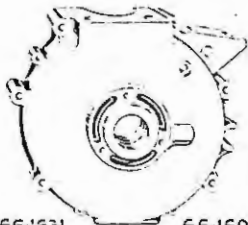


66-1631  
66-1642

66-1603  
66-1613

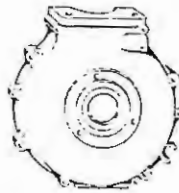

29-2321

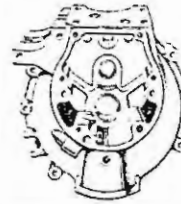

29-2319

29-2326



66-953  
65-437  
67-100  
65-440



67-1239



27-181



67-1247



67-101  
65-438  
66-954



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Crankcase Drain Plug ... ..	28-243	28-243	28-243	28-243	28-243	—
Do. Washer (fibre) ... ..	M814A	M814A	M814A	M814A	M814A	—
Engine Shaft Bush (gear side) ... ..	65-2052	65-2052	—	—	—	—
Crankcase Ball Bearing (drive side) ... ..	24-732	24-732	—	—	—	67-1240
Crankcase Roller Bearing (gear side) ... ..	—	—	24-722	24-722	24-722	—
Do. (drive side) ... ..	—	—	24-724	24-724	24-724	—
Ball Bearing (gear side) ... ..	—	—	—	—	27-261	—
Bearing (drive side) ... ..	—	—	65-2045	65 2045	66-1625	—
Crankcase Bearing Oil Retaining Washer (drive side) ... ..	24-2112	24-2112	—	—	—	—
Do. Spring Ring ... ..	66-1701	66-1701	65-2240	65-2240	65-2240	—
Crankcase Air Release Adaptor ... ..	29-2241	29-2241	—	—	—	—
* Do. ... ..	—	—	29-2241	29-2241	29-2241	—
Crankcase Air Release Adaptor Screw ... ..	29-2242	29-2242	—	—	—	—
* Do. ... ..	—	—	29-2242	29-2242	29-2242	—
Crankcase Air Release Adaptor Washer ... ..	31-8430	31-8430	—	—	—	—
* Do. ... ..	—	—	31-8430	31-8430	31-8430	—
Air Release Adaptor Body ... ..	29-2240	29-2240	—	—	—	—
* Do. ... ..	—	—	29-2240	29-2240	29-2240	—
Air Release Adaptor Body Fibre Disc ... ..	15-82	15-82	—	—	—	—
* Do. ... ..	—	—	15-82	15-82	15-82	—
Air Release Pipe, complete with nipple ... ..	29-2330	29-2330	—	—	—	—
* Do. ... ..	—	—	66-1696	66-1696	66-1685	—
Air Release Pipe Nipple Nut ... ..	K464A	K464A	—	—	—	—
* Do. ... ..	—	—	K464A	K464A	K464A	—

\* See Page 26.



# ENGINE.

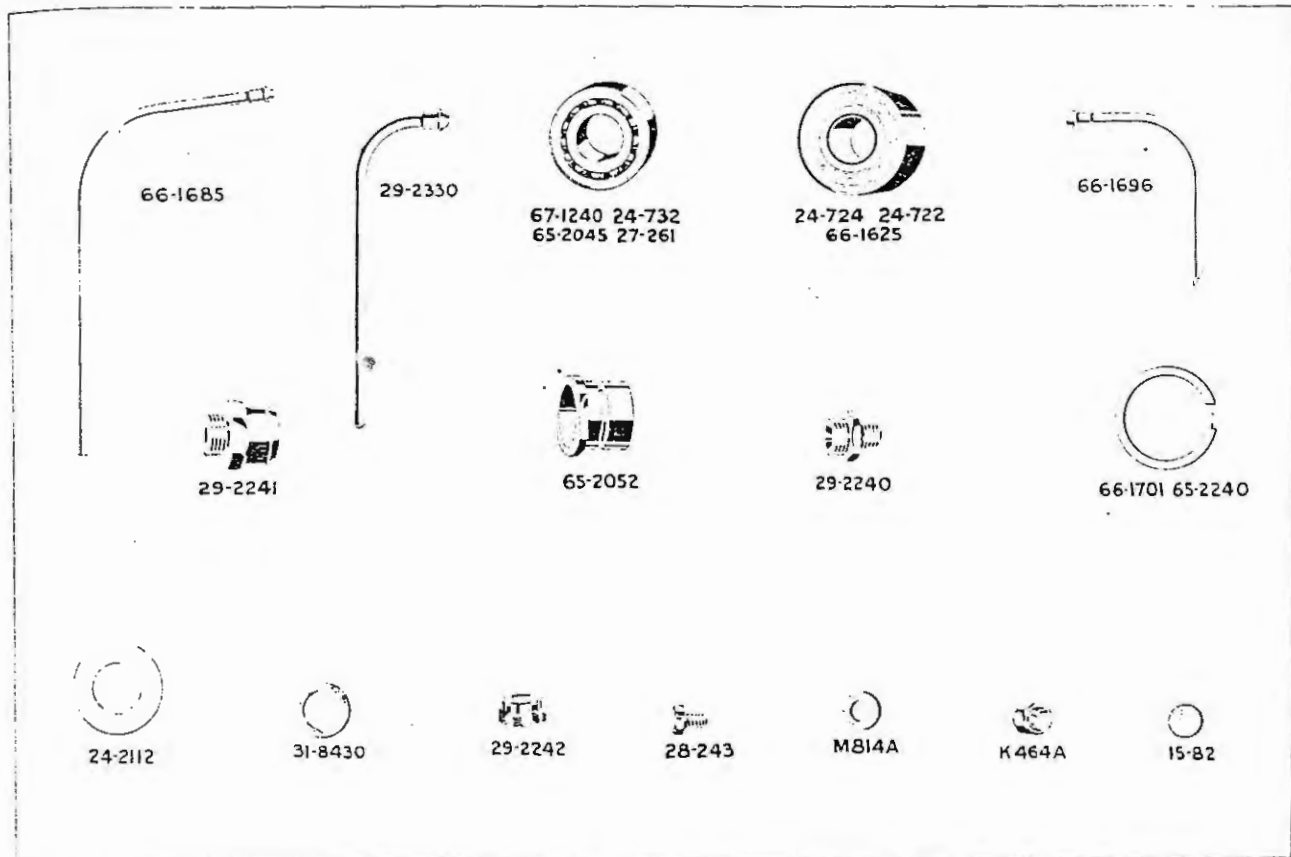



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Crankcase Breather ... ..	—	—	—	—	—	67-130
Do. Pipe ... ..	—	—	—	—	—	67-140
Do. Clip ... ..	—	—	—	—	—	66-8340
Crankcase Breather Oil Seal ( $\frac{3}{16}$ " thick)...	—	—	—	—	—	67-136
Do. ( $\frac{3}{16}$ " thick) ... ..	—	—	—	—	—	67-137
Do. ( $\frac{3}{16}$ " thick) ... ..	—	—	—	—	—	67-135
Do. (outer) ( $\frac{1}{8}$ " thick) ... ..	—	—	—	—	—	67-134
Crankcase Oil Seal ... ..	—	—	—	—	—	67-1242
Do. Washer ... ..	—	—	—	—	—	67-1243
Crankcase and Cylinder Base Fixing Stud	25-496(4)	25-496(4)	—	—	24-1620(4)	67-74(8)
Do. Stud (front) ... ..	29-565	—	—	—	—	—
Do. Stud ... ..	—	—	—	—	66-1627	—
Do. Stud Nut ... ..	EAS2(4)	EAS2(4)	—	—	15-152(5)	24-5160(8)
Do. Stud Nut ... ..	15-6524	—	—	—	—	—
Do. Washer (spring) ... ..	24-8784	—	—	—	—	—
Do. Washer (spring) ... ..	M576B(4)	M576B(6)	—	—	N572(5)	—
Do. Washer (shakeproof) ... ..	—	—	—	—	—	36-382(8)
Crankcase Connecting Bolt (top), complete	—	—	—	—	—	67-1291
Do. Nut (top) ... ..	—	—	—	—	—	67-1292
Crankcase Connecting Bolt ... ..	—	—	15-1355(3)	15-1355(3)	15-1355(3)	M253(2)
Do. Nut ... ..	—	—	EAS0(5)	EAS0(5)	EAS0(5)	EB102(2)
Do. Lockwasher ... ..	—	—	—	—	—	67-1248(2)
Crankcase Stud (top) (rear) ... ..	—	—	31-212	31-212	31-212	67-1250
Do. Stud (top) ... ..	29-2332(2)	29-2332(2)	—	—	—	—
Crankcase Stud (short) ... ..	27-279(4)	27-279(4)	24-949	24-949	24-949	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

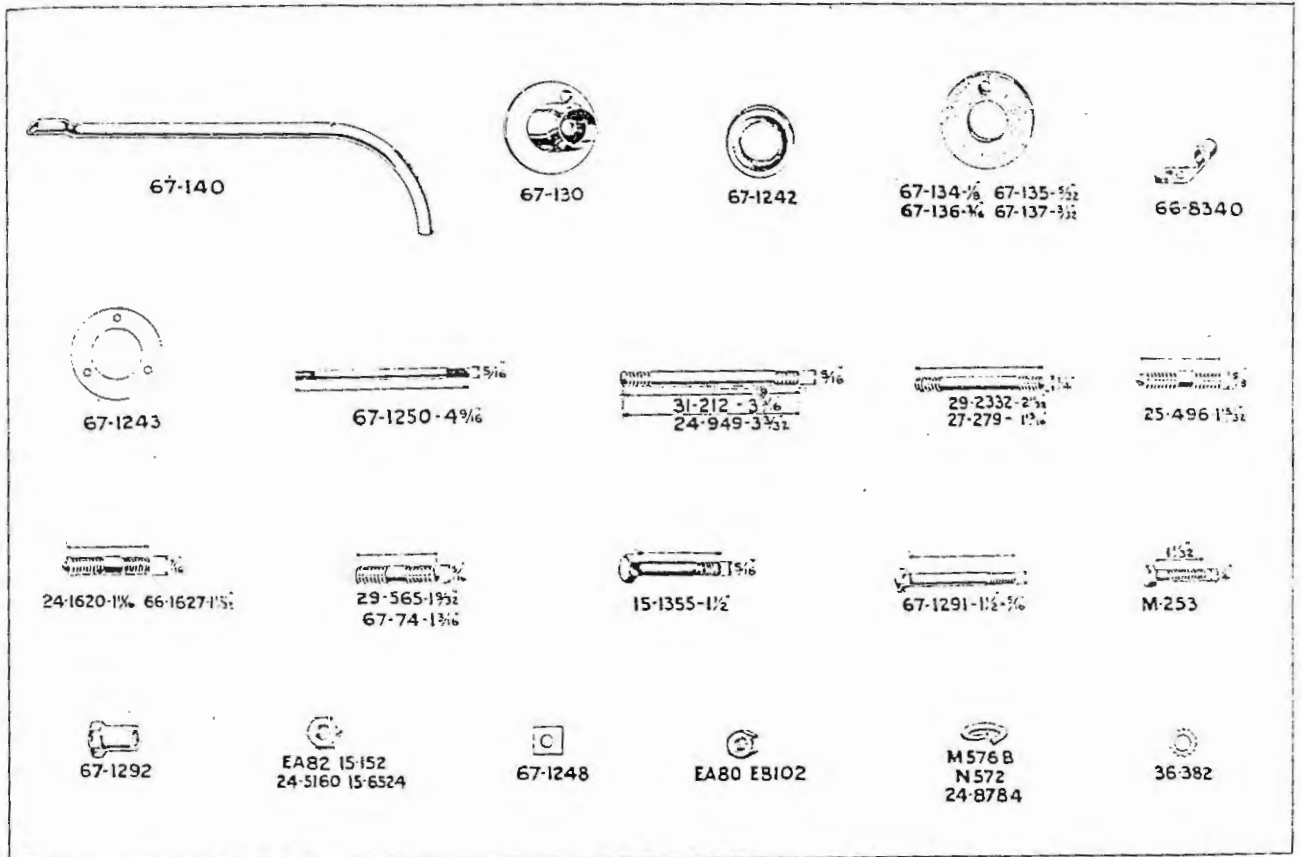



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown, one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Crankcase Stud Nut...	EB113(10)	EB113(10)	—	—	—	—
Crankcase Connecting Stud	—	—	—	—	—	67-1246
Do. (medium) ...	—	—	—	—	—	27-1037
Crankcase Connecting Stud	—	—	—	—	—	29-4101(3)
Do. Nut ...	—	—	—	—	—	EAS0(16)
Do. Washer (shakeproof) ...	—	—	—	—	—	36-382(17)
Crankcase and Gearbox Fixing Stud	—	—	—	—	—	35-4005(2)
Do. Nut ...	—	—	—	—	—	21-5(4)
Do. Washer (shakeproof) ...	—	—	—	—	—	66-4707(4)
Gearbox Fixing Stud	—	—	—	—	—	35-4005(2)
Crankcase Scavenge Cover ...	65-2611	65-2611	65-2611	65-2611	65-2611	67-1285
Do. Joint Washer ...	65-2612(2)	65-2612(2)	65-2612(2)	65-2612(2)	65-2612(2)	67-1288
Scavenge Cover Fixing Stud	31-222(4)	31-222(4)	31-222(4)	31-222(4)	31-222(4)	31-222(4)
Do. Nut ...	EB113(4)	EB113(4)	EB113(4)	EB113(4)	EB113(4)	EB113(4)
Do. Washer (spring) ...	K197(4)	K197(4)	29-541(4)	29-541(4)	29-541(4)	29-541(4)
Crankcase Scavenge Pipe, complete	—	—	—	—	—	67-1275
Do. Fixing Bolt ...	—	—	—	—	—	67-1280
Do. Lockwasher ...	—	—	—	—	—	67-1281
Scavenge Pipe Ball ...	—	—	—	—	—	$\frac{3}{4}$ " diam.
Crankcase Oil Pipe Adaptor	65-2252(2)	65-2252(2)	65-2252(2)	65-2252(2)	65-2252(2)	—
Do. Washer (fibre) ...	66-1683(2)	66-1683(2)	66-1683(2)	66-1683(2)	66-1683(2)	—
*Timing Cover, complete	—	—	66-1918	66-1918	66-1918	—
† Do. ...	—	—	65-2143	65-2143	65-2143	—
Timing Cover (outer)	29-2128	29-2128	—	—	—	67-146
Do. Joint Washer (outer) ...	29-2132	29-2132	66-1920	66-1920	66-1920	67-147

\* See page 26. † See page 26.



# ENGINE.

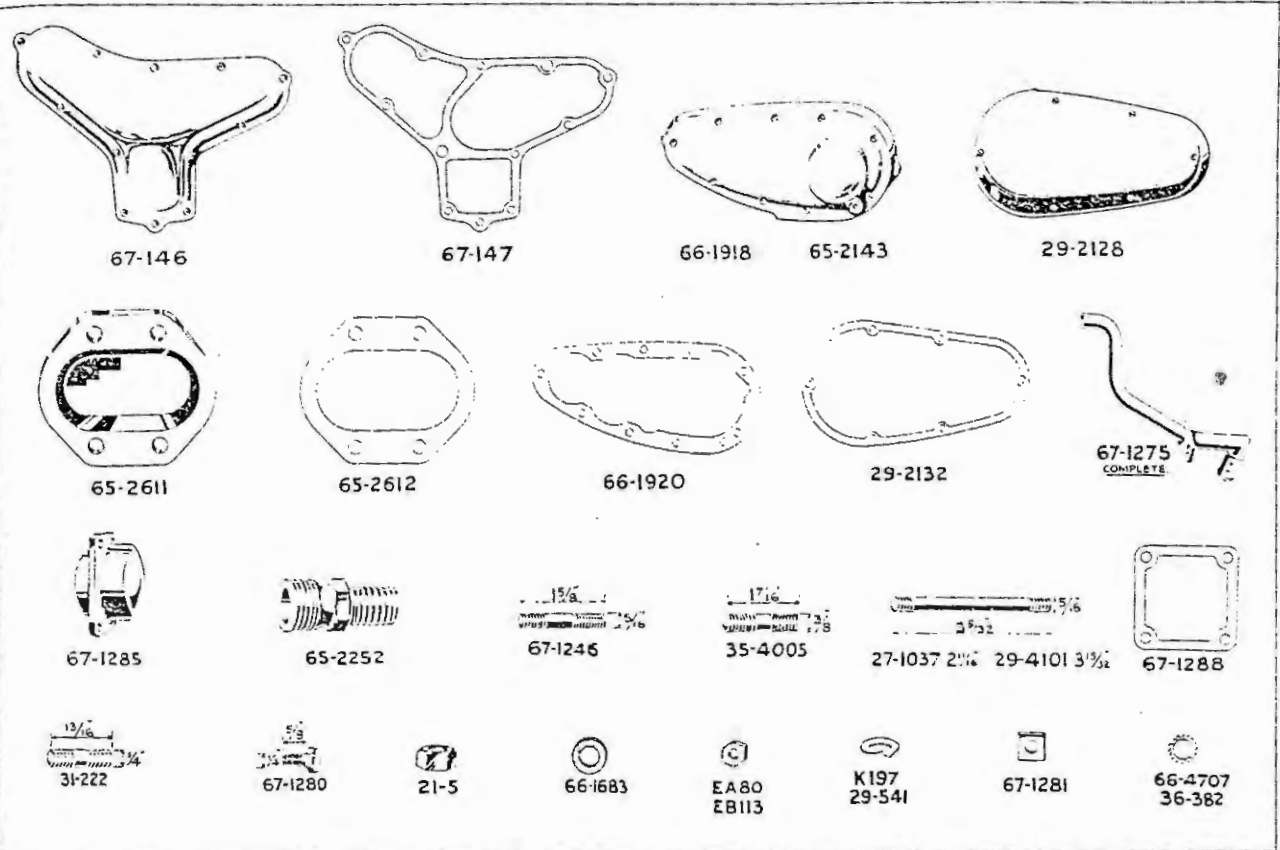



NOTE.—Figures in brackets denote number per set. *e.g.*, (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Timing Cover Outer Screw...	65-2158(6)	65-2158(6)	65-2157(9)	65-2157(9)	65-2157(9)	67-133(3)
Do. do. ...	—	—	—	—	—	65-3063(4)
Do. Inner Screw (long) ...	29-2136(2)	29-2136(2)	—	—	—	—
Do. Outer Screw (long) ...	—	—	—	—	—	67-132(5)
Timing Cover, with fixed fittings (inner)	29-2129	29-2129	—	—	—	67-142
Do. Joint Washer (inner) ...	29-2133	29-2133	—	—	—	67-144
Timing Cover Screws (inner) ...	65-2158(4)	65-2158(4)	—	—	—	67-133(5)
Do. Washer (shakeproof) ...	29-541(2)	29-541(2)	—	—	—	—
Timing Cover Dowel ...	27-1589(2)	27-1589(2)	—	—	—	—
Timing Cover Plug ...	—	—	—	—	—	67-138
Timing Cover Oil Feed Washer (rubber)	—	—	66-1923(2)	66-1923(2)	66-1923(2)	—
† Timing Cover Air Release Adaptor ...	—	—	65-2168	65-2168	65-2168	—
† Timing Cover Air Release Body...	—	—	65-2165	65-2165	65-2165	—
* Timing Cover Breather Extension Pipe, complete.	—	—	65-2166	65-2166	65-2166	—
† Do. Nut ...	—	—	66-8332	66-8332	66-8332	—
† Air Release Disc ...	—	—	15-82	15-82	15-82	—
† Air Release Adaptor Washer ...	—	—	31-8430	31-8430	31-8430	—
† Timing Cover Air Release Adaptor Screw	—	—	65-2171	65-2171	65-2171	—
Oil Valve Spring ...	66-1682	66-1682	66-1684	66-1684	66-1684	67-1400
Do. Retaining Screw ...	65-2188	65-2188	65-2188	65-2188	65-2188	67-1401
Do. Washer ...	66-1683	66-1683	66-1683	66-1683	66-1683	—
Oil Valve Spring Ball ...	$\frac{5}{16}$ " diam.	$\frac{5}{16}$ " diam.	$\frac{1}{2}$ " diam.	$\frac{1}{2}$ " diam.	$\frac{1}{2}$ " diam.	$\frac{1}{2}$ " diam.
Oil Pipe Union, with pipes complete	—	—	—	—	—	67-1461
Oil Pipe Union Joint Washer ...	—	—	—	—	—	67-1466


† See Page 26.




# ENGINE.

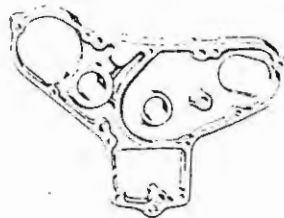

67-142

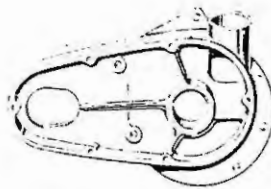


29-2129

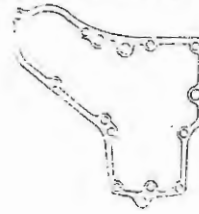


67-144



 
29-2133




67-1461

 


66-1682 66-1684

 


65-2166

 


65-2168

 


65-3063

 

67-132

 

29-2136

 

65-2157-118



67-133



65-2158



65-2165



65-2188



27-1589



67-1400



67-138



66-1923



66-8332



67-1466



31-8430



67-1401



65-2171



66-1683



15-82



29-541



NOTE.—Figures in brackets denote number per set, i.e., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31-B32.	B33 B34 M33	M20 M21.	A7.
Oil Pipe Union Fixing Bolt ... ..	—	—	—	—	—	67-1467
Do. Washer (shakeproof) ... ..	—	—	—	—	—	66-4707
Oil Release Valve, complete ... ..	—	—	—	—	—	67-1490
Oil Release Valve Body, complete ... ..	—	—	—	—	—	67-1491
Oil Release Valve Ball ... ..	—	—	—	—	—	$\frac{5}{16}$ " diam.
Oil Release Valve Spring ... ..	—	—	—	—	—	67-1496
Oil Release Valve Body Plug ... ..	—	—	—	—	—	67-1497
Do. Washer (fibre) ... ..	—	—	—	—	—	67-1498
Oil Release Valve Washer (fibre) ... ..	—	—	—	—	—	67-1499
Crankshaft, Flywheel and Connecting Rod assembled.	—	—	—	—	—	67-614
Crankshaft and Flywheel assembled ... ..	—	—	—	—	—	67-615
Crankshaft Bush (gear side) ... ..	—	—	—	—	—	67-648
Connecting Rod, complete with bushes, bolts and nuts.	—	—	—	—	—	67-228(2)
Gudgeon Pin Bush ... ..	65-441	65-441	66-492	66-492	66-491	67-210(2)
Big End Split Bush (4 halves) ... ..	—	—	—	—	—	67-226(2)
Do. Bush ... ..	—	—	66-490	66-490	66-490	—
Connecting Rod Bolt (big end) ... ..	—	—	—	—	—	35-1202(4)
Connecting Rod Bolt Nut ... ..	—	—	—	—	—	67-224(4)
Connecting Rod Bolt Split Pin ... ..	—	—	—	—	—	35-705(4)
Connecting Rod, complete with bushes ... ..	—	—	66-482	66-482	66-480	—
Do complete with bush ... ..	65-443	29-2276	—	—	—	—
Connecting Rod Thrust Washer ... ..	—	—	66-629(2)	66-629(2)	66-629(2)	—
Do. Rivet ... ..	—	—	66-630(6)	66-630(6)	66-630(6)	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

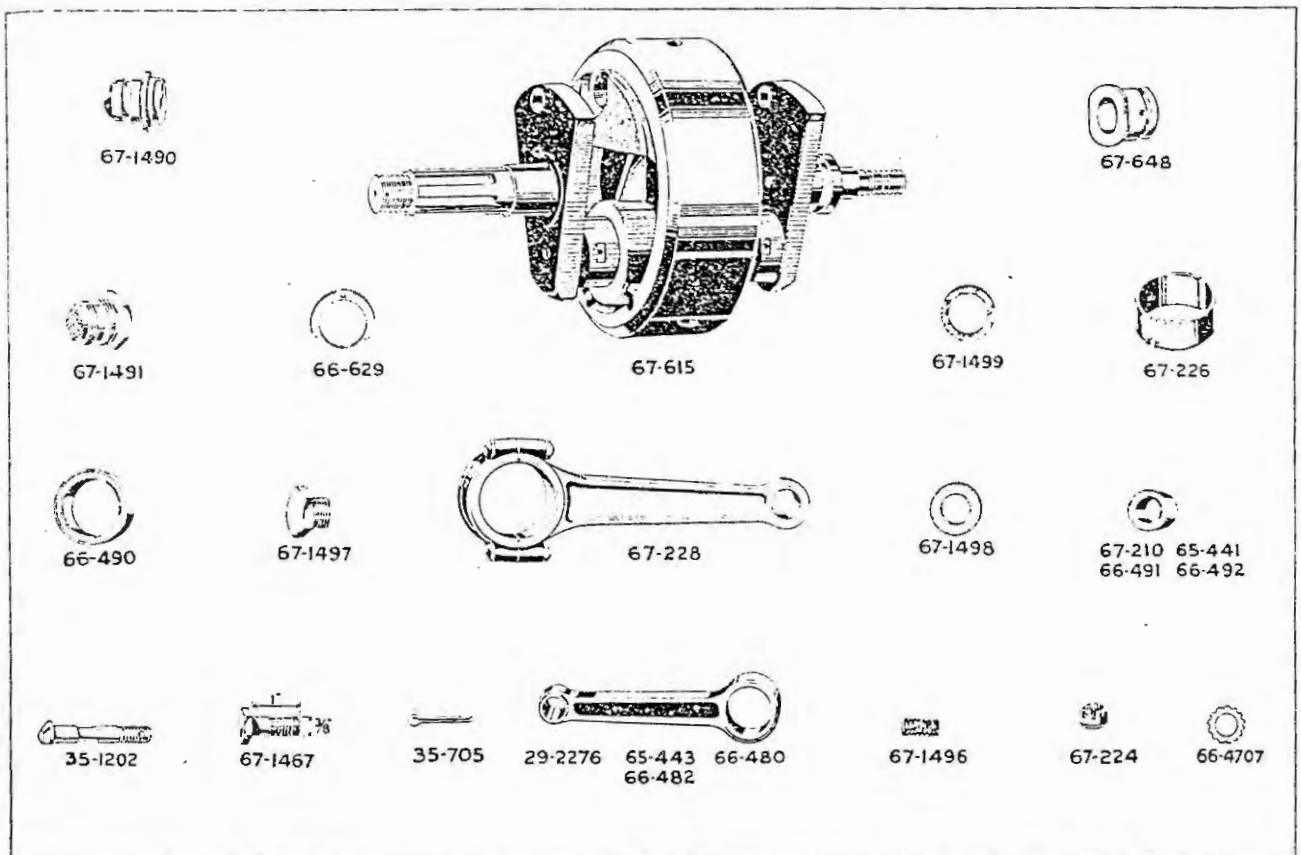



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Crankpin ... ..	29-2196	29-2196	66-545	66-545	66-545	---
Do. Key ... ..	EA101	EA101	EA101	EA101	EA101	---
Do. Nut ... ..	29-776(2)	29-776(2)	31-298-2	31-298-2	31-298-2	---
Do. Locking Washer ... ..	---	---	31-300(2)	31-300(2)	31-300-2	---
Do. Locking Washer Screw ... ..	---	---	EA62(2)	EA62-2	EA62-2	---
Crankpin Roller Cage ... ..	---	---	66-506	66-506	66-506	---
Crankpin Roller ... ..	29-778(15)	29-778(15)	24-375(24)	24-375(24)	24-375(24)	---
Crankpin Oil Hole Plug Screw ... ..	65-479	65-479	65-479	65-479	65-479	---
Flywheel (drive side, cast iron), with engine shaft assembled.	29-2632	29-2632	---	---	---	---
Do. (drive side, steel) ... ..	65-574	65-574	65-1123	65-1233	66-649	---
Do. (drive side, steel) (M21 only) ... ..	---	---	---	---	66-636	---
Flywheel (gear side, cast iron), with engine shaft assembled.	65-554	65-554	---	---	---	---
Do. (gear side, steel) ... ..	65-572	65-572	65-1125	65-1235	66-651	---
Do. (gear side, steel) (M21 only) ... ..	---	---	---	---	66-634	---
Engine Shaft (drive side) ... ..	---	---	65-1128	65-1128	66-644	---
Do. (gear side) ... ..	---	---	65-1129	65-1129	66-640	---
Engine Shaft Rivet ... ..	---	---	27-1239(14)	27-1239(14)	27-1239(14)	---
Oil Flinger (drive side) ... ..	65-2055	65-2055	24-2113	24-2113	24-2113	---
Engine Shaft Shim (drive side) ... ..	---	---	66-661	66-661	66-661	---
Crankshaft Shim (.005") ... ..	---	---	---	---	---	67-639
Do. (.010") ... ..	---	---	---	---	---	67-638
Do. (.015") ... ..	---	---	---	---	---	67-637
Do. (.020") ... ..	---	---	---	---	---	67-636

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

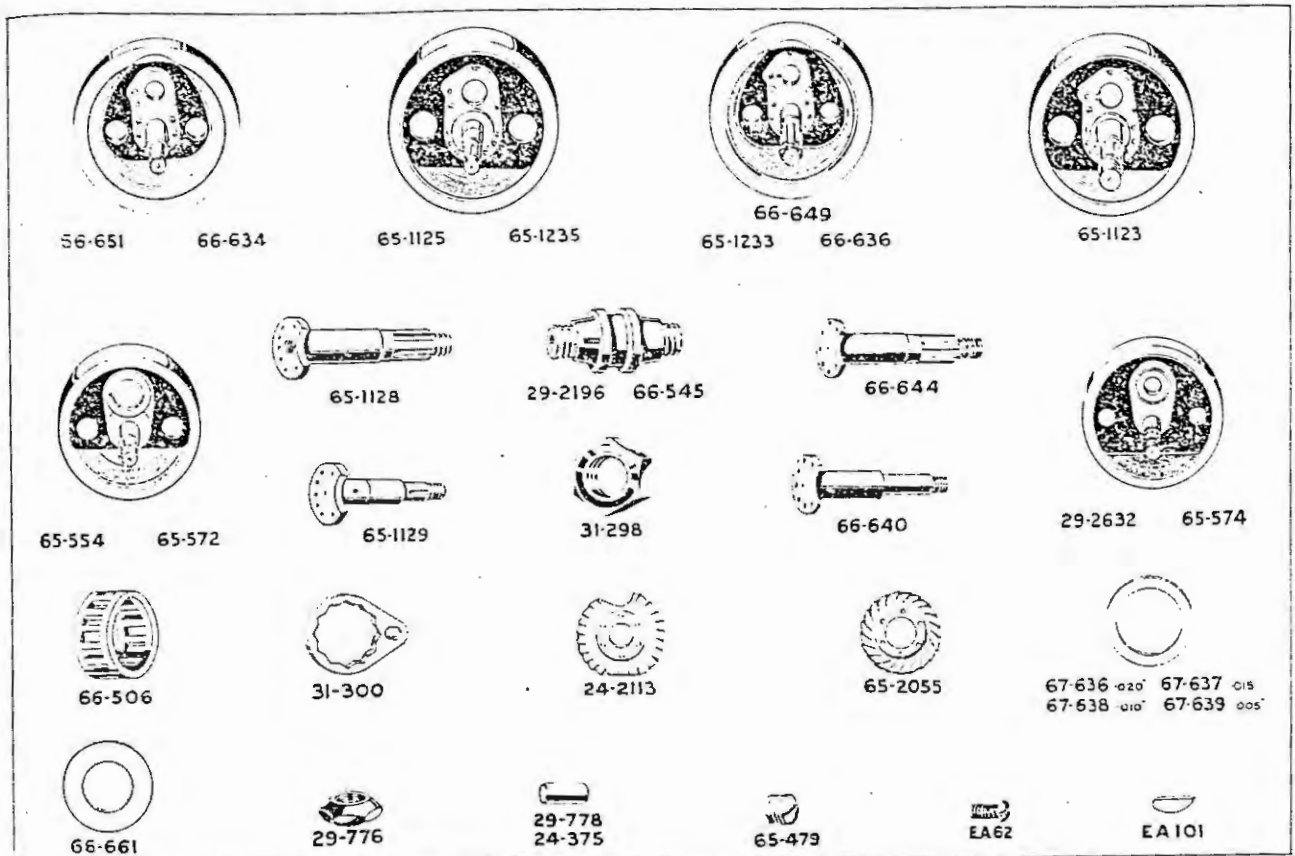



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Camshaft Shim (.025") ...	—	—	—	—	—	67-635
Do. (.030") ...	—	—	—	—	—	67-634
Crankshaft Pinion ...	—	—	—	—	—	67-641
Crankshaft Pump Gear ...	—	—	—	—	—	67-642
Do. Key ...	—	—	—	—	—	15-40
Do. Washer ...	—	—	—	—	—	67-645
Crankshaft Nut ...	—	—	—	—	—	67-643
Do. Locking Washer ...	—	—	—	—	—	67-644
Engine Shaft Distance Collar ...	65-2048	65-2048	66-660	66-660	66-660	—
Engine Shaft Oil Feed Pipe ...	—	—	66-698	66-698	66-698	—
Timing Pinion ...	29-2182	29-2182	65-692	65-692	65-692	—
Do. Key ...	15-40	15-40	65-693	65-693	65-693	—
Do. Locking Washer ...	15-1410	15-1410	65-695	65-695	65-695	—
Do. Nut ...	65-691	65-691	29-905	29-905	29-905	—
Cush Drive Bearing ...	65-2523	65-2523	65-2523	65-2523	65-2523	67-2053
Do. Distance Collar ...	29-2634	29-2634	—	—	—	—
Cush Drive Bearing Nut ...	65-2520	65-2520	65-2520	65-2520	65-2520	67-2054
Do. Locking Washer ...	65-2521	65-2521	65-2521	65-2521	65-2521	—
Do. Split Pin ...	—	—	—	—	—	35-709
Cush Drive Bearing Alignment Washer (.032") ...	66-1705	66-1705	66-1707	66-1707	66-1707	—
Do. (.064") ...	24-389	24-389	66-1708	66-1708	66-1708	—
Cush Drive Sliding Sleeve (B32 only) ...	—	—	65-2431	—	—	—
Cush Drive Sliding Sleeve ...	—	—	—	—	—	67-2055
Cush Drive Sleeve ...	15-1555	15-1555	15-1555	15-1555	15-1555	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares



# ENGINE.



29-2182



65-692



65-2431  
15-1555



65-2523



67-2055



67-641



67-2053



67-2054



29-2634



65-2048  
66-660



66-1705 064  
66-1707 032



67-635 025  
67-634 030



66-1708 004  
24-389 010



65-2520



67-642



66-698



65-691



65-2521



15-1410



67-643



29-905



67-644



67-645



15-40



65-695



65-693



35-709



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Cush Drive Spring ... ..	15-46	15-46	66-1706	66-1706	15-46	67-2052
Do. (M21 only) ... ..	—	—	—	—	66-1706	—
Cush Drive Distance Piece (.320"-.325" thk.) ... ..	—	—	65-2528	65-2528	65-2528	—
Do. (.288"-.293" thick) ... ..	—	—	65-2529	65-2529	65-2529	—
Do. (.256"-.261" thick) ... ..	—	—	65-2530	65-2530	65-2530	—
Engine Sprocket (15T), use only with 65-2431 Sleeve (B32 only). ... ..	—	—	65-2430	—	—	—
Engine Sprocket (16T) ... ..	15-1568	15-1568	15-1568	15-1568	15-1568	—
Do. (17T) ... ..	15-1567	15-1567	15-1567	15-1567	15-1567	—
Do. (18T) ... ..	—	—	15-1566	15-1566	15-1566	—
Do. (19T) ... ..	—	—	15-1565	15-1565	15-1565	—
Do. (20T) ... ..	—	—	15-1564	15-1564	15-1564	—
Do. (21T) ... ..	—	—	15-1560	15-1560	15-1560	—
Engine Sprocket, complete with sleeve and key (27T). ... ..	—	—	—	—	—	67-2050
Magdyno Driving Pinion ... ..	—	—	65-2334	65-2334	65-2334	—
Do. Nut ... ..	—	—	24-195	24-195	24-195	—
Do. Spring Washer ... ..	—	—	M576a	M576a	M576a	—
Magdyno Driving Pinion Oil Seal ... ..	—	—	65-2316	65-2316	65-2316	—
Magdyno Packing Washer (.005") ... ..	—	—	—	—	66-2347(2)	—
Do. (.010") ... ..	—	—	—	—	66-2348(2)	—
Magdyno Strap (short), complete ... ..	—	—	66-2321	66-2321	66-2321	—
Do. (long) ... ..	—	—	66-2320	66-2320	66-2320	—
Magneto Strap (short) (B32 only) ... ..	—	—	66-2327	—	—	—
Do. (B34 only) ... ..	—	—	—	66-2327	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



 
# ENGINE.



65-2334



67-2050



15-1560 21 T 15-1564 20 T  
15-1565 19 T 15-1566 18 T  
15-1567 17 T 15-1568 16 T



65-2430-15 T



66-2320 8%  
66-2321 5%  
66-2327 2%



66-1706  
15-46



67-2052



66-2347 .005  
66-2348 .010



65-2316



24-195



65-2528 320 325  
65-2529 280 285  
65-2530 255 260



M 5768







NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Magneto Strap (long) (B32 only) ...	—	—	66-2343	—	—	—
Do. Do. (B34 only) ...	—	—	—	66-2343	—	—
Magneto Joint Washer ...	—	—	—	—	—	67-1258
Magneto Fixing Stud ...	—	—	—	—	—	67-1245(3)
Magneto Fixing Nut ...	—	—	—	—	—	EA80(2)
Do. (long) ...	—	—	—	—	—	67-1259
Do. Washer ...	—	—	—	—	—	36-382(3)
Dynamo Strap ...	29-2201	29-2201	—	—	—	67-1876
Do. Eyebolt ...	29-2203	29-2203	—	—	—	29-2203
Do. Nut ...	EA80	EA80	—	—	—	EB129
Do. Washer ...	—	—	—	—	—	29-4662
Dynamo Strap Stud ...	29-2177(2)	29-2177(2)	—	—	—	67-1878(2)
Dynamo Eye Plug (plain) ...	65-2352	65-2352	65-2352	65-2352	65-2352	65-2352
Do. (threaded) ...	—	—	65-2353	65-2353	65-2353	—
Dynamo Strap Clip Bolt ...	—	—	27-5156	27-5156	27-5156	—
Do. Washer ...	F21	F21	F21	F21	M550A	—
Distributor Clamp Fixing Screw ...	66-1933	66-1933	—	—	—	—
Dynamo Driving Sprocket ...	29-2198	29-2198	—	—	—	67-725
Do. Key ...	—	—	—	—	—	65-2330
Dynamo Driving Chain ...	29-2199	29-2199	—	—	—	29-2199
Dynamo Driving Sprocket ...	—	—	—	—	—	67-721
Do. Nut ...	—	—	—	—	—	EB201
Do. Washer ...	—	—	—	—	—	35-4224
Magdyne Drive Idler Pinion, with bush ...	—	—	66-2250	66-2250	66-2250	—
Idler Pinion ...	—	—	66-2251	66-2251	66-2251	67-706

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



 
# ENGINE.



66-2250  
66-2251



67-706




67-721



67-725



29-2198

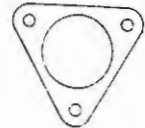

67-1258



67-1876



 
67-1259



66-2343 8 1/2



29-2201



27-5156



 
29-2203



29-2199



29-2177 67-1878



67-1245



66-1933



65-2352



65-2353



EA80  
EB129  
EB-201



29-4662



M550A  
F 21



35-4224



36-382



65-2330



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Idle Pinion complete ... ..	—	—	—	—	—	67-705
Idle Pinion Spindle ... ..	—	—	65-2335	65-2335	65-2335	67-707
Do. Bush inner timing cover ...	—	—	—	—	—	67-709
Do. Bush ... ..	—	—	65-2336	65-2336	65-2336	—
Idle Pinion Spindle Oil Seal ... ..	—	—	—	—	—	67-708
Idle Pinion Key ... ..	—	—	—	—	—	27-1386
Idle Pinion Thrust Washer ... ..	—	—	36-3528	36-3528	36-3528	—
Inlet and Exhaust Cam Pinion, complete with bush ... ..	—	—	65-2420(2)	65-2420(2)	65-2420(2)	—
Cam Pinion Spindle ... ..	—	—	65-2425(2)	65-2425(2)	65-2425(2)	—
Cam Pinion Bush ... ..	—	—	65-441(4)	65-441(4)	65-441(4)	—
Cam Pinion Spindle Bolt ... ..	—	—	66-2007(2)	66-2007(2)	66-2007(2)	—
Timing Gear Plate complete, with bearing	—	—	66-2008	66-2008	66-2008	—
Gear Plate Bolt (C.E.L.) ... ..	—	—	1-5069	1-5069	1-5069	—
Do. (Whit.) ... ..	—	—	21-2902(3)	21-2902(3)	21-2902(3)	—
Do. Washer shakeproof ... ..	—	—	36-382(6)	36-382(6)	36-382(6)	—
Camshaft ... ..	29-2164	29-2286	—	—	—	67-686
Camshaft and Idle Pinion Shaft Bush ...	—	—	—	—	—	67-686(3)
Camshaft Bush (crankcase) ... ..	29-2141	29-2141	—	—	—	67-687
Camshaft Timing Cover Bush (outer) ...	29-2134	29-2134	—	—	—	—
Do. (inner) ... ..	29-2135	29-2135	—	—	—	—
Camshaft Pinion ... ..	29-2162	29-2162	—	—	—	67-682
Do. Key ... ..	EA101	EA101	—	—	—	35-1896
Do. Nut ... ..	—	—	—	—	—	24-7090
Do. Lockwasher ... ..	—	—	—	—	—	67-685

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.



 
67-705



65-2420



29-2162




67-682



29-2164 29-2286



 67-695



65-2425



67-707



65-2335



29-2141



66-2008



29-2154



29-2135



67-686



67-709  
67-687



65-2336



65-441



1-5069 3/4  
21-2902 3/4



66-2007



24-7000



67-685



 
67-708



36-3528



36-382



27-1386  
35-1896  
EA 101



NOTE.—Figures in brackets denote number per set, i.e., (2), 2 per set.

# Engine—continued.

 
 
 
 
 
 
 
 
 
 
When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	E31 E32.	E33 E34 M33	M20 M21.	A7.
Camshaft Shim ... ..	29-2165	29-2165	—	—	—	—
Camshaft Dynamo Sprocket ... ..	29-2187	29-2187	—	—	—	—
Do. Nut ... ..	24-4255	24-4255	—	—	—	—
Do. Lockwasher ... ..	29-2172	29-2172	—	—	—	—
Inlet Cam Wheel complete (special order only).	—	—	65-2438	65-2438	—	—
Exhaust Cam Wheel complete (special order only).	—	—	65-2434	65-2434	—	—
Do. (special order only) ... ..	—	—	65-2436	65-2436	—	—
Inlet and Exhaust Cam Rocker ... ..	29-2148(2)	29-2285(2)	—	—	—	—
Cam Rocker Spindle ... ..	29-2173	29-2173	—	—	—	—
Do. Distance Piece ... ..	29-2171	29-2171	—	—	—	—
Do. Circlip ... ..	29-2170	29-2170	—	—	—	—
Inlet and Exhaust Tappet ... ..	29-2180(2)	—	66-1493 2)	66-1493 2)	—	67-1024(4)
Inlet Tappet ... ..	—	—	—	—	66-1493	—
Exhaust Tappet ... ..	—	—	—	—	66-1495	—
Inlet and Exhaust Tappet Head ... ..	—	—	66-1511 2)	—	—	—
Inlet Tappet Head ... ..	29-232(2)	—	—	—	66-1497	—
Exhaust Tappet Head ... ..	—	—	—	—	66-1498	—
Inlet and Exhaust Tappet Locknut ... ..	24-6040(2)	—	15-6524(2)	15-6524(2)	15-6524(2)	—
Inlet and Exhaust Valve Tappet Guide ... ..	65-42(2)	—	66-1494 2)	66-1494(2)	66-1494(2)	—
Tappet Guide (inlet) ... ..	—	—	—	—	—	67-1021(2)
Do. (exhaust) ... ..	—	—	—	—	—	67-1022
Tappet Guide Fixing Plate ... ..	—	—	—	—	—	67-1023

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.





NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31-B32.	B33 B34 M33	M20 M21.	A7.
Tappet Guide Fixing Plate Bolt ...	—	—	—	—	—	67-1025(2)
Do. Washer (shakeproof) ...	—	—	—	—	—	36-382(2)
Tappet Recess Cover ...	29-2554	—	66-1936	66-1936	—	—
Do. Screw ...	66-1933(4)	—	29-2158 4	29-2158 4	—	—
Do. Washer ...	29-2159	—	—	—	—	—
Tappet Recess Cover Joint Washer ...	—	—	66-1937	66-1937	—	—
Push Rod, complete with ends ...	—	—	65-1084 2	65-1084(2)	—	—
Valve Push Rod ...	—	29-224(2)	—	—	—	—
Do. inlet ...	—	—	—	—	—	67-57(2)
Do. (exhaust) ...	—	—	—	—	—	67-58(2)
Push Rod End (top) ...	—	—	66-1341(2)	66-1341(2)	—	—
Do. (bottom) ...	—	—	65-885(2)	65-885(2)	—	—
Push Rod End Rivet ...	—	—	66-1343(4)	66-1343(4)	—	—
Push Rod Cover Tube ...	—	—	65-1080	65-1080	—	—
Do. Bottom Washer ...	—	—	66-1379	66-1379	—	—
Do. Gland Packing (rubber) ...	—	—	66-1367	66-1367	—	—
Push Rod Gland Nut ...	—	—	65-1082	65-1082	—	—
Do. Stud ...	—	—	24-4227(2)	24-4227(2)	—	—
Do. Nut ...	—	—	65-930(2)	65-930(2)	—	—
Do. Washer (shakeproof) ...	—	—	29-541(2)	29-541(2)	—	—
Oil Pump complete ...	65-2619	65-2619	65-2619	65-2619	65-2619	67-1381
Oil Pump Body ...	65-2596	65-2596	65-2596	65-2596	65-2596	67-1382
Do. Bottom Plate complete ...	65-2625	65-2625	65-2625	65-2625	65-2625	—
Do. Top Plate ...	65-2598	65-2598	65-2598	65-2598	65-2598	—
Do. Washer ...	65-2606	65-2606	65-2606	65-2606	65-2606	—
Do. End Plate ...	—	—	—	—	—	67-1391

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

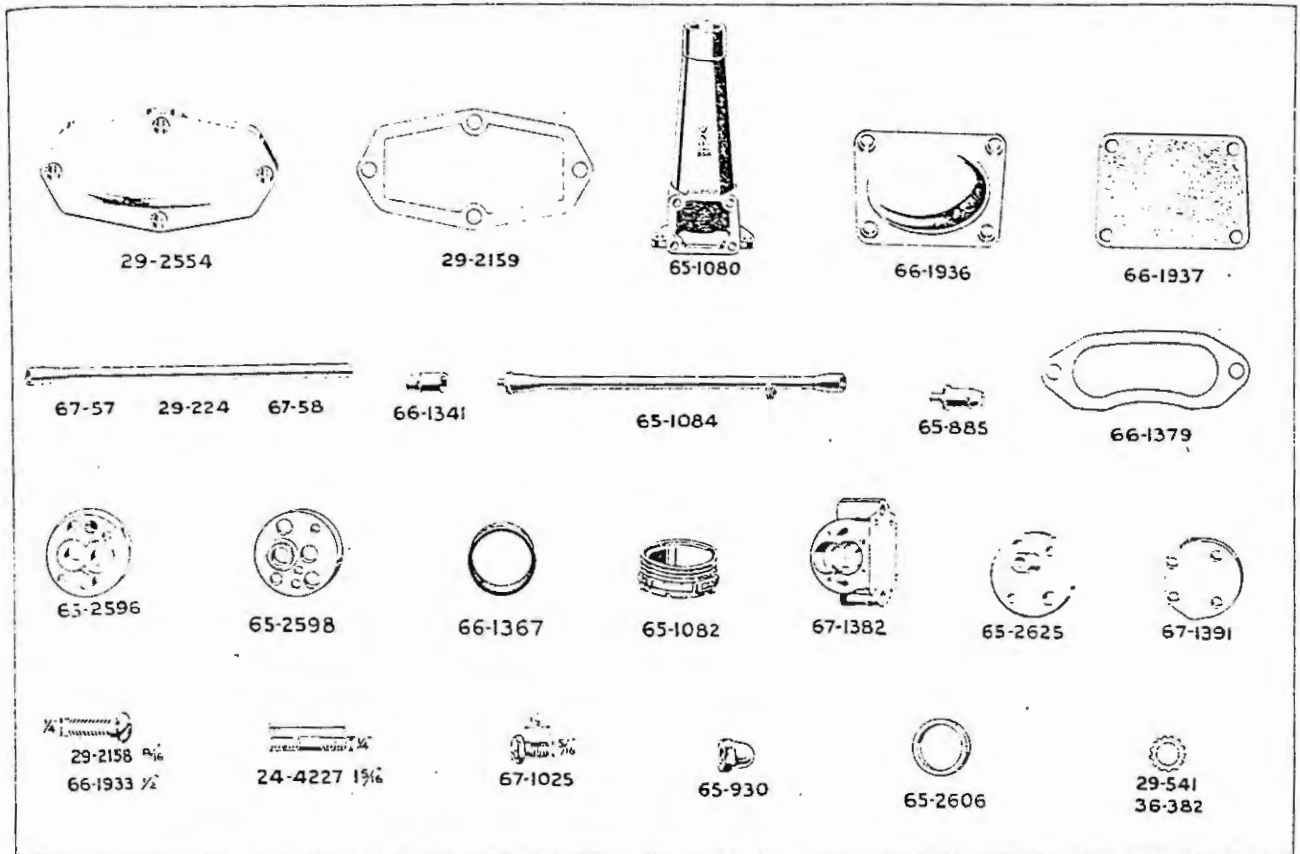



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	1331 1332.	1333 1334 M33	M26 M21.	A7.
Oil Pump Washer (crankcase) ...	65-2618	65-2618	65-2618	65-2618	65-2618	67-1393
Oil Pump Washer (fibre) (small) ...	—	—	—	—	—	67-1394
Oil Pump Bolt ...	15-848(2)	15-848(2)	15-848(2)	15-848(2)	15-848(2)	67-1392(4)
Oil Pump Pin Gear (driving) ...	65-2601	65-2601	65-2601	65-2601	65-2601	67-1383
Do. (driven) ...	65-2600	65-2600	65-2600	65-2600	65-2600	67-1384
Oil Pump Scavenge Gear ...	65-2599(2)	65-2599(2)	65-2599(2)	65-2599(2)	65-2599(2)	—
Do. (driver) ...	—	—	—	—	—	67-1385
Do. (driven) ...	—	—	—	—	—	67-1386
Oil Pump Fixing Bolt ...	65-2604(2)	65-2604(2)	65-2604(2)	65-2604(2)	65-2604(2)	—
Do. Washer (spring) ...	24-978(2)	24-978(2)	24-978(2)	24-978(2)	24-978(2)	—
Oil Pump Fixing Stud (long) ...	—	—	—	—	—	67-1395(2)
Do. (short) ...	—	—	—	—	—	67-1396
Do. Nut ...	—	—	—	—	—	EB113(3)
Do. Washer (shakeproof) ...	—	—	—	—	—	29-541(3)
Oil Pump Spindle (driving) ...	65-2602	65-2602	65-2620	65-2620	65-2620	67-1389
Oil Pump Spindle (driven) ...	—	—	—	—	—	67-1387
Do. Retaining Pin ...	65-2603	65-2603	65-2579	65-2579	65-2579	—
Do. Washer ...	EB222	EB222	EB222	EB222	EB222	—
Do. Spring Ring ...	—	—	—	—	—	67-1390
Oil Pump Driving Spindle Washer ...	—	—	—	—	—	8473
Oil Pump Driving Spindle Housing ...	—	—	—	—	—	67-1388
Oil Pump Filter (gauze) ...	65-2623	65-2623	65-2623	65-2623	65-2623	—
Primary Chain (.375 pitch x .250 diam.) ...	—	—	—	—	—	67-1703
Do. Cover ...	—	—	—	—	—	67-1701
Do. Screw (long) ...	—	—	—	—	—	67-1704

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

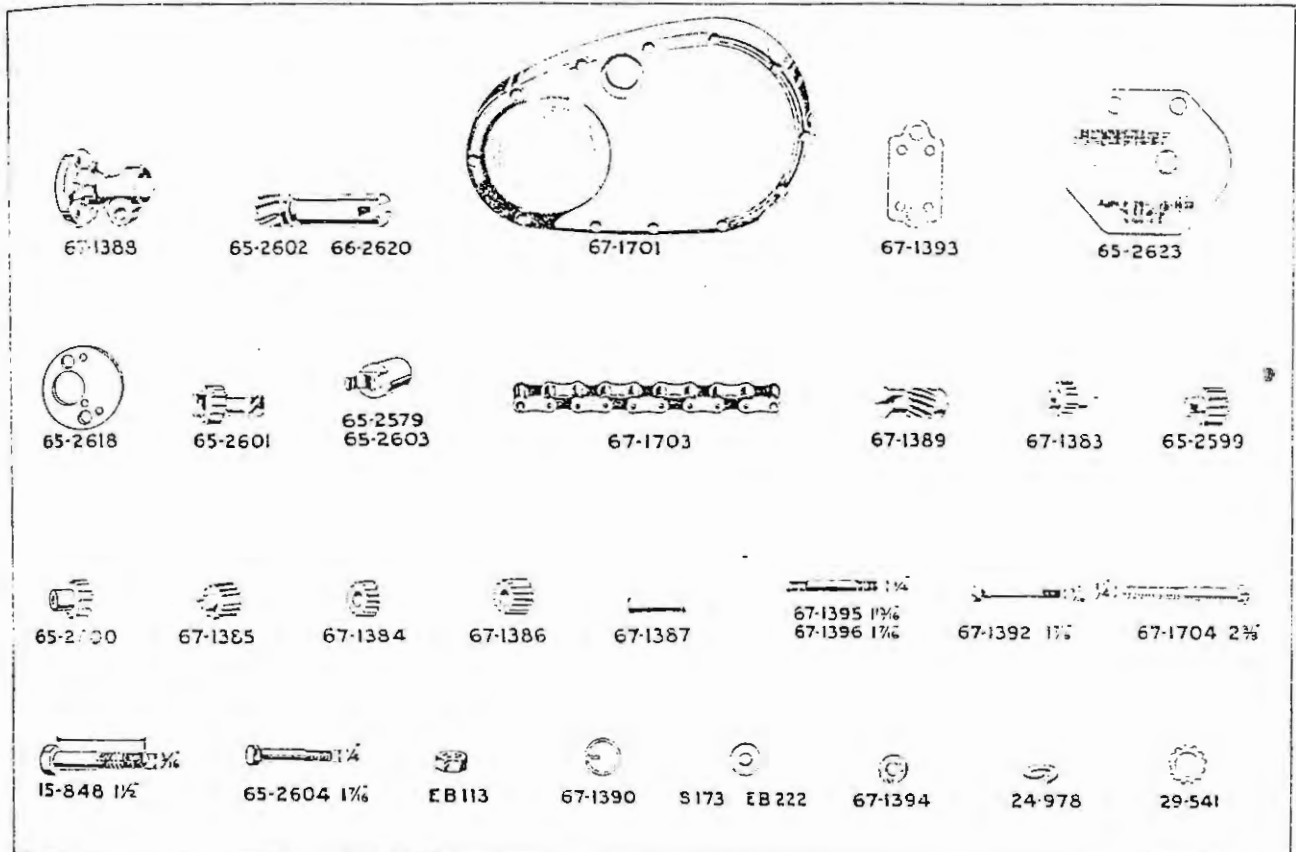



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Engine—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Primary Chain Cover Screw (medium ...	---	---	---	---	---	67-1703 71
Do. (short) ...	---	---	---	---	---	67-1705 3.
Primary Chain Cover Joint Washer ...	---	---	---	---	---	67-1702
Primary Chain Cover Oil Filler Plug ...	---	---	---	---	---	65-3364
Do. Washer ...	---	---	---	---	---	65-3365
Primary Chain Cover Oil Level Screw ...	---	---	---	---	---	67-1708
Do. Washer ...	---	---	---	---	---	67-1709
Primary Chain Tensioner ...	---	---	---	---	---	67-1261
Primary Chain Tensioner Spring Plate ...	---	---	---	---	---	67-1263
Primary Chain Tensioner Stud ...	---	---	---	---	---	67-1262(2)
Do. Nut ...	---	---	---	---	---	67-1264(2)
Do. Wire ...	---	---	---	---	---	67-1267(2)
Do. Stud Washer ...	---	---	---	---	---	621(2)
Primary Chain Tensioner Adjusting Screw	---	---	---	---	---	67-1265
Do. Nut ...	---	---	---	---	---	67-1266
Primary Chain and Bottom Chain Guard	---	---	---	---	---	67-1710
Screw Nut.						


## EXHAUST SYSTEM.

Exhaust Pipe complete (offside) ...	---	---	---	---	---	67-2675
Do. (nearside) ...	---	---	---	---	---	67-2679
Exhaust Pipe complete ...	29-2980	29-2971	65-2687	65-2687	66-2940	---
Do. (M33 only) ...	---	---	---	65-2986	---	---
Do. (B32 and B34 only) ...	---	---	65-2690	65-2690	---	---

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

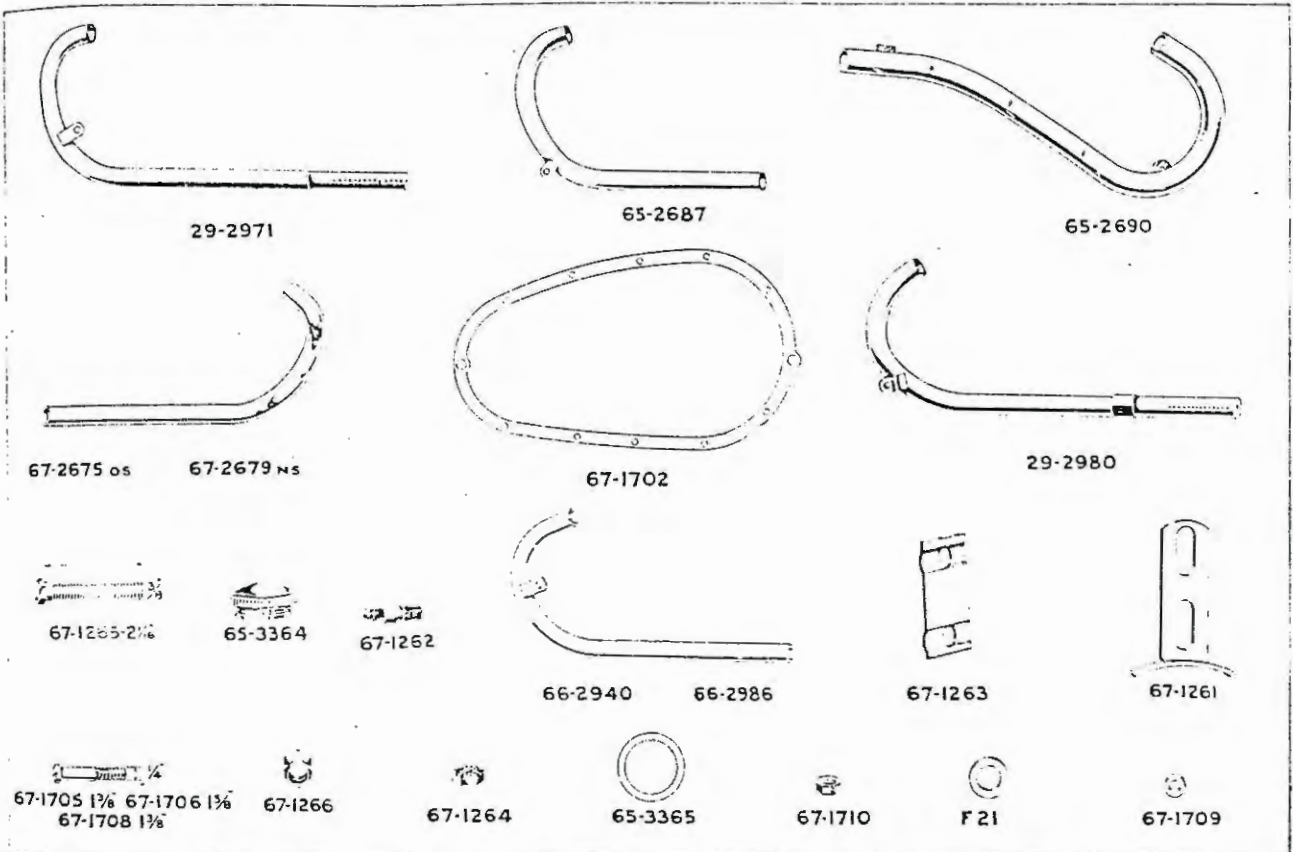



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Engine—continued


When no figures in brackets are shown, one part constitutes a set.

DESCRIPTION	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
Exhaust Pipe (special order only) ...	—	—	65-2695	65-2695	—	—
Exhaust Pipe Sleeve (M33 only) ...	—	—	—	66-2993	—	—
Exhaust Pipe Finned Collar ...	—	—	15-2345	15-2345	—	67-2690(2)
Do. Screw ...	—	—	M204	M204	—	M204(2)
Exhaust Pipe Legshield (B32 and B34 only)	—	—	65-2704	65-2704	—	—
Do. Screws (B32 and B34 only) ...	—	—	24-7065(3)	24-7065(3)	—	—
Do. Washer (shakeproof) ...	—	—	29-3319(3)	29-3319(3)	—	—
Legshield Clip complete (B32 and B34 only)	—	—	15-2436(3)	15-2436(3)	—	—
Do. Screw ...	—	—	E1379(3)	E1379(3)	—	—
Do. Nut ...	—	—	25-7151(3)	25-7151(3)	—	—
Silencer complete (offside) ...	—	—	—	—	—	67-2700
Do. (nearside) ...	—	—	—	—	—	67-2701
Silencer complete ...	29 2975	29 2975	65-2754	65-2754	66-2944	—
Do. (M33 only) ...	—	—	—	66-2991	—	—
Do. (B32 and B34 only) ...	—	—	65-2760	65-2760	—	—
Silencer Clip Bolt ...	—	—	24-7343	24-7343	24-7343	24-7343(2)
Do. Nut ...	—	—	M263	M263	M263	M263(2)
Do. Washer (shakeproof) ...	—	—	29-541	29-541	29-541	29-541(2)
Silencer Fixing Bolt ...	—	—	—	—	15-480	—
Do. Nut ...	—	—	—	—	66-2810	—
Do. Washer ...	—	—	—	—	36-382	—
Do. Split Pin ...	—	—	—	—	15-1266	—
Silencer Fixing Bracket Bolt (when pillion footrests are not used).	—	—	3-1399	3-1399	—	3-1399(2)
Silencer Fixing Bracket Nut (when pillion footrests are not fitted).	—	—	EB106	EB106	—	EB106(2)

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# ENGINE.

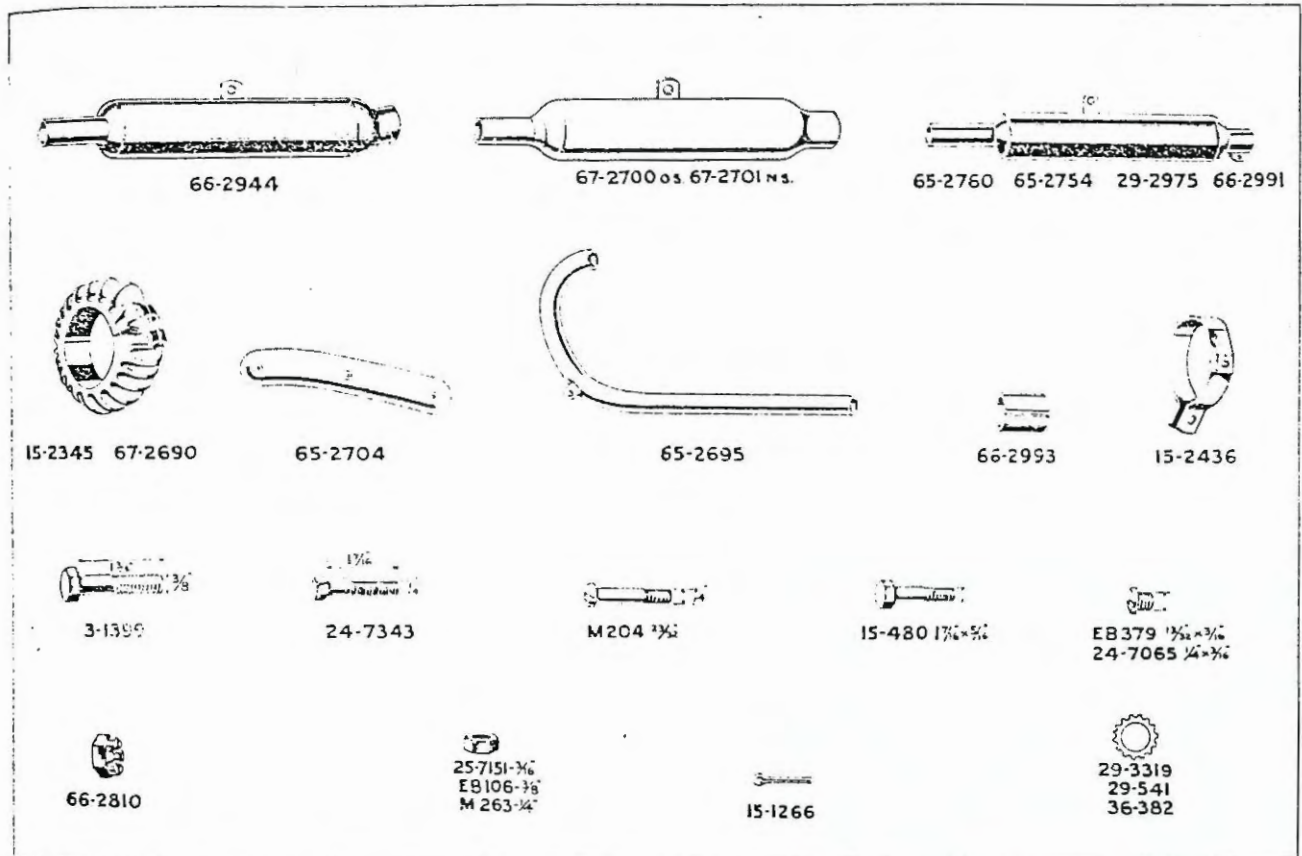



NOTE.—Figures in brackets denote number per set, *e.g.*, (2), 2 per set.

### Engine—continued.

When no figures in brackets are shown one part constitutes a set.


DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
<b>CRANKCASE SHIELD.</b>						
Crankcase Shield (sidecar) complete ...	—	—	—	—	66-2738	—
Do. solo complete ...	—	—	—	—	66-2732	—
Do. (B32 and B34 only) ...	—	—	65-2850	65-2850	—	—
Crankcase Shield Stud (front and rear) ...	—	—	27-5683(2)	27-5683(2)	—	—
Crankcase Shield "L" Bolt ...	—	—	—	—	66-2735	—
Do. Nut ...	—	—	—	—	EAS0(2)	—
Do. Washer ...	—	—	—	—	N566(2)	—
Crankcase Shield and Chainstay Stud Nut ...	—	—	—	—	66-2726(2)	—
Crankcase Shield Front Stud Nut ...	—	—	—	—	66-2725(2)	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

Connecting Rod Big-end Bushes are not supplied separately except for Model A7. The bushes are ground after fitting to connecting rod, making a first-class job impossible except at the factory. A new connecting rod with big-end and gudgeon pin bushes assembled is therefore supplied at the cost of the bushes only and mechanic's time, providing the old parts are returned to Spares Department, Small Heath, Birmingham, 11.



## ENGINE.

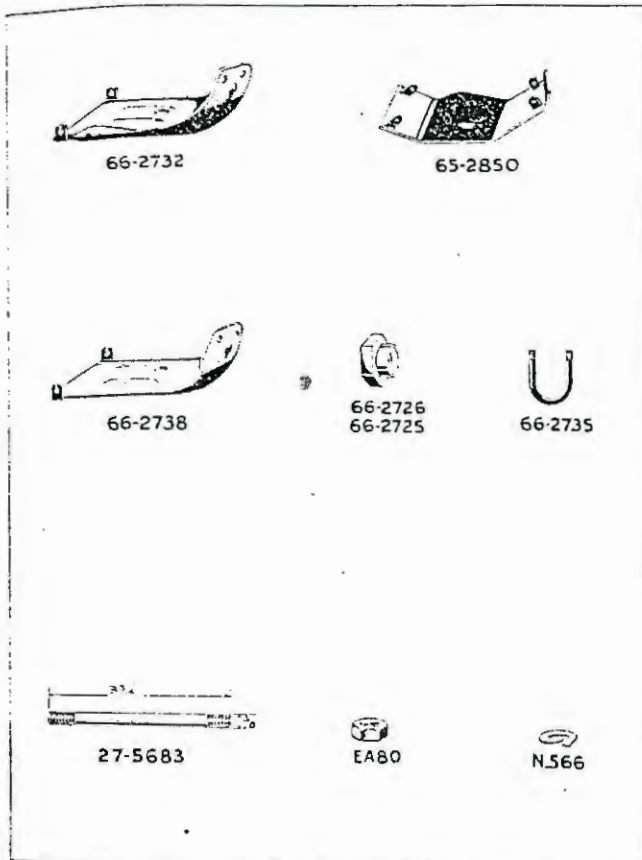

## CRANKCASE

If one side only is needed the other side should be sent to be correctly fitted. Failing this, a perfect fit cannot be guaranteed.



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## GEARBOX and CONTROL PARTS.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	131 132.	133 134.	M20 M21 M33	A7.
Gearbox Shell, complete with fixed fittings	29-3254	29-3254	65-3393	65-3393	66-3028	67-3014
Gearbox Shell only ... ..	29-3255	29-3255	65-3394	65-3394	66-3030	67-3015
Gearbox Inner Cover with fixed fittings...	29-3258	29-3258	65-3344	65-3344	15-4211	67-3017
Gearbox Outer Cover with fixed fittings...	29-3240	29-3240	65-3346	65-3346	66-3102	67-3019
Cover Joint Washer (outer) ... ..	29-3312	29-3312	65-3355	65-3355	66-3068	67-3032
Do. (inner) ... ..	29-3313	29-3313	65-3023	65-3023	66-3069	67-3031
Gearbox Cover Stud (long) ... ..	29-3304(5)	29-3304(5)	29-3304 3	29-3304(3)	15-4213	—
Do. (short) ... ..	—	—	—	—	66-1910(3)	—
Do. Stud Nut ... ..	29-3242(7)	29-3242(7)	65-2153	65-2153	27-4401(4)	—
Do. ... ..	—	—	29-3242 2	29-3242 2	—	—
Gearbox Outer Cover Screw (long) ... ..	—	—	65-3356	65-3356	65-3062	67-1706(2)
Do. (short) ... ..	65-2162(3)	65-2162(3)	65-3357	65-3357	66-3065(2)	67-1705
Gearbox Outer Cover Stud ... ..	—	—	—	—	—	67-3023(4)
Do. Nut ... ..	—	—	—	—	—	67-3034(4)
Do. Washer ... ..	—	—	—	—	—	F21(4)
Gearbox Outer Cover Screw (top) ... ..	—	—	65-3063	65-3063	—	—
Inner Cover Screw ... ..	—	—	21-2873 4	21-2873 4	15-4207(3)	—
Do. Washer (shakeproof) ... ..	—	—	—	—	29-541 3	—
Gearbox Outer Cover Stud ... ..	—	—	—	—	15-4208	—
Do. Nut ... ..	—	—	—	—	M263	—
Do. Washer (spring) ... ..	—	—	—	—	K197	—
Gearbox Inner Cover Bolt ... ..	21-2889(3)	21-2889(3)	21-2888(2)	21-2888(2)	—	—
Gearbox Inner and Outer Cover Bolt ... ..	—	—	—	—	21-2888(2)	—
Gearbox Inner Cover Stud ... ..	65-2152(2)	65-2152(2)	—	—	—	—
Gearbox Inner Cover Screw ... ..	—	—	24-4214	24-4214	24-4214 2	—
Do. Washer (shakeproof) ... ..	29-541(3)	29-541(3)	29-541(3)	29-541(3)	—	—

[Quote Engine and Frame Numbers, with prefix letters, when ordering spares.]



# GEARBOX and CONTROL PARTS

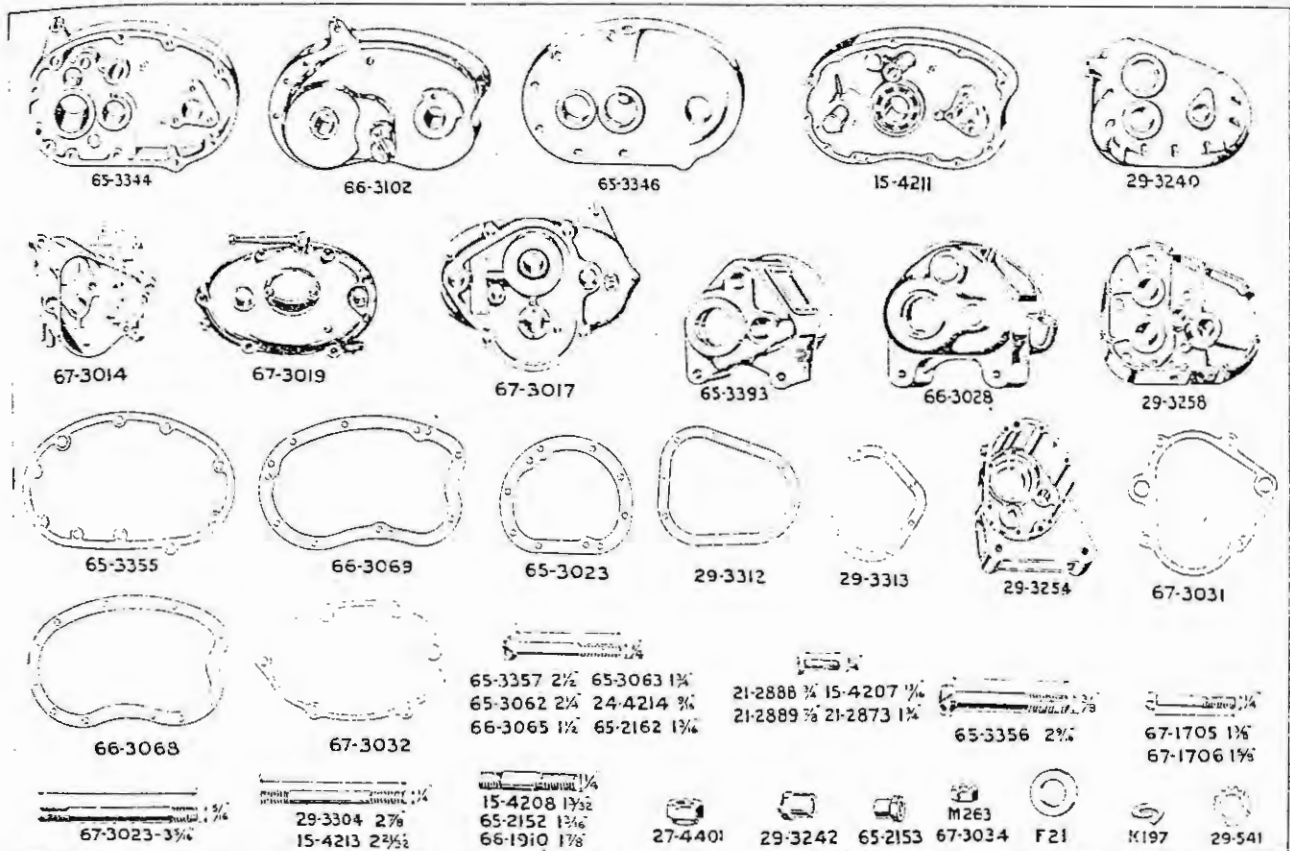



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Gearbox and Control Parts—continued.

 
 
 
 
 
 
 
When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
Gearbox Cover Locking Strip ... ..	—	—	—	—	15-4246	—
Gearbox Inner Cover Dowel ... ..	27-1589(2)	27-1589(2)	27-1589(2)	27-1589(2)	66-3074 2	—
Gearbox Mainshaft Ballrace ... ..	27-4027	27-4027	29-3857	29-3857	24-4065	24-4217
Gearbox Oil Retaining Washer ... ..	27-4033	27-4033	—	—	24-4225 2	67-3025
Gearbox Cover Ball Journal ... ..	—	—	—	—	24-4217	—
Gearbox Mainshaft ... ..	29-3431	29-3431	65-3382	65-3382	15-4260	—
Do. (close ratio) ... ..	—	—	—	—	—	67-3061
Gearbox Mainshaft complete with gear (16T close ratio).	—	—	—	—	—	67-3060
Gearbox Mainshaft Gear (16T close ratio)	—	—	—	—	—	67-3062
Gearbox Mainshaft with gear (14T wide ratio).	—	—	—	—	—	67-3063
Mainshaft Bush (inner cover) ... ..	15-268	15-268	65-3116	65-3116	—	—
Mainshaft Washer (felt) ... ..	—	—	—	—	24-4232	—
Mainshaft Key ... ..	K139	K139	K139	K139	K139	—
Mainshaft Nut ... ..	65-3823	65-3823	65-3823	65-3823	66-3787	67-3252
Do. Locking Washer ... ..	65-3822	65-3822	65-3822	65-3822	65-3822	67-3253
Mainshaft Distance Washer ... ..	—	—	—	—	24-4237	—
Mainshaft Packing Washer (.005") ... ..	29-3183	29-3183	—	—	65-3071	—
Do. (.010") ... ..	29-3184	29-3184	—	—	66-3072	—
Mainshaft Oil Seal Ring ... ..	29-3272	29-3272	65-3372	65-3372	—	—
Mainshaft Shim ... ..	29-3274	29-3274	65-3371	65-3371	—	—
Gearbox Mainshaft Spring Ring ... ..	27-4093	27-4093	—	—	—	67-3028
Do. Retaining Ring ... ..	27-4099	27-4099	—	—	—	—
Mainshaft 3rd Gear Pinion (26T), complete with bush.	—	—	65-3494	65-3494	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.





NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.

 
When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	1331 1332.	1333 1334.	N20 M21 M33	A7.
Mainshaft 3rd Gear Pinion with bush (27T) close ratio, special order only	—	—	65-3411	65-3411	—	—
Mainshaft 3rd Gear Pinion Bush ...	—	—	65-3478	65-3478	—	—
Mainshaft 2nd Gear (21T) ...	—	—	65-3482	65-3482	—	—
Mainshaft 2nd Gear Pinion (24T) close ratio, special order only.	—	—	65-3407	65-3407	—	—
Mainshaft 1st Gear and Kickstarter Ratchet (17T).	—	—	65-3475	65-3475	—	—
Do. (19T close ratio), special order only.	—	—	65-3408	65-3408	—	—
Mainshaft Gear (20T and 16T) ...	—	—	—	—	24-4231	—
Do. (25T), complete with bush ...	—	—	—	—	66-3212	—
Mainshaft Gear Bush (25T) ...	—	—	—	—	66-3214	—
Pinion Sleeve with bush ...	—	—	—	—	15-4165	—
Do. with bushes ...	—	—	65-3173	65-3173	—	—
Do. Bush ...	—	—	65-3097(2)	65-3097(2)	15-4120	—
Gearbox Pinion Sleeve ...	29-3825	29-3825	—	—	—	—
Pinion Sleeve Thrust Washer (phos. bronze)	—	—	65-3098	65-3098	—	—
Do. (steel) ...	—	—	65-3148	M144A	—	—
Pinion Sleeve Oil Retaining Washer ...	—	—	29-3858(2)	29-3858(2)	—	—
Dog Clutch High and Low Gear ...	—	—	65-3131(2)	65-3131(2)	24-4393(2)	—
Mainshaft Gear (22T) ...	27-4429	27-4429	—	—	—	—
Mainshaft Sliding Gear (20T close ratio)	—	—	—	—	—	67-3074
Mainshaft Sliding Gear (24T close ratio)	—	—	—	—	—	67-3075
Mainshaft Sliding Gear (18T wide ratio)	—	—	—	—	—	67-3078

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.



67-3075-24T



67-3078 18T  
67-3074 20T



29-3825  
65-3173



15-4165



65-3131  
24-4393



27-4429-22T



66-3212  
65-3411



65-3408  
65-3475



20T 24-4231 16T



65-3492  
65-3407



15-4120



65-3478



66-3214



65-3097



M144A



29-3858



65-3148



65-3098



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Gearbox and Control Parts—*continued.*

 
When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	131 132.	133 134.	M20 M21 M33	A7.
Mainshaft Sliding Gear (22T wide ratio)	—	—	—	—	—	67-3079
Mainshaft and Layshaft Gear Locating Ring	—	—	—	—	—	67-3101
Mainshaft Sliding Pinion (27T) ...	27-4424	27-4424	—	—	—	—
Layshaft complete, with speeds and 17T gears.	—	—	—	—	—	67-3085
Gearbox Layshaft ...	29-3288	29-3288	65-3386	65-3386	24-4394	67-3086
Do. (132 only) ...	—	—	65-3401	—	—	—
Layshaft Bush ...	—	—	65-3389	65-3389	—	65-3337
Layshaft Bush (short) ...	—	—	—	—	24-4223	—
Do. (long) ...	—	—	—	—	24-4241	—
Layshaft Gear (17T) ...	—	—	—	—	—	67-3087
Do. (18T and 21T) ...	—	—	65-3388	65-3388	—	—
Do. (18T and 20T) (close ratio), special order only.	—	—	65-3406	65-3406	—	—
Layshaft 2nd Gear Pinion (26T), with bush	—	—	65-3414	65-3494	—	—
Do. (23T) (close ratio), special order only).	—	—	65-3413	65-3413	—	—
Layshaft 2nd Gear Pinion Bush ...	—	—	65-3478	65-3478	—	—
Layshaft 1st Gear Pinion (30T) ...	27-4146	27-4146	—	—	—	—
Do. with bush (28T) (close ratio), special order only.	—	—	65-3409	65-3409	—	—
Do. (30T), with bush ...	—	—	65-3496	65-3496	—	—
Do. Bush ...	—	—	65-3479	65-3479	—	—
Layshaft Gear (17T and 20T) ...	—	—	—	—	24-4221	—
Do. (29T), with bush ...	—	—	—	—	66-3209	—
Do. Bush ...	—	—	—	—	66-3211	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.



67-3079 22T



66-3209 65-3496  
65-3409 27-4146



65-3388  
65-3406



20T 24-4221 17T



27-4424 27T



67-3087



 
65-3494  
65-3413




24-4394



67-3085



67-3086

 

65-3386

65-3401



29-3288



65-3337



24-4223



65-3389



24-4241



65-3478  
65-3479



66-3211



67-3101



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.

 
When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
Layshaft Gear (25T), with bush ...	—	—	—	—	66-3215	—
Do. Bush ...	—	—	—	—	66-3214	—
Layshaft Thrust Washer ...	27-4276	27-4276	65-3125(2)	65-3113(2)	—	67-3094
Layshaft Bush (inner cover) ...	—	—	—	—	—	67-3099
Layshaft Gear complete (27T close ratio), with bush.	—	—	—	—	—	67-3091
Do. (29T wide ratio) ...	—	—	—	—	—	67-3097
Layshaft Gear Bush (29T) ...	—	—	—	—	—	67-3093
Layshaft Packing Washer ...	29-3287	29-3287	—	—	—	—
Layshaft Pinion Sleeve, with bushes ...	29-3837	29-3837	—	—	—	—
Layshaft Sleeve Bush ...	27-4290(2)	27-4290(2)	—	—	—	—
Layshaft Sliding Gear ...	27-4436	27-4436	—	—	—	—
Do. Key ...	27-347	27-347	—	—	—	—
Do. Nut ...	M202	M202	—	—	—	—
Do. Lockwasher ...	29-3289	29-3289	—	—	—	—
Layshaft Sliding Gear (19T close ratio) ...	—	—	—	—	—	67-3090
Do. (21T wide ratio) ...	—	—	—	—	—	67-3096
Do. (23T close ratio) ...	—	—	—	—	—	67-3089
Do. (25T wide ratio) ...	—	—	—	—	—	67-3095
Constant Mesh Gear complete (26T close ratio).	—	—	—	—	—	67-3071
Do. (26T wide ratio) ...	—	—	—	—	—	67-3076
Constant Mesh Gear Bush ...	—	—	—	—	—	67-3073
Do. (drilled) (18T) ...	—	—	—	—	—	67-3080


Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.




67-3071 67-3076

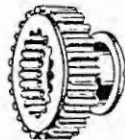

67-3089 67-3095



 
66-3215



29-3837



 67-3090 67-3096



67-3091 67-3097



27-4436



67-3099



67-3093



27-4290 67-3073  
67-3080 66-3214



67-3094 65-3125



29-3289



M202



65-3113



27-4276



29-3287



27-347



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
Constant Mesh Gear Ball Bearing ...	—	—	—	—	—	24-4065
Do. Spring Ring ...	—	—	—	—	—	67-3026
Gearbox Sprocket (17T) ...	29-3432	29-3432	—	—	—	—
Do. (18T standard) (B31/33/34) ...	—	—	65-3370	65-3370	24-4280	67-3051
Do. (15T) (B32) ...	—	—	65-3398	—	—	—
Do. (19T) ...	—	—	—	—	—	67-3050
Gearbox Sprocket Nut ...	27-4057	27-4057	29-3835	29-3835	24-4226	67-3053
Do. Lockwasher ...	27-4063	27-4063	29-3836	29-3836	24-4263	24-4263
Kickstarter Crank Spindle, with quadrant	—	—	—	—	—	67-3165
Kickstarter Spindle Bush ...	—	—	—	—	—	67-3151
Kickstarter Quadrant Stop...	—	—	—	—	—	67-3152
Do. Nut ...	—	—	—	—	—	EAS0
Do. Washer (spring) ...	—	—	—	—	—	24-8784
Kickstarter Crank Complete (folding type) (fitted on and after Frame No. YB31- 5288) (B32-B34 only).	—	—	65-3425	65-3425	—	—
Kickstarter Crank (fitted on and after Frame No. YB31-5288) (B32-B34 only).	—	—	65-3426	65-3426	—	—
Kickstarter Pedal (fitted on and after Frame No. YB31-5288) (B32-B34 only).	—	—	65-3427	65-3427	—	—
Kickstarter Pedal Spring (fitted on and after Frame No. YB31-5288) (B32-B34 only).	—	—	65-3428	65-3428	—	—
Kickstarter Pedal Bolt (fitted on and after Frame No. YB31-5288) (B32-B34 only).	—	—	29-5156	29-5156	—	—
Do. Washer (shakeproof) (fitted on and after Frame No. YB31-5288) (B32- B34 only).	—	—	66-4707	66-4707	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.

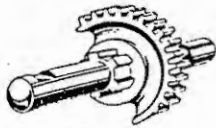

67-3165



67-3050 19 $\pi$  67-3051 18 $\pi$



65-3370 18 $\pi$  24-4280 18 $\pi$   
65-3398 15 $\pi$



29-3432



65-3425



65-3426



65-3428



67-3151



27-4057



65-3427



67-3152



24-4065



67-3026



29-3836 24-4263 29-3835 24-4226  
27-4063 67-3053



29-5156



EA80



24-8784



66-4707



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
Kickstarter Crank Spring Bolt (fitted on and after Frame No. YB31-528S) (B32-B34 only).	—	—	K132	K132	—	—
Do. Washer (shakeproof) (fitted on and after Frame No. YB31-528S) (B32-B34 only).	—	—	29-541	29-451	—	—
Kickstarter Crank ... ..	29-3244	29-3244	65-3381	65-3381	15-4179	65-3381
Do. Cotter Pin ... ..	EB56	EB56	EB56	EB56	EB56	EB56
Do. Nut ... ..	EB57	EB57	EB57	EB57	EB57	EB57
Do. Washer ... ..	15-5155	15-5155	15-5155	15-5155	15-5155	15-5155
Do. Rubber ... ..	65-3397	65-3397	65-3397	65-3397	65-3212	65-3397
Kickstarter Lever Spindle Bush ... ..	—	—	—	—	—	67-3153
Kickstarter Quadrant ... ..	29-3290	29-3290	—	—	15-4121	—
Do. complete with bush ... ..	—	—	65-3353	65-3353	—	—
Do. Bush only (phos. bronze) ... ..	—	—	65-3116	65-3116	—	—
Do. Oil Seal ... ..	65-3354	65-3354	65-3354	65-3354	—	—
Do. Bush ... ..	—	—	65-3358	65-3358	24-4258	—
Kickstarter Crank Spring ... ..	29-3307	29-3307	65-3135	65-3135	66-3058	67-3157
Kickstarter Crank Spring Anchor Screw...	24-4214	24-4214	24-4214	24-4214	M588	—
Do. Nut ... ..	K457	K457	K457	K457	EB102	—
Kickstarter Crank Spring Retaining Peg	—	—	—	—	—	67-3154
Kickstarter Crank Return Stop Rubber...	29-3308	29-3308	29-3308	29-3308	66-3259	—
Kickstarter Quadrant Bush (inner cover)	29-3267	29-3267	—	—	—	—
Do. (outer cover) ... ..	29-3268	29-3268	65-3359	65-3359	—	—
Kickstarter Return Stop Plate ... ..	65-3296(2)	65-3296(2)	65-3296(2)	65-3296(2)	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.

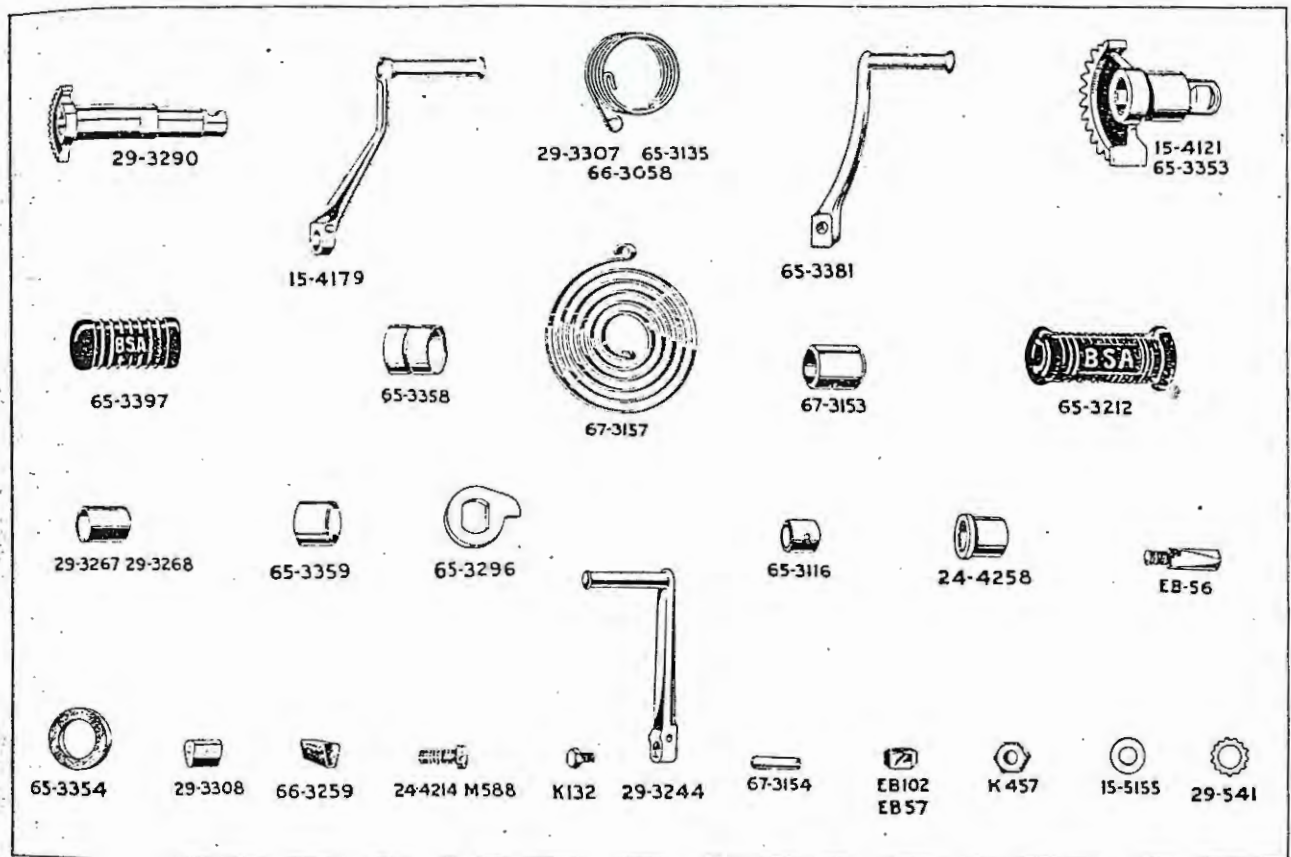



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.

 
 


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
Kickstarter Ratchet ... ..	27-4112	27-4112	—	—	66-3079	67-3158
Do. Pinion ... ..	27-4106	27-4106	65-3283	65-3283	66-3080	67-3159
Do. Sleeve ... ..	—	—	29-3839	29-3839	66-3081	67-3160
Kickstarter Ratchet Spring ... ..	27-4447	27-4447	29-3850	29-3850	24-4256	67-3162
Do. Washer ... ..	—	—	—	—	—	67-3161
Ratchet Pinion Sleeve Nut ... ..	15-267	15-267	65-3139	65-3139	24-4282	67-3163
Do. Locking Washer ... ..	—	—	65-3140	65-3140	24-4278	67-3164
Ratchet Pinion Sleeve Locknut ... ..	—	—	—	—	24-4255	—
Gear Control Shaft ... ..	29-3282	29-3282	65-3156	65-3156	66-3083	67-3116
Do. Bush ... ..	—	—	65-3336	65-3336	66-3084	—
Do. Packing Washer ... ..	—	—	—	—	66-3086	—
Do. Do. (small) ... ..	—	—	—	—	66-3087	—
Control Shaft Bush (inner cover) ... ..	29-3266	29-3266	—	—	24-4245	—
Do. Thrust Washer ... ..	—	—	29-8740	29-8740	—	—
Gear Operating Fork ... ..	—	—	65-3292(2)	65-3292(2)	66-3248(2)	67-3118(2)
Control Shaft Peg ... ..	K31(2)	K31(2)	66-3258(2)	66-3258(2)	66-3258(2)	—
Do. Grub Screw ... ..	—	—	—	—	—	67-3117
Operating Fork (high gear) Mainshaft ... ..	29-3284	29-3284	—	—	—	—
Operating Fork (low gear) Layshaft ... ..	29-3286	29-3286	—	—	—	—
Control Shaft Retaining Pin ... ..	65-2603	65-2603	—	—	—	—
Do. Pin Plug ... ..	29-3243	29-3243	—	—	—	—
Gear Control Shaft Locking Washer ... ..	66-3250	66-3250	—	—	—	—
Control Shaft and Forks complete ... ..	—	—	65-3155	65-3155	66-3082	—
Gear Control Quadrant ... ..	—	—	65-3137	65-3137	24-4247	—
Do. Bush ... ..	—	—	—	—	24-4248	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.

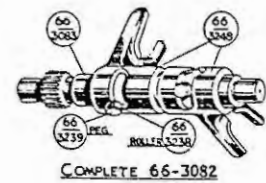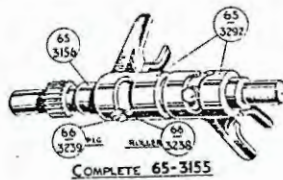



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34.	M20 M21 M33.	A7.
Gear Control Shaft Operating Lever Nut	—	—	EB106	EB106	EB201	—
Gear Control Plunger ... ..	15-4035	15-4035	15-4035	15-4035	15-4035	67-3119
Do. Cup ... ..	—	—	24-4251	24-4251	24-4251	—
Control Plunger Spring ... ..	24-68	24-68	24-68	24-68	24-68	67-3121
Do. Plug ... ..	15-4040	15-4040	—	—	—	—
Gear Control Plunger Housing ... ..	—	—	—	—	—	67-3120
Do. Nut ... ..	—	—	—	—	—	67-3122
Gearbox Inspection Cover ... ..	29-3296	29-3296	66-3070	66-3070	66-3070	67-3024
Gearbox Inspection Cover Joint Washer...	29-3297	29-3297	15-4110	15-4110	15-4110(2)	67-3033
Inspection Cover Screw ... ..	27-4258(4)	27-4258(4)	27-4258(4)	27-4258(4)	27-4258(4)	24-7178(2)
Gearbox Oil Baffle ... ..	—	—	—	—	24-4288	—
Gearbox Oil Filler Plug ... ..	65-3364	65-3364	65-3364	65-3364	M196	—
Do. Washer ... ..	65-3365	65-3365	65-3365	65-3365	M196A	—
Gearbox Oil Level Plug ... ..	28-243	28-243	—	—	—	28-243
Do. Washer (fibre) ... ..	M814A	M814A	—	—	—	M814A
Gearbox Drain Plug... ..	28-243	28-243	28-43	28-43	28-43	28-243
Do. Washer (fibre) ... ..	M814A	M814A	—	—	—	M814A
Gearbox Inspection Hole Plug ... ..	—	—	—	—	—	67-3027(2)
Oil Flinger Washer ... ..	—	—	—	—	24-4235	—
Oil Retaining Washer (small) ... ..	—	—	—	—	24-4236	—
Clutch Push Rod Thrust Pin ... ..	29-3794	29-3794	—	—	25-4251	—
Do. Nut ... ..	M263	M263	—	—	27-4411	—
Clutch Control Lever complete ... ..	29-3245	29-3245	65-3383	65-3383	—	67-3180
Clutch Control Lever ... ..	—	—	—	—	65-3160	—
Do. Nut ... ..	—	—	15-1485	15-1485	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.

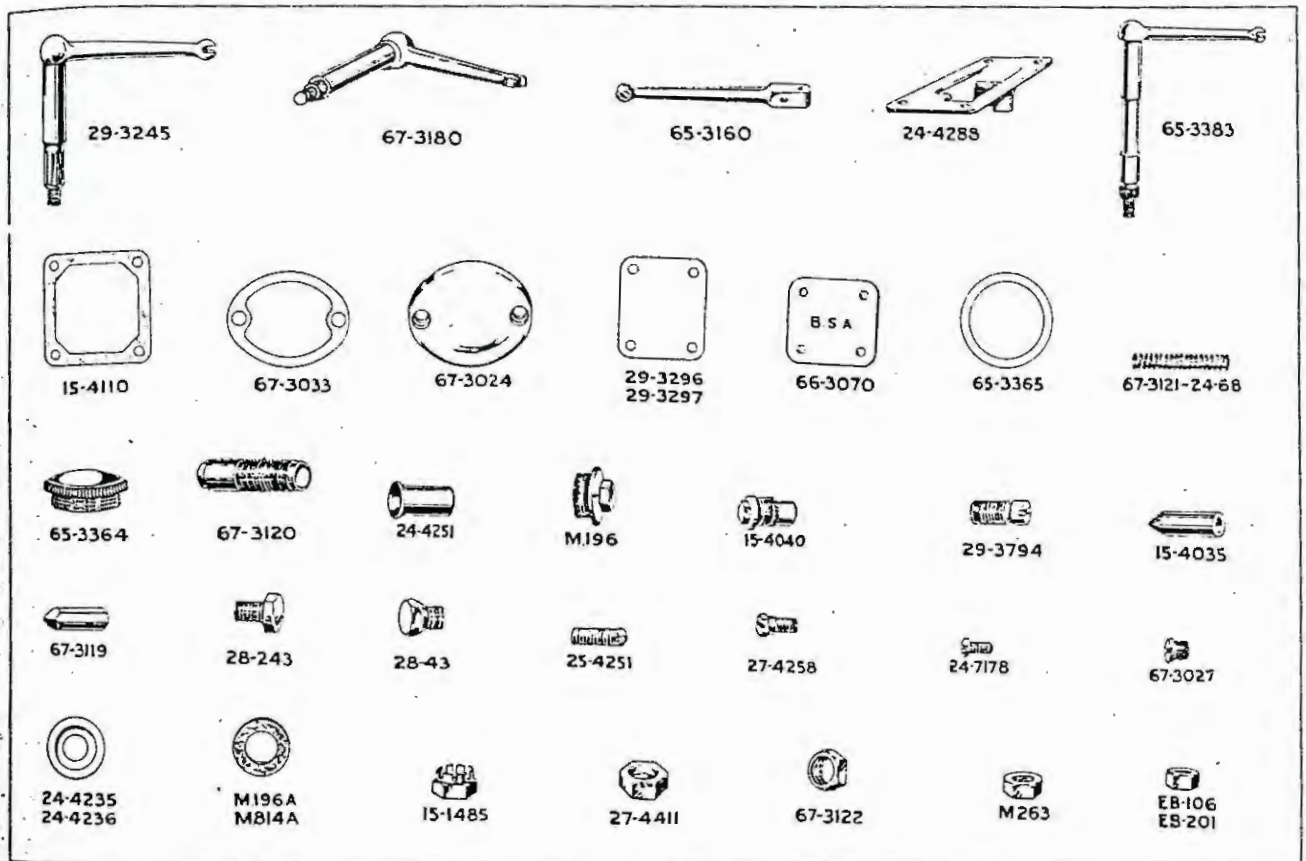



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Gearbox and Control Parts—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
Clutch Control Lever Nut Split Pin ...	—	—	M626	M626	—	—
Do. Washer ... ..	—	—	K234A	K234A	—	—
Clutch Operating Spindle Washer...	EB35	EB35	—	—	—	—
Clutch Cable Stop ... ..	27-1163	27-1163	—	—	—	—
Do. Locknut ... ..	EB102	EB102	—	—	—	—
Clutch Operating Spindle Distance Piece	66-3256	66-3256	—	—	—	—
Clutch Operating Spindle Lug, complete with ball.	66-3421	66-3421	—	—	—	—
Clutch Operating Spindle Nut ... ..	15-6524	15-6524	—	—	—	—
Do. Washer ... ..	31-424	31-424	—	—	—	—
Clutch Push Rod Bush (mainshaft) ...	29-3260	29-3260	—	—	—	—
Clutch Control Lever Fulcrum Pin ...	—	—	—	—	65-3162	—
Clutch Push Rod Gland Washer ... ..	—	—	—	—	15-270	—
Speedometer Driven Gear ... ..	—	—	65-3367	65-3367	—	67-3175
Do. Driving Gear (B32 only) ... ..	—	—	65-3402	—	—	—
Do. Bush ... ..	—	—	65-3390	65-3390	—	65-3390
Do. Bush Screw ... ..	—	—	65-3369	65-3369	—	—
Do. Bush Screw (B32 only) ... ..	—	—	65-3400	65-3400	—	—
Do. Washer (shakeproof) ... ..	—	—	29-541	29-541	—	—
Do. Washer (fibre) ... ..	—	—	65-3392	65-3392	—	65-3392
Do. Thrust Washer ... ..	—	—	65-3375	65-3375	—	65-3375
Do. Bush Nut ... ..	—	—	65-3391	65-3391	—	65-3391
Speedometer Driven Gear Retaining Pin...	—	—	—	—	—	67-3176
Speedometer Pinion Bush ... ..	—	—	65-3377	65-3377	—	65-3377
Speedometer Driving Gear (GT) ... ..	—	—	—	—	—	67-3088

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



## GEARBOX and CONTROL PARTS

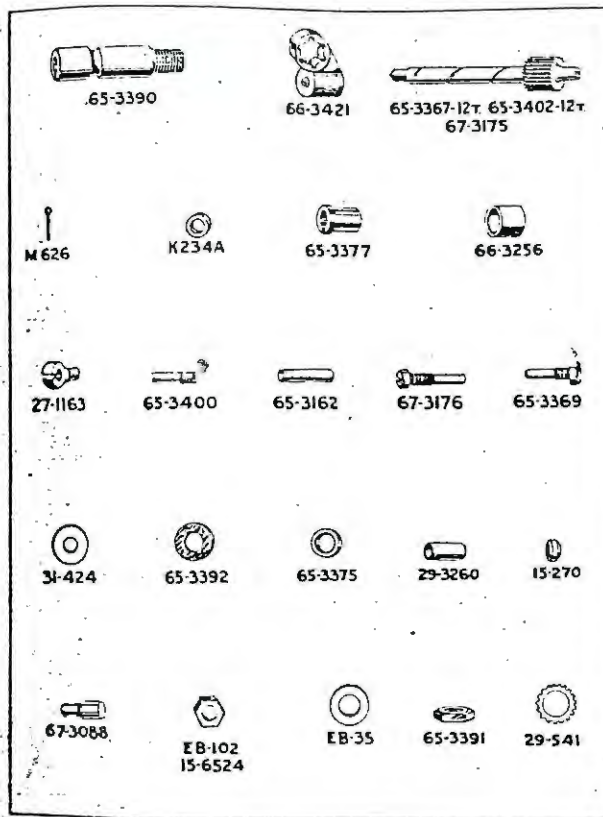

## CONNECTING ROD WITH BIG END BEARING ASSEMBLY.

Model.	Part Number.
C10	29-2195
C11	29-2275
B31	66-478
B32	66-478
B33	66-478
B34	66-478
M20	66-477
M21	66-477
M33	66-478

(See also Page 36.)



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Gearbox and Control Parts—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
<b>FOOTCHANGE.</b>						
Operating Plate and Pawl Arm Stop ...	—	—	15-4228	15-4228	15-4228	—
Do. Screw ... ..	—	—	M208(2)	M208(2)	M208(2)	—
Do. Spring Washer ... ..	—	—	24-8784(2)	24-8784(2)	—	—
Do. (shakeproof) ... ..	—	—	—	—	36-382(2)	—
Do. Nut ... ..	—	—	EAS0(2)	EAS0(2)	EAS0(2)	—
Ratchet Lever Sleeve Bush ... ..	—	—	15-4227	15-4227	15-4227	—
Gear Operating Spindle ... ..	29-3248	29-3248	—	—	—	—
Do. Bush ... ..	29-3265(2)	29-3265(2)	—	—	—	—
Gear Control Quadrant complete ... ..	29-3298	29-3298	—	—	—	—
Pedal Shaft Bush ... ..	—	—	15-4226	15-4226	15-4226	—
Operating Plate Indexing Plunger complete	—	—	15-4241	15-4241	15-4241	—
Do. Plunger only ... ..	—	—	15-4224	15-4224	15-4224	—
Do. Sleeve ... ..	—	—	15-4223	15-4223	15-4223	—
Do. Spring ... ..	—	—	15-4225	15-4225	15-4225	—
Gear Operating Lever ... ..	—	—	15-4239	15-4239	15-4239	—
Gear Control Link Pin ... ..	—	—	15-4221(2)	15-4221(2)	15-4221(2)	—
Do. Split Pin ... ..	—	—	35-705(2)	35-705(2)	35-705(2)	—
Gear Control Quadrant Spacing Collar ... ..	—	—	—	—	15-4233	—
Gear Control Link, complete ... ..	—	—	15-4253	15-4253	15-4253	—
Gear Control Link Yoke ... ..	—	—	15-4254	15-4254	15-4254	—
Do. Adjuster ... ..	—	—	15-4255	15-4255	15-4255	—
Do. Locknut ... ..	—	—	24-563	24-563	24-563	—
Gear Control Operating Lever Locking Washer.	—	—	15-4232	15-4232	15-4232	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



## GEARBOX and CONTROL PARTS.

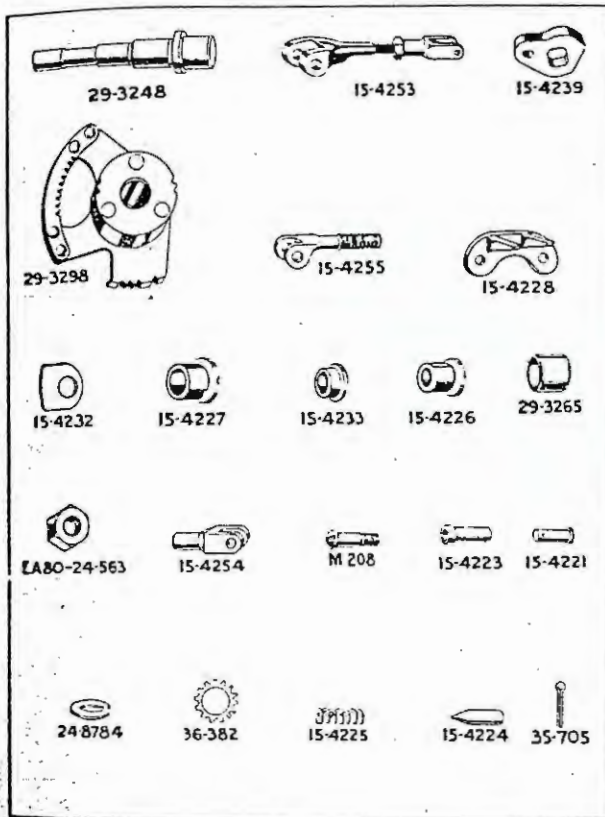

BUY GENUINE

B.S.A. SPARES

Every owner of a B.S.A.  
Motor Cycle is strongly  
advised to buy only  
GENUINE B.S.A. SPARE  
PARTS when replacements  
become necessary.



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
Operating Shaft ... ..	—	—	15-4229	15-4229	15-4229	—
Do. Washer ... ..	—	—	15-39	15-39	15-39	—
Do. Nut ... ..	—	—	EB171	EB171	EB171	—
Do. Clip Ring ... ..	—	—	15-4240	15-4240	15-4240	—
Operating Plate ... ..	—	—	15-4231	15-4231	15-4231	—
Ratchet Lever, complete with sleeve ...	—	—	15-4206	15-4206	15-4206	—
Foot Change Return Spring Stop... ..	29-3269	29-3269	—	—	—	—
Pawl Carrier Plate, complete ... ..	29-3404	29-3404	—	—	—	—
Pawl Spring ... ..	29-3303	29-3303	—	—	—	—
Footchange Operating Plate and Sleeve complete.	66-3415	66-3415	—	—	—	—
Operating Plate Stop ... ..	29-3314(2)	29-3314(2)	—	—	—	—
Do. Screw ... ..	K56(2)	K56(2)	—	—	—	—
Do. Washer (shakeproof) ... ..	29-3319(2)	29-3319(2)	—	—	—	—
Footchange Return Spring... ..	29-3302	29-3302	—	—	—	—
Pawl Carrier Arm Assembly (top) ... ..	—	—	15-4242	15-4242	15-4242	—
Do. (bottom) ... ..	—	—	15-4243	15-4243	15-4243	—
Pawl Carrier Arm (top) ... ..	—	—	15-4236	15-4236	15-4236	—
Do. (bottom) ... ..	—	—	15-4249	15-4249	15-4249	—
Pawl (top) ... ..	—	—	15-4141	15-4141	15-4141	—
Pawl (bottom) ... ..	—	—	15-4142	15-4142	15-4142	—
Pawl Pivot ... ..	—	—	15-4138	15-4138	15-4138(2)	—
Do. Nut ... ..	—	—	15-4143	15-4143	15-4143(2)	—
Pawl Pivot Locknut ... ..	—	—	M263(2)	M263(2)	M263(2)	—
Pawl Arm Carrier Main Spring ... ..	—	—	15-4139	15-4139	15-4139	—
Do. Return Spring ... ..	—	—	15-4161	15-4161	15-4161	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# British Only

## MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM  
GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

**WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS**

45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

SPECIALIZING IN  
VINTAGE MOTORCYCLE PARTS

**TRIUMPH**

**Norton**

**BSA**

**THE BIGGEST!**

ENGINE REBUILDING PARTS  
GASKET - SEALS - BEARINGS  
BUSHINGS - PISTONS - RINGS  
CLUTCHES - TUNE UP PARTS  
SPEED EQUIPMENT

**THE BEST!**

STOCK AND CUSTOM PARTS  
SEATS - HANDLEBARS - CHAINS  
TIRES - TUBES - EXHAUST PIPES  
MUFFLERS - GAS TANKS - FENDERS  
RESTORATION PARTS

**THE ONLY!**

**Central Wheel  
Components**

**Barnett**  
Clutches & Cables

**CLASSIC  
TRANSFERS**  
ROBERT DERRICK LTD

**RENOLD**

**Lucas**

**AMAL**

**IEMIGO**  
Your Powersport Supplier

**BRITURO**  
ENGLAND

**JP PISTONS**

**HASTINGS**

**UH**

VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORG  
ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S  
L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL  
ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING  
TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

**PARTS SHIPPED WORLDWIDE !!!**

**VISA**

**MasterCard**

**Discover**


**AMERICAN  
EXPRESS**

VISIT OUR EBAY STORE

<http://stores.ebay.com/British-Only-Motorcycles-And-Parts>



# GEARBOX and CONTROL PARTS.

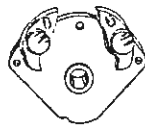

29-3404



15-4229



 
15-4206



15-4249



15-4141  
15-4142



66-3415



15-4236



15-4231



29-3302



29-3303  
15-4139 15-4161



15-4138



15-4143



29-3269



29-3319



29-3314



15-4240



M-263  
EB-171



15-39



K-56



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34.	M20 M21 M33	A7.
Pawl Carrier Arm Washer (.024") ...	—	—	15-4234(3)	15-4234(3)	15-4234(3)	—
Do. Washer (.022") ...	—	—	15-4235	15-4235	15-4235	—
Gear Indicating Plate ...	—	—	—	—	15-4222	—
Do. Peg... ..	—	—	—	—	65-3169	—
Ratchet Lever Sleeve Clip Ring ...	—	—	—	—	15-4219	—
Footchange Operating Pedal ...	29-3412	29-3412	65-3417	65-3417	65-3417	65-3417
Do. Pedal Clamp Bolt ...	65-3361	65-3361	65-3361	65-3361	65-3361	65-3361
Do. Washer ...	K234A	K234A	K234A	K234A	K234A	K234A
Do. Pedal Rubber ...	29-3250	29-3250	29-3250	29-3250	29-3250	29-3250
Footchange Operating Pedal Spindle ...	—	—	—	—	—	67-3147
Footchange Operating Spindle Bush ...	—	—	—	—	—	67-3170
Footchange Operating Lever Spindle Bush (outer cover).	—	—	—	—	—	67-3140
Gear Control Cam Plate, complete ...	—	—	—	—	—	67-3113
Gear Change Selector Arm, complete ...	—	—	—	—	—	67-3130
Gear Change Selector Arm Pivot Pin ...	—	—	—	—	—	67-3136
Geatchange Selector Lever... ..	—	—	—	—	—	67-3143
Do. Screw ...	—	—	—	—	—	67-3144
Do. Return Spring ...	—	—	—	—	—	67-3146
Do. Lockwasher ...	—	—	—	—	—	67-3145
Gear Selector Cam Plate Bearing... ..	—	—	—	—	—	67-3111
Do. Screw ...	—	—	—	—	—	21-2888(2)
Do. Washer ...	—	—	—	—	—	67-3112
Do. Washer (shakeproof) ...	—	—	—	—	—	29-541(2)

 
Quote Engine and Frame Numbers, with prefix letters, when ordering spares.




# GEARBOX and CONTROL PARTS.



67-3112



67-3111

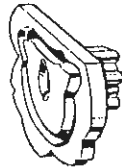

67-3113



29-3412 65-3417



67-3130



15-4222



67-3143



67-3146



65-3169



67-3147



67-3136



29-3250



67-3170



67-3140



67-3145



15-4234  
15-4235



K-234A



15-4219



65-3361



21-2888



67-3144



29-541



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33	M20 M21.	A7.
<b>GEARBOX CLUTCH.</b>						
Clutch Chainwheel, complete ...	65-3919	65-3919	65-3922	66-3908	66-3908	67-3260
Chainwheel Ballrace Ring ...	65-3912	65-3912	65-3912	65-3912	65-3912	—
Chainwheel Ball Retaining Ring ...	65-3910(2)	65-3910(2)	65-3910(2)	65-3910(2)	65-3910(2)	—
Clutch Ballrace Inner Ring ...	65-3911	65-3911	65-3911	65-3911	65-3911	—
Clutch Chainwheel Roller ...	—	—	—	—	—	26-650(18)
Clutch Sleeve... ..	65-3913	65-3913	65-3930	65-3930	66-3799	—
Do. Collar ... ..	—	—	65-3833	65-3833	65-3833	—
Clutch Centre, complete with studs ...	65-3914	65-3914	66-3906	66-3903	66-3903	67-3237
Clutch Spring... ..	65-3831(6)	65-3831(6)	65-3831(6)	65-3831(6)	66-3800(6)	67-3247(6)
Clutch Plate, complete ... ..	—	—	—	—	—	67-3245
Clutch Spring Cup ... ..	65-3830(6)	65-3830(6)	66-3781(6)	66-3781(6)	66-3781(6)	67-3248(6)
Clutch Sleeve Plate ... ..	65-3816	65-3816	65-3816	65-3816	65-3816	—
Clutch Driving Plate, complete with inserts ...	65-3825	65-3825	65-3857(3)	65-3857(4)	65-3857(4)	67-3242(5)
Clutch Spring Retaining Stud Nut ...	M263(12)	M263(12)	M263(12)	M263(12)	M263(12)	67-3249(6)
Clutch Driven Plate... ..	65-3824	65-3824	65-3824(3)	65-3824(4)	65-3824(4)	—
Do. (rear) ... ..	—	—	—	—	—	67-3240
Clutch Thrust Washer ... ..	—	—	—	—	—	67-3250
Do. Abutment Ring ... ..	—	—	—	—	—	67-3251
Clutch Push Rod ... ..	29-3791	29-3791	29-3860	65-3164	66-3790	67-3183
Clutch Push Rod Lever ... ..	—	—	65-3360	65-3360	—	65-3360
Do. Nut ... ..	—	—	—	—	—	15-1485
Do. Split Pin ... ..	—	—	—	—	—	M626
Do. Washer ... ..	—	—	—	—	—	K234A
Clutch Push-Rod Adjusting Screw, complete ...	—	—	65-3403	65-3403	—	65-3403
Adjusting Screw Nut ... ..	—	—	EB141	EB141	—	EB141

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# GEARBOX and CONTROL PARTS.

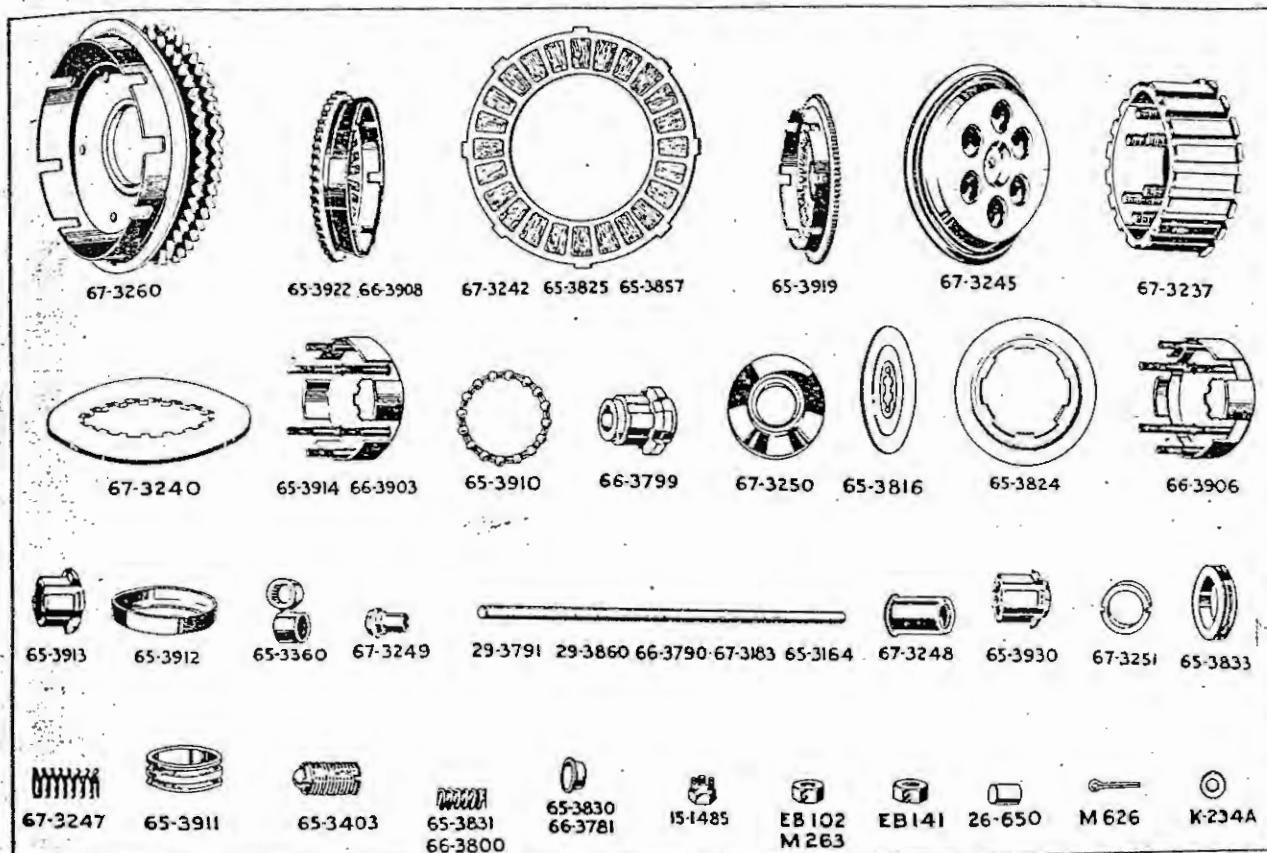



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Gearbox and Control Parts—continued.

When no figures in brackets are shown one part constitutes a set.


DESCRIPTION.	C10.	C11.	B31 B32.	B33 B34 M33.	M20 M21.	A7.
Clutch Cover, ... ..	—	—	—	—	—	67-3263
Do. Washer ... ..	—	—	—	—	—	67-3264
Do. Nut ... ..	—	—	—	—	—	67-3266(12)
Clutch Actuating Cap, with button ...	65-3828	65-3828	65-3828	65-3828	65-3828	—
Gearbox and Chaincase Oil Retaining Washer.	—	—	65-3834	65-3834	66-3090	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

B.S.A. SPARES ARE MADE WITH THE SAME ACCURACY AS THE ORIGINAL PARTS IN YOUR B.S.A. MOTOR CYCLE. IT PAYS TO HAVE GENUINE B.S.A. SPARES.



# GEARBOX and CONTROL PARTS.

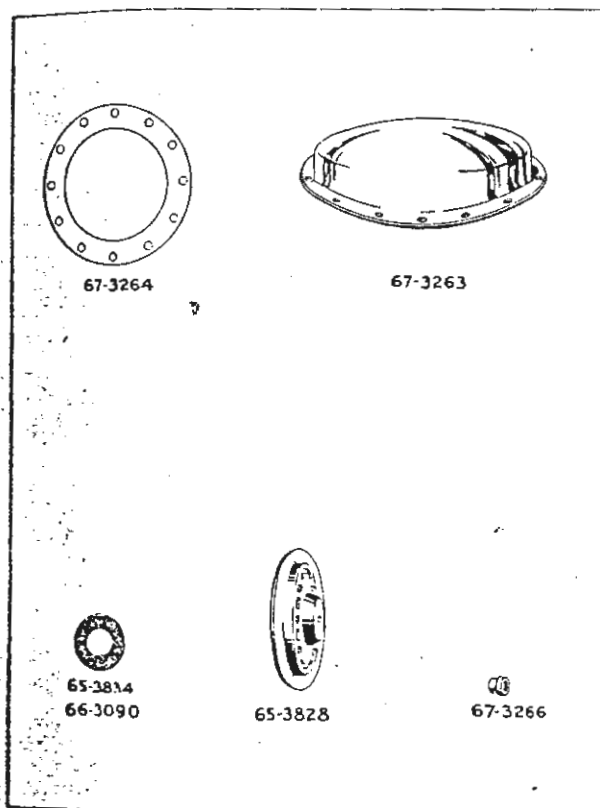

## 1948 MOTOR CYCLE CARBURETTER SETTINGS

Messrs. Amalgamated Carburetters Ltd., Perry Barr, Birmingham.

Model.	Type.	Jet Block No.	Float Chamber.	Valve.	Main Jet.	Needle position.
C10	274/K/3A	25A	3A	4/4	90	2
C11	274/L/AT	25A	1AT	4/4	80	3
B31	276/AW/1BB	45A	1BB	6/4	150	3
B32	276/AW/1BB	45A	1BB	6/4	150	3
B33	289/G/1A	58A	1A	29/4	200	3
B34	289/G/1A	58A	1A	29/4	200	3
M20	276/C/1B	45A	1B	6/4	170	2
M21	276/BR/1B	51A	1B	6/4	160	2
M33	289/G/1A	58A	1A	29/4	200	3
A7	276/CG/1A	39A	1A	6/3	140	2



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## FRAME AND FITTINGS.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.
Frame Front, complete ... ..	29-4253		65-4460		65-4460		66-4128			—
Frame, complete ... ..	—		—		—		—			67-4050
Ball Head Cup ... ..	65-4465(2)		65-4465(2)		65-4465(2)		66-4149(2)			66-4149(2)
Do. Ball ... ..	$\frac{3}{16}$ " diam.(48)		$\frac{3}{16}$ " diam.(48)		$\frac{3}{16}$ " diam.(48)		$\frac{1}{4}$ " diam.(40)			$\frac{1}{4}$ " diam.(40)
Ball Head Grease Nipple ... ..	28-2080(2)		28-2080		28-2080		28-2080(2)			28-2080
Saddle Front Fixing Bolt ... ..	33-4089		33-4089		33-4089		33-4089			67-4030
Do. Split Pin ... ..	—		35-698		35-698		35-698			—
Do. Nut ... ..	24-6040		66-2810		66-2810		66-2810			EAS2
Do. Washer (shakeproof) ... ..	—		—		—		—			66-4707
Saddle Bolt Grease Nipple ... ..	—		28-2080		28-2080		28-2080			—
Engine Plate (front) ... ..	29-4075(2)		65-4429(2)		65-4429(2)		66-4158(2)			—
Do. Cover (front) ... ..	—		65-4431		65-4431		66-4159			—
Engine Plate (rear) ... ..	—		—		—		66-4157(2)			—
Engine Plate (rear) (left and right-hand)	29-4183(2)		—		—		—			—
Gearbox Engine Plate (left-hand) ...	—		65-4441		65-4441		—			—
Do. (right-hand) ... ..	—		65-4440		65-4440		—			—
Engine Plate (front) (offside) ... ..	—		—		—		—			67-4023
Do. (front) (nearside) ... ..	—		—		—		—			67-4024
Engine Plate Insert, complete ... ..	—		—		—		—			67-4036
Engine Plate, Chainstay and Seat Tube Bolt	—		66-4163		66-4163		—			—
Do. Nut ... ..	—		EAS2(14)		EAS2(14)		—			—
Do. Washer (spring) ... ..	—		K51A(14)		K51A(14)		—			—
Engine Yoke Plate Bolt (top) ... ..	—		—		—		66-4098			—
Engine Plate and Chainstay Distance Piece	—		65-4442		65-4442		—			—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRAME AND FITTINGS.

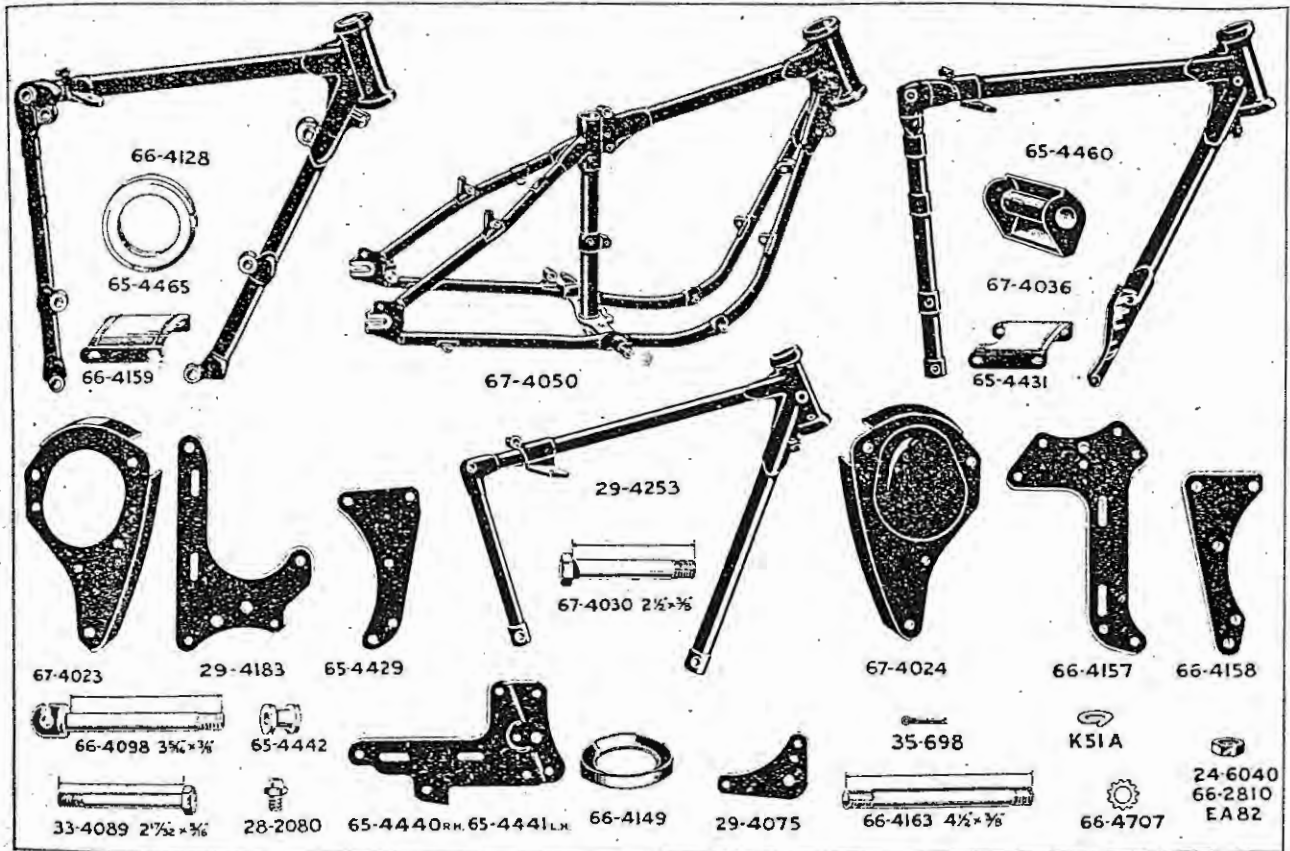



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Frame and Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Backstay and Seat Lug Bolt ...	—	66-4636	66-4636	66-4636	—
Do. Washer ...	—	15-431	15-431	27-6043	—
Do. Nut ...	—	15-541	15-541	M202	—
Engine Frame Bolt (front plate) ...	29-4103	—	—	—	67-4026
Do. Nut ...	EB171	—	—	—	EB171
Do. Washer (shakeproof) ...	—	—	—	—	66-4708
Engine Plate Bolt (rear) (seat tube) ...	29-4103	—	—	—	—
Do. Washer (plain) ...	15-431	—	—	—	—
Do. Washer (spring) ...	15-716	—	—	—	—
Do. Nut ...	EB171	—	—	—	—
Seat Tube and Gearbox Plate Bolt (top)	—	65-4185(2)	65-4185(2)	—	67-4027
Do. Nut ...	—	E19(2)	E19(2)	—	EB171
Do. Washer ...	—	E28(2)	E28(2)	—	N572
Engine Yoke Plate Frame Stud (short) ...	—	27-5684(7)	27-5684(7)	27-5684(5)	—
Do. (long) ...	—	—	—	27-5683	—
Do. (B32 and B34 only) ...	—	27-5683	27-5683	—	—
Engine Yoke Plate Frame Stud Nut ...	—	—	—	EAS2(13)	—
Do. Washer (shakeproof) ...	—	—	—	66-4707(13)	—
Do. Washer (plain) ...	—	—	—	EB76(2)	—
Frame, Crankcase, Exhaust Pipe Lug Stud	—	—	—	—	67-1251
Do. Nut ...	—	—	—	—	EAS2(2)
Do. Washer ...	—	—	—	—	66-4707
Frame, Crankcase, Exhaust Pipe Lug Stud	—	—	—	—	27-6275
Do. Nut ...	—	—	—	—	EAS2
Do. Washer ...	—	—	—	—	66-4707

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



## FRAME AND FITTINGS.

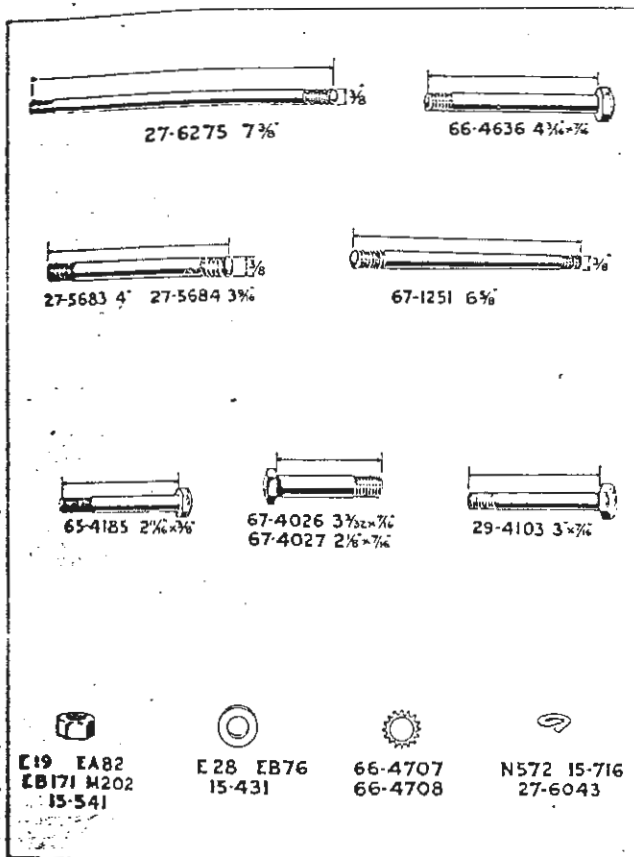

## WASHERS, Shakeproof.

"A" inside diameter.

Comp. No.	"A"
29-541	1"
29-3319	3/16"
36-382	3/16"
36-399	3/8"
65-695	1/2"
66-4707	3/8"
66-4708	7/16"

## SPLIT PINS.

Comp. No.	Diam.	Length
35-698	1/16"	1"
35-701	1/16"	1/2"
35-705	3/32"	3/4"
35-706	3/32"	7/8"
35-707	3/32"	1"
35-709	3/32"	1 1/4"
35-710	1/8"	1"
EB77	3/32"	1 1/8"



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Frame and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Front Bottom Connecting Link (when sidecar is fitted)	—	—	—	—	3-1718
Gearbox Foot Setscrew ... ..	—	—	—	—	67-4028(2)
Do. Washer (shakeproof) ... ..	—	—	—	—	36-382(2)
Saddle Rear Connecting Bolt ... ..	—	27-6510(2)	27-6510(2)	27-6510(2)	—
Do. Nut ... ..	—	EAS0(6)	EAS0(6)	EAS0(6)	—
Do. Washer ... ..	—	F21(6)	F21(6)	36-382(2)	—
Saddle Rear Spring Bolt Washer ... ..	—	—	—	M55CA(4)	—
Saddle Rear Fixing Stud ... ..	—	—	—	—	67-4040(2)
Do. Nut ... ..	—	—	—	—	EAS0(4)
Do. Washer ... ..	—	—	—	—	M550A(4)
Rear Mudguard Stay Stud ... ..	—	—	—	—	67-4032(2)
Chainstay Lug Stud ... ..	—	—	—	—	33-4160
Do. Nut ... ..	—	—	—	—	M365A
Rear Wheel Adjusting Screw ... ..	—	—	—	66-4603	—
Do. (nearside) ... ..	—	—	—	—	67-4800
Do. (offside) ... ..	—	—	—	—	67-4801
Do. Nut ... ..	—	—	—	27-4401	1-6032(2)
Gearbox Connecting Bolt ... ..	—	65-4190(2)	65-4190(2)	—	—
Do. (C10 only) ... ..	27-5674(2)	—	—	—	—
Do. Bolt Nut (C10 only) ... ..	EAS2(2)	—	—	—	—
Do. Serrated Washer (C10 only) ... ..	35-5864(2)	—	—	—	—
Gearbox Connecting Bolt (C11 only) ... ..	27-5683(2)	—	—	—	—
Do. Bolt Nut (C11 only) ... ..	EAS2(4)	—	—	—	—
Do. Serrated Washer (C11 only) ... ..	65-4189(4)	—	—	—	—
Do. Washer (shakeproof) (C11 only) ... ..	66-4707(4)	—	—	—	—

 
Quote Engine and Frame Numbers, with prefix letters, when ordering spares.




# FRAME AND FITTINGS.



27-5683 4x3/8




27-5674 2 2/32 x 3/8

 

27-6510 2 1/2 x 3/4



 
65-4190 3 x 3/8




67-4800 2 1/4  
67-4801 1 1/8



 33-4160



67-4040 2 1/8

 

66-4603 2 1/8



67-4028 3/4



67-4032



3-1718



65-4189



M365A



1-6032 EA80  
EA82



35-5864



27-4401



M550A F21



36-382 66-4707



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Frame and Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	
Gearbox Connecting Bolt (rear) ...	—	—	—	—	—	—	66-4168	—	—	—
Do. (front) ...	—	—	—	—	—	—	15-476	—	—	—
Gearbox Connecting Bolt Nut ...	—	—	—	—	—	—	EAS2(2)	—	—	—
Do. Washer ...	—	—	EAS2(4)	—	EAS2(4)	—	EAS2(2)	—	—	—
Do. Washer (spring) ...	—	—	27-5676(2)	—	27-5676(2)	—	27-5676(2)	—	—	—
Do. Washer ...	—	—	K51A(4)	—	K51A(4)	—	—	—	—	—
Gearbox Connecting Bolt Collar ...	—	—	15-4100(2)	—	15-4100(2)	—	66-4707(2)	—	—	—
Crankcase and Engine Plate Stud ...	—	—	—	—	—	—	66-4169	—	—	—
Do. Nut ...	29-4100(4)	—	—	—	—	—	—	—	—	—
Do. Washer (spring) ...	EAS0(8)	—	—	—	—	—	—	—	—	—
Front Down Tube and Chainstay Bolt	24-8784(S)	—	—	—	—	—	—	—	—	—
Do. Nut ...	—	—	—	—	—	—	3-1190	—	—	—
Do. Distance Washer ...	—	—	—	—	—	—	M202(2)	—	—	—
Gearbox Adjusting Screw ...	—	—	—	—	—	—	31-4070	—	—	—
Do. Nut ...	—	—	65-4184	—	65-4184	—	27-5710	—	—	—
Adjusting Stop ...	—	—	—	—	—	—	15-5664	—	—	—
Do. Nut ...	—	—	—	—	—	—	66-4167	—	—	—
Do. Washer ...	—	—	—	—	—	—	EAS0	—	—	—
Chainstay and Backstay complete	—	—	—	—	—	—	M550A	—	—	—
Chainstay and Backstay, complete	—	—	65-4610	—	65-4610	—	—	—	—	—
Chainstay complete ...	—	—	—	—	—	—	66-4650	—	—	—
Backstays complete ...	29-4259	—	—	—	—	—	—	—	—	—
Chainstay Lug Stud...	29-4257	—	—	—	—	—	—	—	—	—
Do. Nut ...	—	—	—	—	—	—	33-4160	—	—	—
	—	—	—	—	—	—	M365A	—	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRAME AND FITTINGS.

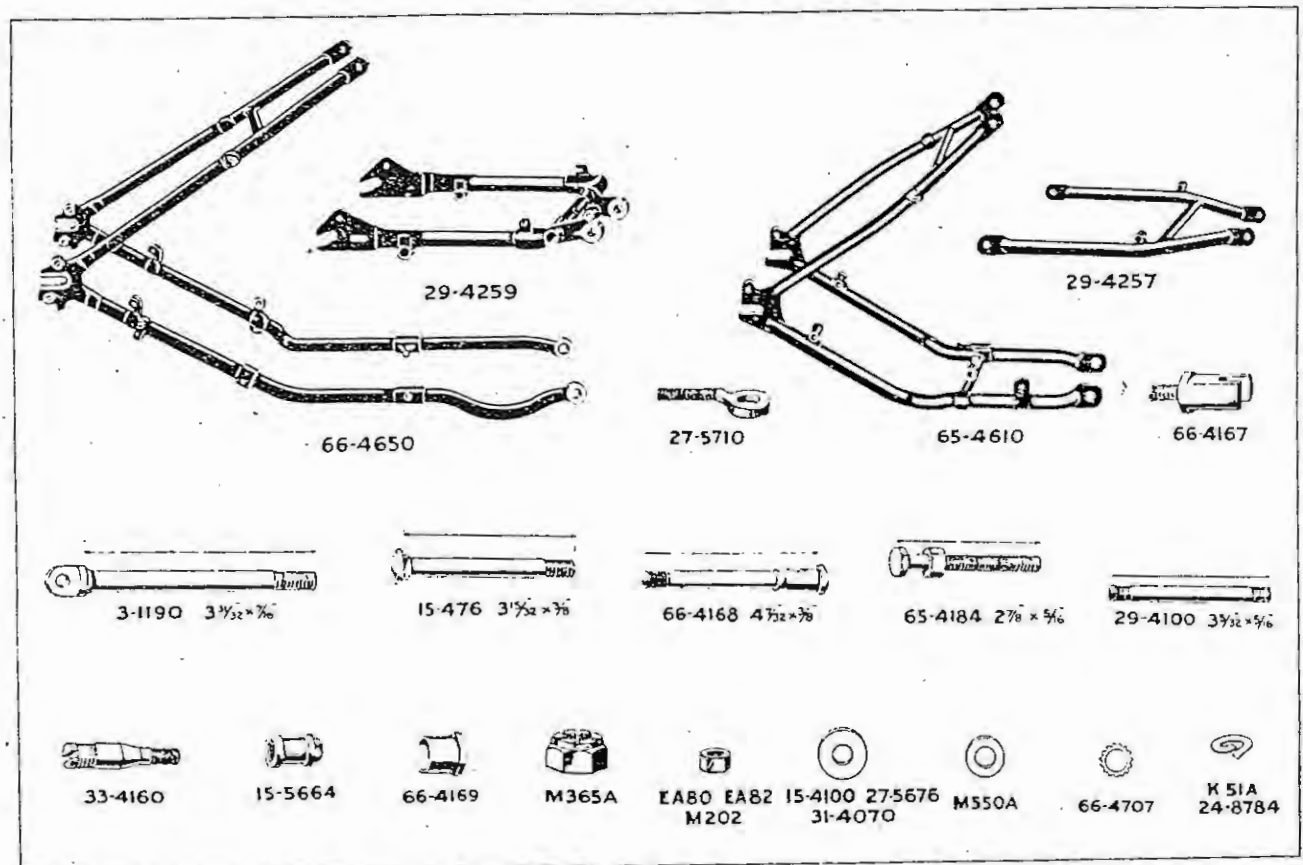



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Frame and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Chainstay Central Stand Anchor Lug ...	29-4181	—	—	—	—
Chainstay Bridge Tube Grease Nipple ...	35-5016	—	—	—	—
Chainstay Bridge Connecting Stud ...	—	—	—	15-6325	—
Do. Nut ... ..	—	—	—	EAS2(2)	—
Chainstay Bridge Distance Collar (left-hand)	—	—	—	66-4602	—
Do. (right-hand) ... ..	—	—	—	66-4601	—
Do. (centre) ... ..	—	—	—	15-6240	—
Chainstay Distance Piece (front) ... ..	—	—	—	66-4581	—
Chainstay, Backstay, and Mudguard Stay Connecting Bolt.	EB144(2)	—	—	—	—
Do. Nut ... ..	EB201(4)	—	—	—	—
Do. Washer (spring) ... ..	K51A(2)	—	—	—	—
Mudguard and Saddle Spring Fixing Bolt (offside).	65-292	—	—	—	—
Do. Nut ... ..	EAS0(2)	—	—	—	—
Do. Washer (spring) ... ..	N566(2)	—	—	—	—
Horn, Saddle Spring and Mudguard Bolt (nearside).	24-102	—	—	—	—
Horn and Saddle Spring Distance Piece	66-8347	—	—	—	—
Chainstay Engine Plate Bolt ... ..	29-4132	—	—	—	—
Do. Nut ... ..	EB171	—	—	—	—
Chainstay and Seat Tube Connecting Stud	—	—	—	66-4604	—
Do. Nut ... ..	—	—	—	B906(2)	—
Backstay Frame Bolt ... ..	29-4102	—	—	—	—
Do. Washer ... ..	15-431	—	—	—	—
Do. Nut ... ..	15-541	—	—	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRAME AND FITTINGS.



15-6325  $9\frac{1}{4} \times \frac{3}{8}$



66-4604  $8\frac{1}{2} \times \frac{1}{2}$



 
29-4132  $4\frac{1}{2} \times \frac{3}{8}$  29-4102  $\frac{1}{2} \times \frac{3}{8}$



15-6240




66-4602



24-102  $2\frac{1}{2} \times \frac{1}{2}$



 65-292  $2 \times \frac{3}{8}$



EB 144  $1\frac{1}{2} \times \frac{3}{8}$



66-4601



29-4181



66-4581



66-8347



15-541 B906  
EB 171



EA80 EA82  
EB 201



35-5016



15-431



N566 KS1A



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Frame and Fittings—continued.

 
 

 

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Electric Horn Fixing Bolt ... ..	—	28-2338	28-2338	—	—
Do. Nut ... ..	—	EAS0	EAS0	—	—
Do. Washer (spring) ... ..	—	24-8784	24-8784	—	—
Do. Washer (plain) ... ..	—	F21	F21	—	—
Silencer and Toolbox Fixing Bolt ...	EB144(2)	{ when pillow footrests are not fitted }	—	—	—
Do. Nut ... ..	EAS2(2)			—	—
Front Down Tube and Exhaust Pipe Stud (B32 only).	—	27-5683	—	—	—
Footrest Stud ... ..	—	—	—	—	67-4029(2)
<b>FRONT STAND.</b>					
Front Stand, complete (B31, B33 only)...	—	65-6582	65-6582	—	—
Do. complete ... ..	—	—	—	66-4727	67-6530
Do. Support Bolt ... ..	—	—	—	27-5446	—
Do. Nut ... ..	—	—	—	15-447	—
Front Stand Bolt (B31, B33 only) ...	—	B751(2)	B751(2)	—	—
Front Stand Bolt ... ..	—	—	—	M413(2)	B751(2)
Do. Washer (shakeproof) ... ..	—	—	—	36-382(2)	—
Do. Nut (B31, B33 only) ... ..	—	15-447(2)	15-447(2)	—	—
Do. Nut ... ..	—	—	—	EA111(2)	15-447(2)
<b>REAR STAND.</b>					
Rear Stand, complete ... ..	—	—	—	66-4772	—
Rear Stand Spring ... ..	—	—	—	66-4767	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRAME AND FITTINGS.

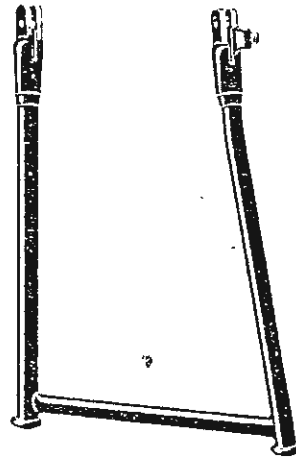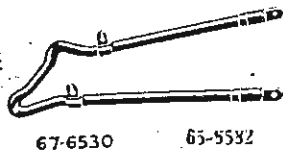



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set

# Frame and Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Rear Stand Bolt ... ..	—	—	—	24-6055(2)	—
Do. Nut ... ..	—	—	—	24-6040(2)	—
Do. Washer (spring) ... ..	—	—	—	15-716(2)	—
PROP STAND (special order only).					
Prop Stand, complete ... ..	65-4735	65-4735	65-4735	65-4735	65-4735
Prop Stand Lug, complete ... ..	65-4739	65-4739	65-4739	65-4739	67-4880
Prop Stand Pivot Pin ... ..	65-4741	65-4741	65-4741	65-4741	65-4741
Prop Stand Spring ... ..	65-4742	65-4742	65-4742	65-4742	65-4742
Clip Bolt ... ..	28-2338(2)	28-2338(2)	28-2338(2)	28-2338(2)	28-2338(2)
Do. Washer ... ..	36-382(2)	36-382(2)	36-382(2)	36-382(2)	36-382(2)
CENTRAL STAND.					
Central Stand, complete ... ..	29-4866	29-4860	29-4860	—	67-4843
Do. (B32, B34 only) ... ..	—	65-4730	65-4730	—	—
Central Stand Grease Nipple ... ..	35-5016	35-5016	35-5016	—	—
Central Stand Spring ... ..	65-4727	65-4727	65-4727	—	67-4847
Central Stand Engine Plate Distance Piece	29-4840	29-4840	29-4840	—	—
Do. Stud ... ..	—	65-4728	65-4728	—	—
Do. Nut ... ..	—	M202(2)	M202(2)	—	—
Do. Washer (spring) ... ..	—	M281A(2)	M281A(2)	—	—
Central Stand Pin ... ..	—	—	—	—	67-4848(2)
Do. Grease Nipple ... ..	—	—	—	—	28-2080(2)
Central Stand Split Pin ... ..	—	—	—	—	35-698(2)
Do. Nut ... ..	—	—	—	—	21-431(2)
Do. Washer ... ..	—	—	—	—	30-733(2)

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRAME AND FITTINGS.

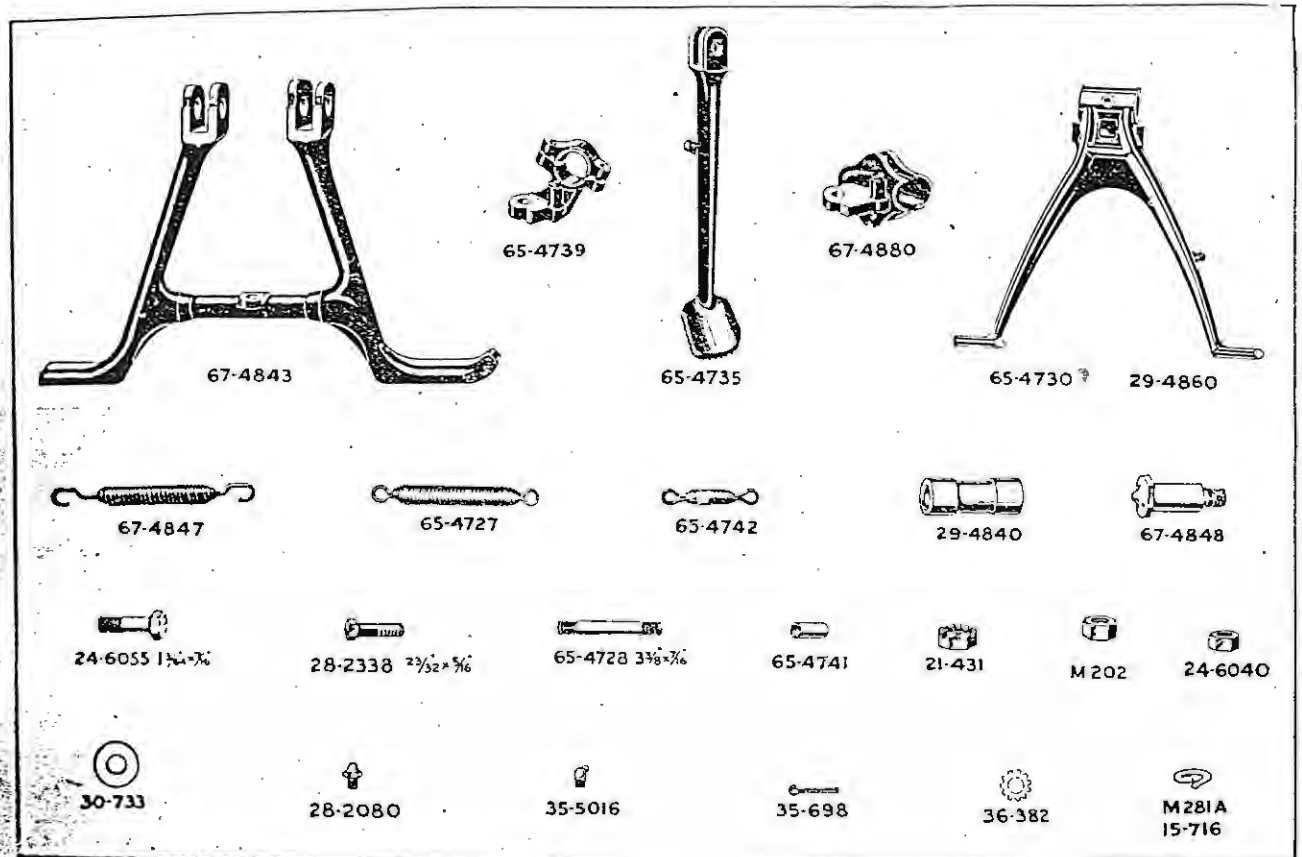



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Frame and Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
<b>HANDLEBAR.</b>					
Handlebar ... ..	65-4960	65-4960	65-4960	65-4960	65-4960
<b>CARRIER.</b>					
Carrier, complete ... ..	29-7025	65-6897	65-6897	66-6979	67-6921
Carrier Fixing Bolt ... ..	15-7161(4)	15-7161(4)	15-7161(4)	B751(4)	15-7161(4)
Do. Nut ... ..	M263(4)	M263(4)	M263(4)	EB113(4)	M263(4)
Do. Washer (spring) ... ..	K197(4)	K197(4)	K197(4)	K197(4)	K197(4)
Do. Washer (plain) ... ..	—	—	—	B751A(4)	—
<b>BATTERY CARRIER.</b>					
Battery and Air Cleaner Carrier, complete (less element)	—	—	—	—	67-4535
Battery Carrier, complete ... ..	29-4654	65-4667	65-4667	66-4892	—
Do. Bracket ... ..	29-4655	65-4668	65-4668	66-4893	—
Do. Bracket (B32,B34) (when light- ing set is not supplied).	—	65-4669	65-4669	—	—
Locating Strip, complete ... ..	29-4665	29-4665	29-4665	29-4665	29-4665
Battery Carrier Strap ... ..	29-4657	—	29-4657/3	29-4657/3	29-4657/3
Do. (B31 only) ... ..	—	29-4657	—	—	—
Do. (B32 only) ... ..	—	29-4657/3	—	—	—
Do. Hinge Pin... ..	29-4664	29-4664	29-4664	29-4664	29-4664
Battery Carrier Swivel Block (tapped hole)	65-2353	65-2353	65-2353	65-2353	65-2353
Do. (plain hole) ... ..	65-2352	65-2352	65-2352	65-2352	65-2352
Battery Carrier Strap Bolt... ..	29-4661	29-4661/1	29-4661/1	29-4661/1	29-4661/1
Do. Saddle Washer ... ..	29-4662	29-4662/1	29-4662/1	29-4662/1	29-4662/1

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRAME AND FITTINGS.

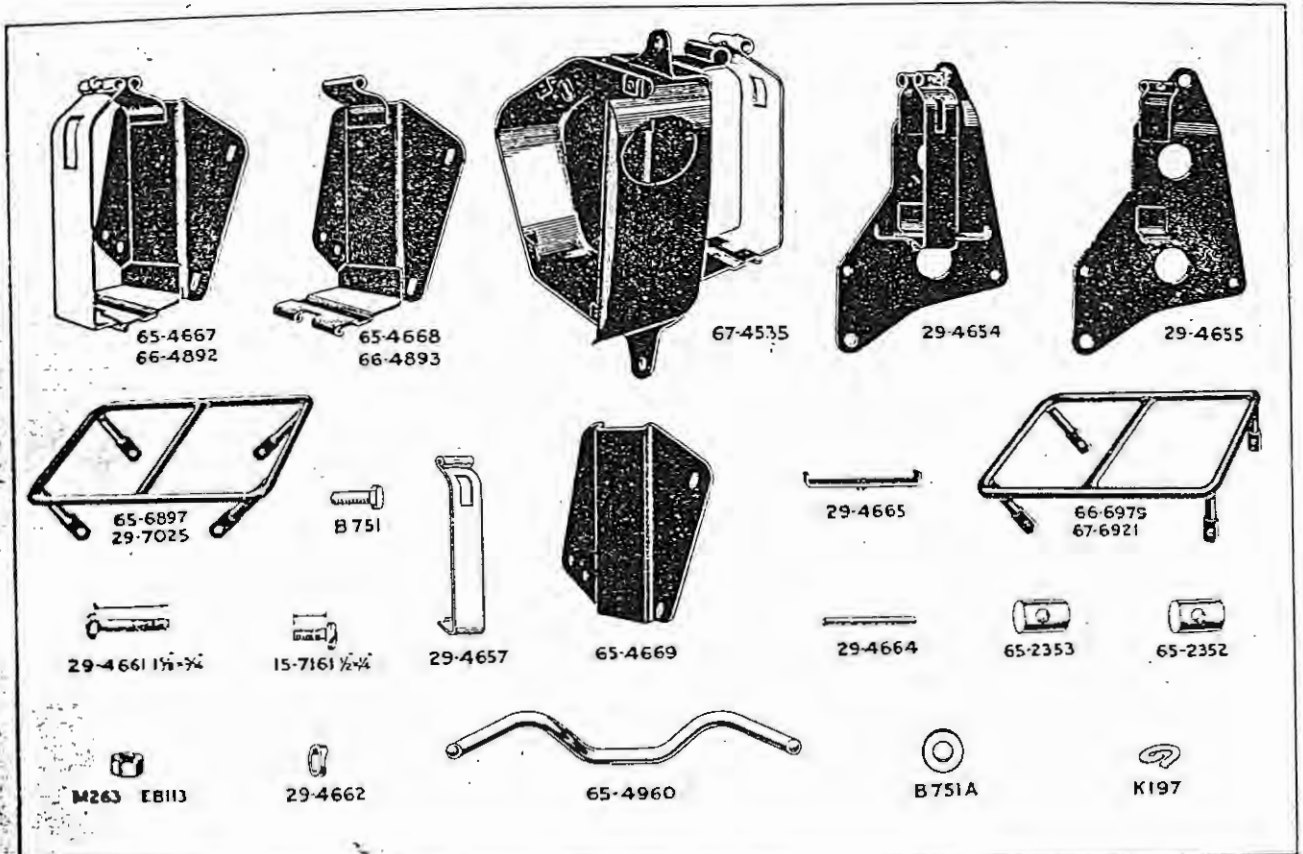



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Frame and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Battery Bracket and Frame Stud ...	—	—	—	31-7011(2)	—
Do. Nut ... ..	—	—	—	24-563(2)	—
Do. Washer (shakeproof) ... ..	—	—	—	36-382(5)	—
Battery Carrier Fixing Bolt ... ..	—	M413(3)	M413(3)	—	—
Battery Carrier and Oil Tank Fixing Bolt	—	EB70(3)	EB70(3)	EB68A(3)	—
Do. Washer (spring) ... ..	—	24-S784(5)	24-S784(5)	—	—
<b>AIR CLEANER.</b>					
Air Cleaner with fixed fittings (less element)	—	—	—	—	67-4540
Air Cleaner Element ... ..	—	—	—	—	67-4545
Do. Fixing Screw ... ..	—	—	—	—	K56(4)
Do. Washer (shakeproof) ... ..	—	—	—	—	29-3319(4)
Air Cleaner Ferrule ... ..	—	—	—	—	67-4546
Air Cleaner Fixing Screw ... ..	—	—	—	—	67-8313(3)
Do. Washer (spring) ... ..	—	—	—	—	24-S784(3)

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

### EQUIPMENT


### SADDLES. H. Terry & Sons, Redditch.

Description.	Telescopic Fork C10—C11.	B31—B32.	B33—B34.	M20—M21—M33.	A7.
Saddle ...	29-9355	65-9100	65-9100	66-9202	67-9050
Type ...	S874	S857	S857	S873	S875

Quote type numbers when ordering saddles.



## FRAME AND FITTINGS.

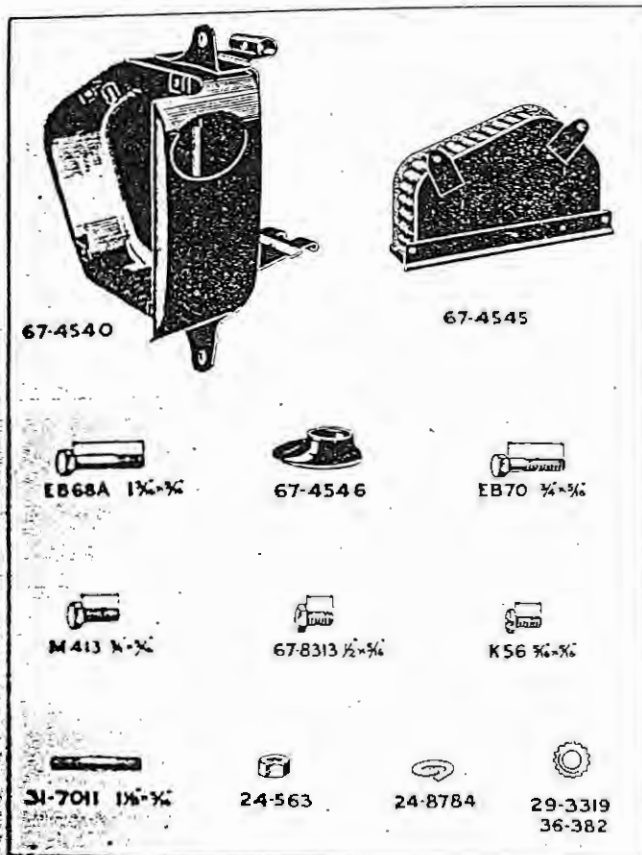

## SPRING WASHERS (Single). SPRING WASHERS (Dbl).

"A" inside diameter.

"A" inside diameter.

Comp. No.	"A"
K51A	.390"
K197	.255"
M281A	.440"
M576B	.406"
N566	.343"
N572	.468"
N585	.406"
15-716	.453"
24-978	.255"
24-8784	.315"

Comp. No.	"A"
EB150	.380"
24-6035	.317"
27-6043	.437"



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## FRONT FORK AND FITTINGS.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.
Front Fork assembled ... ..	29-5264		65-5340		65-5340		66-5070			67-5005
Front Fork ... ..	—		—		—		66-5071			—
Do. Middle Yoke Bush ... ..	—		—		—		66-5065(4)			—
Pivot Stud (Front Stand) ... ..	—		65-5356(2)		65-5356(2)		—			65-5356
Steering Stem and Yoke complete ... ..	—		—		—		66-5144			—
Steering Stem Yoke Bush ... ..	—		—		—		66-5065(2)			—
Steering Head Dust Cap ... ..	65-5321		65-5321		65-5321		66-5203			66-5203
Steering Head Ballrace Cone (top) ... ..	65-5319		65-5319		65-5319		65-5126			65-5126
Do. (bottom) ... ..	65-5320		65-5320		65-5320		65-5127			65-5127
Steering Damper Adjusting Rod complete ... ..	—		67-5021		67-5021		15-5093			67-5021
Steering Damper Rod Split Pin ... ..	—		35-710		35-710		—			35-710
Do. Star Washer ... ..	—		25-5247		25-5247		25-5247			25-5247
Do. Bottom Plate ... ..	—		25-5241		25-5241		25-5241			25-5241
Do. Friction Washer ... ..	—		65-5380(2)		65-5380(2)		65-5380(2)			65-5380(2)
Do. Knob Spring Washer ... ..	—		24-6035		24-6035		—			24-6035
Do. Anchor Plate ... ..	—		27-5152		27-5152		27-5152			27-5152
Do. Stud ... ..	—		65-5327		65-5327		A178A			65-5327
Do. Nut ... ..	—		EAS0		EAS0		EAS0			EAS0
Do. Washer ... ..	—		F21		F21		M550A(2)			F21
Do. Washer (shakeproof) ... ..	—		36-382		36-382		36-382(2)			36-382
Steering Damper Adjusting Knob ... ..	—		—		—		25-5226			—
Do. Washer (double spring) ... ..	—		—		—		EB150			—
Steering Damper Centre ... ..	—		65-5328		65-5328		—			65-5328
Steering Damper Rod Distance Washer (use only with 67-5021). ... ..	—		15-7563		15-7563		—			—
Do. (B32 only) ... ..	—		66-8347		—		—			—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRONT FORK AND FITTINGS.

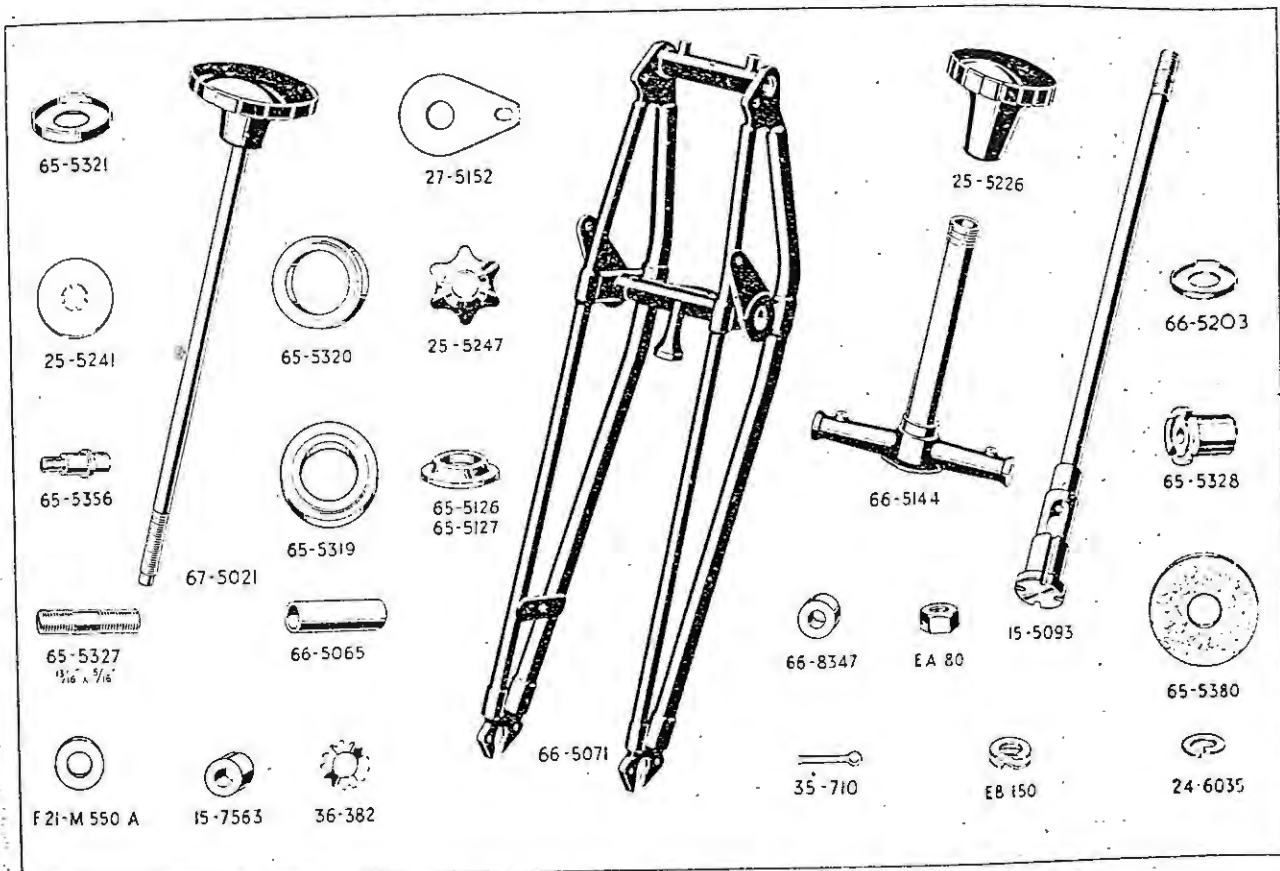



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Front Fork and Fittings—continued.

 
When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Ball Head Clip Bolt, complete with clips and bolts.	—	—	—	66-5138	—
Ball Head Clip Yoke Bush ... ..	—	—	—	66-5065(2)	—
Ball Head Clip Yoke Clip ... ..	—	—	—	15-5151(2)	—
Do. Bolt ... ..	—	—	—	65-5334(4)	—
Do. Washer ... ..	—	—	—	15-5155(4)	—
Ball Head Clip Bolt ... ..	—	—	—	27-5135	—
Do. Nut ... ..	—	—	—	EB664	—
Do. Locknut ... ..	—	—	—	24-5208	—
Fork Top Link (plain holes) ... ..	—	—	—	15-5240	—
Do. (bottom) (plain holes) ... ..	—	—	—	15-5242	—
Do. (top) (tapped holes) ... ..	—	—	—	15-5241	—
Do. (bottom) (tapped holes) ... ..	—	—	—	15-5239	—
Fork Link Bolt Friction Washer (Ferodo)	—	—	—	15-5251(2)	—
Fork Link Bottom Friction Link ... ..	—	—	—	15-5246	—
Fork Friction Plate ... ..	—	—	—	15-5244	—
Fork Link Bolt (top) ... ..	—	—	—	15-5190(2)	—
Do. (bottom) ... ..	—	—	—	15-5249	—
Fork Steering Stem Bolt ... ..	—	—	—	15-5247	—
Fork Link Bolt Nut ... ..	—	—	—	15-5196(3)	—
Do. Washer (shakeproof) ... ..	—	—	—	36-382(3)	—
Shock Absorber Adaptor Knob, complete	—	—	—	66-5165	—
Do. Star Washer ... ..	—	—	—	15-5260	—
Do. Centre Nut ... ..	—	—	—	15-5256	—
Do. Locking Washer ... ..	—	—	—	15-5257	—
Do. Spring ... ..	—	—	—	15-5258	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.




## FRONT FORK AND FITTINGS.



15-5239  $3\frac{3}{4}$  THREADED.



66-5165

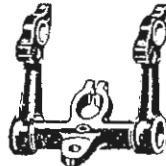

66-5138



15-5260



15-5240  $3\frac{3}{8}$  PLAIN HOLES.  
15-5241  $3\frac{3}{8}$  THREADED HOLES.  
15-5242  $3\frac{3}{4}$  PLAIN HOLES.



15-5246  $3\frac{3}{4}$



 
15-5244



15-5256



66-5065



27-5135  $1\frac{1}{2} \times \frac{3}{4}$



65-5334  $1\frac{1}{2} \times \frac{3}{4}$



15-5190  $5\frac{1}{2} \times \frac{3}{4}$

15-5247  $7\frac{1}{2} \times \frac{3}{4}$

15-5249  $8\frac{1}{2} \times \frac{3}{4}$



24-5208



15-5151



15-5258



15-5251



15-5257



EB 664



15-5196



15-5155



36-382



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Front Fork and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork
	C10	C11:	B31	B32.	B33	B34.	M20	M21	M33	
Front Fork Spring ... ..	29-5314	(2)	65-5390	(2)	65-5390	(2)	66-5153	—	—	—
Do. (solo machines only) ... ..	—	—	—	—	—	—	—	—	—	65-5390(2)
Do. (sidecar machines only) ... ..	—	—	—	—	—	—	—	—	—	67-5036(2)
Front Fork Spring Stop ... ..	—	—	—	—	—	—	66-5151	—	—	—
Fork Spring Top Bolt ... ..	—	—	—	—	—	—	24-5228	—	—	—
Do. Nut ... ..	—	—	—	—	—	—	EAS2	—	—	—
Fork Spring Top Sleeve ... ..	—	—	—	—	—	—	24-5227	—	—	—
Do. Washer ... ..	—	—	—	—	—	—	66-4707	—	—	—
Do. Distance Washer ... ..	—	—	—	—	—	—	24-5226	—	—	—
Fork End Drain Plug ... ..	EB673	(2)	EB673	(2)	EB673	(2)	—	—	—	EB673(2)
Do. Washer (fibre) ... ..	H35	(2)	H35	(2)	H35	(2)	—	—	—	H35(2)
Fork Spring Bottom Sleeve, with peg ... ..	—	—	—	—	—	—	24-5233	—	—	—
Fork Spring Bottom Sleeve Washer ... ..	—	—	—	—	—	—	24-5237	—	—	—
Do. Nut ... ..	—	—	—	—	—	—	EAS2	—	—	—
Do. Split Pin ... ..	—	—	—	—	—	—	EB77	—	—	—
Front Fork Grease Nipple (straight type) ... ..	—	—	—	—	—	—	28-2080	(2)	—	—
Do. with loose locknut (angle type) ... ..	—	—	—	—	—	—	15-5290	(3)	—	—
Fork Outer Sleeve (nearside), complete ... ..	29-5340	—	65-5385	—	65-5385	—	—	—	—	67-5042
Fork Outer Sleeve (offside), complete ... ..	29-5342	—	65-5387	—	65-5387	—	—	—	—	67-5044

Quote: Engine and Frame Numbers, with prefix letters, when ordering spares.

# LEAD THE WAY ON A B.S.A.



ckets are  
tes a set.

opic Fork  
A7.

5390(2)  
5036(2)

673(2)  
35(2)

-5042  
-5044

## FRONT FORK AND FITTINGS.



29-5342



24-5227



65-5385

29-5340



67-5044



24-5233



67-5042



66-5153



66-5151



67-5036

29-5314

65-5390



24-5226



24-5228



24-5237



28-2080



15-5290



EB673



EA82



H35



EB 77



66-4707



NOTE.—Figures in brackets denote number per set, *e.g.*, (2), 2 per set.

### Front Fork and Fittings—*continued.*


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork
	C10	C11	B31	B32	B33	B34	M20	M21	M33	A7
Fork Sliding Tube (nearside), complete ...	29-5294		65-5360		65-5360		—			65-5360
Do. (offside), complete ...	29-5303		65-5362		65-5362		—			65-5362
Sealing Tape ...	29-5322		29-5322		29-5322		—			29-5322
Fork End Bolt (nearside) ...	29-5293		65-5295		65-5295		—			65-5295
Do. Washer ...	36-382		M576B		M576B		—			M576B
Front Fork Shaft ...	29-5273(2)		65-5352(2)		65-5352(2)		—			67-5014(2)
Front Fork Top Bearing ...	29-5346(2)		29-5346(2)		29-5346(2)		—			29-5346(2)
Do. Bottom Bearing ...	29-5347(2)		29-5347(2)		29-5347(2)		—			29-5347(2)
Front Fork Shaft Plug ...	29-5283(2)		29-5283(2)		29-5283(2)		—			29-5283(2)
Top Bearing Circlip ...	29-5320(2)		29-5320(2)		29-5320(2)		—			29-5320(2)
Front Fork Oil Seal Holder complete ...	29-5310(2)		29-5310/3(2)		29-5310/3(2)		—			29-5310/3(2)
Do. (C11 de luxe only) ...	29-5310/3(2)		—		—		—			—
Front Fork Oil Seal ...	29-5313(2)		29-5313(2)		29-5313(2)		—			29-5313(2)
Fork Bottom Yoke complete ...	29-5286		65-5353		65-5353		—			67-5016
Do. Bolt ...	29-5289(2)		29-5289(2)		29-5289(2)		—			29-5289(2)
Do. Nut ...	EAS0(2)		EAS0(2)		EAS0(2)		—			EAS0(2)
Do. Washer (shakeproof) ...	36-382(2)		36-382(2)		36-382(2)		—			36-382(2)
Steering Stem Adjusting Sleeve ...	29-5290		65-5329		65-5329		—			67-5023
Do. Cap ...	29-5291		65-5330		65-5330		—			67-5024
Front Fork Top Yoke ...	29-5292		65-5355		65-5355		—			67-5028
Do. Clip Bolt ...	27-5135		27-5135		27-5135		—			27-5135
Do. Nut ...	29-5315		29-5315		29-5315		—			29-5315
Front Fork Tube Nut ...	65-5331(2)		65-5331(2)		65-5331(2)		—			65-5331(2)
Do. Washer ...	65-5332(2)		65-5332(2)		65-5332(2)		—			65-5332(2)

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRONT FORK AND FITTINGS.

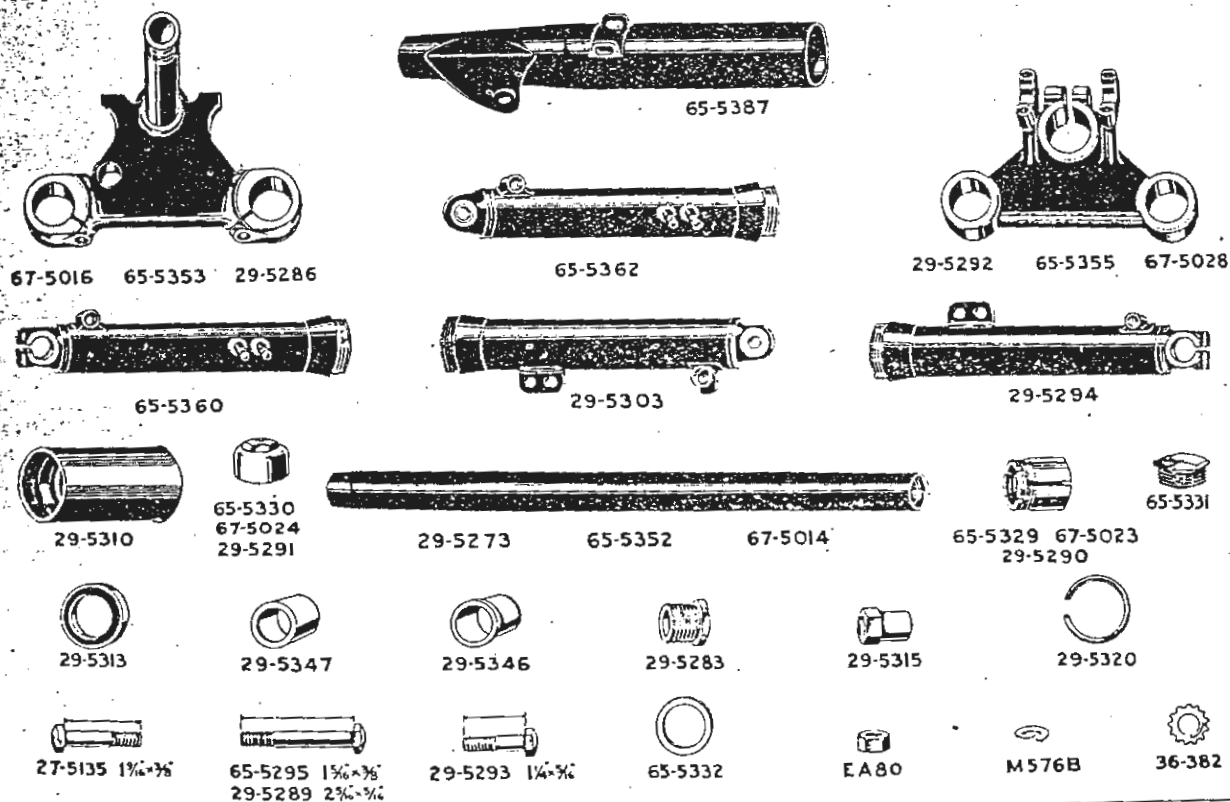



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Front Fork and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork A7.
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	
Handlebar Clip ... ..	65-5333(2)		65-5333(2)		65-5333(2)		—			65-5333(2)
Do. Bolt ... ..	65-5334(4)		65-5334(4)		65-5334(4)		—			65-5334(4)
Do. Washer ... ..	15-5155(4)		15-5155(4)		15-5155(4)		—			15-5155(4)
Pivot and Front Brake Anchor Stud ...	—		—		—		—			67-5013
Front Fork Top Bush Shim (.010" thick)	29-5335		29-5335		29-5335		—			29-5335
Do. (.020" thick) ... ..	29-5336		29-5336		29-5336		—			29-5336
Do. (.030" thick) ... ..	29-5337		29-5337		29-5337		—			29-5337

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

### GEAR RATIOS FOR MODEL A7 MOTOR CYCLE

Model.	Standard Rear Wheel Sprocket		Component Number.	No. of Teeth.	Gear Ratios.			
	Solo.	Sidecar.			4th	3rd	2nd	1st
A7	46	—	67-6040	46	5.1	6.2	9.0	13.2
	—	49	67-6050	49	5.4	6.6	9.5	14.0

 


kets are  
a a set.

pic Fork  
.7.

333(2)  
334(4)  
55(4)  
5013  
5335  
5336  
5337

## FRONT FORK and FITTINGS.



67-5013



65-5333



65-5334 %-%



29-5335 29-5336  
29-5337



15-5155

## EQUIPMENT.

### SPEEDOMETERS.

Smith's Motor Accessories Ltd., Cricklewood Works  
London.

Description.	C10-C11. B31-B32. M20-M21.		
Speedometer (fork fixing) 80 m.p.h. trip.	—	S433,1/L	S433,1/L
Speedometer (fork fixing) 140 kilometre trip.	—	S433,5/L	S433,5/L
Speedometer (tank fixing) 80 m.p.h. trip.	S467,9/L	—	—
Speedometer (tank fixing) 140 kilometre trip.	S467,13/L	—	—
Description.	B33-B34. M33		A7
Speedometer (fork fixing) 120 m.p.h.	S433,3/L	—	S433,3/L
Speedometer (fork fixing) 180 kilometre trip.	S433,7/L	—	S433,7/L

Quote type numbers when ordering replacement components  
for any of the above-mentioned Accessories.



NOTE: - Figures in brackets denote number per set, e.g., (2), 2 per set.

## FRONT HUB and WHEEL FITTINGS.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
Front Wheel complete (less brake and tyre)	29-5770										
(C10 only).											
Do. (C11 only) ... ..	29-5771										
Do. (C11 de luxe) ... ..	29-5771/14										
Do. (B31-B33) ... ..			65-5870/13		65-5870/13						
Do. (B32) ... ..			65-5915/15								
Do. (B34) ... ..					65-5915/12						
Do. (M20-M21) ... ..							66-5536/16				
Do. (M33) ... ..							66-5536/13				
Do. ... ..										67-6001/17	
Front Wheel Rim (C10 only) (WM1-19)	29-5776										
Do. (C11 only) (WM1-20) ... ..	29-5777										
Do. (C11 de luxe) (WM1-20) ... ..	29-5777/14										
Do. (B31-B33) (WM2-19) ... ..			65-5871/13		65-5871/13						
Do. (B32) (WM1-21)... ..			65-5916/15								
Do. (B34) (WM1-21)... ..					65-5916/12						
Do. (M20-M21) (WM3-19) ... ..							66-5482/16				
Do. (M33) (WM3-19) ... ..							66-5482/13				
Do. (WM2-19)... ..										67-6005/17	
Front Wheel Spoke (right-hand) (C10 only)	24-7012(20)										
Do. (C11 only) ... ..	29-5772(20)										
Do. (B32, B34) ... ..			29-5846(20)		29-5846(20)						
Do. (B31, B33) (right-hand) ... ..			65-5910(20)		65-5910(20)						
Do. (right-hand) ... ..							24-6899(20)			67-6008(20)	

When ordering Wheels or Wheel parts particular note should be made as to size of tyre and rim.



# FRONT HUB and WHEEL FITTINGS.

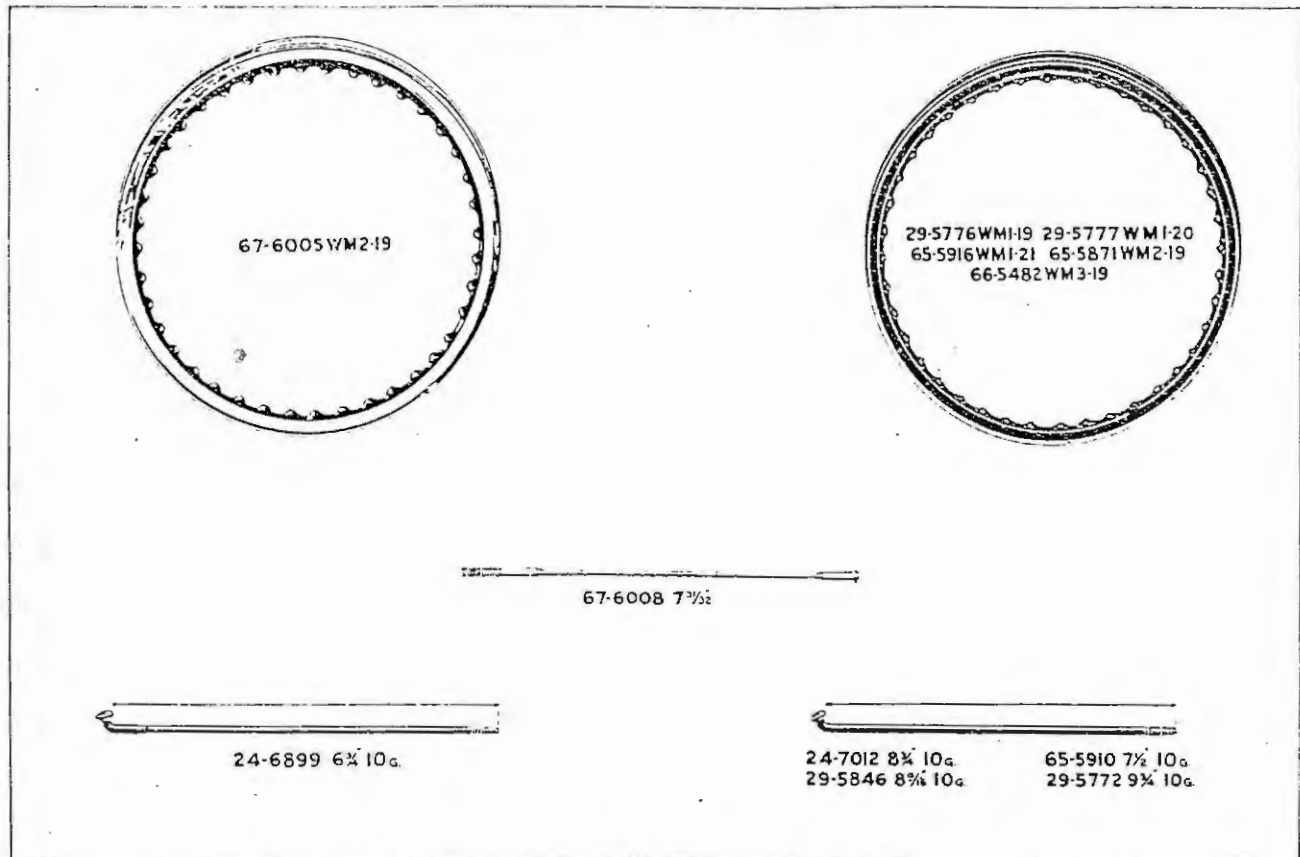



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Front Hub and Wheel Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Front Wheel Spoke (left-hand) (C10 only)	24-7012(20)	—	—	—	—
Do. (C11 only) ... ..	24-6912(20)	—	—	—	—
Do. (B32, B34) ... ..	—	65-5537(20)	65-5537(20)	—	—
Do. (B31, B33) ... ..	—	65-5872(20)	65-5872(20)	—	—
Do. (left-hand) ... ..	—	—	—	24-7012(20)	67-6007(20)
Front Wheel Spoke Nipple ... ..	27-6813(40)	27-6810(40)	27-6810(40)	27-6813(40)	27-6813(40)
Front Hub with spindle, less brake	—	—	—	66-5518	—
Front Hub complete, with bearings	29-5825	65-5876	65-5876	66-5519	67-6021
Front Hub Cup ... ..	29-5832(2)	—	—	—	—
Front Hub Cone (fixed) ... ..	29-5834	—	—	—	—
Do. (adjusting) ... ..	29-5833	—	—	—	—
Front Hub Cone Locknut ... ..	29-5842(2)	—	—	—	—
Front Hub Ball ... ..	$\frac{1}{4}$ " diam. (22)	—	—	—	—
Front Hub Bearing ... ..	—	65-5883(2)	65-5883(2)	24-6860(2)	65-5883(2)
Front Hub Washer (felt) ... ..	24-6790(2)	65-5886	65-5886	—	65-5886
Do. (right-hand) ... ..	—	—	—	24-6792	—
Do. (left-hand) ... ..	—	—	—	66-5525	—
Front Hub Felt Washer Retaining Ring (right-hand).	—	—	—	24-6841	—
Do. (left-hand) ... ..	—	65-5887	65-5887	24-6846(2)	65-5887
Felt Washer Retaining Cup ... ..	29-5840(2)	65-5888	65-5888	—	—
Do. Washer ... ..	29-5841(2)	—	—	—	—
Front Hub Grease Nipple (angle type), with loose locknut.	15-5290	15-5290	15-5290	—	15-5290
Do. (straight type) ... ..	—	—	—	28-2080	—


When ordering Wheels or Wheel parts particular note should be made as to size of tyre and rim.



# FRONT HUB and WHEEL FITTINGS.

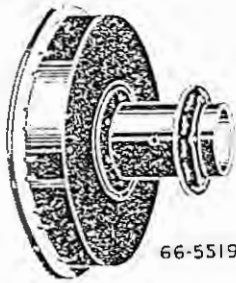


66-5519

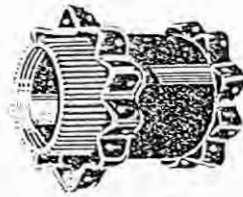


67-6021



29-5825

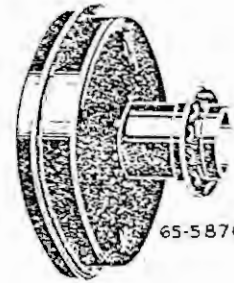

65-5876

 

24-6912 9 1/4 10 1/4



24-7012 8 1/4 10 1/4

65-5537 9 1/4 10 1/4

65-5872 8 1/4 10 1/4



67-6007 8 1/4 10 1/4



65-5883



24-6860



24-6841 24-6846



24-6790 24-6792  
66-5525 65-5886



29-5840



65-5808



29-5832



29-5834



29-5833



29-5841 65-5887



29-5842



27-6810 27-6813



15-5290



28-2080



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Front Hub and Wheel Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11	B31	B32	B33	B34	M20	M21	M33	A7	
Front Hub Spindle ... ..	29-5837		65-5894		65-5894		66-5526			67-5523	
Do. Nut ... ..	29-5839		—		—		15-6737(2)			—	
Front Hub Spindle Sleeve ... ..	29-5835		65-5889		65-5889		—			67-6027	
Front Hub Spindle Distance Piece ... ..	29-5836		65-5892		65-5892		24-7051			67-5522	
Do. Locknut ... ..	—		—		—		24-6994			—	
Do. Washer ... ..	—		—		—		36-3528(2)			—	
Front Hub Washer ... ..	—		—		—		66-5524			—	
Front Hub Bearing Adjusting Sleeve ... ..	—		—		—		24-6867			—	
Do. Locknut ... ..	—		—		—		24-898			—	
Front Hub Bearing Locknut ... ..	—		—		—		24-6868			—	
Do. Thrust Washer ... ..	—		65-5884		65-5884		—			65-5884	
Do. Retaining Ring ... ..	—		65-5885		65-5885		—			65-5885	
Front Hub Distance Collar ... ..	—		65-5890		65-5890		—			65-5890	
Front Hub Distance Piece ... ..	—		65-5891		65-5891		—			—	
Front Hub End Cover complete ... ..	—		—		—		—			67-6044	
Front Hub Shell Washer (rubber) ... ..	—		—		—		—			67-6051	
<b>FRONT WHEEL BRAKE.</b>											
Front Brake Cover Plate complete, with fixed fittings.	29-5843		—		—		66-5514			67-5524	
Do. (B31, B33) ... ..	—		65-5895		65-5895		—			—	
Do. (B32, B34) ... ..	—		65-5895/3		65-5895/3		—			—	
Front Brake Cover Plate Thrust Washer	—		—		—		—			67-5534	

When ordering Wheels or Wheel parts particular note should be made as to size of tyre and rim.



# FRONT HUB and WHEEL FITTINGS.

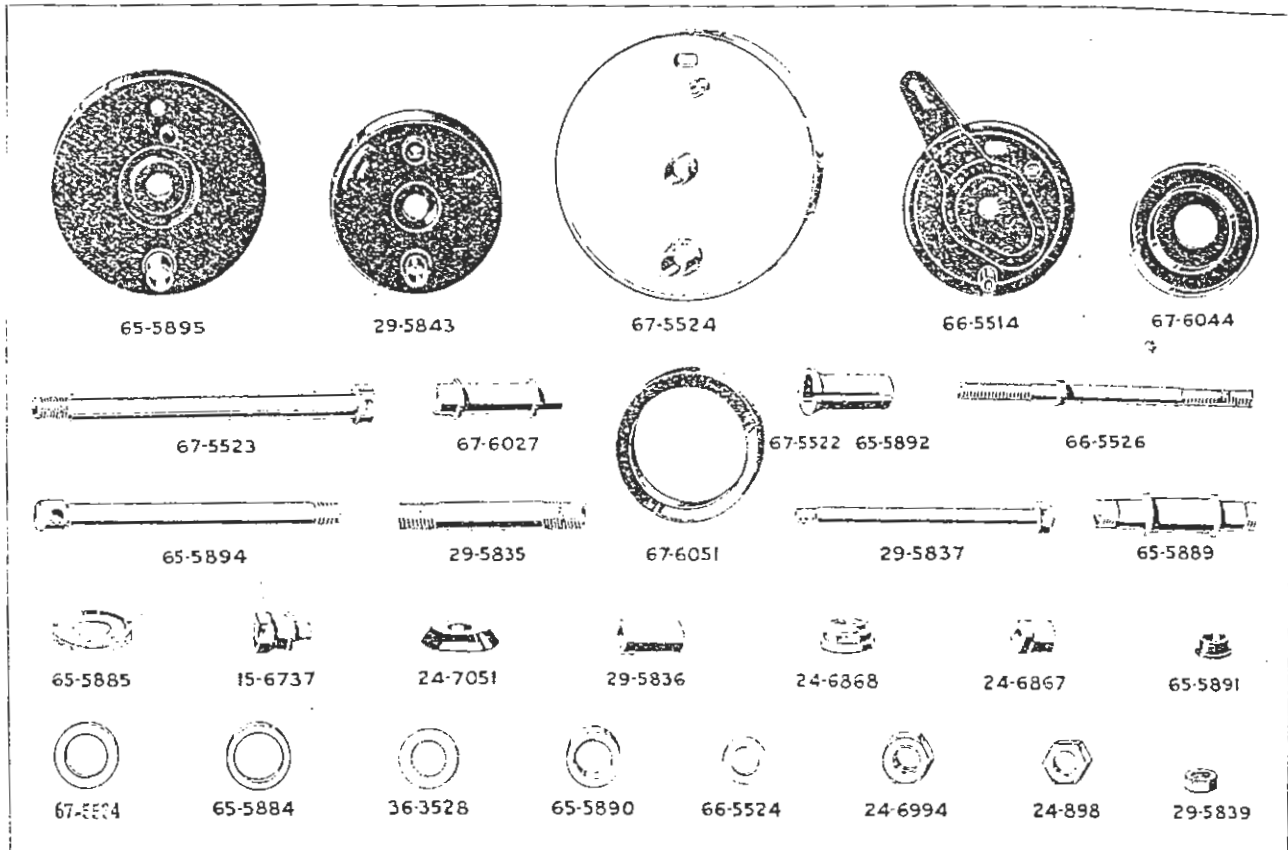



NOTE.—Figures in brackets denote number per set, *y.e.*, (2), 2 per set.

# Front Hub and Wheel Fittings—*continued.*


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Front Brake Cover Plate Stud ... ..	—	—	—	—	67-5013
Do. Nut ... ..	—	65-5893(2)	65-5893(2)	—	—
Front Brake Distance Collar Spring Ring	—	—	—	—	67-5528
Front Brake Shoe complete ... ..	—	—	—	—	65-5901(2)
Do. (right-hand), complete ... ..	24-7767	65-5901	65-5901	35-9235	—
Do. (left-hand), complete ... ..	24-7768	65-5901	65-5901	35-9235	—
Brake Shoe Lining ... ..	24-7775(2)	65-5903(2)	65-5903(2)	35-6432(2)	65-5903(2)
Do. Rivet ... ..	24-7990(14)	35-6436(14)	35-6436(14)	35-6436(14)	35-6436(14)
Front Brake Shoe Spring ... ..	24-7810(2)	65-5904(2)	65-5904(2)	35-6440(2)	65-5904(2)
Front Brake Cam ... ..	65-5673	65-5905	65-5905	24-7127	65-5905
Do. Washer ... ..	—	25-7180	25-7180	—	—
Do. Grease Nipple ... ..	—	—	—	28-2080	—
Brake Cam Bearing Oil Hole Clip ... ..	65-5674	65-5674	65-5674	—	65-5674
Front Brake Cam Operating Lever ... ..	24-7800	65-5907	65-5907	65-5907	65-5907
Do. Nut (B32, B34) ... ..	—	EB171, 1	EB171, 1	—	—
Do. Nut (B31, B23) ... ..	—	EB171	EB171	—	—
Do. Nut ... ..	EB171	—	—	EB171	EB171
Do. Washer (B31, B33) ... ..	—	15-431	15-431	—	—
Do. Washer (B32, B34) ... ..	—	15-431, 1	15-431, 1	—	—
Do. Washer ... ..	15-431	—	—	15-431	15-431
Do. Washer (shakeproof) ... ..	66-4708	66-4708	66-4708	66-4708	66-4708
Front Brake Shoe Fulcrum Pin ... ..	—	65-5899	65-5899	33-5544	65-5899
Do. Nut ... ..	—	—	—	15-1455	24-5860
Do. Nut (B32, B34) ... ..	—	24-5860, 1	24-5860, 1	—	—
Do. Nut (B31, B33) ... ..	—	24-5860	24-5860	—	—


When ordering Wheels or Wheel parts particular note should be made as to size of tyre and rim.




# FRONT HUB and WHEEL FITTINGS.

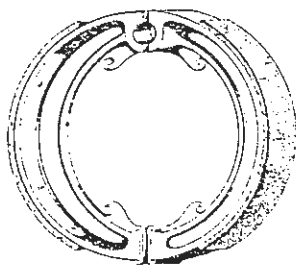


35-9235 65-5901

 


35-6432

 


35-6440

 

24-7775 65-5903

 

65-5904 24-7810

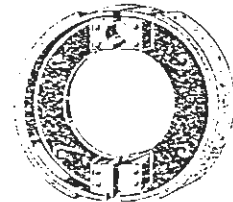


24-7767<sub>RM</sub> 24-7768<sub>LM</sub>



65-5907



 
24-7800



65-5905



 24-7127



65-5673



33-5544



65-5899



67-5013



65-5674



67-5528



25-7180



15-431



65-5893



EB171 15-1455



24-5860



28-2080



66-4708



NOTE — Figures in brackets denote number per set, e.g., (2), 2 per set.

### Front Hub and Wheel Fittings—continued

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Front Brake Shoe Fulcrum Pin Washer (serrated) ... ..	—	—	—	33-5545	24-8045
Do. Washer (B31, B33) ... ..	—	24-8045	24-8045	—	—
Do. Washer (B32, B34) ... ..	—	24-8045, 1	24-8045, 1	—	—
Front Brake Anchor Bolt ... ..	—	—	—	15-7104	—
Do. Nut ... ..	—	—	—	EA82	—
Do. Washer (shakeproof) ... ..	—	—	—	66-4707	—
Front Brake Drum ... ..	—	—	—	—	67-5530
Do. Thrust Washer ... ..	—	—	—	—	67-5531
Front Brake Drum Thrust Ball Cage, complete.	—	—	—	—	67-5532
<b>SPEEDOMETER DRIVE.</b>					
Speedometer Drive ... ..	—	—	—	29-5737	—


When ordering Wheels or Wheel parts particular note should be made as to size of tyre and rim.

### STANDARD NUTS.


3 16"	1 4"	5 16"	3 8"	7 16"	1 2"	9 16"
EB116	A223	EA80	E19	EB171	B906	15-1455
25-7151	EB102	EA111	EA82	K464A	EA60	
	EB113	EB129	EB106	M202	24-7000	
	K234b	24-563	EB141	15-541	27-6716	
	K457	24-6040	EB201	24-5860		
	M263					
	1-6032					



# FRONT HUB and WHEEL FITTINGS.

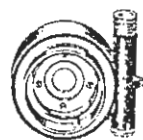


29-5737  $\frac{1}{4}$ " DIA. HOLE.

 

67-5532



67-5531

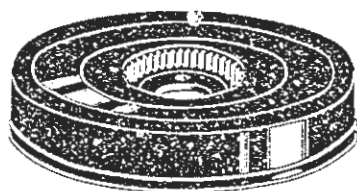

67-5530



15-7104



24-8045 33-5545



EA82



66-4707

## ENGINE AND FRAME MARKINGS FOR 1948 MOTOR CYCLES.

MODEL.	TYPE.	ENGINE.	FRAME.
C10 ...	250c.c. S.V.	YC10-101 upw'ds	YC10-101
C11 ...	250c.c. O.H.V.	YC11-101 upw'ds	upwards
B31 ...	350c.c. O.H.V.	YB31-101 upw'ds	
B32 (Comp'n)	350c.c. O.H.V.	YB32-101 upw'ds	YB31-101
B33 ...	500c.c. O.H.V.	YB33-101 upw'ds	upwards
B34 (Comp'n)	500c.c. O.H.V.	YB34-101 upw'ds	
M20 ...	500c.c. S.V.	YM20-101 upw'ds	YM20-101
M21 ...	600c.c. S.V.	YM21-101 upw'ds	upwards
M33 ...	500c.c. O.H.V.	YM33-101 upw'ds	
A7 (Twin) ...	500c.c. O.H.V.	YA7-101 upw'ds	YA7-101 upwards



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## REAR HUB and WHEEL FITTINGS.

 
 
 

When no figures in brackets are shown, one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
Rear Wheel complete (less brake and tyre) (C10 only).	29-6170										
Do. (C11 only) ... ..	29-6175										
Do. (C11 de luxe) ... ..	29-6175/14										
Do. (B31-B33) ... ..			65-6261/13		65-6261/13						
Do. (B32) ... ..			65-6266/15								
Do. (B34) ... ..					65-6266/12						
Do. (M20-M21) ... ..							66-6071/16				
Do. (M33) ... ..							66-6071/13				
Do. ... ..										67-6001/17	
Rear Wheel Rim (C10 only) (WM1-19)...	29-5776										
Do. (C11 only) (WM1-20) ... ..	29-5777										
Do. (C11 de luxe) (WM1-20) ... ..	29-5777/14										
Do. (B31-B33) (WM2-99) ... ..			65-6263/13		65-6263/13						
Do. (B32) ... ..			65-6267/15								
Do. (B34) ... ..					65-6267/12						
Do. (M20-M21) (WM3-19) ... ..							66-6054/16				
Do. (M33) (WM3-19) ... ..							66-6054/13				
Do. (WM2-19) ... ..										67-6005/17	
Rear Wheel Spoke (right-hand) (C10 only)	24-7014(20)										
Do. (C11 only) ... ..	65-5873(20)										
Do. (right-hand) ... ..			24-7012(20)		24-7012(20)		26-6824(20)			67-6007(20)	
Rear Wheel Spoke (left-hand) (C10 only)	24-7012(20)										
Do. (left-hand) (C11 only) ... ..	24-6912(20)										
Do. (left-hand) ... ..			65-6027(20)		65-6027(20)		15-7037(20)			67-6008(20)	

When ordering Wheels or Wheel parts particular note should be made as to size of tyre and rim.



# REAR HUB and WHEEL FITTINGS.

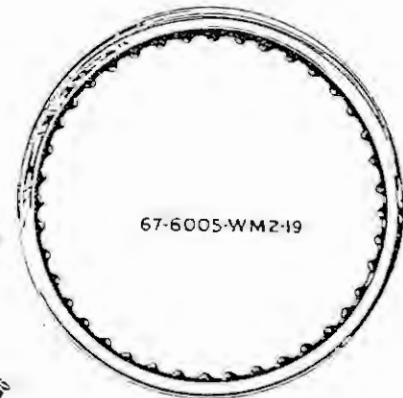



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Rear Hub and Wheel Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Spoke Nipple ... ..	27-6813(40)	27-6813(40)	27-6813(40)	27-6808(40)	27-6813(40)
Rear Hub Shell complete, with bearings	29-6181	65-6250	65-6250	66-6067	67-6021
Rear Hub Shell Washer (rubber) ...	—	—	—	—	67-6051
Rear Hub Collar ... ..	—	—	—	—	67-6032
Rear Hub Cup ... ..	29-5701(2)	—	—	—	—
Rear Hub Cone ... ..	29-5700	—	—	—	—
Do. (adjusting) ... ..	29-5702	—	—	—	—
Rear Hub Ball ... ..	$\frac{5}{16}$ in diam. (20)	—	—	—	—
Rear Hub Bearing ... ..	—	24-7058(2)	24-7058(2)	26-6890(2)	65-5883(3)
Do. Thrust Washer ... ..	—	—	—	15-7045(2)	65-5884
Do. Locknut ... ..	—	—	—	26-6861	—
Rear Hub Ball Journal Housing ...	—	—	—	—	67-6037
Do. Shim ... ..	—	—	—	—	67-6033
Do. Retaining Spring Ring ...	—	—	—	—	67-6034
Ballrace Retaining Ring ... ..	—	—	—	—	65-5885
Rear Hub Spindle complete, with fixed nut	—	—	—	66-6101	—
Do. complete with collar ... ..	—	—	—	—	67-6047
Rear Hub Spindle ... ..	29-5791	65-6161	65-6161	—	—
Do. Nut ... ..	27-6732(2)	65-6136(2)	—	15-7092	67-6031
Do. Locknut ... ..	27-6716(2)	27-6716	27-6716	—	—
Do. Washer ... ..	—	65-6137(2)	65-6137(2)	—	—
Rear Hub Spindle Distance Collar ...	—	27-8039	27-8039	—	65-5890
Rear Hub Spindle Sleeve ... ..	—	—	—	15-7046	67-6027
Do. Thrust Washer ... ..	—	—	—	15-7047	—
Do. Nut (with peg) ... ..	—	—	—	15-7049	—

When ordering Wheels or Wheel parts particular note should be made as to size of tyre and rim.



# REAR HUB and WHEEL FITTINGS.

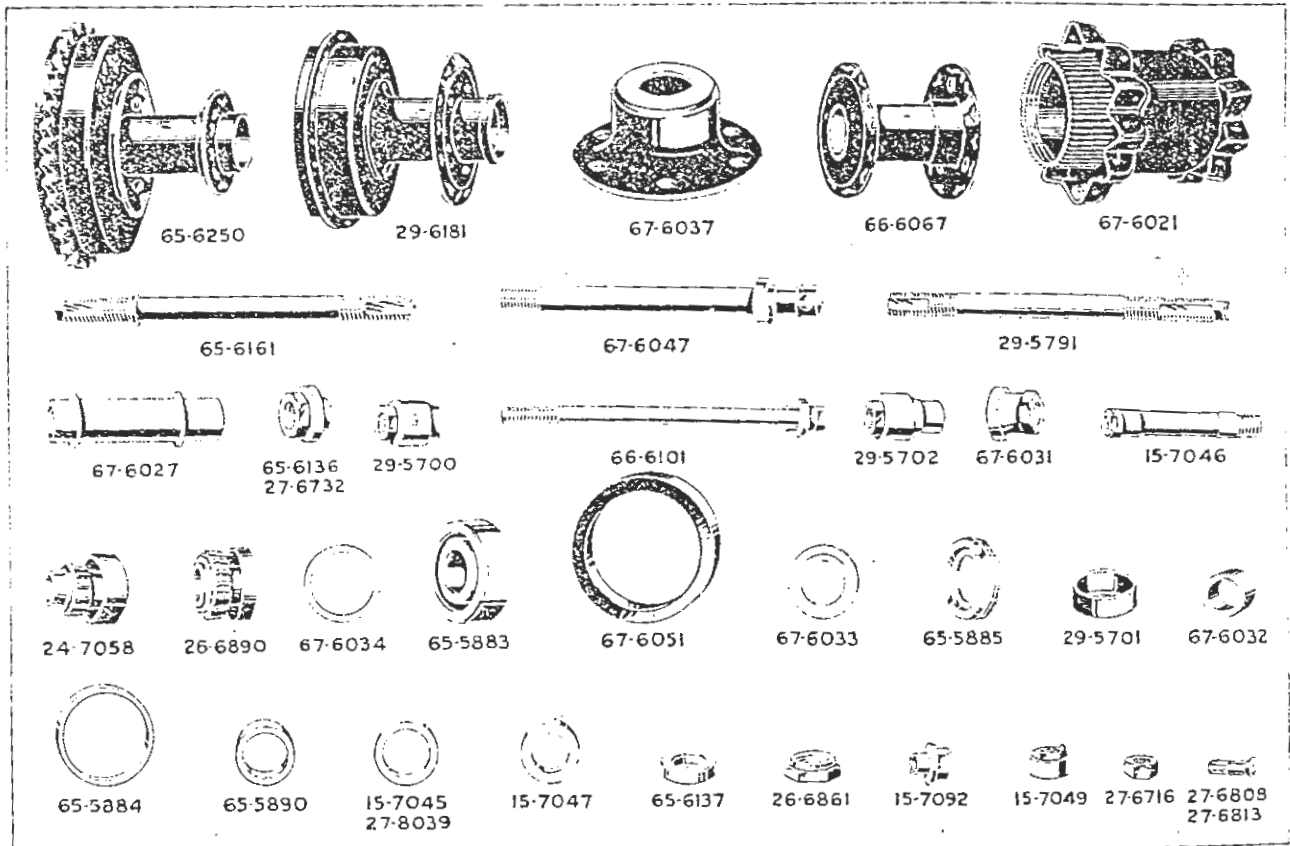



NOTE: Figures in brackets denote number per set, e.g., (2), 2 per set.

### Rear Hub and Wheel Fittings--continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11	B31	B32	B33	B34	M20	M21	M33	A7	
Rear Hub Spindle Sleeve Locking Washer	..						26-6855				
Rear Hub Washer (felt) ... ..	24-7047(2)		24-7047(2)		24-7047(2)		15-7048			65-5886	
Do. Retaining Ring ... ..	..		..		..		..			65-5887	
Rear Hub Retaining Cup ... ..	29-5710(2)		29-5710(2)		29-5710(2)		26-6865(2)			..	
Rear Hub Oil Retaining Washer ...	29-5905		..		..		..			..	
Rear Hub Felt Retaining Washer ...	29-5715(2)		29-5715(2)		29-5715(2)		..			..	
Rear Hub Dust Plate ... ..	..		..		..		15-7051			..	
Do. Screw ... ..	..		..		..		24-7065(4)			..	
Do. Washer ... ..	..		..		..		24-7068(4)			..	
Rear Hub End Cover complete ... ..	..		..		..		..			67-6044	
Rear Hub Spigot and Brake Drum Support	..		..		..		66-6104			..	
Do. Nut ... ..	..		..		..		66-6105			..	
Rear Hub Adjusting Sleeve ... ..	..		65-5670(2)		65-5670(2)		..			..	
Rear Hub Adjusting Plate ... ..	27-6738(2)		27-6738(2)		27-6738(2)		66-6096			..	
Rear Hub Distance Piece ... ..	65-5832		..		..		..			67-6028	
Rear Hub Grease Nipple (angle type) ...	15-5290		15-5290		15-5290		..			15-5290	
Do. (straight type) ... ..	..		..		..		28-2080			..	
Rear Hub Packing Washer ... ..	..		..		..		26-6689			..	
Rear Hub Driving Flange ... ..	..		..		..		..			67-6036	
Rear Hub Chainwheel ... ..	29-6186		..		..		..			..	
Hub Flange and Chainwheel Bolt ...	29-6187(6)		..		..		..			..	
Do. Lockstrip ... ..	29-6188(3)		..		..		..			..	
Do. Nut ... ..	EB129(6)		..		..		..			..	

When ordering Wheels or Wheel parts particular note should be made as to size of tyre and rim.



# REAR HUB and WHEEL FITTINGS.

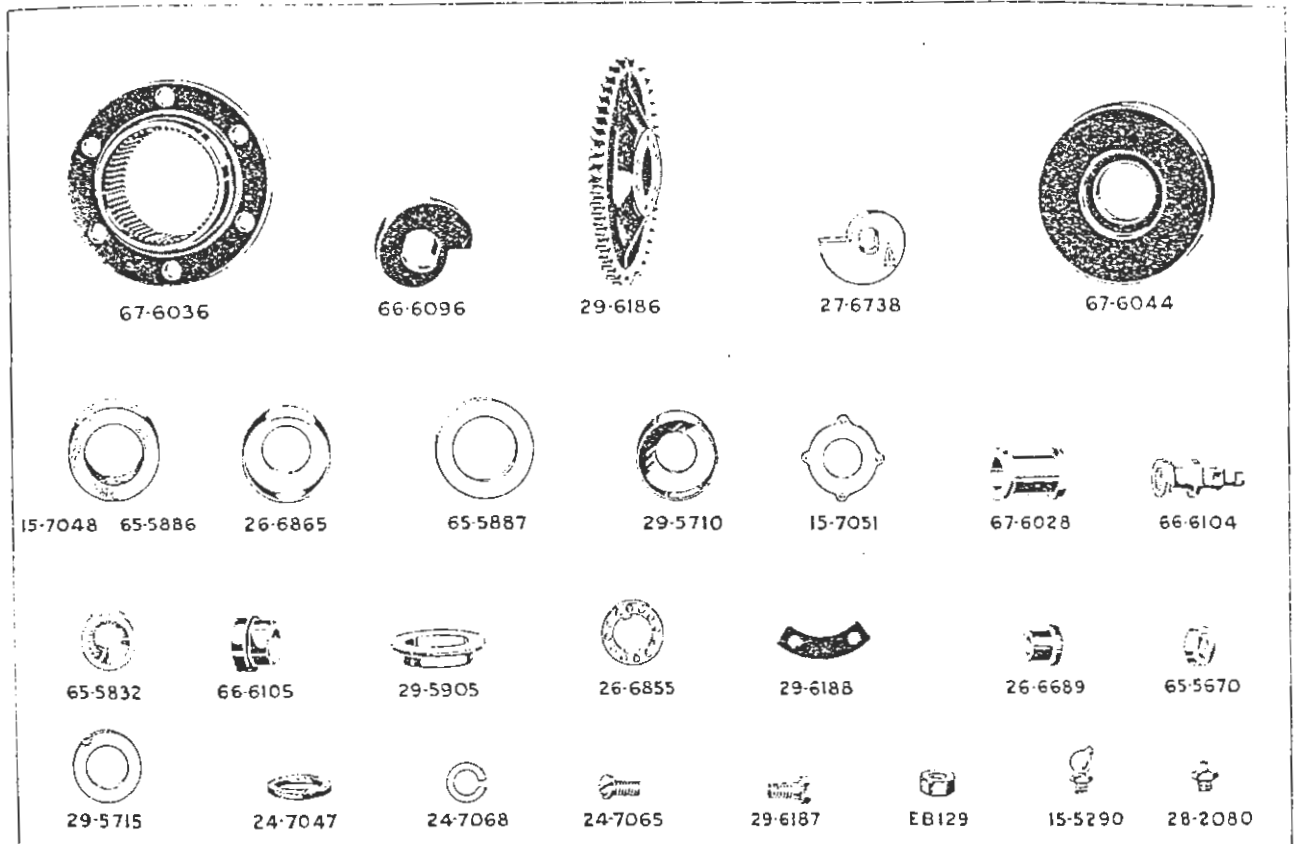



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Rear Hub and Wheel Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
Rear Brake Cover Plate with fixed fittings	29	5766	—	—	—	—	66-6123	—	—	67-6041	
Do. (B31, B33) ... ..	—	—	65-6276	—	65-6276	—	—	—	—	—	
Do. (B32, B34) ... ..	—	—	65-6276 3	—	65-6276 3	—	—	—	—	—	
Rear Brake Drum and Chainwheel with driving studs.	—	—	—	—	—	—	66-6107	—	—	—	
Rear Brake Drum and Chainwheel (46T solo).	—	—	—	—	—	—	—	—	—	67-6040	
Do. (49T sidecar). ... ..	—	—	—	—	—	—	—	—	—	67-6050	
Rear Brake Drum Bearing Sleeve ...	—	—	—	—	—	—	—	—	—	67-6030	
Rear Brake Fulcrum Pin ... ..	—	—	65-5899	—	65-5899	—	33-5544	—	—	65-5899	
Do. Washer (serrated) (B31, B33)...	—	—	24-8045	—	24-8045	—	—	—	—	—	
Do. Washer (B32, B34) ... ..	—	—	24-8045/1	—	24-8045/1	—	—	—	—	—	
Do. Washer ... ..	—	—	—	—	—	—	33-5545	—	—	24-8045	
Do. Nut (B31, B33) ... ..	—	—	24-5860	—	24-5860	—	—	—	—	—	
Do. Nut (B32, B34) ... ..	—	—	24-5860/1	—	24-5860/1	—	—	—	—	—	
Do. Nut ... ..	—	—	—	—	—	—	15-1455	—	—	24-5860	
Rear Brake Drum Securing Bolt ... ..	—	—	—	—	—	—	66-6070(3)	—	—	67-6038(6)	
Do. Nut ... ..	—	—	—	—	—	—	—	—	—	EB141(6)	
Do. Locking Strip ... ..	—	—	—	—	—	—	—	—	—	67-6039(3)	
Brake Drum Felt Washer ... ..	—	—	—	—	—	—	15-7059	—	—	—	
Rear Brake Shoe with lining (right-hand)	24	7767	65-5901	—	65-5901	—	35-9235	—	—	65-5901	
Do. (left-hand) ... ..	24	7768	65-5901	—	65-5901	—	35-9235	—	—	65-5901	
Brake Shoe Lining ... ..	24	7775(2)	65-5903(2)	—	65-5903(2)	—	35-6432(2)	—	—	65-5903(2)	
Do. Rivet ... ..	24	7990(14)	35-6436(14)	—	35-6436(14)	—	35-6436(14)	—	—	35-6436(14)	
Rear Brake Shoe Spring ... ..	24	7810(2)	65-5904(2)	—	65-5904(2)	—	35-6440(2)	—	—	65-5904(2)	

When ordering Wheels or Wheel parts particular note should be made as to size of tyre or rim.



# REAR HUB and WHEEL FITTINGS.

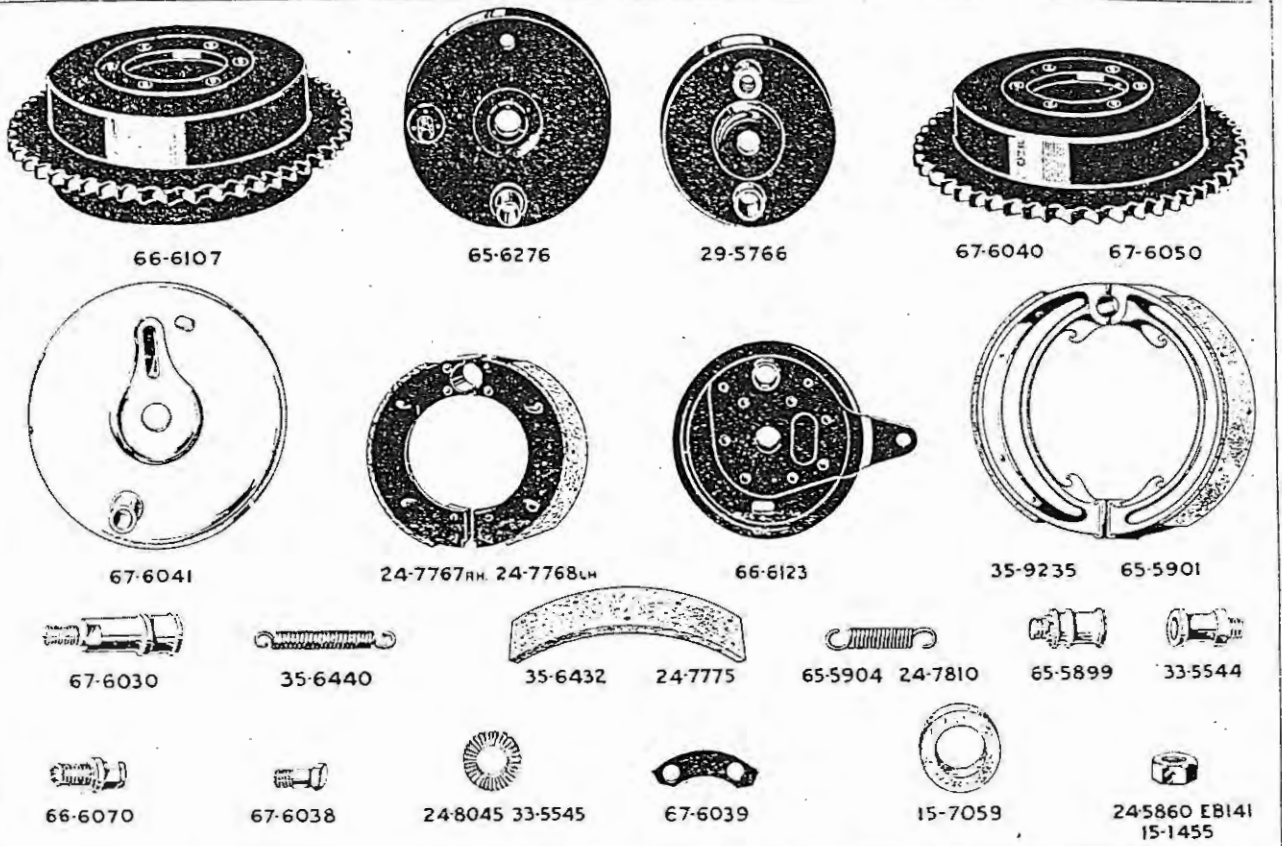



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Rear Hub and Wheel Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
Rear Brake Cam ... ..	65	5673	65	5905	65	5905	24	7127		65	5905
Do. Bearing Grease Nipple ... ..							15	5290			
Do. Oil Hole Clip ... ..	65	5674	65	5674	65	5674				65	5671
Rear Brake Operating Lever with stud ...	29	7360					15	7961			
Rear Brake Operating Lever ... ..			65	6279	65	6279				65	6279
Do. Bush ... ..							65	7037			
Rear Brake Screw Swivel Pin ... ..			65	6274	65	6274					
Do. Washer (shakeproof) ... ..	66	4707	66	4708	66	4708	66	4708		66	4708
Do. Washer (plain) ... ..	15	431					15	431		15	431
Rear Brake Operating Lever Washer			15	431	15	431					
(B31, B33).											
Do. (B32, B34) ... ..			15	431 1	15	431 1					
Do. Nut (B31, B33) ... ..			EB171		EB171						
Do. Nut (B32, B34) ... ..			EB171 1		EB171 1						
Do. Nut ... ..	EB171						EB171			EB171	
Rear Brake Anchor Bolt ... ..	29	6110					24	209			
Do. Nut ... ..							C2-97A				
Do. Washer ... ..	24	7911					EB76				
Do. Split Pin ... ..							66	6257			
Rear Brake Outrigger Strap ... ..										67	0046
<b>SPEEDOMETER DRIVE.</b>											
Speedometer Drive ... ..	29	5738									
Do. Washer ... ..	15	39									
Do. Nut ... ..	29	5792									

When ordering Wheels or Wheel parts particular note should be made as to size of tyre or rim.



# REAR HUB and WHEEL FITTINGS.



29-5738  $\frac{3}{4}$ " DIA HOLE



29-7360



67-6046



15-7961



65-6279



65-5905



65-5673



24-7127



29-5792



65-7037



65-6274



65-5674



24-209  $\frac{7}{16}$ " x  $\frac{1}{2}$ "



29-6110  $\frac{7}{16}$ " x  $\frac{1}{2}$ "



C2-97A



EB171



15-39 EB76  
15-431 24-7911



15-5290



66-6257



66-4707  
66-4708



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## FRONT MUDGUARD and FITTINGS.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
Front Mudguard with fixed fittings ...	29-6551	—	—	—	—	—	—	—	—	—	—
Do. (B31, B33) ...	—	—	65-6569	—	65-6569	—	—	—	—	—	—
Do. (B32, B34) ...	—	—	65-6591/3	—	65-6591/3	—	—	—	—	—	—
Do. ...	—	—	—	—	—	—	66-6530	—	—	67-6526	—
Front Mudguard Stay ...	—	—	—	—	—	—	—	—	—	67-6528	—
Front Mudguard Top Stay... ..	29-6553	—	—	—	—	—	66-6542	—	—	—	—
Do. (B31, B33) ...	—	—	65-6580	—	65-6580	—	—	—	—	—	—
Do. (B32, B34) ...	—	—	65-6593/3	—	65-6593/3	—	—	—	—	—	—
Front Mudguard Bottom Stay ...	29-6552	—	—	—	—	—	—	—	—	—	—
Do. (B32, B34) ...	—	—	65-6597/3	—	65-6597/3	—	—	—	—	—	—
Front Mudguard Stay Plate ...	—	—	—	—	—	—	15-7160(2)	—	—	—	—
Front Mudguard Stay Bolt ...	15-7161(4)	—	—	—	—	—	15-7161(2)	—	—	15-7161(2)	—
Do. (B31, B33) ...	—	—	15-7161(2)	—	15-7161(2)	—	—	—	—	—	—
Do. (B32, B34) ...	—	—	15-7161/3(4)	—	15-7161/3(4)	—	—	—	—	—	—
Front Mudguard Stay Bolt Nut ...	M263(4)	—	—	—	—	—	EB113(2)	—	—	M263(2)	—
Do. (B31, B33) ...	—	—	M263(2)	—	M263(2)	—	—	—	—	—	—
Do. (B32, B34) ...	—	—	M263(4)	—	M263(4)	—	—	—	—	—	—
Do. Washer (plain) ...	27-8560(4)	—	—	—	—	—	B751A(2)	—	—	27-8560(2)	—
Do. Washer (plain) (B31, B33) ...	—	—	B751A(4)	—	B751A(4)	—	—	—	—	—	—
Do. Washer (plain) (B32, B34) ...	—	—	27-8560/1(4)	—	27-8560/1(4)	—	—	—	—	—	—
Do. Washer (spring) ...	K197(4)	—	—	—	—	—	K197(2)	—	—	K197(2)	—
Do. Washer (spring) (B32, B34) ...	—	—	K197(4)	—	K197(4)	—	—	—	—	—	—
Mudguard Stay Fork End Bolt ...	1-5069(2)	—	—	—	—	—	B751(2)	—	—	—	—
Do. Nut ...	—	—	EAS0(2)	—	EAS0(2)	—	M263(2)	—	—	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRONT MUDGUARD and FITTINGS.

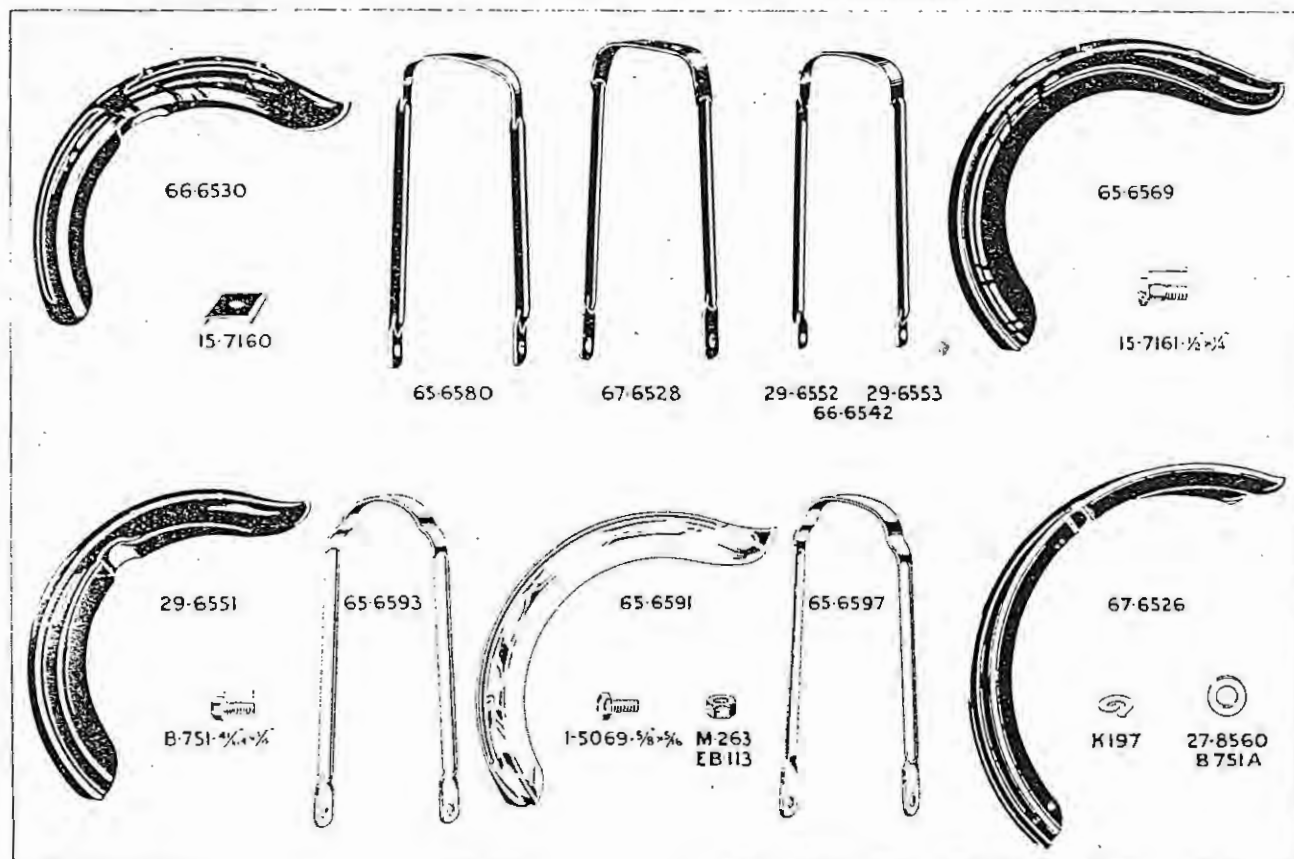



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Front Mudguard and Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11	B31	B32	B33	B34	M20	M21	M33	A7	
Mudguard Stay Fork End Bolt Washer (shakeproof) ... ..	36-382(2)		36-382(2)		36-382(2)		29-541(2)			—	
Do. Washer (spring) (B31, B33) ...			EB150(2)		EB150(2)					—	
Front Mudguard Stay Distance Piece (B32, B34) ...			65-6598(2)		65-6598(2)					—	
Front Mudguard Support Bolt ... ..	—		—		—		15-7354			—	
Do. Washer ... ..	—		—		—		27-7166			—	
Do. Washer (shakeproof) ... ..	—		—		—		36-382			—	
Front Mudguard Stay Bolt Washer (right-hand) (plain) ...	—		—		—		A176			—	
Front Mudguard Stay and Stand Fixing Stud Nut ...	—		—		—		—			EA80(2)	
Do. (B31, B33) ... ..	—		EA80(2)		EA80(2)		—			—	
Do. (B32, B34) ... ..	—		EA80, 1(2)		EA80, 1(2)		—			—	
Do. Washer (shakeproof) ... ..	—		36-382(2)		36-382(2)		—			36-382(2)	
Do. Washer (double spring) (B31, B33) ...	—		EB150(2)		EB150(2)		—			—	
Do. Washer (double spring) ... ..	—		—		—		—			EB150(2)	
Front Mudguard Support Bridge ... ..	29-6554		—		—		—			67-6532	
Do. (B31, B33) ... ..	—		65-6584		65-6584		—			—	
Do. (B32, B34) ... ..	—		65-6600		65-6600		—			—	
Do. Fixing Bolt ... ..	15-7161(2)		—		—		—			15-7161(2)	
Do. (B31, B33) ... ..	—		15-7161(2)		15-7161(2)		—			—	
Do. (B32, B34) ... ..	—		15-7161, 3(2)		15-7161, 3(2)		—			—	
Do. Nut ... ..	M263(2)		M263(2)		M263(2)		—			M263(2)	
Do. Nut ... ..	—		—		—		—			EA80(4)	

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# FRONT MUDGUARD and FITTINGS.

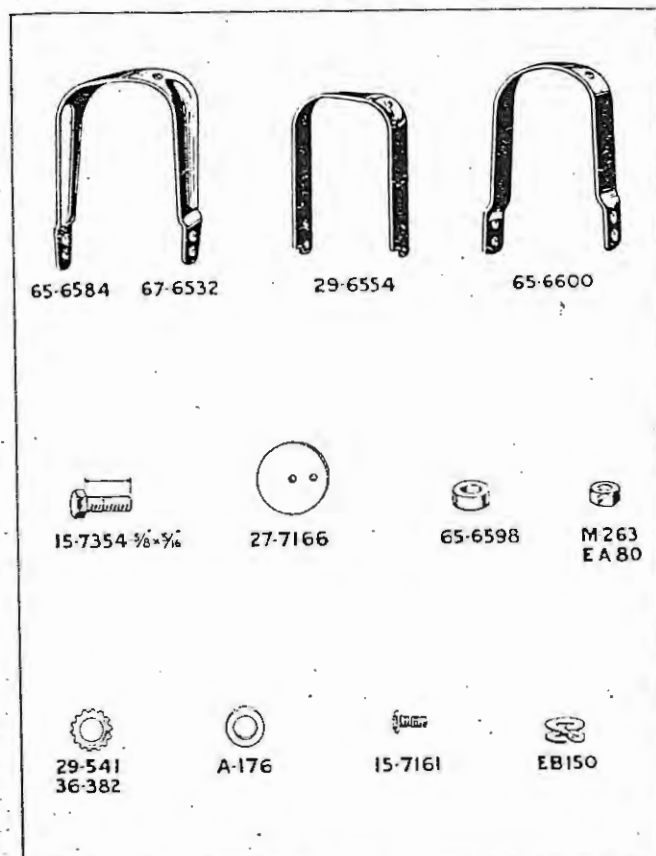

## WASHERS (PLAIN).

Component No.	Inside Diameter.	Component No.	Inside Diameter.
B751A	.255"	N144A	.752"
EA28	.385"	S173	.218"
EA129	.380"	15-439	.505"
EB35	.502"	15-431	.442"
EB58	.275"	15-5155	.328"
EB76	.380"	24-5914	.505"
EB76A	.380"	24-7911	.380"
EB222	.192"	25-7180	.281"
F21	.317"	26-9461	.203"
K234A	.255"	27-1111	.443"
K359A	.317"	27-5676	.380"
M101A	.442"	27-5880	.255"



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Front Mudguard and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.


DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
Front Mudguard Support Bridge Fixing Screw Washer (plain).	27-8560(2)	—	—	—	—	—	—	—	—	27-8560(2)	
Do. (B31, B33) ... ..	—	—	B751A(4)	—	B751A(4)	—	—	—	—	—	
Do. (B32, B34) ... ..	—	—	27-8560(1/2)	—	27-8560(1/2)	—	—	—	—	—	
Do. Washer (spring) ... ..	K197(2)	—	—	—	—	—	—	—	—	K197(2)	
Do. Washer (shakeproof) ... ..	—	—	—	—	—	—	—	—	—	36-382(4)	
Front Mudguard Bridge Fork Fixing Bolt	28-2338(4)	—	—	—	—	—	—	—	—	—	
Do. Nut ... ..	EAS0(4)	—	24-6040(4)	—	24-6040(4)	—	—	—	—	—	
Do. Washer (shakeproof) ... ..	36-382(4)	—	36-382(4)	—	36-382(4)	—	—	—	—	—	
Do. Washer (fibre) ... ..	—	—	66-7518(2)	—	66-7518(2)	—	—	—	—	—	
Do. Washer (plain) ... ..	—	—	M550A(4)	—	M550A(4)	—	—	—	—	—	
Front Number Plate ... ..	65-6576	—	65-6576	—	65-6576	—	66-6535	—	—	65-6576	
Front Number Plate Fixing Stud Nut ...	M263(2)	—	M263(2)	—	M263(2)	—	—	—	—	M263(2)	
Do. Washer (spring) ... ..	K197(2)	—	—	—	—	—	—	—	—	K197(2)	
Do. Washer (plain) ... ..	—	—	B751A(4)	—	B751A(4)	—	—	—	—	—	
Front Number Plate Securing Screw ...	—	—	—	—	—	—	24-7065(4)	—	—	—	
Do. Nut ... ..	—	—	—	—	—	—	25-7151(4)	—	—	—	

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

Every owner of a B.S.A. Motor Cycle is strongly advised to buy only genuine B.S.A. Spare Parts when replacements become necessary.



## FRONT MUDGUARD and FITTINGS.

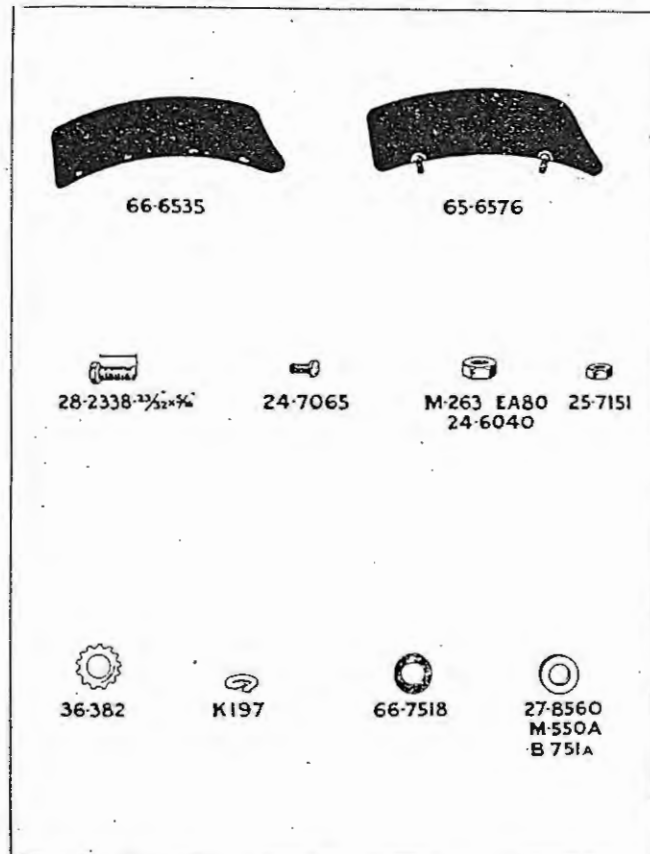

## GEAR RATIOS FOR 1948 MOTOR CYCLES.

Model	Standard Sprocket		Suitable Sprockets		Gear Ratios			
	Solo	Side Car	Compt. No.	No. of teeth	4th	3rd	2nd	1st
C10	16	—	15-1568	16	—	6.6	9.8	14.5
C11	16	—	15-1568	16	—	6.6	9.8	14.5
			15-1567	17	—	6.2	9.2	13.6
B31	17	—	15-1568	16	6.0	7.8	11.8	16.9
B33	19	—	15-1567	17	5.6	7.3	11.1	15.9
B34	17	—	15-1566	18	5.3	6.9	10.5	15.0
			15-1565	19	5.0	6.54	10.0	14.2
B32	16	—	65-2430	15	7.6	9.8	15.2	21.6
			15-1568	16	7.1	9.2	14.2	20.2
			15-1567	17	6.7	8.7	13.4	19.0
M20	19	17	15-1568	16	6.3	8.3	12.9	18.8
			15-1567	17	5.9	7.8	12.2	17.6
M21	21	17	15-1566	18	5.6	7.4	11.5	16.7
			15-1565	19	5.3	7.0	10.9	15.8
M33	21	18	15-1564	20	5.0	6.6	10.3	15.0
			15-1560	21	4.8	6.3	9.9	14.3



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## REAR MUDGUARD and FITTINGS.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.
Rear Mudguard, with fixed fittings ...	29-6865	—	—	—	—	—	66-6835	—	—	67-6752
Do. (B31, B33) ...	—	—	65-6835	—	—	—	—	—	—	—
Do. (B32, B34) ...	—	—	65-6848/3	—	65-6848/3	—	—	—	—	—
Rear Mudguard Tail, with bridge ...	29-6869	—	—	—	—	—	—	—	—	—
Do. with hinge ...	—	—	—	—	—	—	—	—	—	67-6753
Do. Bridge Bolt ...	K132A(2)	—	—	—	—	—	—	—	—	15-7161(2)
Do. Washer ...	27-8560(2)	—	—	—	—	—	—	—	—	27-8560(2)
Do. Washer (spring) ...	—	—	—	—	—	—	—	—	—	K197(2)
Do. Nut ...	—	—	—	—	—	—	—	—	—	M263(2)
Rear Mudguard Tail (B31, B33) ...	—	—	65-6836	—	65-6836	—	—	—	—	—
Rear Mudguard Tail ...	—	—	—	—	—	—	66-6941	—	—	—
Do. Bolt, complete (B31, B33) ...	—	—	66-6740(2)	—	66-6740(2)	—	—	—	—	—
Do. Bolt, complete ...	—	—	—	—	—	—	66-6740	—	—	—
Mudguard Backstay Bridge Bracket complete (B31, B33) ...	—	—	65-6770	—	65-6770	—	—	—	—	—
Do. Bracket only (B31, B33) ...	—	—	65-6771	—	65-6771	—	—	—	—	—
Do. do. ...	—	—	—	—	—	—	M80	—	—	—
Do. do. (B32, B34) ...	—	—	M80	—	M80	—	—	—	—	—
Do. Strip (B31, B33) ...	—	—	65-6772	—	65-6772	—	—	—	—	—
Do. Bolt (B31, B33) ...	—	—	K132A(2)	—	K132A(2)	—	—	—	—	—
Do. Bolt (B32, B34) ...	—	—	M284(2)	—	M284(2)	—	—	—	—	—
Do. Bolt ...	—	—	—	—	—	—	K132A(2)	—	—	—
Do. Washer (B32, B34) ...	—	—	27-8560(2)	—	27-8560(2)	—	—	—	—	—
Do. Washer (spring) ...	—	—	K197(2)	—	K197(2)	—	K197(2)	—	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# REAR MUDGUARD and FITTINGS.

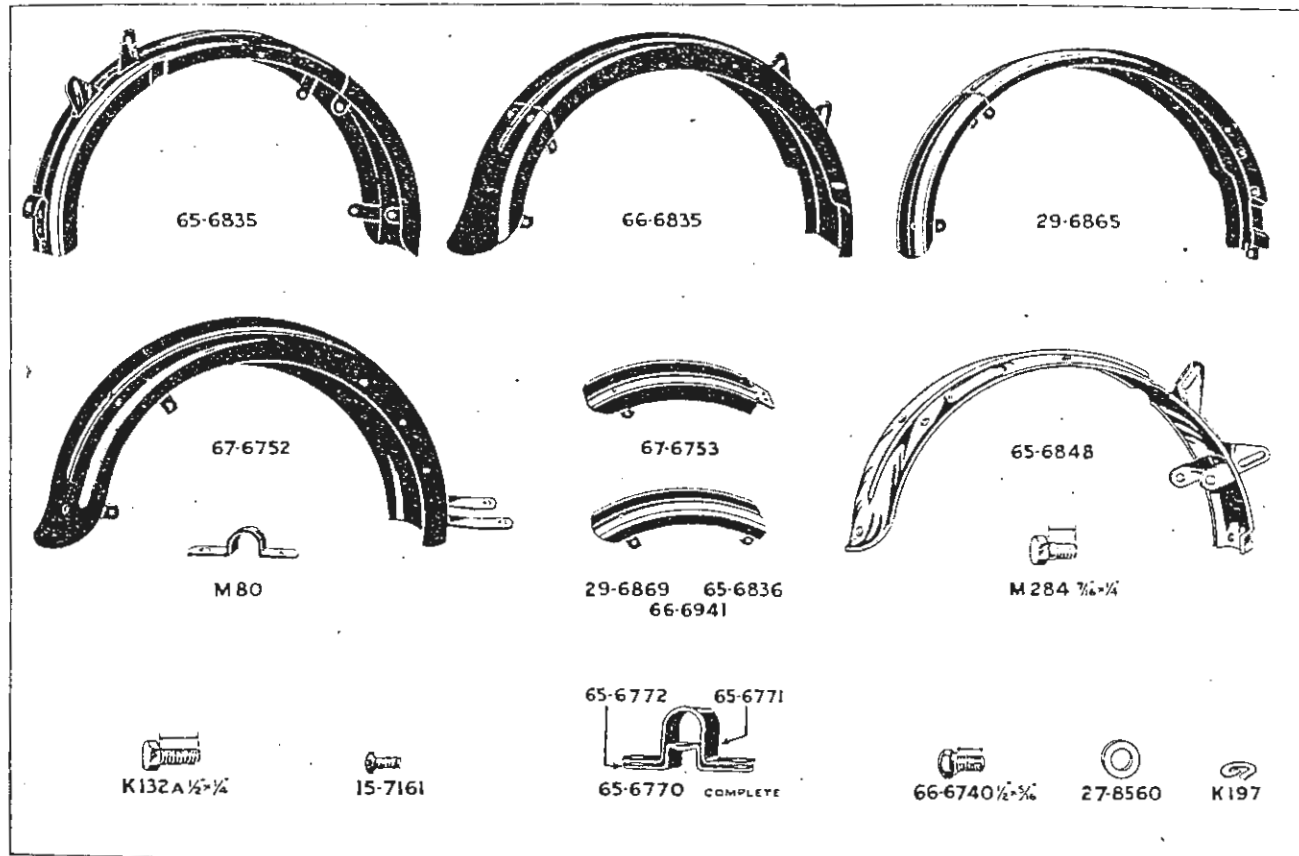



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Rear Mudguard and Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Mudguard Backstay Bridge Bracket Bolt Washer (fibre)	—	—	—	EB242(2)	—
Mudguard Backstay Bridge Bracket Nut	—	M263(2)	M263(2)	EB113(2)	—
Do. Washer (plain) ...	—	—	—	27-8560(2)	—
Rear Mudguard Chainstay Bridge Clip ...	—	—	—	24-7385	—
Rear Mudguard Chainstay Clip Bolt ...	—	—	—	K132A(2)	—
Do. Washer (plain) ...	—	—	—	27-8560(2)	—
Do. Washer (spring) ...	—	—	—	K197(2)	—
Do. Nut ...	—	—	—	EB113(2)	—
Rear Number Plate ...	29-6885	—	—	66-6875	29-6885
Do. (B31, B33) ...	—	29-6885	29-6885	—	—
Do. (B32, B34) ...	—	65-6854	65-6854	—	—
Rear Number Plate Bolt (top) ...	15-7161(2)	15-7161(2)	15-7161(2)	K132A(2)	15-7161(2)
Do. Nut (top) (B31, B33) ...	—	M263(2)	M263(2)	—	—
Rear Number Plate Bolt (bottom) ...	EB112	1-5945	1-5945	24-225	1-5945
Do. Nut ...	M263(3)	M263(3)	M263(3)	EB113(3)	M263(2)
Do. Washer (plain) ...	27-8560(2)	27-8560(2)	27-8560(2)	—	27-8560(2)
Do. Washer (plain) ...	—	B751A(4)	—	—	—
Do. Washer (spring) ...	K197(3)	K197	K197(3)	K197(3)	K197(3)
Rear Number Plate Buffer (rubber) ...	15-7383	15-7383	15-7383	15-7383	15-7383
Lifting Handle and Mudguard Stay ...	29-6881	—	—	66-6947	67-6755
Do. (B31, B33) ...	—	65-6839	65-6839	—	—
Do. (B32, B34) ...	—	65-6852/3	65-6852/3	—	—
Lifting Handle Top Bolt ...	EB112(2)	—	15-7161(2)	M413(2)	M447A(2)
Do. (B31 only) ...	—	B751(2)	—	—	—
Do. (B32 only) ...	—	15-7161(2)	—	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# REAR MUDGUARD and FITTINGS.

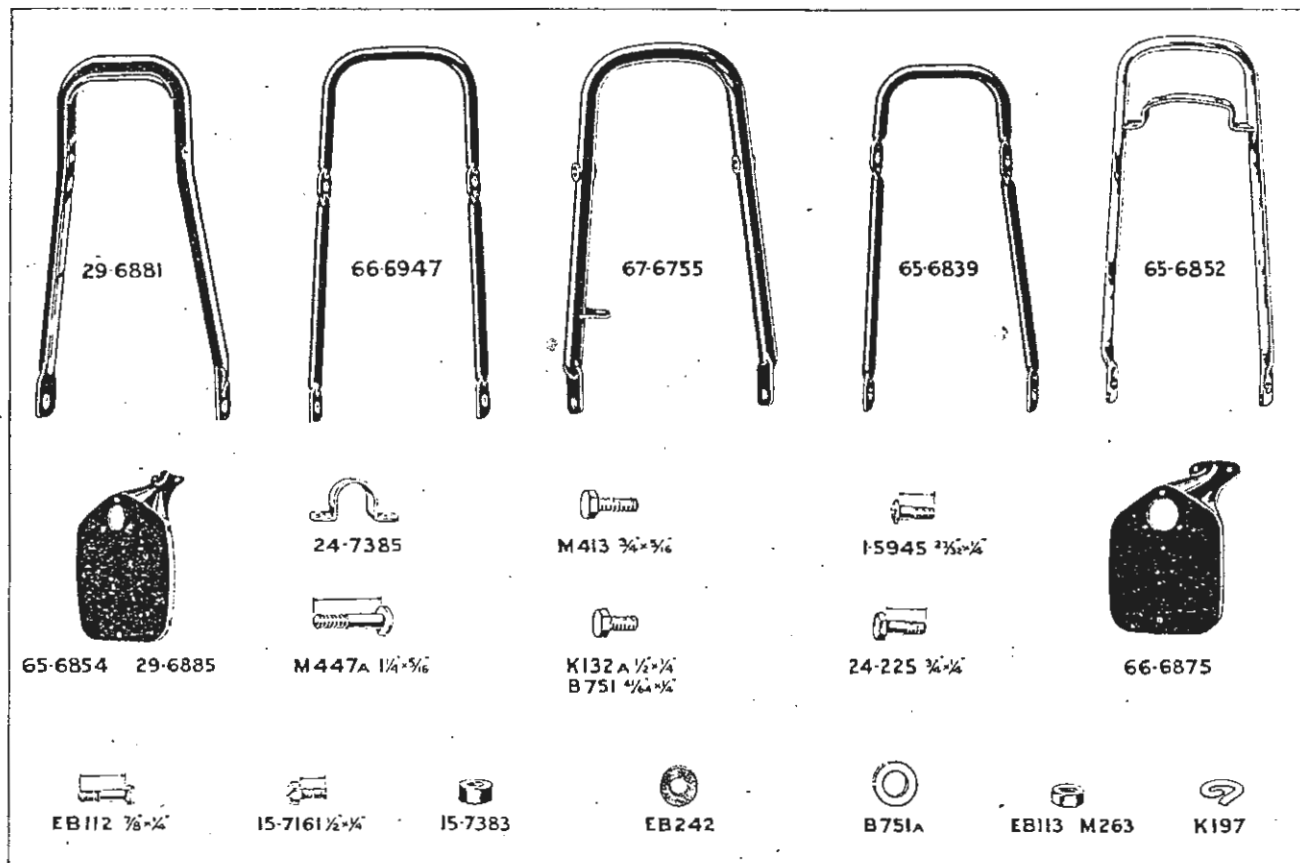



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Rear Mudguard and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Lifting Handle Top Bolt Nut ...	M263(2)	M263(2)	M263(2)	EA80(2)	EA80(2)
Do. Washer ...	K196(2)	B751A(2)	—	K359A(2)	—
Lifting Handle Top Bolt Washer (spring)	K197(2)	—	—	24-8784(2)	24-8784(2)
Do. (B32, B34) ...	—	K197(2)	K197(2)	—	—
Lifting Handle ...	—	—	—	—	67-6765
Do. Bolt ...	—	—	—	—	24-6770
Do. Nut ...	—	—	—	—	EA80
Do. Washer (plain) ...	—	—	—	—	M550A
Do. Washer (plain) (B32, B34) ...	—	27-8560(2)	27-8560(2)	—	—
Do. Washer (shakeproof) ...	—	—	—	—	36-382
Lifting Handle Bottom Stud (left-hand) .	—	—	—	24-5205	—
Do. Nut ...	—	—	—	EA80	—
Do. Washer ...	—	—	—	F21(2)	—
Rear Mudguard Lifting Stay Bolt (right-hand)	—	—	—	15-480	—
Do. Nut ...	—	—	—	EA80	—
Rear Mudguard Lifting Stay Packing Piece	—	—	—	15-7563(2)	—
Rear Mudguard Bottom Stay, complete...	—	—	—	66-6891(2)	67-6758(2)
Do. (left-hand) ...	29-6882	65-6842	65-6842	—	—
Do. (right-hand) ...	29-6871	65-6840	65-6840	—	—
Bottom Stay Bolt ...	K132A(2)	K132A(2)	K132A(2)	B751(2)	B751(2)
Do. Nut ...	15-447(2)	15-447(2)	15-447(2)	15-447(2)	15-447(2)
Front Stay (right-hand) ...	29-6875	} Used when pillion seat is fitted.			
Do. (left-hand) ...	29-6883				
Front Stay Bolt ...	15-7161(2)				
Do. Nut ...	M263(2)				
Do. Washer (spring) ...	K197(2)				

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# REAR MUDGUARD and FITTINGS.



29-6875 12"

29-6883 12"



29-6871 14"



65-6842 12 1/2"  
65-6840 12 1/2"

66-6891 11 1/2"  
67-6758 12 1/2"




29-6882 14"



K132A 1/2 x 1/4"



B751 1/4 x 1/4"

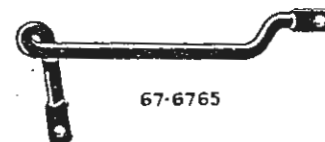

67-6765



24-5205 1 1/2 x 1/4"



15-480 1 1/2 x 1/4"



15-7161 1/2 x 1/4"



24-6770



15-447



M263 EA80



15-7563



K196



27-8560



K359A



K197 24-8784



36-382



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Rear Mudguard and Fittings—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M2C	M21	M33	A7.	
Rear Mudguard Upright Stay ...	—	—	—	—	—	—	66-6945(2)	—	—	—	—
Do. (B32, B34) ...	—	—	65-6851/3	—	65-6851/3	—	—	—	—	—	—
Do. (left-hand) (B31, B33) ...	—	—	65-6838	—	65-6838	—	—	—	—	—	—
Do. (right-hand) (B31, B33) ...	—	—	65-6837	—	65-6837	—	—	—	—	—	—
Do. Stay Bolt (B31, B33) ...	—	—	B751(2)	—	B751(2)	—	—	—	—	—	—
Do. Stay Bolt (B32, B34) ...	—	—	15-7161/3(2)	—	15-7161/3(2)	—	—	—	—	—	—
Rear Mudguard Stay Bolt ...	—	—	—	—	—	—	K132A(2)	—	—	—	—
Do. Washer ...	—	—	—	—	—	—	27-8560(2)	—	—	—	—
Do. Washer (B31, B33) ...	—	—	B751A(2)	—	B751A(2)	—	K234A(2)	—	—	—	—
Do. (B32, B34) ...	—	—	27-8560(2)	—	27-8560(2)	—	—	—	—	—	—
Do. Washer (spring) ...	—	—	—	—	—	—	K197(2)	—	—	K51A(2)	—
Do. Washer (spring) (B32, B34) ...	—	—	K197(2)	—	K197(2)	—	—	—	—	—	—
Rear Mudguard Upright Stay Nut	—	—	M263(2)	—	M263(2)	—	M263(2)	—	—	EB106(2)	—
Stay Fixing Stud Spring Washer (chainstay end).	—	—	M576B(2)	—	M576A(2)	—	—	—	—	—	—
Do. Nut (B31, B33) ...	—	—	EB106(2)	—	EB106(2)	—	—	—	—	—	—
Do. Nut (B32, B34) ...	—	—	EB106/1(2)	—	EB106/1(2)	—	—	—	—	—	—
Mudguard and Chainstay Bridge Fixing Bolt.	—	—	—	—	—	—	—	—	—	28-2338(2)	—
Do. Washer (spring) ...	—	—	—	—	—	—	—	—	—	24-8784(2)	—
Mudguard Fixing Bolt (offside) ...	—	—	—	—	—	—	—	—	—	67-6760	—
Do. (nearside) ...	—	—	—	—	—	—	—	—	—	65-4185	—
Do. Nut ...	—	—	—	—	—	—	—	—	—	EA82(2)	—
Do. Washer (spring) ...	—	—	—	—	—	—	—	—	—	K51A(2)	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



## REAR MUDGUARDS and FITTINGS.

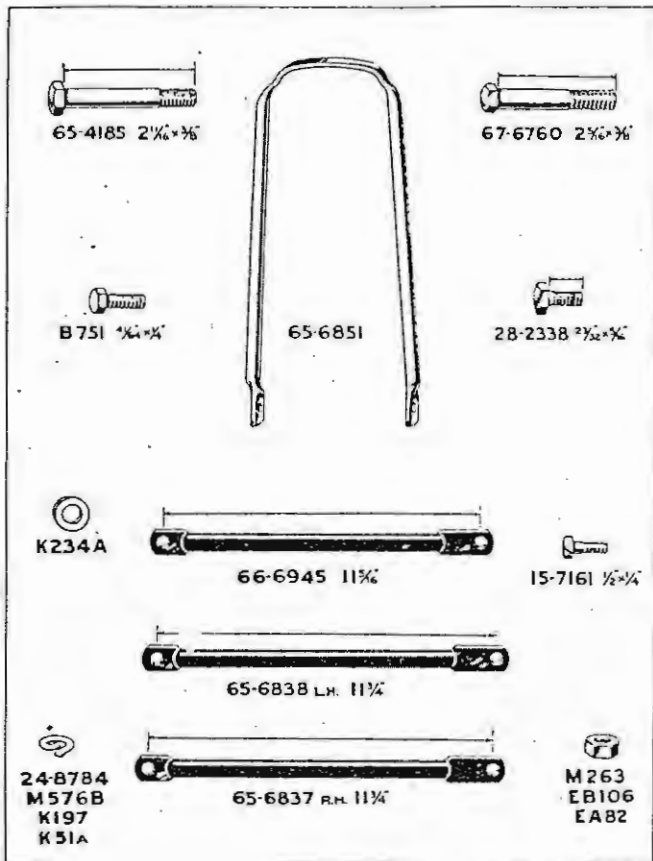

### STANDARD BOLTS ("A"—Shank Length)

3;16"	"A"	1/4"	"A"
EB379	12 1/2"	B751	4 1/2"
EB673	11 3/4"	EA62	3 1/8"
K56	10 1/2"	EA76	1 3/4"
M168A	10 1/4"	EB72	2 1/2"
24-7065	1 1/4"	EB112	3 1/2"
1-4606	1 1/2"	K132	2 1/2"
		K132A	4 1/2"
		K231A	11 1/2"
		M204	3 1/2"
		M253	1 3/4"
		M284	2 1/2"
		M588	2 1/2"
		15-7161	1 1/2"
		24-225	3 1/4"
5;16"	"A"	3/8"	"A"
EB68A	1 3/8"	EB75A	2 1/2"
EB70	3 1/4"	65-4185	2 11/16"
M413	4 1/4"		
M447A	1 1/4"		
1-5069	5 9/16"		
15-480	1 7/8"		
15-1355	1 1/2"		
15-7354	2 5/8"		
27-6311	3 3/4"		
28-2338	3 1/2"		




NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set. **REAR BRAKE CONTROL & FOOTRESTS** When no figures in brackets are shown, one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Bottom Bracket Chainstay Bridge Screw (B31, B33).	—	EB112	EB112	—	—
Do. (B32, B34) ... ..	—	24-S328	24-S328	—	—
Bottom Bracket Chainstay Bridge Washer (spring) (B31, B33).	—	K197	K197	—	—
Do. Nut (B31, B33) ... ..	—	M263(2)	M263(2)	—	—
Rear Mudguard Distance Collar (B32, B34)	—	65-6850	65-6850	—	—
Rear Mudguard Distance Collar ... ..	—	—	—	—	67-6761(2)
Do. Nut (B32, B34) ... ..	—	M263	M263	—	—
Do. Washer (spring) (B32, B34) ...	—	K197	K197	—	—
Do. Washer (plain) (B32, B34) ...	—	27-8560	27-8560	—	—
Voltage Control Support Bolt ... ..	M253(2)	M253(2)	M253(2)	M253(2)	M253(2)
Do. Washer (plain) ... ..	B751A(4)	—	—	B751A(4)	B751A(4)
Do. Washer (plain) (B31, B33) ...	—	B751A(6)	—	—	—
Do. Washer (plain) (B32, B34) ...	—	B751A(4)	B751A(4)	—	—
Do. do. (plain) (B32, B34) ...	—	27-8560(6)	27-8560(6)	—	—
Do. do. ... ..	27-8560(6)	—	—	27-8560(6)	27-8560(3)
Do. Washer (spring) ... ..	—	K197(2)	K197(2)	—	—
Do. Washer (rubber) ... ..	15-7383(2)	15-7383	15-7383	15-7383(2)	15-7383(2)
Do. (B32, B34) ... ..	—	15-7383(2)	15-7383(2)	—	—
Do. Nut ... ..	M263(4)	M263(4)	M263(4)	M263(4)	M263(4)
Do. Locknut ... ..	EB102(2)	EB102(2)	EB102(2)	EB102(2)	EB102(2)
Rear Brake Pedal ... ..	29-7363	65-7052	65-7052	66-7005	67-7002
Do. Bush ... ..	—	—	—	66-7034	—
Do. Grease Nipple (straight type) ...	—	—	—	28-2080	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



## REAR BRAKE CONTROL & FOOTRESTS.

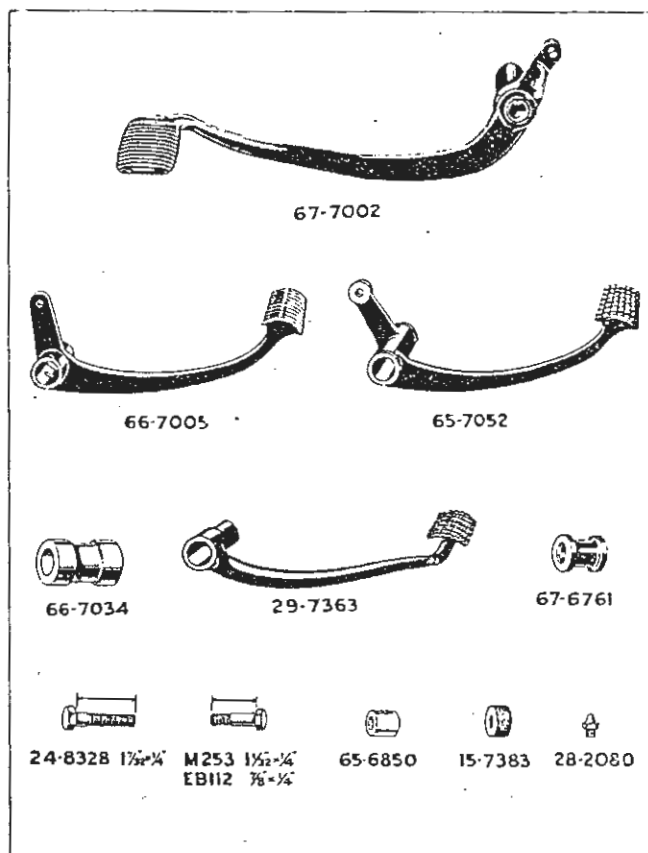

## ELECTRICAL EQUIPMENT

J. Lucas Ltd., Great King Street, Birmingham.

Descript'n.	Telescopic Fork. C10-C11.	B31-B32.	B33-B34.	M20-M21 M33.	A7.
Magdyno Unit	—	045105	045105	045105	—
Magneto	—	K.N.R.I. order only	K.N.R.I. order only	—	045081
Dynamo	200424	—	—	—	200424
Distributor	40079A	—	—	—	—
Coil	403022	—	—	—	—
Voltage Control	33018A	33018A	33018A	33018A	33018A
Headlamp	055468A	055465B	055465B	055531A	055464B
Tail Lamp	052307	052307	052307	526082	052307
Battery	4080050	4080050	4080050	4080050	4080050
Electric Horn	069239	069380	069380	069380	069239
Push	762007	762007	762007	762007	762007



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Rear Brake Control and Footrests—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Rear Brake Pedal Return Spring ...	29-7327	65-7054	65-7054	66-7032	67-7006
Do. Spring Bolt ...	—	27-6311	27-6311	EA76	—
Do. Washer (plain) ...	—	M550A	M550A	—	—
Do. Washer (shakeproof) ...	—	—	—	29-541	—
Do. Nut ...	—	—	—	K234B	—
Rear Brake Pedal Stop Plate ...	—	—	—	66-7033	—
Do. Washer ...	—	—	—	EB76A	—
Rear Brake Pedal Shaft ...	29-7388	66-7035	66-7035	66-7029	67-7005
Do. Nut ...	27-8059(2)	15-541	15-541	15-541	EA82
Do. Locknut ...	—	—	—	15-1455	—
Do. Washer ...	M101A(2)	30-660	30-660	30-660	—
Do. Washer (thin) ...	—	—	—	15-4100	—
Do. Washer (shakeproof) ...	—	66-4708	66-4708	66-4708	36-399
Rear Brake Operating Lever ...	29-7362	—	—	—	—
Rear Brake Anchor Strap ...	—	—	—	15-5816	—
Do. (B31, B33) ...	—	65-6275	65-6275	—	—
Do. (B32, B34) ...	—	65-6281	65-6281	—	—
Do. Bolt ...	—	EB75A	EB75A	—	—
Do. Nut (B31, B33) ...	—	EA82	EA82	—	—
Do. Nut ...	—	EA82/1	EA82/1	—	—
Do. Nut (slotted) ...	—	15-1166	15-1166	—	—
Do. Washer (spring) ...	—	M576B	M576B	—	—
Do. Washer (plain) ...	—	E28	E28	—	—
Do. Split Pin ...	—	35-706	35-706	—	—
Rear Brake Anchor Strap Bracket ...	—	65-7028	65-7028	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# REAR BRAKE CONTROL & FOOTRESTS.



65-6281



67-7005



15-5816



66-7035



65-6275



66-7029



29-7327



66-7032



29-7362



29-7388



67-7006



65-7054



66-7033



EB75A



15-1166



27-6311



EA76



27-8059



65-7028



15-541



15-1455



30-660 15-4100  
M101A M550A



M576B



35-706



29-541 36-399  
66-4708



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Rear Brake Control and Footrests—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Rear Brake Rod, with toggle end ...	29-7365/7	29-7365/3	29-7365/3	65-7007/7	67-7003/3
Do. (C11 de luxe) ...	29-7365/3	—	—	—	—
Toggle End Screw ...	EB72	EB72	EB72	27-4517	27-4517
Do. Nut ...	EB102	EB102	EB102	EB102	EB102
Do. Washer (spring) ...	—	—	—	K197	—
Rear Brake Adjusting Nut ...	29-7368	29-7368	29-7368	—	29-7368
Rear Brake Rod Toggle Bush ...	29-7328	—	—	—	—
Rear Brake Rod Spring ...	24-595	24-595	24-595	15-7980	15-686
Rear Brake Rod Nut ...	M263	M263	M263	M263	M263
Do. Flynut ...	—	—	—	15-7985	—
Rear Brake Lever Swivel Block ...	—	—	—	—	65-6274
<b>FOOTRESTS.</b>					
Footrest Rod ...	—	66-4900	66-4900	66-4900	—
Do. (right-hand) ...	29-7529	—	—	—	—
Do. (left-hand) ...	29-7544	—	—	—	—
Footrest Rod Washer (spring) ...	N572(4)	—	—	—	—
Do. Washer (plain) ...	—	24-5914(2)	24-5914(2)	24-5914(2)	—
Do. Washer (shakeproof) ...	—	65-695(2)	—	65-695(2)	—
Footrest Rod Nut ...	27-8059(4)	15-5753(2)	15-5753(2)	15-5753(2)	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# REAR BRAKE CONTROL & FOOTRESTS.



66-4900 13 7/8"



29-7529

29-7544



65-7007 19 1/2"

29-7365 18 1/2"

 
67-7003 21 1/2"



29-7328



65-6274



24-595 15-7980  
15-686



15-7985



29-7368



27-4517  
EB 72



15-5753



27-8059



M263 EBI02



24-5914



N572 K197



65-695



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## FOOTRESTS & PILLION FOOTRESTS


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Footrest Distance Tube ... ..	—	65-4811(2)	65-4811(2)	65-4811(2)	—
Do. (right-hand) ... ..	29-7530	—	—	—	—
Do. (left-hand) Engine Plate ...	29-7504	—	—	—	—
Do. (left-hand) (front chaincase) ...	29-7531	—	—	—	—
Do. (left-hand) (chaincase and engine plate). ... ..	29-7545	—	—	—	—
Do. (left-hand) ... ..	29-7532	—	—	—	—
Front Chaincase Sealing Washer ...	30-729	—	—	—	—
Do. ... ..	15-4100	—	—	—	—
Chaincase Distance Sleeve ... ..	66-4903	66-4903(2)	66-4903(2)	66-4903(2)	—
Footrest Washer (cork) ... ..	66-4902(2)	66-4902(2)	66-4902(2)	66-4902(2)	—
Footrest Brake Rod Pedal Stop Plate ...	29-7534	—	—	—	—
Footrest Bracket ... ..	—	—	—	—	67-4851(2)
Do. (offside) ... ..	29-7549	65-4890	65-4890	65-4890	—
Do. (nearside) ... ..	29-7550	65-4891	65-4891	65-4890	—
Footrest Bracket Nut complete ... ..	—	—	—	—	67-4851(2)
Footrest Bracket Rubber ... ..	29-7551(2)	29-7551(2)	29-7551(2)	29-7551(2)	29-7551(2)
<b>PILLION FOOTRESTS.</b>					
Pillion Footrest Assembly (offside) ...	29-7558	65-4887	65-4887	66-4934	—
Do. (nearside) ... ..	29-7559	65-4888	65-4888	66-4935	—
Pillion Footrest assembled ... ..	—	—	—	—	67-4870(2)

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.




# FOOTRESTS & PILLION FOOTRESTS.

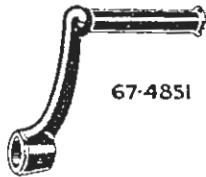

67-4851



29-7550  
29-7549

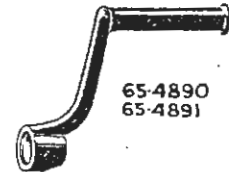

65-4890  
65-4891



29-7558 OFF SIDE. 65-4887 OFF SIDE.  
29-7559 NEAR SIDE. 65-4888 NEAR SIDE.  
67-4870



29-7551



66-4934 OFF SIDE. 66-4935 NEAR SIDE.



65-4811



29-7545



29-7504 2" 29-7531 1 1/2"  
29-7530 4 1/16" 29-7532 3 1/4"



66-4903



29-7534



67-4852



15-4100



66-4902



30-729



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## PILLION FOOTRESTS.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.
Pillion Footrest, with stiffening piece ...	29-7561(2)		29-7561(2)		—		—			29-7561(2)
Pillion Footrest Swivel Bolt ...	29-7564(2)		29-7564(2)		29-7564(2)		—			29-7564(2)
Do. Nut ...	24-6040(2)		24-6040(2)		24-6040(2)		—			24-6040(2)
Do. Washer (shakeproof) ...	36-382(2)		36-382(2)		36-382(2)		—			36-382(2)
Pillion Footrest Anchor Bolt (offside) ...	29-7560		65-4894		65-4894		—			67-4871
Do. (nearside) ...	65-4895		65-4895		65-4895		—			67-4871
Pillion Footrest Anchor Bolt Distance Piece	29-7565		—		—		—			—
Do. Washer (plain) ...	EA129		—		—		—			—
Do. Washer (spring) ...	K51A(2)		K51A(2)		K51A(2)		—			K51A(2)
Do. Nut ...	EAS2(2)		EAS2(2)		EAS2(2)		—			EAS2(2)
Pillion Footrest Spindle (left-hand) ...	—		—		—		66-4936			—
Do. (right-hand) ...	—		—		—		66-4938			—
Footrest Spindle Bolt ...	—		—		—		27-6312(2)			—
Do. Nut ...	—		—		—		EAS0(2)			—
Pillion Footrest Spindle Rubber ...	—		—		—		15-S155(2)			—

## EQUIPMENT.

## AIR CLEANERS FOR 1948 MOTOR CYCLES.

Model.	Cleaner.	Adaptor.	Elbow.	Screw.	Washer.
C10 ...	29-9290	29-9291	—	—	—
C11 ...	29-9290	29-9291	—	—	—
B31 ...	65-9196	65-1212	65-9198	M253	29-541
B32 ...	65-9196	65-1212	65-9198	M253	29-541
B33 ...	65-9196	65-1237	65-9198	M253	29-541
B34 ...	65-9196	65-1237	65-9198	M253	29-541
M20 ...	65-9195	65-1210	—	—	—
M21 ...	65-9195	65-1210	—	—	—
M33 ...	65-9196	65-1237	65-9198	M253	29-541



# PILLION FOOTRESTS.



66-4936 6 3/4"



15-8155



66-4938 8 3/4"



29-7560 2 1/2" 67-4871



65-4894 3 3/8"



65-4895 2 3/32"



29-7561



27-6312 3 1/2" x 3/4"



29-7564 3 1/2" x 3/4"



EA80 EA82  
24-6040



EA12S



29-7565



K51A



36-382



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set. **CHAINCASE, CHAINGUARD & FITTINGS** When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Chaincase (front), with fixed fittings ...	29-8085	65-7584	65-7584	65-7584	—
Chaincase Inspection Cap ...	27-209	27-209	27-209	27-209	—
Do. Washer ...	27-207	27-207	27-207	27-207	—
Chaincase Securing Bolt ...	65-7550(3)	65-7550(3)	65-7550(3)	65-7550(3)	—
Do. Washer (spring) ...	24-8784(3)	24-8784(3)	24-8784(3)	24-8784(3)	—
Chaincase Rear with fixed fittings and sliding plate.	29-8087	65-7578	65-7578	66-7601	—
Chaincase Sliding Plate complete...	—	66-7520	66-7520	66-7520	—
Chaincase Sliding Plate Bolt ...	—	66-7523(2)	66-7523(2)	66-7523(2)	—
Do. Nut ...	—	EB102(2)	EB102(2)	EB102(2)	—
Do. Washer (plain) ...	—	B751A(2)	B751A(2)	B751A(2)	—
Do. Washer (fibre) ...	—	66-7518(2)	66-7518(2)	66-7518(2)	—
Front and Rear Chaincase Fixing Screw .	1-4606(16)	1-4606(16)	1-4606(16)	1-4606(16)	—
Do. Washer (spring) ...	24-7069(16)	—	—	—	—
Do. Washer (shakeproof) ...	—	29-3319(16)	29-3319(16)	29-3319(16)	—
Front Chaincase Joint Washer (cork) ...	66-7514	66-7514	66-7514	66-7514	—
Rear Chaincase Washer (felt) ...	—	15-8814	15-8814	15-8814	—
Crankcase and Chaincase Joint Washer ...	66-7575	66-7575	66-7575	66-7575	—
Chaincase Oil Level Plug ...	66-7517	66-7517	66-7517	66-7517	—
Do. Washer (fibre) ...	EB242	EB242	EB242	EB242	—
Chaincase Oil Drain Plug ....	15-645	15-645	15-645	15-645	—
Do. Washer (fibre) ...	66-7518	66-7518	66-7518	66-7518	—
Chaincase Stiffening Washer ...	29-8060	29-8060	29-8060	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# CHAINCASE, CHAINGUARD AND FITTINGS.



29-8085



29-8087



65-7578


66-7601




65-7584



66-7514

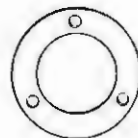

66-7575

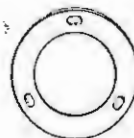

29-8060



15-8814



66-7520



27-209



66-7517  $\frac{3}{8} \times \frac{3}{8}$



66-7523  $\frac{3}{8} \times \frac{3}{8}$



1-4606  $\frac{1}{2} \times \frac{3}{4}$



65-7550  $\frac{3}{8} \times \frac{3}{8}$



15-645  $\frac{1}{4} \times \frac{1}{4}$



27-207



EB102



EB242



B751A



66-7518



24-7068 24-8784



29-3319



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Chaincase, Chainguard and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
<b>CHAINGUARD.</b>					
Chainguard with fixed fittings (top) ...	29-8325	—	—	66-7806	67-7725
Do. (B31, B33) ...	—	65-7715	65-7715	—	—
Do. (B32, B34) ...	—	65-7718/3	65-7718/3	—	—
Chainguard Strap Bolt ...	EB70	—	—	28-2338	—
Do. (B32, B34) ...	—	24-7065	24-7065	—	—
Do. Nut ...	EA80	M263	M263	EB113	—
Do. Washer (shakeproof) ...	36-382	—	—	29-541	—
Do. (B32, B34) ...	—	29-3319	29-3319	—	—
Do. Washer (plain) ...	—	K234A	K234A	—	—
Top Chainguard and Crankcase Fixing Bolt (front).	—	—	—	—	21-2880
Do. Washer (spring) ...	—	—	—	—	24-8784
Top Chainguard Fixing Bolt (rear)	—	—	—	—	K132A
Do. Washer (plain) ...	—	—	—	—	F21
Do. Washer (spring) ...	—	—	—	—	K197
Bottom Chainguard ...	—	—	—	15-8833	67-7765
Bottom Chainguard Screw ...	—	—	—	1-4606(3)	—
Do. Washer (shakeproof) ...	—	—	—	29-3319(3)	—
Do. Washer (plain) ...	—	—	—	26-9461(3)	—
Do. Locknut ...	—	—	—	25-7151(3)	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# CHAINCASE, CHAINGUARD AND FITTINGS.



65-7715




29-8325



66-7806



67-7725

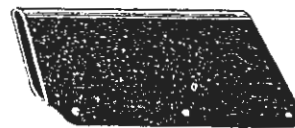

15-8833



65-7718



EB 70  $\frac{3}{4} \times \frac{1}{2}$   
28-2338  $\frac{3}{4} \times \frac{1}{2}$



K132A  $\frac{3}{8} \times \frac{1}{4}$



67-7765



21-2880  $\frac{1}{2} \times \frac{1}{2}$



1-4606  $\frac{1}{2} \times \frac{3}{4}$   
24-7065  $\frac{1}{4} \times \frac{3}{4}$



EB113 EA80  
M263 25-7151



26-9461 K234A  
F 21



24-8784 K197



29-541 36-382  
29-3319



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## TANK AND FITTINGS.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Petrol Tank (special order only) (B32-34)	—	65-S354	65-S354	—	—
Petrol Tank ... ..	29-7920/13	—	—	—	—
Do. (C11 de luxe) ... ..	29-7920/14	—	—	—	—
Do. (B31-B33) ... ..	—	65-S161/13	65-S161/13	—	—
Do. (B32-B34) ... ..	—	65-S161/15	65-S161/12	—	—
Do. (M20-M21) ... ..	—	—	—	66-S285/16	—
Do. (M33) ... ..	—	—	—	66-S285/13	—
Do. ... ..	—	—	—	—	67-S015/17
Petrol Pipe complete with nuts ... ..	—	65-S150	65-S150	66-S292	67-S025
Do. (C10 only) ... ..	29-7932	—	—	—	—
Do. (C11 only) ... ..	29-7886	—	—	—	—
Do. (M33 only) ... ..	—	—	—	66-S290	—
Filler Cap (quick release type) ... ..	29-7898	29-7898	29-7898	29-7898	29-7898
Knee Grip Rubber (right-hand) ... ..	65-S314	65-S314	65-S314	65-S314	65-S314
Do. (left-hand) ... ..	65-S315	65-S315	65-S315	65-S315	65-S315
Knee Grip Plate (right-hand) ... ..	29-7869	29-7869	29-7869	29-7869	29-7869
Do. (left-hand) ... ..	29-7868	29-7868	29-7868	29-7868	29-7868
Do. Screw ... ..	EA76(4)	EA76(4)	EA76(4)	EA76(4)	EA76(4)
Tank Connecting Pipe, complete ... ..	—	—	—	33-S255	—
Tank Support Bolt (rear) ... ..	65-S034(2)	65-S034(2)	65-S034(2)	66-S089(2)	65-4185
Do. (B33 only) ... ..	—	—	66-S089(2)	—	—
Do. Washer (plain) ... ..	30-660(2)	30-660(2)	30-660(2)	30-659(2)	—
Do. Washer (shakeproof) ... ..	—	—	—	—	66-4707
Do. Nut ... ..	—	—	—	—	EA82

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# TANK AND FITTINGS.

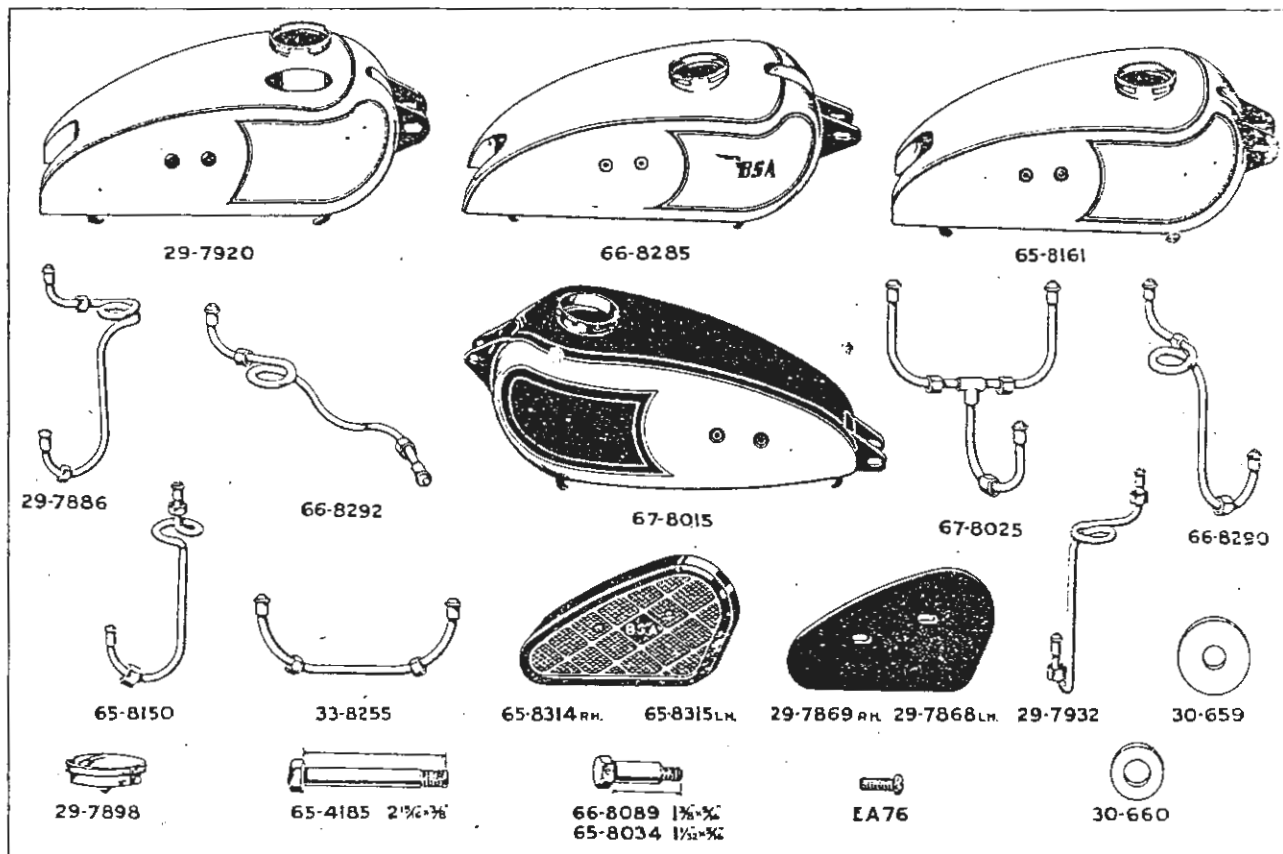



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Tank and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
Tank Support Bolt Rubber (top)...	65-8032(2)		65-8032(2)		65-8032(2)		66-8091(2)			—	
Do. (B33 only) (rear) ...	—		—		36-4140(2)		—			—	
Do. (bottom) ...	65-8033(2)		66-8091(2)		66-8091(2)		36-4140(2)			—	
Tank Support Bolt (front) ...	65-8326		65-8326		65-8326		28-2338(2)			65-8326	
Do. Nut ...	EAS2		EB106		EB106		—			EAS2	
Do. Washer (shakeproof) ...	66-4707		66-4707		66-4707		36-382(2)			66-4707	
Petrol Tank Support Bolt Sleeve ...	—		—		—		27-8447(2)			—	
Tank Support Rubber (front) ...	—		—		—		27-8448(2)			—	
Tank Buffer Cup (rubber) ...	—		—		—		27-8449(2)			—	
Petrol Tank Coil Stud Washer (spring) ...	24-978(2)		—		—		—			—	
Do. Nut ...	1-6032(2)		—		—		—			—	
Petrol Tank Badge (left-hand and right-hand).	29-7910(2)		29-7910(2)		29-7910(2)		29-7910(2)			67-8017(2)	
Do. Screw ...	65-8317(4)		65-8317(4)		65-8317(4)		65-8317(4)			65-8317(4)	
Petrol Tap ...	27-8552		27-8553		27-8553		27-8553			27-8552(2)	
Do. Washer (fibre) ...	EB242(2)		EB242		EB242		EB242			EB242(2)	
Petrol Filter ...	27-8436		27-8443		27-8443		27-8443			27-8436(2)	
Do. Washer (fibre) ...	24-8504		24-8504		24-8504		24-8504			24-8504(2)	
<b>OIL TANK AND FITTINGS.</b>											
Oil Tank, with fixed fittings ...	29-7981		65-8479		65-8479		65-8442			67-8320	
Oil Tank Filler Cap ...	65-8485		65-8485		65-8485		66-8351			67-8330	
Do. Washer ...	65-3365		65-3365		65-3365		—			65-3365	

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# TANK AND FITTINGS.



65-8442



66-8351



65-8032



65-8485 67-8330



65-8479



36-4140  
65-8033  
66-8091



27-8449



29-7910 67-8017



67-8320



27-8443 27-8436



65-8326 3x3/8"



29-7981



65-3365



27-8553



27-8552



27-8448



28-2338 3/4x3/8"



65-8317 3/4x3/8"



1-6032



27-8447



24-8504 EB242



24-978



36-382 66-4707



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Tank and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
Oil Tank Filler Cap Split Pin ... ..	—	—	—	—	—	—	35-707	—	—	—	—
Oil Tank Fixing and Seat Tube Greaser	—	—	—	—	—	—	—	—	—	67-8314	—
Do. Washer (spring) ... ..	—	—	—	—	—	—	—	—	—	24-8784(4)	—
Oil Tank Drain Plug ... ..	EA95	EA95	EA95	EA95	EA95	EA95	EA95	EA95	EA95	EA95	—
Do. Washer ... ..	EA132	EA132	EA132	EA132	EA132	EA132	EA132	EA132	EA132	EA132	—
Oil Tank Filter, complete ... ..	29-7962	29-7962	29-7962	29-7962	29-7962	—	—	—	—	29-7962	—
Filter Top Cap, with spring ... ..	—	—	—	—	—	—	66-8358	—	—	—	—
Filter Element, with bottom cap ... ..	—	—	—	—	—	—	66-8359	—	—	—	—
Oil Tank and Air Cleaner Fixing Screw...	—	—	—	—	—	—	—	—	—	67-8313(3)	—
Oil Tank Bolt ... ..	—	—	—	—	—	—	15-480(3)	—	—	—	—
Do. Distance Collar ... ..	—	—	—	—	—	—	66-8347(3)	—	—	—	—
Do. Washer (spring) ... ..	—	—	—	—	—	—	24-8784(3)	—	—	—	—
Oil Feed Pipe, complete ... ..	—	65-8469	65-8469	65-8469	65-8469	—	—	—	—	67-8309	—
Oil Feed and Return Pipe Assembly ... ..	—	—	—	—	—	—	66-8406(2)	—	—	—	—
Oil Supply Pipe Assembly (M33 only) ... ..	—	—	—	—	—	—	66-8406	—	—	—	—
Oil Supply Pipe, complete (M33 only) ... ..	—	—	—	—	—	—	66-8402	—	—	—	—
Oil Feed Pipe Union Washer (fibre) ... ..	29-7971(2)	29-7971(2)	29-7971(2)	29-7971(2)	29-7971(2)	—	—	—	—	29-7971(2)	—
Oil Feed Pipe, with union ... ..	29-7974	65-8461	65-8461	65-8461	65-8461	—	—	—	—	—	—
Oil Feed and Scavenge Pipe, with nipple	—	65-8465(2)	65-8465(2)	65-8465(2)	65-8465(2)	—	66-8402(2)	—	—	—	—
Oil Scavenge Pipe Assembly, complete ... ..	—	65-8475	65-8475	65-8475	65-8475	—	—	—	—	—	—
Oil Pipe Connection (rubber) ... ..	65-2060(2)	65-2060(2)	65-2060(2)	65-2060(2)	65-2060(2)	—	65-2060(2)	—	—	66-2060(2)	—
Oil Pipe Nipple ... ..	—	—	—	—	—	—	65-8419(2)	—	—	—	—
Do. (M33 only) ... ..	—	—	—	—	—	—	65-8419	—	—	—	—
Oil Pipe Nipple Nut ... ..	66-8332(2)	66-8332(2)	66-8332(2)	66-8332(2)	66-8332(2)	—	66-8332(4)	—	—	—	—
Do. (M33 only) ... ..	—	—	—	—	—	—	66-8332(3)	—	—	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# TANK AND FITTINGS.



65-8469




66-8358



66-8406



67-8309

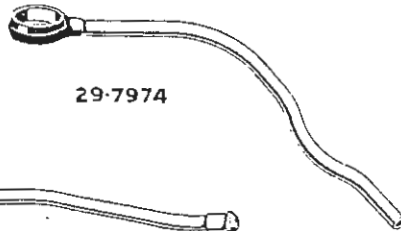


29-7974



65-8461




 29-7962



65-8465

 66-8402



66-8359



65-2060



EA95



67-8314



66-8347



65-8419



66-8332



15-480 1 1/4 x 3/4



67-8313 1/2 x 3/4



29-7971



EA132



24-8784



35-707



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Tank and Fittings—continued.

When no figures in brackets are shown one part constitutes a set.

 
DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.
Oil Return Pipe, assembled (M33 only) ...	---	---	---	---	---	---	66-8410	---	---	---
Oil Return Pipe, complete (M33 only) ...	---	---	---	---	---	---	66-8411	---	---	---
Oil Return Pipe, with nipple ...	29-7976	---	---	---	---	---	---	---	---	---
Oil Return Pipe Nut ...	66-8332	---	---	---	---	---	---	---	---	---
Oil Return Pipe Connection ...	---	---	65-8420	---	65-8420	---	---	---	---	65-8420
Do. Nut ...	---	---	65-8424	---	65-8424	---	---	---	---	65-8424
Do. Washer (fibre) ...	---	---	65-8421	---	65-8421	---	---	---	---	65-8421
Crankcase Oil Pipe, with nipple ...	29-7943(2)	---	---	---	---	---	---	---	---	---
Oil Pipe Ferrule ...	65-8422(4)	---	65-8422(6)	---	65-8422(6)	---	65-8422(4)	---	---	65-8422(4)
Oil Tank Breather Pipe Extension ...	29-7949	---	66-8330	---	66-8330	---	66-8330	---	---	67-8324
Do. Clip ...	66-8340	---	66-8340	---	66-8340	---	66-8340	---	---	67-8325
Do. Bolt ...	K132A	---	---	---	---	---	K132A	---	---	---
Do. Nut ...	M263	---	---	---	---	---	M263	---	---	---
Do. Breather Pipe Connection (rubber) ...	65-2060	---	---	---	65-2060	---	65-2060	---	---	65-2060
Do. Ferrule ...	65-8422(2)	---	---	---	---	---	65-8422(2)	---	---	65-8422(2)

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

Every owner of a B.S.A. Motor Cycle is strongly advised to buy only genuine B.S.A. Spare Parts when replacements become necessary.




# TANK AND FITTINGS.



66-8411




66-8410

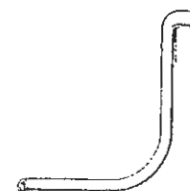

67-8324



 29-7976



66-8330



29-7949



65-2060



65-8420



29-7943



65-8422



66-8340



67-8325



65-8424



66-8332



K132A-1/2 x 1/4



65-8421



M263



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## HANDLEBAR CONTROLS.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork		Telescopic Fork		Telescopic Fork		Girder Fork			Telescopic Fork	
	C10	C11.	B31	B32.	B33	B34.	M20	M21	M33	A7.	
<b>FRONT BRAKE CONTROL.</b>											
Front Brake Control complete, less cable and Cover.	29-SS10		29-SS10		29-SS10		29-SS10			29-SS10	
Front Brake Control Body ... ..	29-SS11		29-SS11		29-SS11		29-SS11			29-SS11	
Centre Body Screw ... ..	K231A		K231A		K231A		K231A			K231A	
Control Lever ... ..	29-SS12		29-SS12		29-SS12		29-SS12			29-SS12	
Control Lever Screw ... ..	29-SS13		29-SS13		29-SS13		29-SS13			29-SS13	
Contr'l Lever Locking Washer ... ..	29-SS18		29-SS18		29-SS18		29-SS18			29-SS18	
Control Lever Nut ... ..	29-SS14		29-SS14		29-SS14		29-SS14			29-SS14	
Front Brake Cable and Cover complete ...	29-SS15		65-8675		65-8675		66-8758			67-8601	
Front Brake Cable ... ..	29-SS16		65-8676		65-8676		66-8759			67-8602	
Do. Cable Cover ... ..	29-SS17		65-8677		65-8677		66-8746			67-8603	
Cable Cover Cap ... ..	27-9353(2)		27-9353(2)		27-9353(2)		27-9353(2)			27-9353(2)	
Front Brake Cable Nipple (control end) .	66-8747		66-8747		66-8747		66-8747			66-8747	
Cable Nipple (bottom) ... ..	27-9330		27-9330		27-9330		27-9330			27-9330	
Cable Toggle End ... ..	29-5871		29-5871		29-5871		29-5871			29-5871	
Do. Screw ... ..	EB72		EB72		EB72		EB72			EB72	
Do. Nut ... ..	EB102		EB102		EB102		EB102			EB102	
Do. Washer (spring) ... ..	K197		K197		K197		K197			K197	
Front Brake Cable Adjusting Screw complete.	24-7848		24-7848		24-7848		24-7848			24-7848	
Do. Locknut ... ..	24-7849		24-7849		24-7849		24-7849			24-7849	


Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# HANDLEBAR CONTROLS.



29-8812 R.H.

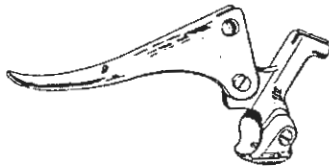

29-8810



29-8811



29-5871



27-9330



EB72  $\frac{2}{32} \times \frac{1}{4}$



29-8813



K231A  $\frac{1}{16} \times \frac{1}{4}$




24-7848  $\frac{5}{16}$



29-8818



24-7849  $\frac{5}{16}$

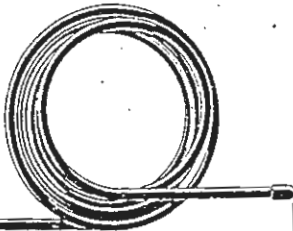

29-8817	33"
65-8677	32 $\frac{1}{2}$ "
66-8746	33 $\frac{3}{8}$ "
67-8603	34 $\frac{3}{8}$ "



29-8814 EB102




66-8747



K197



27-9353

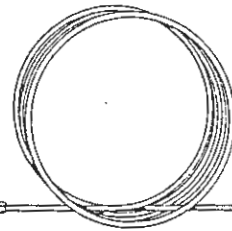

29-8816	37 $\frac{1}{8}$ "
65-8676	37 $\frac{1}{4}$ "
66-8759	37 $\frac{3}{8}$ "
67-8602	40"



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Handlebar Controls—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
<b>CLUTCH CONTROL.</b>					
Clutch Control complete, less cable and cover.	29-8820	29-8820	29-8820	29-8820	29-8820
Clutch Control Body ... ..	29-8821	29-8821	29-8821	29-8821	29-8821
Do. Screw ... ..	K231A	K231A	K231A	K231A	K231A
Clutch Control Lever ... ..	29-8832	29-8832	29-8832	29-8832	29-8832
Control Lever Screw ... ..	29-8813	29-8813	29-8813	29-8813	29-8813
Lever Locking Washer ... ..	29-8818	29-8818	29-8818	29-8818	29-8818
Do. Nut ... ..	29-8814	29-8814	29-8814	29-8814	29-8814
Clutch Cable and Cover complete ...	29-8827	65-8671	65-8671	66-8580	67-8681
Cable only ... ..	29-8828	65-8672	65-8672	66-8581	67-8682
Cover only ... ..	29-8829	65-8673	65-8673	66-8576	67-8683
Cover Cap ... ..	27-9353(2)	27-9353(2)	27-9353(2)	27-9353(2)	27-9353(2)
Clutch Cable Nipple (control end) ...	66-8747	66-8747	66-8747	66-8747	66-8747
Do. (bottom) ... ..	27-9329	27-9329	27-9329	27-9329	24-7729
Clutch Cable Adjusting Screw complete ...	25-9360	25-9360	25-9360	25-9360	25-9360
Do. Locknut ... ..	25-9365	25-9365	25-9365	25-9365	25-9365
<b>IGNITION CONTROL.</b>					
Ignition Control complete, less cable and cover.	—	66-8810	66-8810	—	—
Ignition Control Lever ... ..	—	66-8811	66-8811	—	—


Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# HANDLEBAR CONTROLS.

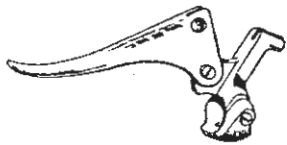

29-8820

 

29-8832 L.H.



29-8821



66-8810



25-9360 1/4



25-9365




66-8811



66-8747



29-8818

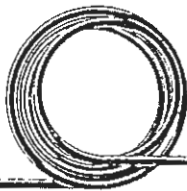

29-8829	41"
65-8673	49 1/2"
66-8576	52 1/2"
67-8683	41 1/4"



27-9353



24-7729



27-9329




K231A 1/4 x 1/4



29-8813



29-8814

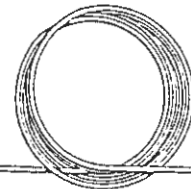

29-8828	45 1/2"
65-8672	53"
66-8581	57 1/2"
67-8682	48 1/2"



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Handlebar Controls—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Lever Body ... ..	—	24-7568	24-7568	—	—
Centre Body Cap Screw ... ..	—	27-9567	27-9567	—	—
Control Body Cap ... ..	—	27-9573	27-9573	—	—
Control Spring Washer ... ..	—	27-9600	27-9600	—	—
Control Lever Clamp ... ..	—	66-8516	66-8516	—	—
Do. Screw ... ..	—	66-8517(2)	66-8517(2)	—	—
Ignition Control Cable and Cover complete	—	65-8714	65-8714	65-8714	—
Cable only ... ..	—	65-8715	65-8715	65-8715	—
Cover only ... ..	—	65-8716	65-8716	65-8716	—
Cable Cover Cap ... ..	—	27-9579(2)	27-9579(2)	27-9579(2)	—
Cable Nipple (control end) ... ..	—	27-9443	27-9443	27-9443	—
<b>EXHAUST LIFTER.</b>					
Exhaust control complete, less cable and cover.	—	66-8513	66-8513	—	—
Exhaust Control Body ... ..	—	66-8515	66-8515	—	—
Exhaust Lever only ... ..	—	66-8514	66-8514	—	—
Exhaust Lever Clamp ... ..	—	66-8516	66-8516	—	—
Do. Screw ... ..	—	66-8517(2)	66-8517(2)	—	—
Exhaust Control Lever Screw ... ..	—	66-8517	66-8517	—	—
Do. Nut ... ..	—	66-8519	66-8519	—	—
Exhaust Lifter Cable and Cover complete	—	65-8795	65-8795	—	—
Do. (M20-M21) ... ..	—	—	—	66-8524	—
Do. (M33) ... ..	—	—	—	66-8527	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



## HANDLEBAR CONTROLS.

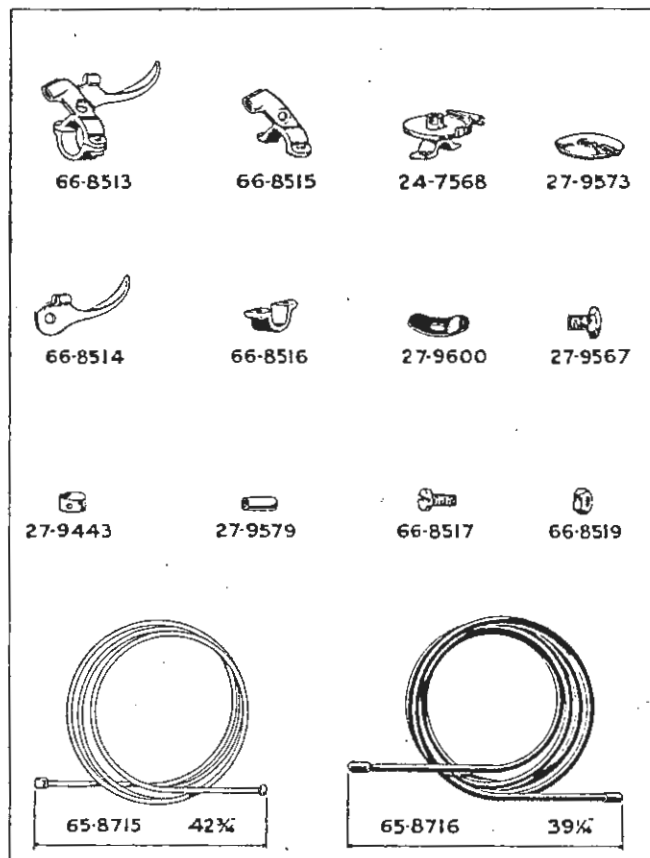

There's over 70 years reputation  
for Quality behind the B.S.A.  
trade marks which are your  
safeguard.



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Wandlebar Controls—continued.


When no figures in brackets are shown one part constitutes a set

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Exhaust Lifter Cable (M20-M21) ...	—	—	—	66-8525	—
Do. (M33) ...	—	—	—	66-8528	—
Exhaust Lifter Cable Cover (M20-M21) ...	—	—	—	66-8526	—
Do. (M33) ...	—	—	—	66-8529	—
Exhaust Cable only ...	—	65-8796	65-8796	—	—
Exhaust Cable Cover ...	—	65-8797	65-8797	—	—
Exhaust Cable Cap ...	—	27-9579(2)	27-9579(2)	—	—
Exhaust Cable Nipple ...	—	27-7768	27-7768	—	—
Do. Toggle ...	—	66-8507	66-8507	66-8507	—
Do. Screw ...	—	C2-154	C2-154	C2-154	—
Do. Nut ...	—	C2-158	C2-158	C2-158	—
Exhaust Lifter Cable Adjuster ...	—	A202	A202	A202	—
Do. Locknut ...	—	A223	A223	A223	—
Do. Return Spring ...	—	15-1312	15-1312	15-1312	—
<b>AIR CONTROL.</b>					
Air Control complete, less cable and cover	—	66-8896	66-8896	66-8896	66-8896
Air Control Body ...	—	66-8904	66-8904	66-8904	66-8904
Air Control Lever ...	—	66-8897	66-8897	66-8897	66-8897
Air Lever Control Body Cap ...	—	27-9573	27-9573	27-9573	27-9573
Air Lever Spring Washer ...	—	27-9600	27-9600	27-9600	27-9600
Centre Body Cap Screw ...	—	27-9567	27-9567	27-9567	27-9567
Air Control Clamp ...	—	66-8516	66-8516	66-8516	66-8516
Do. Screw ...	—	66-8517(2)	66-8517(2)	66-8517(2)	66-8517

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# HANDLEBAR CONTROLS.

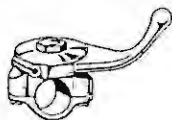

66-8896



66-8897



 
66-8904



27-9573



C2-158 A223



15-1312



A202



66-8516



27-9579



66-8507




27-9567



27-7768



C2-154 3/4 x 1/2

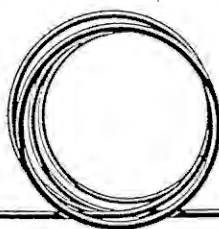


65-8797	24"
66-8526	36"
66-8529	23"



66-8517



27-9600

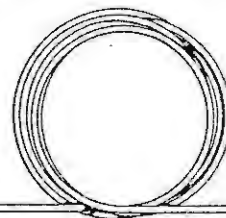

65-8796	27"
66-8525	40"
66-8528	27"



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Handlebar Controls—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
<b>THROTTLE TWIST GRIP</b> when controls of lever type (not B.S.A. clamp on pattern) are fitted.					
Throttle Twist Grip, less cable and cover	27-9480	Fitted up to Frame Number YC-411	—	—	—
Twist Grip Handlebar Clip ... ..	27-9426		—	—	—
Clip Screw ... ..	27-9450		—	—	—
Twist Grip End Plug ... ..	27-9428		—	—	—
Twist Grip End Screw ... ..	27-9429		—	—	—
Twist Grip Locknut ... ..	27-9452		—	—	—
Twist Grip Cantilever, with guide strip ...	27-9457		—	—	—
Cantilever Pin ... ..	27-9433		—	—	—
Helix Tube and Strip ... ..	27-9473		—	—	—
Twist Grip Long Slide ... ..	27-9439		—	—	—
Do. Short Slide ... ..	27-9454		—	—	—
Do. Rubber Grip ... ..	27-9444		—	—	—
Do. Washer ... ..	27-9470		—	—	—
Rubber Grip for left-hand bar ... ..	27-9482		—	—	—
<b>THROTTLE TWIST GRIP CONTROL</b> (quick action type).					
Throttle Twist Grip Control, less cable and cover.	*65-8501	65-8501	65-8501	65-8501	65-8501
Twist Grip Rubber Grip ... ..	*65-8503	65-8503	65-8503	65-8503	65-8503
Inner Sleeve and Rotor ... ..	*65-8504	65-8504	65-8504	65-8504	65-8504

\*Fitted to C10-C11 Models on and after Frame No. YC-412.



# HANDLEBAR CONTROLS.



27-9482



27-9480



27-9444



65-8501



65-8504



65-8503



27-9473



27-9426



27-9457



27-9439



27-9454



27-9428



27-9470



27-9452



27-9450



27-9433



27-9429



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Handlebar Controls—continued.

When no figures in brackets are shown, one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Twist Grip Body (top half) ... ..	*65-8505	65-8505	65-8505	65-8505	65-8505
Do. (bottom half) ... ..	*65-8506	65-8506	65-8506	65-8506	65-8506
Friction Spring ... ..	*24-9569	24-9569	24-9569	24-9569	24-9569
Friction Screw ... ..	*24-9570	24-9570	24-9570	24-9570	24-9570
Do. Locknut ... ..	*24-9571	24-9571	24-9571	24-9571	24-9571
Cable Stop ... ..	*24-9572	24-9572	24-9572	24-9572	24-9572
Body Screw ... ..	*24-9573(2)	24-9573(2)	24-9573(2)	24-9573(2)	24-9573(2)
Rubber Grip, for left-hand bar ... ..	*65-8502	65-8502	65-8502	65-8502	65-8502
*Fitted to C10—C11 Models on and after Frame No. YC-412.					
<b>CARBURETTER CABLES AND COVERS.</b>					
Air Control Cable and Cover, complete ...	—	65-8836	65-8836	66-8899	67-8555
Cable only ... ..	—	65-8837	65-8837	27-9515	67-8556
Cable Cover ... ..	—	—	—	15-9583	67-8557
Cable Cover (long) ... ..	—	65-8838	65-8838	—	—
Do. (short) ... ..	—	65-8839	65-8839	—	—
Cable Cover Cap ... ..	—	27-9579(4)	27-9579(4)	27-9579(2)	27-9579(2)
Air Cable Nipple (control end) ... ..	—	27-9443	27-9443	27-9443	27-9443
Do. (carburetter end) ... ..	—	27-9506	27-9506	27-9506	27-9506
Throttle Cable and Cover, complete ...	29-8760	65-8832	65-8832	66-8882	67-8521
Throttle Cable ... ..	29-8761	65-8833	65-8833	66-8880	67-8522
Cable Cover ... ..	29-8762	—	—	24-9511	67-8523
Throttle Cable Cover (long) ... ..	—	65-8834	65-8834	—	—
Do. (short) ... ..	—	65-8835	65-8835	—	—
Throttle Cable Cover Cap ... ..	27-9579(2)	27-9579(4)	27-9579(4)	27-9579(2)	27-9579(2)

 
Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



## HANDLEBAR CONTROLS.



65-8506



65-8502



65-8505



24-9572



24-9570



24-9573



24-9569



27-9443




27-9579




27-9506



24-9571

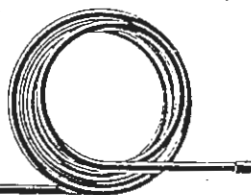

15-9583	33"	67-8557	33"
65-8838	25"	65-8839	3"
29-8762	31 1/4"	65-8834	29 1/2"
65-8835	3"	24-9511	36"
	67-8523	36 1/2"	

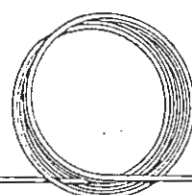

65-8837	33 1/2"	67-8556	37 1/2"
27-9515	38"	29-8761	35 1/4"
65-8833	36 1/2"	66-8880	39 1/2"
	67-8522	39 1/2"	

For the same reason that  
you buy a  
B.S.A. MOTOR CYCLE—  
to get the greatest value—

ALWAYS  
BUY GENUINE  
B.S.A. SPARES



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Handlebar Controls—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Cable Nipple (control end)...	27-9443	27-9443	27-9443	27-9443	27-9443
Do. (carburettor end) ...	27-9506	27-9506	27-9506	27-9506	27-9506
Air and Throttle Midway Adjuster ...	—	15-9577(2)	15-9577(2)	—	—
Do. Body ...	—	15-9578(2)	15-9578(2)	—	—
Do. Body Screw ...	—	15-9579(2)	15-9579(2)	—	—
Do. Nut ...	—	15-9580(2)	15-9580(2)	—	—
<b>COMBINED MAG. AND EXHAUST CONTROL.</b>					
Combined Mag. and Exhaust Control, complete (less cable and cover).	—	—	—	66-8815	—
Control Lever (long) ...	—	—	—	15-9611	—
Control Lever (short) ...	—	—	—	66-8816	—
Control Body ...	—	—	—	66-8817	—
Control Body Clamp ...	—	—	—	66-8816	—
Do. Screw ...	—	—	—	66-8517(2)	—
Control Cap ...	—	—	—	27-9561	—
Control Bolt ...	—	—	—	27-9567	—
Division Plate ...	—	—	—	27-9554	—
Adjusting Nut ...	—	—	—	66-8818	—
Locking Washer ...	—	—	—	66-8819	—
Spring Washer ...	—	—	—	27-9600	—
Cable Nipple ...	—	—	—	27-9443(2)	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# HANDLEBAR CONTROLS.

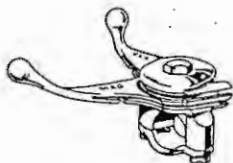

66-8815



 
15-9611



66-8816



66-8516



66-8817



15-9578



27-9561



27-9567



27-9554



 
27-9600



66-8819



66-8818



15-9577



15-9580



27-9443



15-9579



27-9506



66-8517



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## TOOLS AND SUNDRIES.


When no figures in brackets are shown, one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
<b>TOOL BOX.</b>					
Tool Box, complete ... ..	29-9125	—	—	65-9019	65-9080
Tool Box, complete (B31-B33) ... ..	—	65-9080	65-9080	—	—
Tool Box, complete (B32-B34) ... ..	—	65-9086	65-9086	—	—
Tool Box Fixing Screw ... ..	29-9132	29-9132	29-9132	29-9132	29-9132
Tool Box Fastener Nut ... ..	A223	A223	A223	A223	A223
Tool Box and Mudguard Fixing Bolt ...	M284(2)	M284(2)	M284(2)	15-7161	—
Do. Nut ... ..	M263(2)	M263(2)	M263(2)	EB113	—
Do. Washer (plain) ... ..	K234A(2)	K234A(2)	K234A(2)	—	—
Do. Washer (shakeproof) ... ..	29-541(2)	29-541(2)	29-541(2)	—	—
Do. Washer (spring) ... ..	—	—	—	K197	—
Tool Box Strap ... ..	—	—	—	65-9021	67-9005
Do. (B31-B33) ... ..	—	65-9085	65-9085	—	—
Do. (B32-B34) ... ..	—	65-9088	65-9088	—	—
Tool Box Strap Bolt ... ..	—	15-7161(2)	15-7161(2)	15-7161(2)	M284(4)
Do. Washer (shakeproof) ... ..	—	29-541(2)	29-541(2)	29-541(2)	29-541(4)
Do. Nut ... ..	—	M263(2)	M263(2)	EB113(2)	M263(4)
Tool Box Fixing Clip (B32-B34) ... ..	—	65-9089	65-9089	—	—
Do. ... ..	—	—	—	27-9001	—
Fixing Clip Bolt (B32-B34) ... ..	—	K132A(2)	K132A(2)	—	—
Do. ... ..	—	—	—	24-225	—
Clip Bolt Washer ... ..	—	—	—	K234A(2)	—
Do. Distance Washer ... ..	—	—	—	A176	—
Do. Shakeproof Washer ... ..	—	—	—	29-541(2)	—
Tool Box Bolt Nut ... ..	—	—	—	M263	—


Quote Engine and Frame Numbers, with prefix letters, when ordering spares.




# TOOLS AND SUNDRIES.

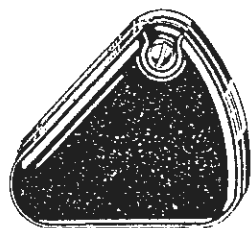

65-9080 65-9086

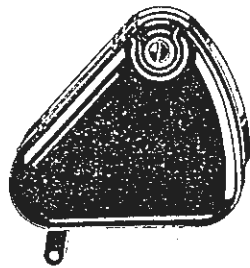

29-9125

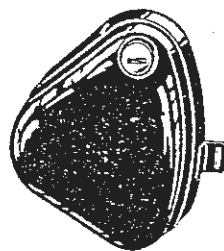

65-9019



67-9005



65-9021



27-9001 65-9089



24-225  $\frac{3}{4} \times \frac{1}{4}$



29-9132



M284  $\frac{3}{16} \times \frac{1}{4}$



K132 A  $\frac{1}{2} \times \frac{1}{4}$



15-7161  $\frac{1}{2} \times \frac{1}{4}$



EB113 M263



K234A



A176



29-541



K 197



A223



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Tools and Sundries—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
<b>TOOLS.</b>					
Tool Roll, complete with tools (C10 only)	29-9151	—	—	—	—
Do. (C11 only) ... ..	29-9152	—	—	—	—
Tool Roll, complete with tools ... ..	—	65-9138	65-9138	66-9119	67-9020
Tool Roll only ... ..	29-9215	29-9215	29-9215	29-9215	29-9215
Box Spanner ... ..	15-832	15-832	15-832	15-832	—
Dynamo Spanner ... ..	35-7600	29-9251	29-9251	29-9251	29-9251
Cylinder Base Nut Spanner ... ..	66-9036	—	—	66-9036	—
Sparking Plug Spanner, complete... ..	66-9132	66-9132	66-9132	66-9132	66-9132
Tappet Adjusting Spanner ... ..	65-9133	65-9133	65-9133	65-9133	—
Tappet Spanner ... ..	—	65-9132	65-9132	65-9132	—
Tappet Adjusting Spanner ... ..	—	27-8925	27-8925	—	27-8925
Do. (M33 only) ... ..	—	—	—	27-8925	—
Do. (C11 only) ... ..	27-8925	—	—	—	—
Do. (C10 only) ... ..	65-9132	—	—	—	—
Adjustable Spanner ... ..	—	EB262	EB262	EB262	EB262
Tommy Bar ... ..	29-9253	29-9253	29-9253	29-9253	29-9253
Hub Bearing Attachment Spanner ... ..	29-9254	29-9254	29-9254	29-9254	—
B.S.A. Double-ended Spanner ... ..	EB259	EB259	EB259	EB259	EB259
Do. (D.E.S.3) ... ..	—	—	—	—	67-9025
Grease Gun ... ..	28-4265	28-4265	28-4265	28-4265	28-4265
Tyre Lever ... ..	29-9252	29-9252	29-9252	29-9252	29-9252
Carburettor Spanner... ..	15-8945	15-8945	15-8945	15-8945	15-8945
Cylinder Head Bolt Spanner ... ..	65-9115	65-9115	65-9115	—	65-9115
Screwdriver Attachment ... ..	66-9038	66-9038	66-9038	66-9038	66-9038
Front Hub Cone Spanner ... ..	29-9255	29-9255	29-9255	—	—
Tappet Feelers, complete ... ..	65-9130	65-9130	65-9130	65-9130	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.




# TOOLS AND SUNDRIES.



29-9255



27-8925

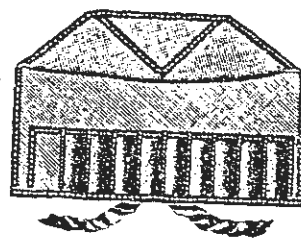

29-9215



66-9132



29-9254



15-8945



29-9251



66-9038



67-9025



EB-262



15-832



65-9132



65-9133



65-9115



 
66-9036



EB-259



29-9252



29-9253



28-4265



65-9130



35-7600



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Tools and Sundries—continued.


When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Valve Grinding Tool Holder, complete (C11 only).	66-9044	—	—	—	—
Do. ... ..	—	66-9044	66-9044	—	15-8950
Do. (M33 only) ... ..	—	—	—	66-9044	—
Feeler Gauge (rocker) ... ..	—	—	—	—	67-9047
Front Fork Top Nut Spanner ... ..	65-9110	65-9110	65-9110	—	65-9110
Gland Nut Spanner ... ..	—	66-9071	66-9071	—	—
Do. (M33 only) ... ..	—	—	—	66-9071	—
Wheel Alignment Gauge ... ..	—	—	—	66-9042	—
Hub Spindle Nut Spanner ... ..	—	—	—	66-9067	—
Hub Adjusting Sleeve Spanner ... ..	—	—	—	66-9052	—
Detachable Wheel Spanner... ..	—	—	—	66-9068	—
Inflator ... ..	27-8958	27-8958	27-8958	27-8958	27-8958
Speedometer Bracket (fork centre mounting)	—	65-9111	65-9111	15-9043	65-9111
Do. Bolt ... ..	—	K132A(2)	K132A(2)	M413(2)	—
Do. Washer (spring) ... ..	—	K197(2)	K197(2)	—	—
Speedometer Bracket Distance Piece ... ..	—	—	—	15-7563(2)	—
Speedometer Clamp Rod, complete ... ..	29-9296	—	—	—	—
Speedometer Clamping Disc Locating Plate	65-9105	—	—	—	—
Clamp Rod Nut ... ..	65-9101	—	—	—	—
Speedometer Cable, complete ... ..	29-9326	65-9150	65-9150	—	67-9057
Do. (fork top mounting) ... ..	—	—	—	66-9145	—
Speedometer Cable Guide Plate ... ..	—	65-9109	65-9109	—	65-9109
Cable Clip ... ..	29-9323	66-8340	66-8340	66-9113(2)	—
Front Brake Cable Securing Clip ... ..	65-9108	65-9108	65-9108	—	65-9108
Do. Screw ... ..	65-5912(2)	65-5912(2)	65-5912(2)	—	C2-154(2)
Do. Nut ... ..	C2-158(2)	C2-158(2)	C2-158(2)	—	C2-158(2)

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# TOOLS AND SUNDRIES.

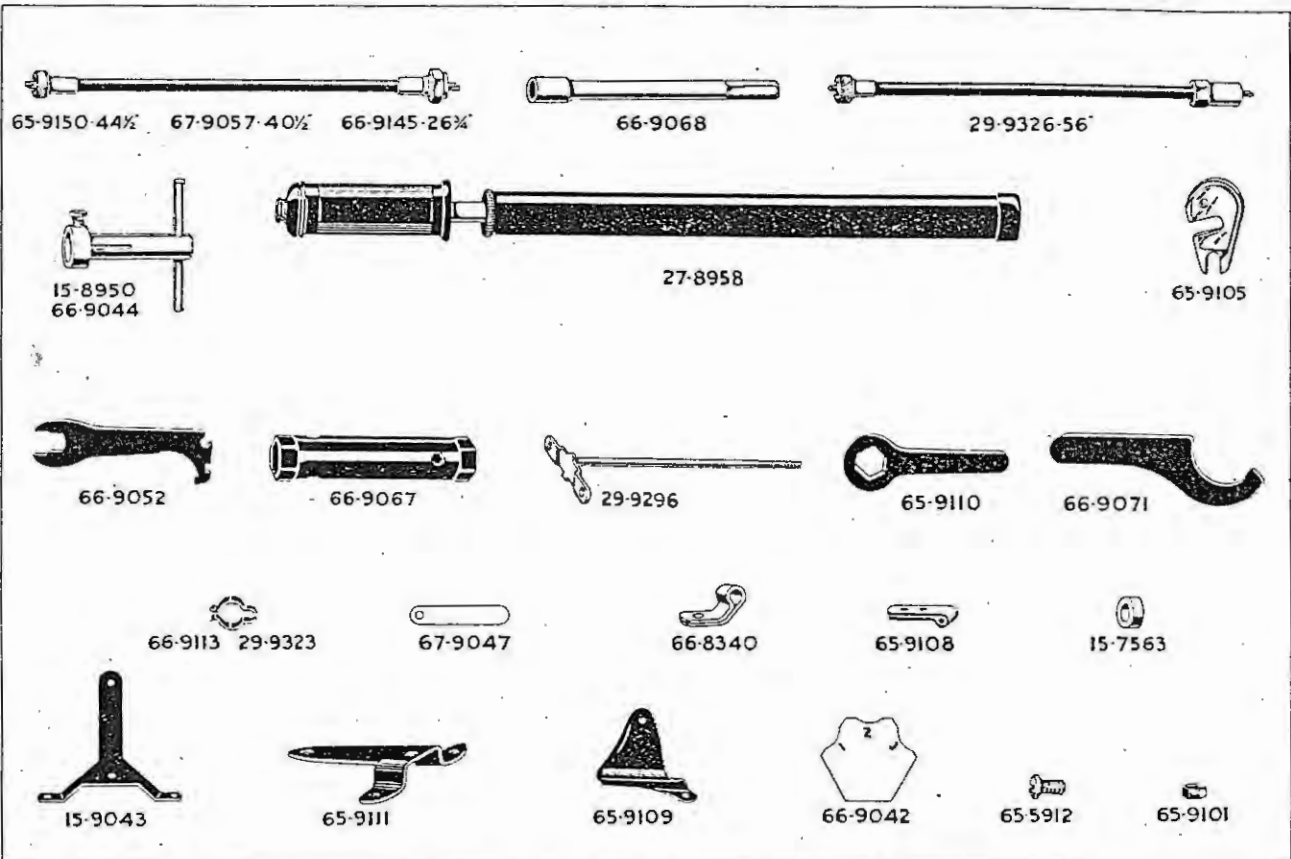



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Tools and Sundries—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Lamp Bracket (top) ... ..	—	—	—	27-9021(2)	—
Do. (bottom) ... ..	—	—	—	33-9051(2)	—
Head Lamp Bracket Bolt (top) ... ..	—	—	—	15-8994(3)	—
Do. (bottom) ... ..	—	—	—	15-8993	—
Bolt Nut (top) ... ..	—	—	—	24-6040(2)	—
Do. (bottom) ... ..	—	—	—	EAS0(2)	—
Do. Washer (shakeproof) ... ..	—	—	—	36-382(4)	—
Cable Clip (Shamrock pattern) ... ..	24-8944(2)	24-8944(2)	24-8944(2)	24-8944(2)	—
Cable Clip (rubber) ... ..	66-9049(5)	66-9049(3)	66-9049(3)	66-9049(8)	66-9049(3)
Rear Number Plate Tail Lamp Screw ... ..	65-5912(3)	65-5912(3)	65-5912(3)	65-5912(3)	65-5912(3)
Do. Nut ... ..	C2-158(3)	C2-158(3)	C2-158(3)	C2-158(3)	C2-158(3)
Licence Holder ... ..	29-9221	29-9221	29-9221	29-9221	29-9221
Pillion Seat ... ..	29-9340	29-9340	29-9340	29-9340	67-9033
Do. Bolt ... ..	15-7161(4)	15-7161(4)	15-7161(4)	15-7161(4)	15-7161(4)
Do. Nut ... ..	M263(4)	M263(4)	M263(4)	M263(4)	M263(4)
Do. Washer (spring) ... ..	K197(4)	K197(4)	K197(4)	K197(4)	K197(4)
Tail Lamp Wire Clip ... ..	65-9071(5)	65-9071(5)	65-9071(5)	65-9071(5)	65-9071(5)
Transmission Chain Front (68 links) (B32 only) . .	—	24-8930	—	—	—
Do. Front (69 links) ... ..	24-8931	—	—	—	—
Do. Front (68 links) (M20-M21) (sidecar). .	—	—	—	24-8930	—
Transmission Chain Front (69 links) (M20) (solo). .	—	—	—	24-8931	—
Do. Front (69 links) (B31 only) ... ..	—	24-8931	—	—	—
Do. Front (69 links) (B34 only) ... ..	—	—	24-8931	—	—
Do. Front (70 links) (B33 only) ... ..	—	—	24-8932	—	—

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.




# TOOLS AND SUNDRIES.



27-9021  
33-9051



66-9049

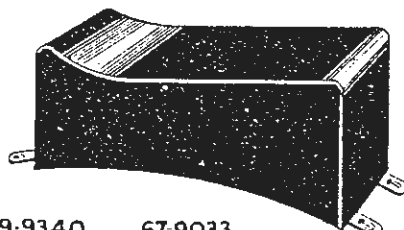

29-9340

67-9033



29-9221



24-8944



15-8993  $\frac{3}{8} \times \frac{1}{4}$   
15-8994  $\frac{1}{2} \times \frac{1}{4}$



65-9071



24-8930-68 LINKS  $\frac{1}{2}$  PITCH X 305  
24-8931-69 "  $\frac{1}{2}$  " X 305  
24-8932-70 "  $\frac{1}{2}$  " X 305



K132 A  $\frac{1}{2} \times \frac{1}{4}$



15-7161  $\frac{1}{2} \times \frac{1}{4}$



65-5912



EA80 M263  
24-6040



C2-158



K197



36-382



NOTE.—Figures in brackets denote number per set, *e.g.*, (2), 2 per set.

### Tools and Sundries—continued.

When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	Telescopic Fork C10 C11.	Telescopic Fork B31 B32.	Telescopic Fork B33 B34.	Girder Fork M20 M21 M33	Telescopic Fork A7.
Transmission Chain Front (69 links) (M33 only) (sidecar).	—	—	—	24-S931	—
Do. Front (70 links) M(21-M33) (solo).	—	—	—	24-S932	—
Transmission Chain Rear (90 links) (B32)	—	65-9186	—	—	—
Do. (91 links) (B31-B33-B34) ...	—	15-S967	15-S967	—	—
Transmission Chain Rear (104 links) ...	65-9188	—	—	—	—
Do. Rear (95 links) (M20-M21) ...	—	—	—	24-S713	—
Do. Rear (94 links) (M33) ...	—	—	—	15-S968	—
Do. Rear (102 links) (solo) ...	—	—	—	—	67-9041
Do. Rear (103 links) (sidecar) ...	—	—	—	—	67-9042
Front Chain Connecting Link (Reynolds chain).	27-S746	27-S746	27-S746	27-S746	—
Do. Double Connecting Link (Reynolds chain).	27-S810	27-S810	27-S810	27-S810	—
Do. Cranked Connecting Link (Reynolds chain).	27-S805	27-S805	27-S805	27-S805	—
Rear Chain Connecting Link (Reynolds chain).	27-S746	15-S16	15-S16	15-S16	67-9044
Do. Double Connecting Link (Reynolds chain).	27-S810	15-S976	15-S976	15-S976	—
Do. Cranked Connecting Link (Reynolds chain).	27-S805	15-S972	15-S972	15-S972	67-9043

When ordering Chain Connecting Links state Reynolds or B.S.A.

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.



# TOOLS AND SUNDRIES.



15-8972 27-8805  
67-9043



15-8976 27-8810



15-816 27-8746  
67-9044



15-8967 - 91	LINKS.	$\frac{5}{8}$ "	PITCH.	x .250"
15-8968 - 94		$\frac{5}{8}$ "		x .250"
24-8713 - 95		$\frac{5}{8}$ "		x .250"
65-9186 - 90		$\frac{5}{8}$ "		x .250"
65-9188 - 104		$\frac{1}{2}$ "		x .305"
24-8931 - 69		$\frac{1}{2}$ "		x .305"
24-8932 - 70		$\frac{1}{2}$ "		x .305"
67-9041 - 102		$\frac{5}{8}$ "		x .400"
67-9042 - 103		$\frac{5}{8}$ "		x .400"

B.S.A. Spares are made  
with the same accuracy  
as the original parts in  
your B.S.A. Motor Cycle.  
It pays to have genuine  
B.S.A. Spares.



NOTE.—Figures in brackets denote number per set e.g., (2), 2 per set.

## LEGSHIELDS.

When no figures in brackets are shown one part constitutes a set.


### MODELS C10, C11 (G.P.O. C10).

Description.			Model	Description.			Model
			C10 C11				C10 C11
Legshield complete assembly	...	...	29-7605	Legshield Top Support Bar complete	...	...	29-7609
Legshield (left-hand)	...	...	29-7613	Legshield Top Support Bar Screw	...	...	EB72(2)
Legshield (right-hand)	...	...	29-7614	Do. Washer	...	...	B751A(2)
Bottom Support Strip	...	...	29-7606	Do. Lockwasher (shakeproof)	...	...	29-541(2)
Bottom Bracket (offside)	...	...	29-7607	Do. Nut	...	...	M263(2)
Bottom Bracket (nearside)	...	...	29-7608	Top Support Bar and Frame Tube Clip (right-hand)	...	...	65-7286
Legshield Bottom Fixing Screw	...	...	24-225(4)	Do. (left-hand)	...	...	65-7287
Do. Washer	...	...	B751A(4)	Support Bar and Frame Clip Nut	...	...	27-7979(2)
Do. Lockwasher (shakeproof)	...	...	29-541(4)	Distributor Shield	...	...	29-7611
Do. Nut	...	...	M263(2)	Do. Fixing Screw	...	...	EA62(2)
Bottom Bracket and Support Strip Screw	...	...	B751(2)	Do. Lockwasher (shakeproof)	...	...	29-541(2)
Do. Lockwasher (shakeproof)	...	...	29-541(2)	Do. Nut	...	...	M263(2)
Do. Nut	...	...	M263(2)				
Bottom Bracket and Crankcase Stud	...	...	29-4101				

B.S.A. SPARES ARE MADE WITH THE SAME ACCURACY AS THE ORIGINAL PARTS IN YOUR B.S.A. MOTOR CYCLE. IT PAYS TO HAVE GENUINE B.S.A. SPARES.



# LEGSHIELDS.

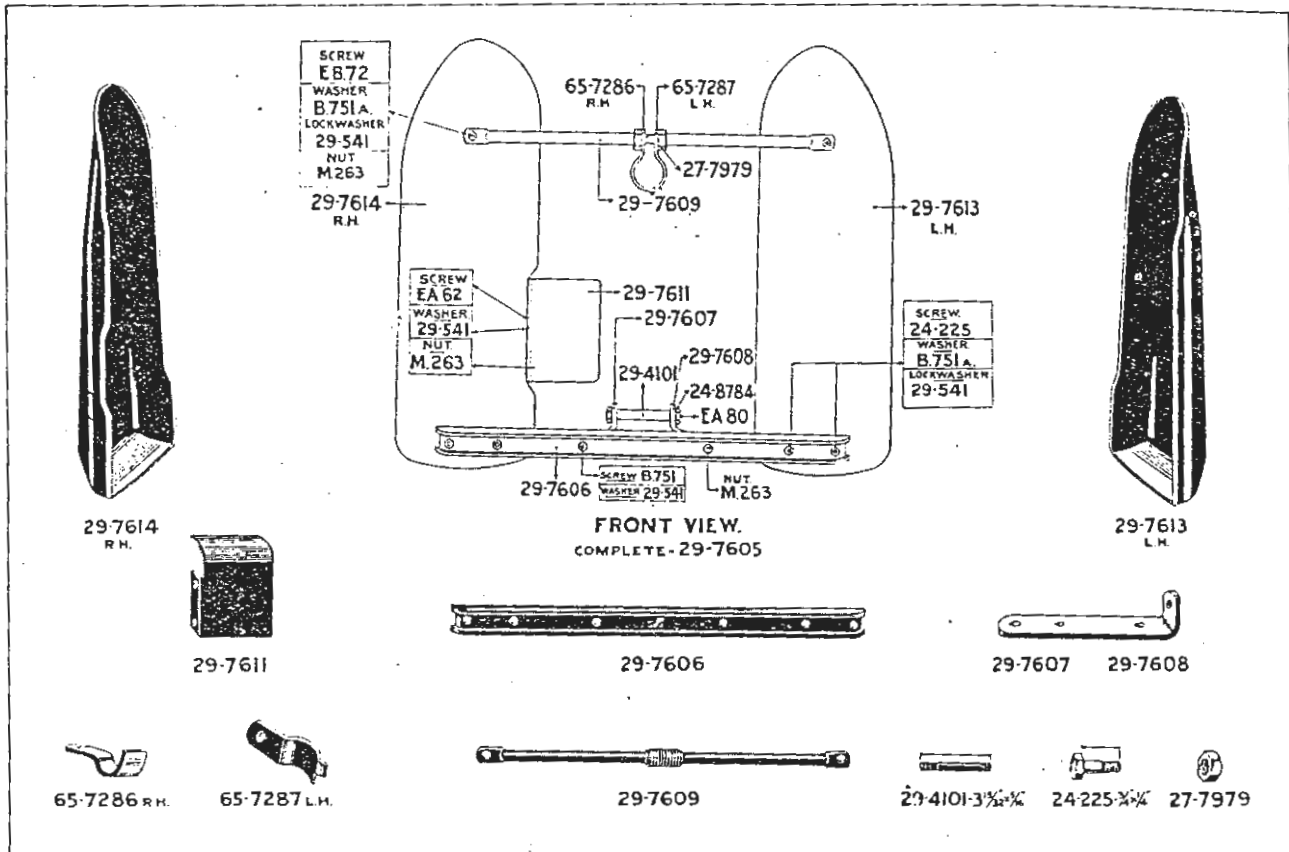



# SPECIAL COMPONENTS FOR C10 MOTOR CYCLES AS SUPPLIED TO G.P.O.

EXHAUST SYSTEM.				Telescopic Fork.			
Description.				Part No.			
Exhaust Pipe complete ...	...	...	...	29-2980/2			
Silencer complete ...	...	...	...	29-2975/2			
CLUTCH CONTROL.							
Description.				Part No.			
Clutch Control complete less cable and cover				66-8584			
FRONT HUB AND WHEEL FITTINGS.							
Description.				Part No.			
Front Wheel complete, less brake and tyre...				29-5771			
Front Wheel Rim (WM1-20) ...	...	...	...	29-5777			
Front Wheel Spoke (right-hand) ...	...	...	...	29-5772(20)			
Do. (left-hand) ...	...	...	...	24-6912(20)			
REAR HUB AND WHEEL FITTINGS.							
Description.				Part No.			
Rear Wheel complete, less brake and tyre ...				29-6175			
Rear Wheel Rim (WM1-20) ...	...	...	...	29-5777			
Rear Wheel Spoke (right-hand) ...	...	...	...	65-5873(20)			
Do. (left-hand) ...	...	...	...	24-6912(20)			
Footrest Rod Brake Pedal Stop Plate ...				29-7540			
REAR MUDGUARD AND FITTINGS.							
Description.				Part No.			
First Aid Box Support Plate ...	...	...	...	65-9035			
Do. Screw ...	...	...	...	1-4606(2)			
Do. Nut ...	...	...	...	EB116(2)			

Description.				Telescopic Fork.			
				Part No.			
First Aid Box Screw ...	...	...	...	C2-154(2)			
Do. Nut ...	...	...	...	C2-158(2)			
HANDLEBAR.							
Description.				Part No.			
Handlebar ...	...	...	...	29-4876			
FRONT BRAKE CONTROL.							
Description.				Part No.			
Front Brake Control, less cable and cover ...				66-8584			
PETROL TANK.							
Description.				Part No.			
Petrol Tank ...	...	...	...	29-7921			
Petrol Pipe complete ...	...	...	...	29-7890			
Petrol Tank Filler Cap Chain ...	...	...	...	29-7987			
OIL TANK AND FITTINGS.							
Description.				Part No.			
Oil Tank, with fixed fittings ...	...	...	...	29-7984			
Oil Tank Filler Cap, complete ...	...	...	...	29-7985			
Oil Tank Filler Cap Chain ...	...	...	...	29-7987			
TOOLS.							
Description.				Part No.			
Adjustable Spanner ...	...	...	...	EB262			
SUNDRIES.							
Description.				Part No.			
Licence Holder ...	...	...	...	29-9220			
Headlamp (Lucas Reference Number) ...				055084			



# COMPONENT NUMBERS FOR OVERSIZE PISTONS AND PISTON RINGS.

Models.	Comp. Ratio.	PISTON COMPLETE.			PISTON ONLY.			PISTON RING.			PISTON SCRAPER RING.			
		Standard	$\frac{1}{4}$ mm. oversize.	1mm. oversize.	Standard	$\frac{1}{4}$ mm. oversize.	1mm. oversize.	Standard	$\frac{1}{4}$ mm. oversize.	1mm. oversize.	Standard	$\frac{1}{4}$ mm. oversize.	1mm. oversize.	Type.
C10	5 to 1	29-2561	29-2562	29-2563	65-405	65-383	65-385	29-2620(2)	29-2621(2)	29-2622(2)	65-730	65-731	65-732	Slotted and Grooved.
C11	6.5 to 1	29-2568	29-2569	29-2570	29-2274	29-2311	29-2312	29-2620(2)	29-2621(2)	29-2622(2)	65-730	65-731	65-732	Slotted and Grooved.
B31 B32	Standard 6.5 to 1	65-755	65-759	65-760	65-703	65-704	65-705	65-744(2)	65-745(2)	65-746(2)	65-735	65-736	65-737	Slotted and Grooved.
B31 B32	High Comp. 7.5 to 1	65-754	65-755	65-756	65-721	65-722	65-723	65-744(2)	65-745(2)	65-746(2)	65-490	65-491	65-492	Maxigroove
B31 B32	High Comp. 7.75 to 1	*65-790	65-769	65-771	*65-791	65-770	65-772	Plain 65-783 L Section 65-786	Plain 65-784 L Section 65-787	Plain 65-785 L Section 65-788	65-490	65-491	65-492	Maxigroove
B31 B32	High Comp. 12.5 to 1	65-775	65-777	65-779	65-776	65-778	65-780	Plain 65-783 L Section 65-786	Plain 65-784 L Section 65-787	Plain 65-785 L Section 65-788	65-490	65-491	65-492	Maxigroove
B33 B34	Standard 6.8 to 1	65-1244	65-1260	65-1262	65-1245	65-1261	65-1263	65-1250(2)	65-1251(2)	65-1252(2)	65-1253	65-1254	65-1255	Slotted and Grooved.
B33 B34	High Comp. 7.5 to 1	65-1264	65-1266	65-1268	65-1265	65-1267	65-1269	65-1250(2)	65-1251(2)	65-1252(2)	65-1253	65-1254	65-1255	Slotted and Grooved.
B33 B34	High Comp. 8.5 to 1	65-1256	65-1274	65-1276	65-1257	65-1275	65-1277	65-1250(2)	65-1251(2)	65-1252(2)	24-1792	24-1793	24-1794	Maxigroove
M20	4.9 to 1	66-1190	66-1191	66-1192	66-1024	66-1025	66-1026	66-1090(2)	66-1091(2)	66-1092(2)	66-1100	66-1101	66-1102	Slotted and Grooved.
M21	5 to 1	66-1198	66-1199	66-1200	66-1039	66-1040	66-1041	66-1090(2)	66-1091(2)	66-1092(2)	66-1100	66-1101	66-1102	Slotted and Grooved.
M33	6.8 to 1 Std. 7.4 to 1 HC 8.5 to 1 HC	As	Model	B33	As	Model	B33	As	Model	B33	As	Model	B33	
A7	Std. 7 to 1	67-81	67-83	67-85	67-82	67-84	67-86	67-87(4)	67-88(4)	67-89(4)	67-90(2)	67-91(2)	67-92(2)	Maxigroove
A7	8.6 to 1	67-93	67-95	67-97	67-94	67-96	67-98	67-87(4)	67-88(4)	67-89(4)	67-90(2)	67-91(2)	67-92(2)	Maxigroove
A7	7.5 to 1	67-103	67-105	67-107	67-104	67-106	67-108	67-87(4)	67-88(4)	67-89(4)	67-90(2)	67-91(2)	67-92(2)	Maxigroove

\*65-790 Piston complete supersedes and to be supplied as replacement of 65-767 Piston complete.

\*65-791 Piston only supersedes and must be supplied with Rings 65-783 and 65-786 for replacement of 65-768 Piston only.



**SPECIAL COMPONENTS FOR M20 MOTOR  
CYCLES AS SUPPLIED TO AUTOMOBILE  
ASSOCIATION**

**CLUTCH.**

Description.	Part No.
Clutch Chainwheel, complete ... ..	66-3809
Clutch Sleeve ... ..	66-3811
Clutch Chainwheel Roller ... ..	26-650(22)
Clutch Centre ... ..	15-4306
Clutch Driving Plate ... ..	66-3812(4)
Clutch Driven Plate ... ..	15-4307(3)
Clutch Ring (Ferodo) ... ..	15-2419(8)
Clutch Sleeve Cork Ring ... ..	66-3813
Clutch Sliding Plate, complete ... ..	15-4308
Do. Spring Washer ... ..	K197(6)
Do. Nut ... ..	EB113(6)
Clutch Operating Cap, complete ... ..	15-4313
Clutch Operating Cap Bush Locknut ... ..	EA60
Clutch Operating Cap Bush Washer ... ..	26-4138
Mainshaft Nut ... ..	15-374
Clutch Cover ... ..	15-4315
Do. Washer... ..	15-4316
Clutch Cover Screw ... ..	EB379(8)
Do. Washer... ..	24-7068(8)
Clutch Push Rod ... ..	15-4261
Clutch Spring ... ..	15-4311
Clutch Spring Nut ... ..	15-4312



There's over 70 years reputation  
for Quality behind the B.S.A.  
trade marks which are your  
safeguard.




# SPECIAL COMPONENTS (Automobile Association).



66-3809




15-4308

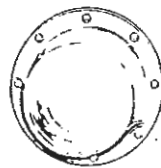


15-4315



15-4313

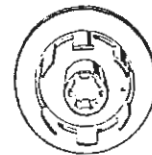

15-4306

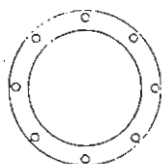

15-4316



 
15-4307



66-3811



15-4312



15-4261



15-2419



66-3812



15-4311



15-374



26-4138



66-3813



EB379  $\frac{1}{2} \times \frac{3}{4}$



EA60



24-7068



**SPECIAL COMPONENTS FOR M20 MOTOR  
CYCLES AS SUPPLIED TO AUTOMOBILE  
ASSOCIATION**

**PETROL TANK.**

Description.	Part No.
Petrol Tank ... ..	66-8249
Petrol Pipe, complete ... ..	66-8275

**ENGINE.**

Carburettor Joint Washer (Hallite) ... ..	66-127(2)
Do. Flange Stud ... ..	27-5768(2)
Do. Do. Extension (Tufnol) ... ..	66-135

**REAR BRAKE.**

Rear Brake Pedal ... ..	66-7010
-------------------------	---------

**HANDLEBAR CONTROLS.**


Front Brake Control, complete less cable and cover ... ..	66-8584
Front Brake Cable, complete ... ..	66-8755
Cable only ... ..	66-8756
Cable Cover ... ..	66-8757
Ignition Control, complete less cable and cover	24-7565
Ignition Control Cable, complete ... ..	66-8806
Ignition Control Cable ... ..	66-8807
Do. Cover ... ..	66-8808
Exhaust Control, complete less cable and cover	66-8513
Exhaust Lifter Cable, complete ... ..	66-8511
Exhaust Lifter Cable ... ..	66-8502
Do. Cover ... ..	29-8780
Clutch Control, complete less cable and cover	66-8584




**ALWAYS ORDER  
GENUINE  
B.S.A. SPARES**



# SPECIAL COMPONENTS (Automobile Association).

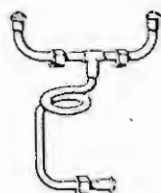

66-8275

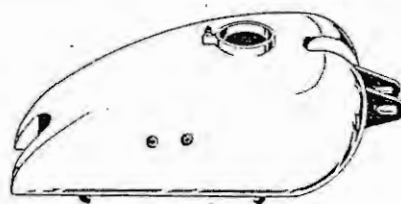

66-8249



66-8584



66-8513




66-7010




24-7565




27-5768 2 1/4 x 3/4

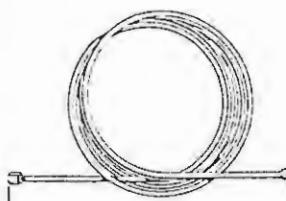


66-8807 45% 66-8502 40%  
66-8756 41%

 

66-127

 

66-135

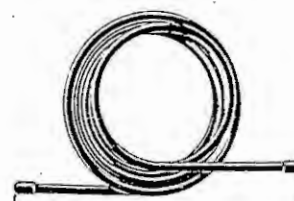

29-8780 37% 66-8757 37%  
66-8808 42%



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set

## LEGSHIELDS.

When no figures in brackets are shown one part constitutes a set.


### FOR MODEL M20 MOTOR CYCLE AS SUPPLIED TO THE AUTOMOBILE ASSOCIATION

Description	Part No.
Legshield complete assembly ... ..	66-7345
Legshield (left-hand) ... ..	66-7347
Do. (right-hand) ... ..	66-7348
Legshield Stay complete ... ..	66-7318
Legshield Stay Tube Sleeve Nut ... ..	27-7979(2)
Legshield Stay Frame Clip (right-hand) ... ..	66-7315
Do. (left-hand) ... ..	66-7316
Legshield Stay Bolt ... ..	B751(2)
Do. Washer ... ..	B751A(2)
Do. Nut ... ..	27-4401(2)
Engine Plate Crankcase Bolt ... ..	66-4160
Legshield Bottom Support Tube complete (right-hand) ... ..	66-7349
Do. (left-hand) ... ..	66-7351

Description.	Part No.
Legshield Support Tube Clip ... ..	66-7353(2)
Do. Bolt ... ..	B751(2)
Do. Nut ... ..	EB113(2)
Do. Washer ... ..	B751A(2)
Legshield and Footrest Fixing Strap (left-hand) ... ..	66-7354
Do. (right-hand) ... ..	66-7358
Legshield Bottom Inside Strap (right-hand) ... ..	66-7355
Do. (left-hand) ... ..	66-7356
Legshield and Strap Bolt ... ..	EB673(10)
Do. Nut ... ..	25-7151(10)
Legshield and Footrest Bolt ... ..	15-7354(2)
Footrest Bracket (for use with legshields) ... ..	66-7362(2)
Footrest Rubbers ... ..	66-7363(2)



LEGSFIELDS.

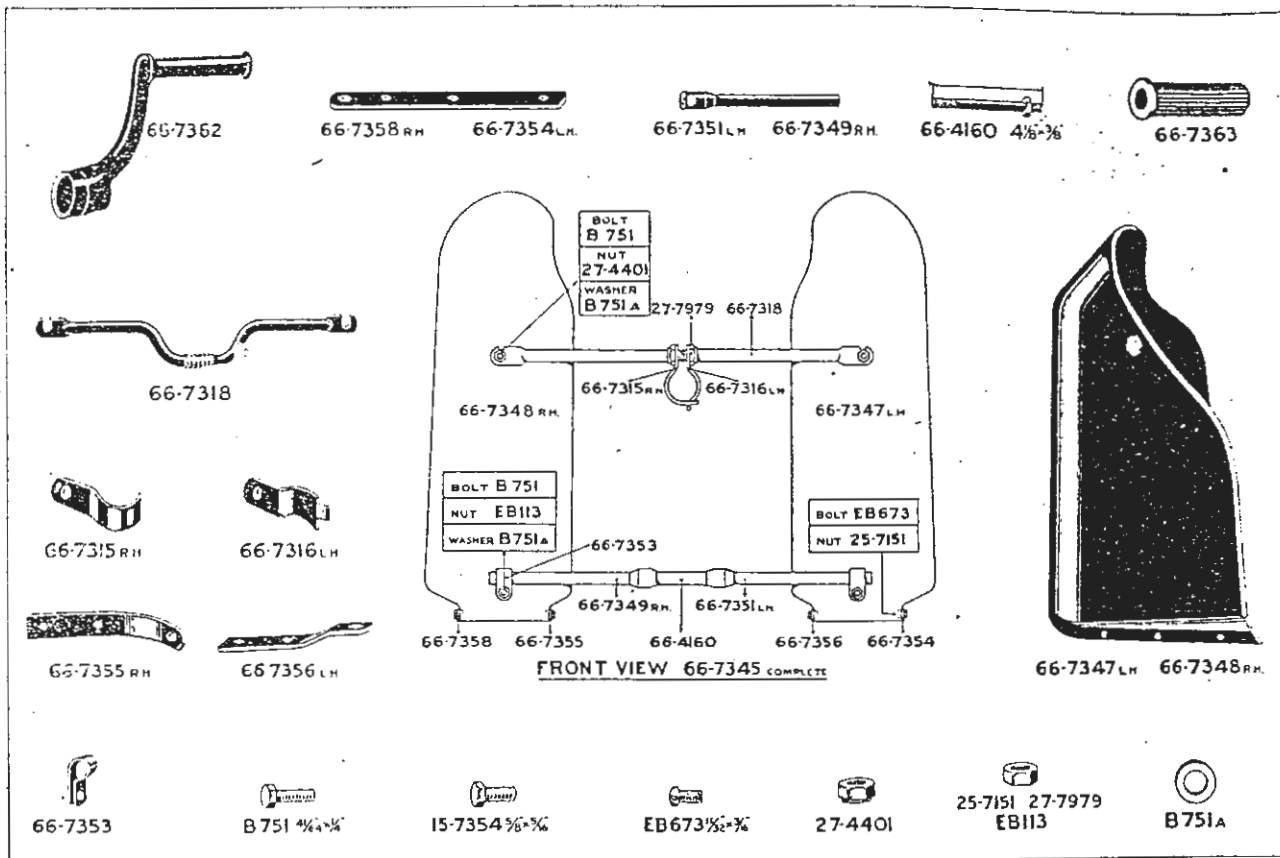



**SPECIAL COMPONENTS FOR M20 MOTOR CYCLES AS SUPPLIED TO  
THE AUTOMOBILE ASSOCIATION**

**TOOLS AND SUNDRIES.**

Description.	Part No.
Adjustable Spanner ... ..	EB262
Tool for removing tyre valve centres ...	66-9161
Chain Rivet Extractor ... ..	66-9166
Wesco Type Oil Can (type 200), with fixing clip ... ..	66-9148
Tyre Repair Outfit ... ..	66-9164
Roll Insulating Tape ... ..	66-9154
Chain Connecting Link (single), $\frac{1}{2} \times .305$ ...	No. 26
Chain Connecting Link (single), $\frac{3}{8} \times \frac{1}{4}$ ...	No. 26
Sparking Plug Spanner ... ..	66-9132
Hub Bearing Adjusting Spanner ... ..	29-9254
Cylinder Base Nut Spanner ... ..	66-9036
Tommy Bar ... ..	29-9253
Detachable Wheel Spanner ... ..	15-8946
Tappet Spanner ... ..	65-9133

Description.	Part No.
Tappet Spanner ... ..	65-9132
Wheel Alignment Gauge ... ..	66-9042
Tappet Feelers ... ..	65-9130
Grease Gun ... ..	28 4265
Front Hub Bearing Adjustment Spanner ...	66-9052
Hub Spindle Nut Spanner ... ..	66-9067
Box Spanner ... ..	15-832
Battery Bracket with washer ... ..	66-4895

**EQUIPMENT.**

Description.	Part No.
Headlamp (Lucas Ref. No.) ... ..	055531
Horn Push, with clip fixing (Lucas Ref.) ...	No. 4
Dipper Switch, with clip fixing (Lucas Ref.) .	No. 99




TO MAINTAIN THE ORIGINAL  
RELIABILITY AND PERFORMANCE  
OF YOUR B.S.A. MOTOR CYCLE  
FIT ONLY SPARES MADE BY B.S.A.


**ALWAYS USE**





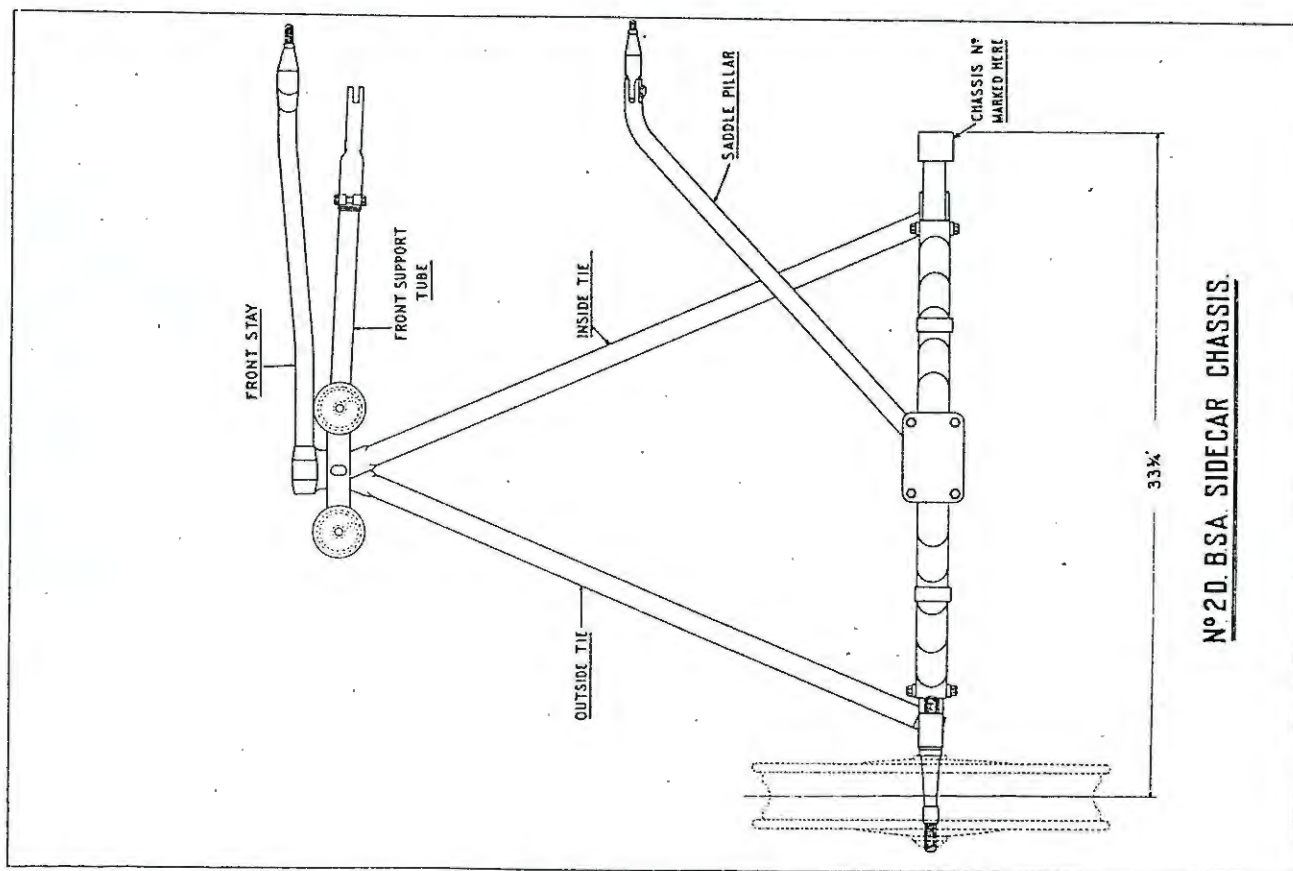



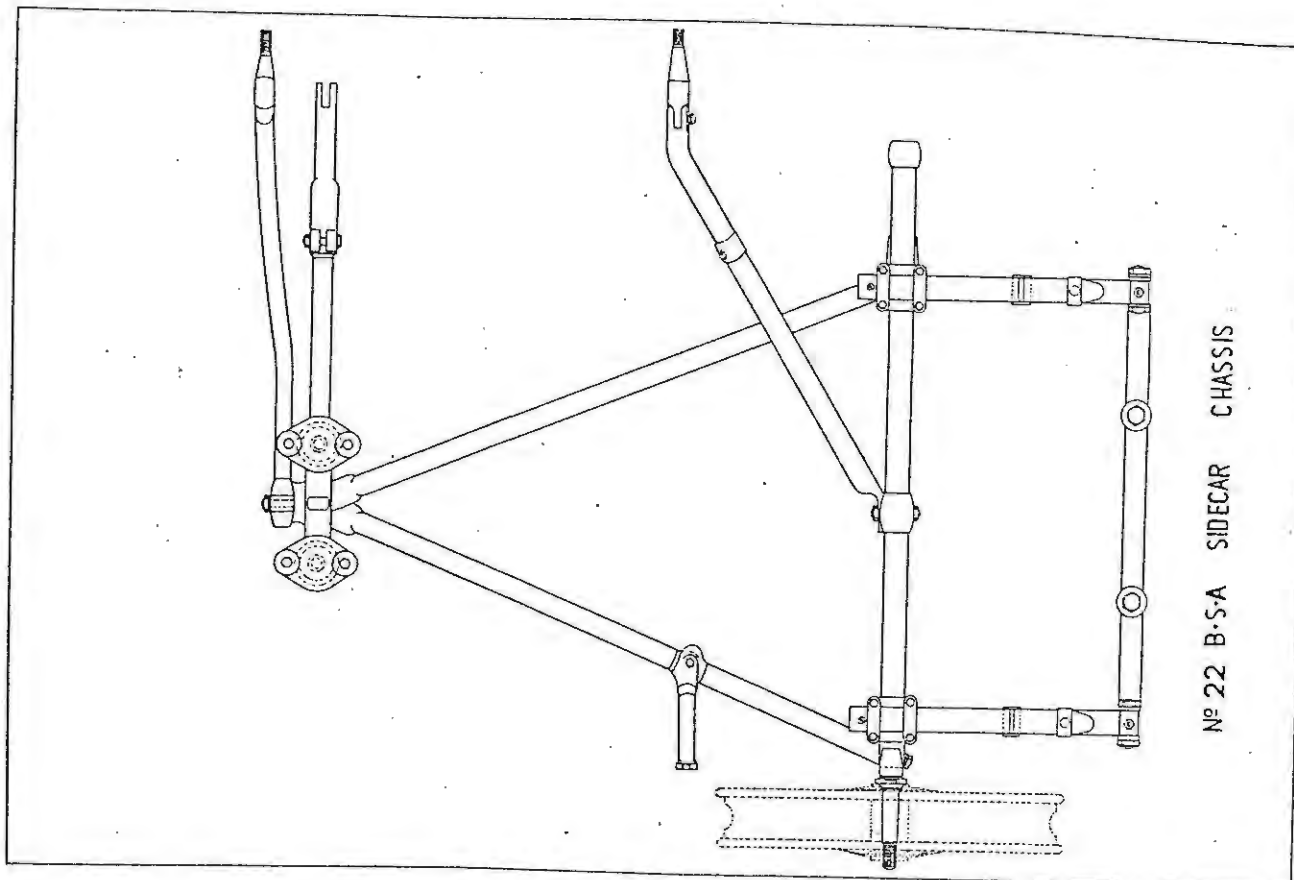



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

## SIDECAR CHASSIS

When no figures in brackets are shown one part constitutes a set.

### FRONT STAY.

Description.	Number 20	Number 22
Front Stay, complete ...	3-1605	—
Do. (Model A7) ...	—	3-1720
Do. (Models M20-M21) ...	—	3-9274
Front Stay Cone Nut ...	N177	N177
Do. Washer (spring) ...	N176	N176
Do. Washer (plain) ...	—	24-7910
Front Connecting Lug ...	3-1373	3-1373
Do. Bolt ...	3-1372	3-1372
Do. Washer ...	—	24-5914
Do. Split Pin ...	35-713	35-713
Do. Nut ...	3-953	3-953
Do. Packing Washer ...	30-729	—
Front Connecting Lug Clip Bolt ...	3-1271	3-1271
Do. Washer (spring) ...	N572	N572

### FRONT SUPPORT TUBE.

Front Support Tube, complete with bolts and nuts ...	3-1607	—
Do. (Model A7) ...	—	3-1719
Do. (Models M20-M21) ...	—	3-1727
Front Support Tube (adjustable type) ...	3-1608	—
Do. (Model A7) ...	—	3-1716
Do. (Models M20-M21) ...	—	3-1728


Description.	Number 20	Number 22
Front Bottom Connection ...	3-1259	3-1259
Do. Bolt ...	3-1271	3-1271
Do. Nut ...	M202	M202
Front Bottom Tube Bolt (motor cycle end) ...	C2-109	C2-109
Do. Nut ...	EAS2	EAS2

### SADDLE PILLAR.

Saddle Pillar Tube, complete (adjustable type) ...	3-1600	3-1724
Do. Top Connection (adjustable type) ...	3-1601	3-1725
Do. Bottom Connection (adjustable type) ...	3-1603	3-1603
Do. Bottom Tube Lug ...	3-1258	3-1258
Do. Bolt ...	3-1271	3-1271
Do. Nut ...	M202	M202
Saddle Pillar Tube Bottom Lug ...	3-1252	3-1252
Do. Bolt ...	3-1289	3-1289
Do. Nut ...	M202	M202
Do. Washer (spherical) ...	3-1290(2)	3-1290(2)
Do. Washer (spring) ...	N572	15-716



# SIDECAR CHASSIS.

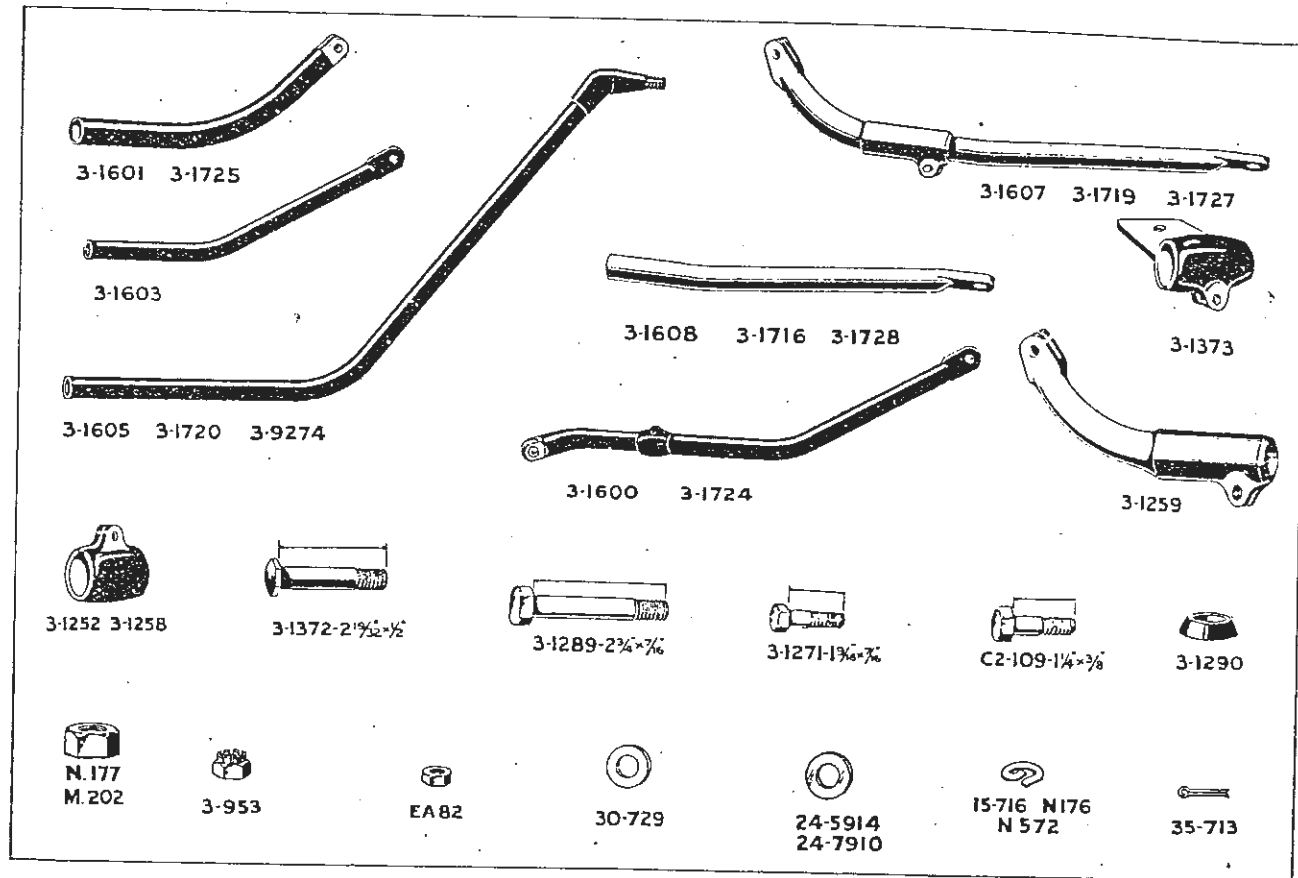



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Sidecar Chassis—continued.

When no figures in brackets are shown one part constitutes a set.

Description.	Number 20	Number 22
Saddle Pillar Connecting Bolt ...	3-1393	3-1393
Do. Nut ...	3-1137	3-1137
Do. Washer (spring) ...	N584	N584
Do. Washer (plain) ...	—	15-8164(2)
Do. Tube Lug Bolt ...	C2-109	C2-109
Do. Nut ...	EAS2	EAS2
Do. Washer (spring) ...	N585	N585

#### MAIN FRAME.

Axle Tube, complete ...	3-9227	3-9227
Main Rear Connection ...	3-1637	3-1700
Do. Washer (spherical) ...	C2-57	C2-57
Do. Washer (double spring) ...	C2-58	C2-58
Do. Nut ...	M365A	M365A
Main Rear Connection Grease Nipple	28-2080	28-2080
Do. Split Pin ...	35-714	35-722
Wheel Bracket ...	3-1251	3-1701
Do. Shackle Pin Bush ...	C2-104A	—

#### INSIDE TIE.

Inside Tie, comprising tube liner and tube end spindle ...	3-9263	3-9263
Tube End Spindle Washer ...	24-5914	24-5914
Do. Nut ...	3-953	3-953
Do. Split Pin ...	35-713	35-713

#### OUTSIDE TIE.


Description.	Number 20	Number 22
Outside Tie, comprising tube liner and tube end spindle ...	3-9264	3-9264
Tube End Spindle Washer ...	24-5914	24-5914
Do. Nut ...	3-953	3-953
Do. Split Pin ...	35-713	35-713

#### FRONT SPRING (Twin).

Front Spring (7 coil), complete with bolts ...	3-1378(2)	—
Front Spring only ...	—	C2-260(2)
Do. Connecting Bolt Retaining Ring ...	3-1364(2)	—
Do. Bracket ...	—	C2-86(2)
Do. Cup ...	C2-238(4)	C2-238(2)
Do. Bolt ...	—	15-2018(4)
Do. Nut ...	—	EAS0(4)
Do. Washer (spring) ...	—	N566(4)
Do. Clamp Washer ...	—	N620(4)
Do. Connecting Bolt Nut ...	EAS2(4)	EAS2(2)
Do. Bearer Bar ...	3-1369	3-1369
Do. Connecting Bolt Washer (spring) ...	N585(2)	N585(2)
Do. Washer (plain) ...	30-650(2)	—
Do. Connecting Bolt (short) .	—	EB144(2)



# SIDECAR CHASSIS.

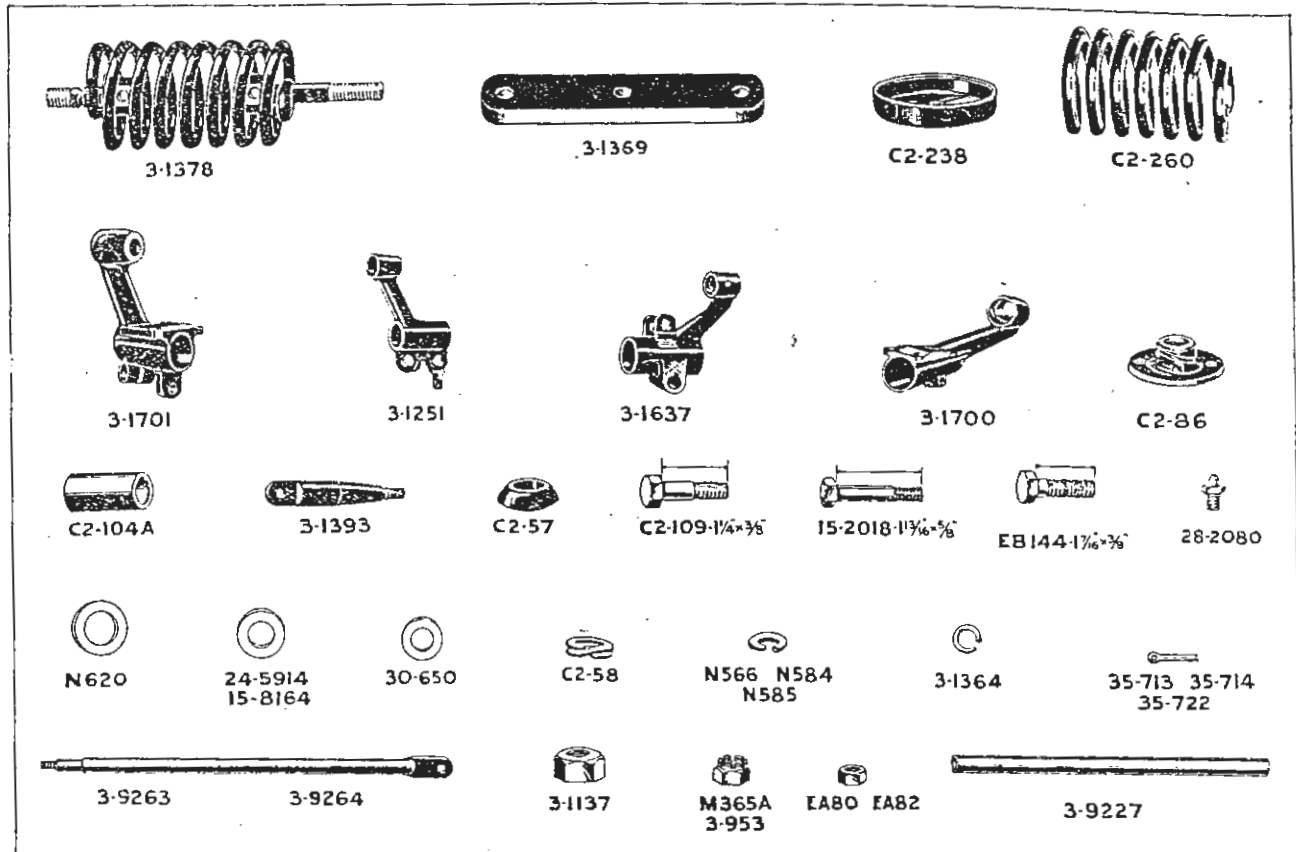



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set

### Sidecar Chassis—continued.

When no figures in brackets are shown one part constitutes a set.

#### REAR SPRING.

Description.	Number 20	Number 22
Rear Spring, with silentbloc ...	3-1639	—
Do. with bush ...	—	3-1707(2)
Rear Spring Bush ...	—	3-1706(2)
Do. Silentbloc ...	3-1628(2)	—
Do. Bolt ...	3-1455	—
Do. Nut ...	15-1166	—
Do. Split Pin ...	35-705	—
Rear Spring Shackle, complete ...	—	3-1704(2)
Do. Bush ...	—	3-1706(2)
Do. Bolt ...	—	3-1383(2)
Do. Nut ...	—	15-5753(2)
Do. Washer (spring) ...	—	N584(2)
Do. Shackle Link (plain) ...	3-1253	—
Do. do. with bolts ...	3-1453	—
Rear Spring Shackle Link Bolt Nut ...	15-1166(2)	—
Do. Split Pin ...	35-705(2)	—
Do. Shackle Link Grease Nipple ...	28-2080	28-2080(2)
Do. do. Distance Piece ...	3-944	—
Do. Clamp Plate ...	3-955	—
Do. Stirrup Bolt ...	3-1169(2)	—
Do. Washer (spring) ...	N585(4)	—
Do. Nut ...	EAS2(4)	—
Do. Gaiter and Laces ...	C2-105(2)	—


Description.	Number 20	Number 22
Rear Spring Bottom Clamp Plate (when box mounted central) ...	3-1642	—
Do. Bottom Clamp Plate (when box mounted 1" off centre) ...	3-1643	—
Clamp Plate Bolt Washer ...	30-729(4)	—
Rear Bearer Bar ...	—	3-1703
Do. Nut ...	—	3-1569(2)
Do. Split Pin ...	—	35-708(2)
Do. Nut ...	—	EAS2(2)
Do. Washer (spring) ...	—	N585(2)
Do. Washer (plain) ...	—	M101A(2)
Do. Thrust Washer ...	—	24-875(2)
Do. Clamp Washer ...	—	30-650(2)
Rear Spring Plate ...	—	3-1714(4)
Do. Clamp Stud ...	—	3-1715(8)
Do. Nut ...	—	EAS0(8)
Do. Washer (spring) ...	—	N566(8)
Rear Bearer Bar Connecting Bolt ...	—	31-68(2)

#### SIDECAR STAND.

Description.	Number 20	Number 22
Sidecar Stand ...	3-1255	3-1379
Stand Bolt ...	EB144	EB144
Do. Nut ...	EB201	EB201
Do. Washer (spring) ...	EB150	EB150



# SIDECAR CHASSIS.

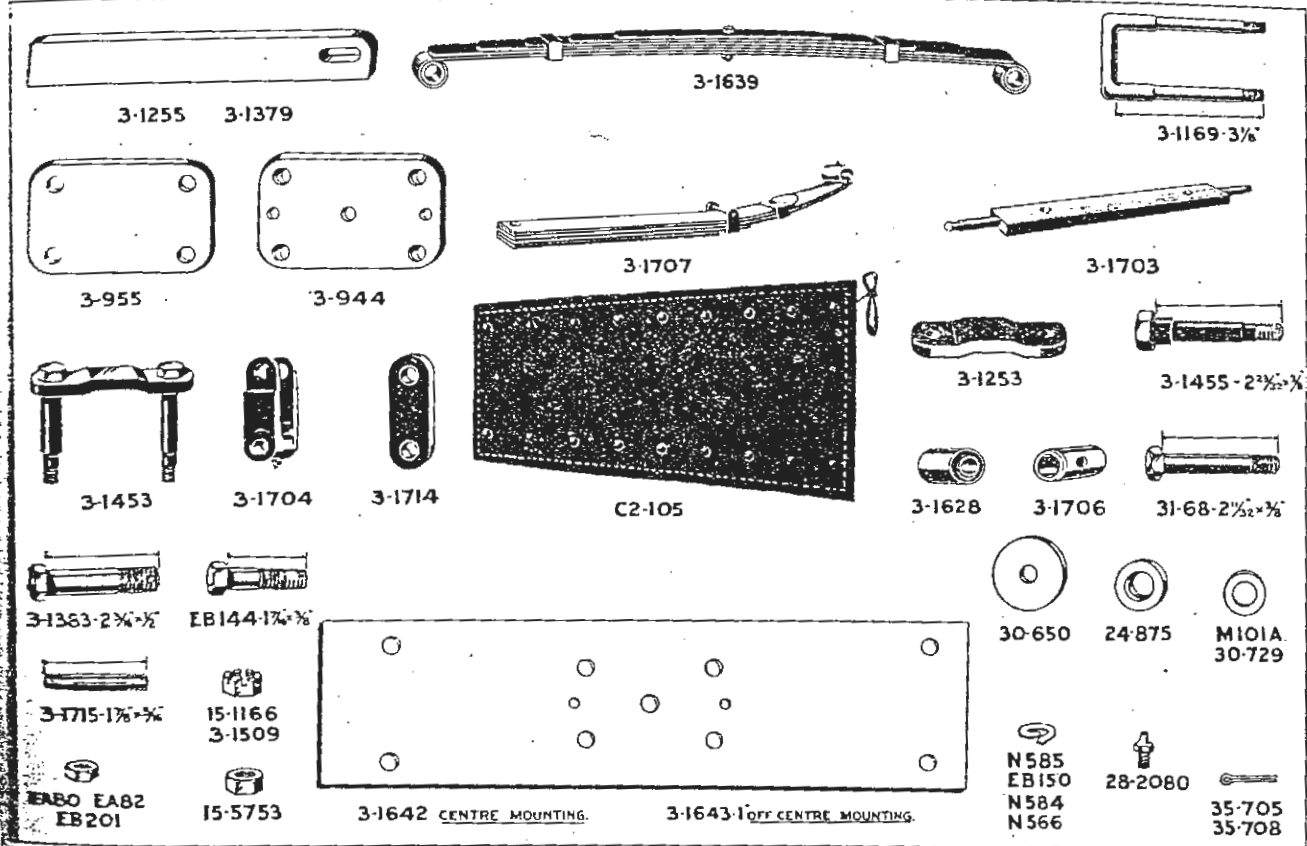







NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

### Sidecar Chassis—continued.

When no figures in brackets are shown one part constitutes a set.

#### WHEEL AND HUB.

Description.	Number 20	Number 22
Sidecar Wheel, complete less tyre,		
spindle and bearing ...	3-9386 ...	3-9380
Wheel Rim (WM3-19) ...	3-9381 ...	3-9381
Wheel Spoke ...	27-7010(40)	27-7010(40)
Spoke Nipple ...	27-6810(40)	27-6810(40)
Hub Shell ...	3-1670-	—
Hub Shell, complete with cups ...	—	3-9077
Hub Balls (31) ...	—	$\frac{1}{4}$ " diam.
Hub Shell Grease Nipple, with loose		
locknut ...	15-5290 ...	—
Hub Shell Grease Nipple ...	—	28-2080
Do. Bearing (inner) ...	65-5883 ...	—
Do. do. (outer) ...	24-4217 ...	—
Hub Grease Retaining Washer (felt) ...	3-1676(2) ...	—
Hub Spindle ...	3-1671 ...	3-1702
Do. Sleeve ...	3-1672 ...	—
Do. Nut ...	3-1106(2) ...	—
Do. Cone (fixed) ...	—	3-1241
Do. Cone (adjusting) ...	—	N563
Do. Cone Nut ...	—	N565
Do. Cone Washer ...	—	N589
Do. Split Pin ...	—	N590


Description.	Number 20	Number 22
Hub Grease Retaining Washer		
Holder ...	3-1673 ...	—
Wheel Spindle Packing Washer ...	27-8039(3) ...	27-8039
Do. Castle Nut ...	3-1116 ...	3-1116
Do. Split Pin ...	N590 ...	N590
Do. Bearing Locknut ...	3-1677 ...	—
Hub Distance Piece, complete ...	3-1686 ...	—
Grease Retaining Washer Cover,		
complete ...	3-1682 ...	—
Do. Inner Ring ...	3-1681 ...	—
Hub Cup (large) ...	—	N605
Do. (small) ...	—	N606
Hub Shell Cap ...	—	3-1685
Hub End Cover (large) ...	3-1688 ...	—

#### MUDGUARD.

Mudguard ...	3-1099 ...	3-1730
Do. Stays, complete ...	3-9152 ...	3-1731
Do. Stay Support Tube, complete ...	3-9344 ...	3-1741



# SIDECAR CHASSIS.

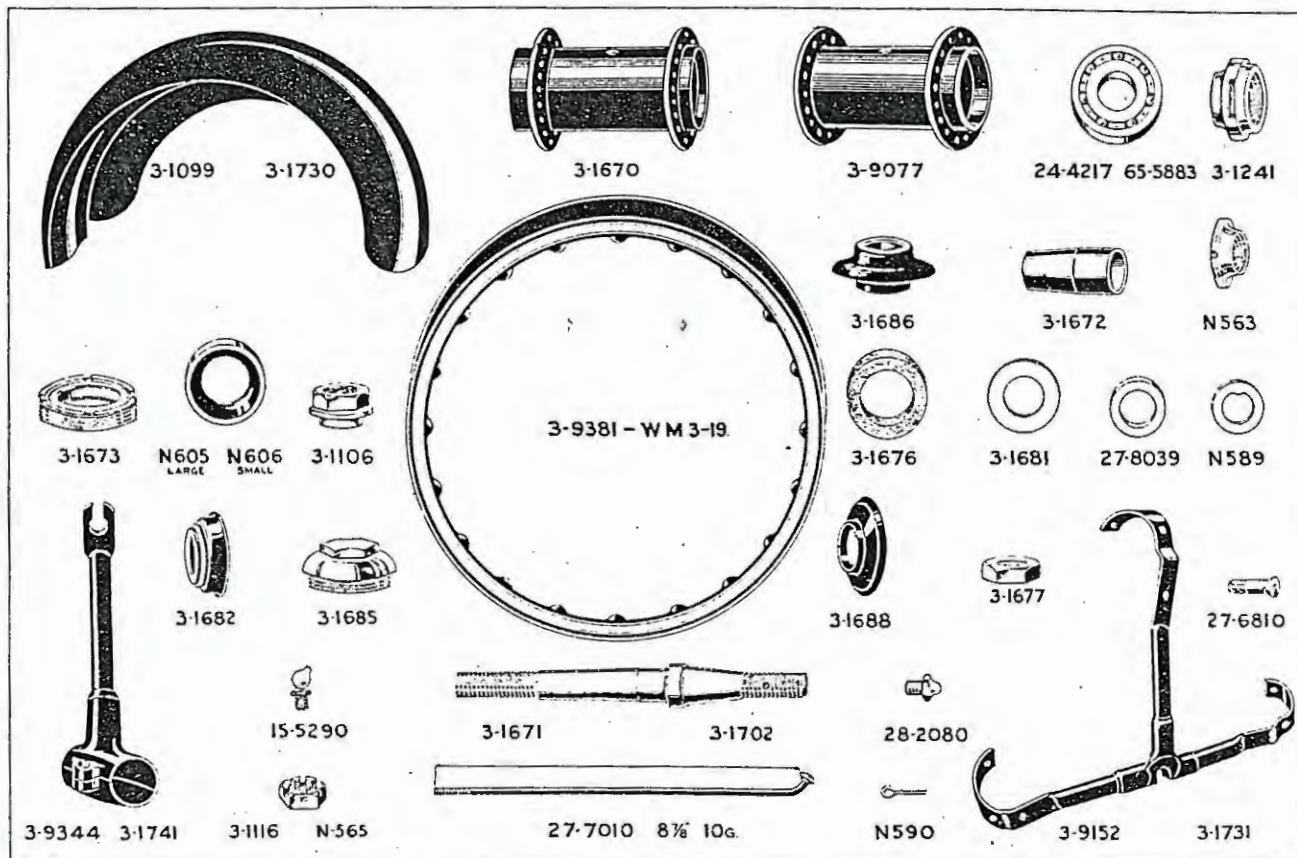



NOTE.—Figures in brackets denote number per set, e.g., (2), 2 per set.

# Sidecar Chassis—continued.

When no figures in brackets are shown one part constitutes a set.

Description.	Number 20	Number 22
Support Tube Lug Bolt ...	N555(2)	N555(2)
Do. Washer (spring) ...	N566(2)	N566(2)
Do. Nut ...	EA80(2)	EA80(2)
Mudguard Upright Stay, complete		
(outer) ...	3-9355	—
Do. Strengthening Plate (top)	3-1117	—
Do. do. (front)	3-1118	—
Do. do. (rear)	3-1119	—
Do. Upright Stay Screw ...	30-988(2)	1-5945(2)
Do. Washer (spring) ...	N574(2)	K197(2)
Do. Washer (plain) ...	N607(2)	27-8560(2)
Do. Nut ...	EB113(2)	M263(2)
Do. Upright Stay Bolt ...	M413	28-2338
Do. Nut ...	EA80	EA80
Do. Washer (spring) ...	N566	24-8784
Do. do. (plain) ...	30-650	M625
Do. Rear Stay Bolt ...	M413	28-2338


Description.	Number 20	Number 22
Mudguard Rear Stay Bolt Nut ...	EA80	EA80
Do. Washer (plain) ...	30-650	M625
Do. Washer (spring) ...	N566	24-8784
Front and Rear Stay Screw ...	3-1120(4)	1-5945(4)
Do. Nut ...	EB113(4)	M263(4)
Do. Washer (spring) ...	N574(4)	K197(4)
Do. Washer (plain) ...	N607(4)	27-8560(4)
Mudguard Support Tube Bolt ...	3-1115	31-7275
Do. Distance Nut ...	24-5860	24-5860
Do. Support Bolt Nut ...	27-6974	27-6974
Do. do. Lug and Spindle Nut ...	—	3-1106
Do. Washer (plain) ...	—	27-8039
Do. Stay Packing Washer ...	—	N620(2)

## SUNDRIES.

Sidecar Lamp (Lucas Ref.) ...	LD109A	LD109A
Sidecar Lamp Packing Washer ...	31-4070	31-4070



# SIDECAR CHASSIS.

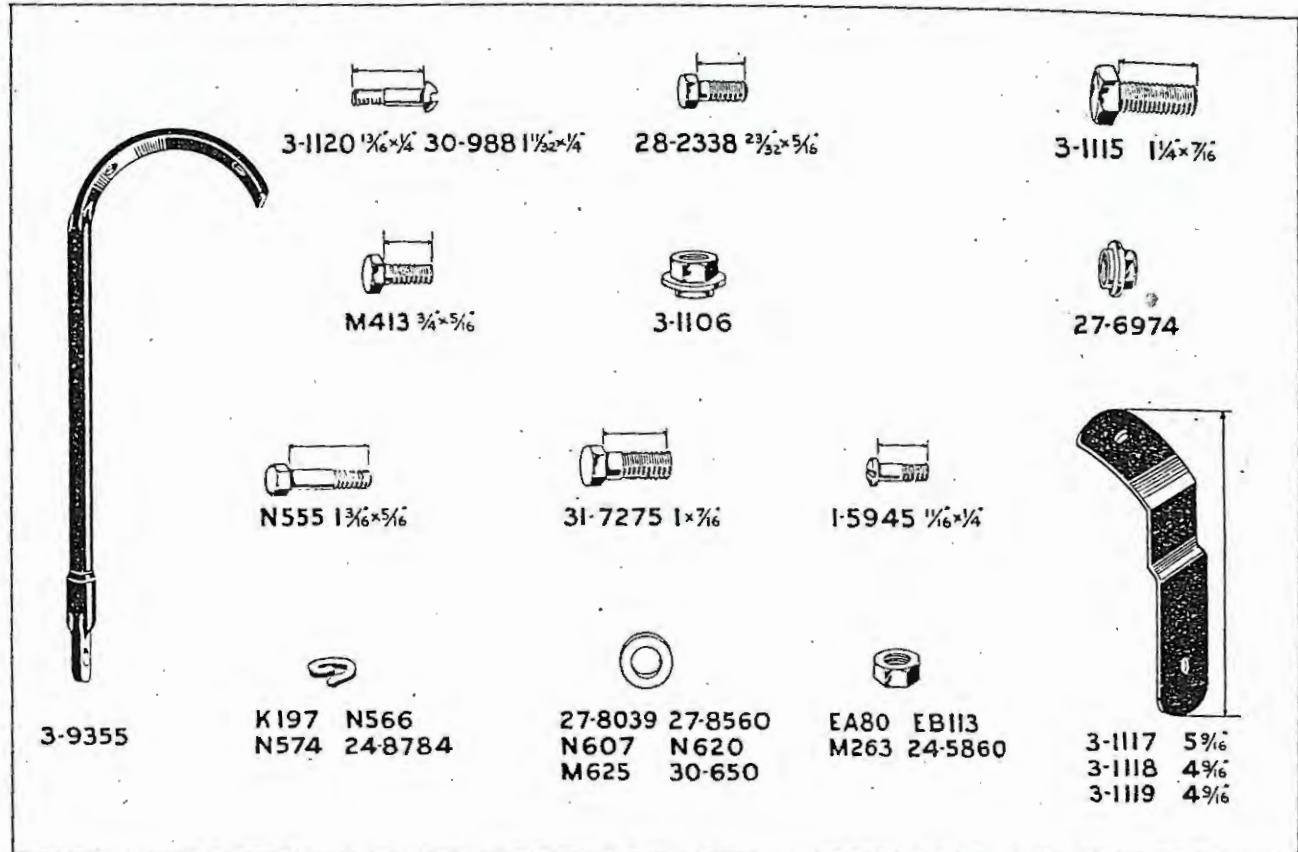



# INDEX.

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
1-4606	Front and rear chaincase fixing screw ... ..	163	162
1-4606	Bottom chainguard screw ...	165	164
1-4606	First aid box support plate screw ... ..	165	200
1-5069	Timing gear plate bolt ...	47	46
1-5069	Front mudguard stay fork end bolt ... ..	139	138
1-5945	Rear number plate bolt (bottom)	147	146
1-6032	Rear wheel adjusting screw nut	95	94
1-6032	Petrol tank coil stud nut ...	169	168
3-1190	Front down tube and chainstay bolt ... ..	97	96
3-1381	Cylinder head stud (short) ...	13	12
3-1399	Silencer fixing bracket bolt ...	57	56
3-1718	Front bottom connecting link .	95	94
15-39	Gear control operating shaft washer... ..	83	82
15-39	Speedometer drive washer ...	137	136
15-40	Crankshaft pump gear key ...	41	40
15-40	Timing pinion key ... ..	41	40
15-46	Cush drive sleeve spring ...	43	42
15-82	Crankcase air release adaptor body fibre disc ... ..	29	28
15-82	Air release disc... ..	35	34
15-152	Crankcase and cylinder base fixing stud nut ... ..	31	30

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
15-267	Kickstarter ratchet pinion sleeve nut ... ..	75	74
15-268	Mainshaft bush (inner cover) .	63	62
15-270	Clutch push rod gland washer	79	78
15-374	Mainshaft nut ... ..	203	202
15-431	Washer (plain) ... ..	various	
15-447	Rear mudguard bottom stay nut	149	148
15-447	Front stand bolt nut ... ..	101	100
15-447	Front stand support bolt nut	101	100
15-476	Gearbox connecting bolt (front)	97	96
15-480	Engine steady stay bolt ...	19	18
15-480	Silencer fixing bolt ... ..	57	56
15-480	Rear mudguard lifting stay bolt (right-hand) ... ..	149	148
15-480	Oil tank bolt ... ..	171	170
15-541	Backstay frame bolt nut ...	99	98
15-541	Backstay and seat lug bolt nut	93	92
15-541	Rear brake pedal shaft nut ...	155	154
15-645	Chaincase oil drain plug ...	163	162
15-686	Rear brake rod spring ...	157	156
15-716	Washer (spring) ... ..	various	
15-816	Rear chain connecting link ...	197	196
15-832	Box spanner ... ..	191	190
15-848	Oil pump bolt ... ..	53	52
15-1120	Carburettor flange stud ...	15	14
15-1166	Rear brake anchor strap nut	155	154
15-1215	Valve spring cup ... ..	17	16
15-1266	Silencer fixing bolt split pin ...	57	56



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
15-1312	Exhaust lifter cable return spring ... ..	181	180
15-1355	Crankcase connecting bolt ...	31	30
15-1367	Carburettor flange stud ...	15	14
15-1367	Inlet manifold stud ...	13	12
15-1410	Timing pinion locking washer.	41	40
15-1455	Front brake shoe fulcrum pin nut ... ..	125	124
15-1455	Rear brake fulcrum pin nut ...	135	134
15-1455	Rear brake pedal locknut ...	155	154
15-1485	Clutch control lever nut ...	77	76
15-1485	Clutch push rod lever nut ...	87	86
15-1525	Valve retaining split collar (exhaust) ... ..	17	16
15-1555	Cush drive sleeve ...	41	40
15-1560	Engine sprocket (21T) ...	43	42
15-1564	Engine sprocket (20T) ...	43	42
15-1565	Engine sprocket (19T) ...	43	42
15-1566	Engine sprocket (18T) ...	43	42
15-1567	Engine sprocket (17T) ...	43	42
15-1568	Engine sprocket (16T) ...	43	42
15-2345	Exhaust pipe finned collar ...	57	56
15-2419	Clutch ring (Ferodo) ...	203	202
15-2436	Legshield clip complete ...	57	56
15-4035	Gear control plunger ...	77	76
15-4040	Gear control plunger spring plug	77	76
15-4100	Gearbox connecting bolt nut washer... ..	97	96
15-4100	Front chaincase sealing washer	159	158
15-4100	Rear brake pedal shaft washer	155	154

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
15-4110	Gearbox inspection cover joint washer... ..	77	76
15-4120	Pinion sleeve bush ...	65	64
15-4121	Kickstarter quadrant ...	73	72
15-4138	Pawl pivot ...	83	82
15-4139	Pawl arm carrier main spring	83	82
15-4141	Pawl (top) ...	83	82
15-4142	Pawl (bottom) ...	83	82
15-4143	Pawl pivot nut... ..	83	82
15-4161	Pawl arm carrier return spring	83	82
15-4165	Pinion sleeve with bush ...	65	64
15-4179	Kickstarter crank ...	73	72
15-4206	Ratchet lever complete with sleeve	83	82
15-4207	Gearbox outer cover bolt ...	61	60
15-4208	Gearbox outer cover stud ...	61	60
15-4211	Gearbox inner cover with fixed fittings ... ..	61	60
15-4213	Gearbox cover stud (long) ...	61	60
15-4219	Ratchet lever sleeve clip ring	85	84
15-4221	Gear control link pin ...	81	80
15-4222	Gear indicating plate ...	85	84
15-4223	Operating plunger sleeve ...	81	80
15-4224	Operating plunger ...	81	80
15-4225	Operating plunger sleeve spring	81	80
15-4226	Pedal shaft bush ...	81	80
15-4227	Ratchet lever sleeve bush ...	81	80
15-4228	Operating plate and pawl arm stop ... ..	81	80
15-4229	Gear control operating shaft...	83	82
15-4231	Gear operating plate ...	83	82



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
15-4232	Gear control operating lever lockwasher ... ..	S1 ...	S0
15-4233	Gear control quadrant spacing collar ... ..	S1 ...	S0
15-4234	Pawl carrier arm washer (.024")	S5 ...	S4
15-4235	Pawl carrier arm washer (.022")	S5 ...	S4
15-4236	Pawl carrier arm (top) ...	S3 ...	S2
15-4239	Gear operating lever ...	S1 ...	S0
15-4240	Gear operating shaft clip ring	S3 ...	S2
15-4241	Operating plate indexing plunger complete ... ..	... not illust'd ...	S2
15-4242	Pawl carrier arm assembly (top)	not illust'd ...	S2
15-4243	Pawl carrier arm assembly (bot- tom) ... ..	... not illust'd ...	S2
15-4246	Gearbox cover locking strip ...	63 ...	62
15-4249	Pawl carrier arm (bottom) ...	S3 ...	S2
15-4253	Gear control link complete ...	S1 ...	S0
15-4254	Gear control link yoke ...	S1 ...	S0
15-4255	Gear control link adjuster ...	S1 ...	S0
15-4260	Gearbox mainshaft ... ..	63 ...	62
15-4261	Clutch push rod ... ..	203 ...	202
15-4306	Clutch centre ... ..	203 ...	202
15-4307	Clutch driven plate ... ..	203 ...	202
15-4308	Clutch sliding plate complete...	203 ...	202
15-4311	Clutch spring ... ..	203 ...	202
15-4312	Clutch spring nut ... ..	203 ...	202
15-4313	Clutch operating cap complete	203 ...	202
15-4315	Clutch cover ... ..	203 ...	202
15-4316	Clutch cover washer ... ..	203 ...	202
15-5093	Steering damper adjusting rod	109 ...	108

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
15-5151	Ball head clip yoke clip ...	111 ...	110
15-5155	Carburettor flange stud washer	various ...	14
15-5155	Kickstarter crank cotter pin washer... ..	73 ...	72
15-5155	Ball head clip bolt washer ...	111 ...	110
15-5155	Handlebar clip bolt washer ...	117 ...	116
15-5190	Fork link bolt (top) ... ..	111 ...	110
15-5196	Fork link bolt nut ... ..	111 ...	110
15-5239	Fork top link (bottom) (tapped holes) ... ..	111 ...	110
15-5240	Fork top link (plain holes) ...	111 ...	110
15-5241	Fork top link (tapped holes)...	111 ...	110
15-5242	Fork top link (bottom) (plain holes) ... ..	111 ...	110
15-5244	Fork friction plate ... ..	111 ...	110
15-5246	Fork link bottom friction link	111 ...	110
15-5247	Fork steering stem bolt ...	111 ...	110
15-5249	Fork link bolt (bottom) ...	111 ...	110
15-5251	Fork link bolt friction washer (Feredo) ... ..	111 ...	110
15-5256	Shock absorber centre nut ...	111 ...	110
15-5257	Shock absorber centre nut lock- washer... ..	111 ...	110
15-5258	Shock absorber locking washer spring ... ..	111 ...	110
15-5260	Shock absorber star washer ...	111 ...	110
15-5290	Front fork grease nipple (angle type) ... ..	113 ...	112
15-5290	Front hub grease nipple (angle type) ... ..	121 ...	120



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
15-5290	Rear hub grease nipple (angle type) ... ..	133	132	15-7383	Rear number plate buffer (rubber)	147	146
15-5290	Rear brake cam bearing grease nipple ... ..	137	136	15-7383	Voltage control support bolt washer (rubber) ... ..	153	152
15-5664	Gearbox adjusting screw nut .	97	96	15-7563	Steering damper rod distance washer... ..	109	108
15-5753	Footrest rod nut ... ..	157	156	15-7563	Rear mudguard lifting stay packing piece ... ..	149	148
15-5816	Rear brake anchor strap ...	155	154	15-7563	Speedometer bracket distance piece ... ..	193	192
15-6240	Chainstay bridge distance collar (centre) ... ..	99	98	15-7961	Rear brake operating lever with stud ... ..	137	136
15-6325	Chainstay bridge connecting stud	99	98	15-7980	Rear brake rod spring ...	157	156
15-6524	Crankcase and cylinder base fixing stud nut ... ..	31	30	15-7985	Rear brake rod flynut ...	157	156
15-6524	Inlet and exhaust tappet locknut	49	48	15-8155	Pillion footrest spindle rubber	161	160
15-6524	Clutch operating spindle nut...	79	78	15-8814	Rear chaincase washer (felt)...	163	162
15-6737	Front hub spindle nut ...	123	122	15-8833	Bottom chainguard ... ..	165	164
15-7037	Rear wheel spoke (left-hand)...	129	128	15-8945	Carburettor spanner ... ..	191	190
15-7045	Rear hub thrust washer ...	131	130	15-8946	Detachable wheel spanner ... not illust'd ...	...	208
15-7046	Rear hub spindle sleeve ...	131	130	15-8950	Valve grinding tool holder complete ... ..	193	192
15-7047	Rear hub spindle sleeve thrust washer... ..	131	130	15-8967	Transmission chain (rear) (91 links) ... ..	197	196
15-7048	Rear hub washer (felt) ...	133	132	15-8968	Transmission chain (rear) (94 links) ... ..	197	196
15-7049	Rear hub spindle sleeve nut...	131	130	15-8972	Rear chain connecting link (cranked) ... ..	197	196
15-7051	Rear hub dust plate ... ..	133	132	15-8976	Rear chain double connecting link ... ..	197	196
15-7059	Rear brake drum washer (felt)	135	134	15-8993	Headlamp bracket bolt (bottom)	195	194
15-7092	Rear hub spindle nut ...	131	130	15-8994	Headlamp bracket bolt (top)...	195	194
15-7104	Front brake anchor bolt ...	127	126				
15-7160	Front mudguard stay plate ...	139	138				
15-7161	Bolt ( $\frac{1}{4}$ ") ... ..	various					
15-7354	Front mudguard support bolt.	141	140				
15-7354	Legshield and footrest bolt ...	207	206				



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
15-9043	Speedometer bracket (fork centre mounting) ... ..	193	192	24-225	Rear number plate bolt (bottom)	147	146
15-9577	Air and throttle midway adjuster	187	186	24-225	Toolbox fixing clip bolt ...	189	188
15-9578	Air and throttle midway adjuster body ... ..	187	186	24-225	Legshield bottom fixing screw.	199	198
15-9579	Air and throttle adjuster body screw ... ..	187	186	24-375	Crankpin roller ... ..	39	38
15-9580	Air and throttle adjuster body screw nut ... ..	187	186	24-389	Cush drive bearing alignment washer... ..	41	40
15-9583	Air control cable cover ...	185	184	24-563	Inlet manifold stud nut ...	13	12
15-9611	Combined mag. and exhaust control lever (long) ...	187	186	24-563	Rocker adjusting screw nut ...	21	20
21-5	Crankcase and gearbox fixing stud nut ... ..	33	32	24-563	Gear control link locknut ...	81	80
21-431	Central stand nut ... ..	103	102	24-563	Battery bracket and frame stud nut ... ..	107	106
21-2873	Gearbox outer cover bolt ...	61	60	24-595	Rear brake rod spring ...	157	156
21-2880	Top chainguard and crankcase fixing bolt ... ..	165	164	24-722	Crankcase roller bearing (gear side) ... ..	29	28
21-2888	Gearbox inner cover bolt ...	61	60	24-724	Crankcase roller bearing (drive side) ... ..	29	28
21-2888	Gear selector cam plate bearing screw ... ..	85	84	24-732	Crankcase ball bearing (drive side) ... ..	29	28
21-2889	Gearbox inner cover bolt ...	61	60	24-898	Front hub bearing adjusting sleeve locknut ... ..	123	122
21-2902	Carburettor fixing bolt ...	15	14	24-949	Crankcase stud... ..	31	30
21-2902	Timing gear plate bolt ...	47	46	24-978	Petrol tank coil stud washer...	169	168
21-2903	Rocker box bolt (inlet) ...	19	18	24-978	Petrol tank coil stud washer	169	168
24-68	Gear control plunger spring ...	77	76	24-978	Valve spring cover screw washer	<i>various</i>	
24-102	Horn, saddle spring and mud-guard bolt ... ..	99	98	24-978	Oil pump fixing bolt washer (spring) ... ..	53	52
24-195	Magdyno driving pinion nut...	43	42	24-1620	Crankcase and cylinder base fixing stud ... ..	31	30
24-209	Rear brake anchor bolt ...	137	136	24-1792	Piston scraper ring (high compression) ... ..	25	24



Compt. No.	DESCRIPTION	Page illustrated.	Page described.
24-1793	Piston scraper ring (high compression) (1mm. oversize) ...	<i>See Piston Chart</i>	
24-1794	Piston scraper ring (high compression) (1mm. oversize) ...	<i>See Piston Chart</i>	
24-2112	Crankcase bearing oil retaining washer (drive side) ...	29	28
24-2113	Oil flinger (drive side) ...	39	38
24-4065	Gearbox mainshaft ballrace ...	63	62
24-4065	Constant mesh gear ball bearing	71	70
24-4214	Gearbox inner cover screw ...	61	60
24-4214	Kickstarter crank spring anchor screw ...	73	72
24-4217	Gearbox cover ball journal ...	63	62
24-4217	Gearbox mainshaft ballrace ...	63	62
24-4221	Layshaft gear (17T and 20T) ...	67	66
24-4223	Layshaft bush (short) ...	67	66
24-4225	Gearbox oil retaining washer ...	63	62
24-4226	Gearbox sprocket nut ...	71	70
24-4227	Push rod cover tube stud ...	51	50
24-4231	Mainshaft gear (20T and 16T) ...	65	64
24-4232	Mainshaft washer (felt) ...	63	62
24-4235	Oil flinger washer ...	77	76
24-4236	Oil retaining washer (small) ...	77	76
24-4237	Mainshaft distance washer ...	63	62
24-4241	Layshaft bush (long) ...	67	66
24-4245	Control shaft bush (inner cover) ...	75	74
24-4247	Gear control quadrant ...	75	74
24-4248	Gear control quadrant bush ...	75	74
24-4251	Gear control plunger cup ...	77	76

Compt. No.	DESCRIPTION	Page illustrated.	Page described.
24-4255	Kickstarter ratchet sleeve lock nut ...	75	74
24-4255	Camshaft dynamo sprocket nut	49	48
24-4256	Kickstarter ratchet spring ...	75	74
24-4258	Kickstarter quadrant bush ...	73	72
24-4263	Gearbox sprocket nut lockwasher	71	70
24-4278	Kickstarter ratchet pinion sleeve lockwasher ...	75	74
24-4280	Gearbox sprocket (18T) ...	71	70
24-4282	Kickstarter ratchet pinion sleeve nut ...	75	74
24-4288	Gearbox oil baffle ...	77	76
24-4393	Dog clutch (high and low gear)	65	64
24-4394	Gearbox layshaft ...	67	66
24-5160	Crankcase and cylinder base fixing stud nut ...	31	30
24-5205	Carburettor flange stud ...	15	14
24-5205	Lifting handle bottom stud (left-hand) ...	149	148
24-5208	Ball head clip bolt locknut ...	111	110
24-5226	Front fork spring distance washer	113	112
24-5227	Front fork spring top sleeve ...	113	112
24-5228	Front spring top bolt ...	113	112
24-5233	Front fork bottom sleeve with peg ...	113	112
24-5237	Front fork spring sleeve washer (bottom) ...	113	112
24-5860	Front brake shoe fulcrum pin nut ...	125	124
24-5860	Rear brake shoe fulcrum pin nut	135	134



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
24-5914	Rocker trunnion washer ...	21	20
24-5914	Footrest rod washer (plain) ...	157	156
24-6035	Steering damper knob washer (spring) ...	109	108
24-6040	Nut ( $\frac{1}{8}$ " ) ...	<i>various</i>	
24-6055	Rear stand bolt ...	103	102
24-6770	Rear mudguard lifting handle bolt ...	149	148
24-6790	Front hub washer (felt) ...	121	120
24-6792	Front hub washer (right-hand)	121	120
24-6841	Front hub washer retaining ring (right-hand) ...	121	120
24-6846	Front hub felt washer retaining ring (left-hand) ...	121	120
24-6860	Front hub bearing ...	121	120
24-6867	Front hub bearing adjusting sleeve ...	123	122
24-6868	Front hub bearing locknut ...	123	122
24-6899	Front wheel spoke (right-hand)	119	118
24-6912	Front wheel spoke (left-hand) .	121	120
24-6912	Rear wheel spoke (left-hand) .	129	128
24-6994	Front hub spindle locknut ...	123	122
24-7000	Camshaft pinion key nut ...	47	46
24-7012	Front wheel spoke (right-hand)	119	118
24-7012	Front wheel spoke (left-hand)	121	120
24-7012	Rear wheel spoke (left-hand) .	129	128
24-7012	Rear wheel spoke (right-hand)	129	128
24-7014	Rear wheel spoke (right-hand)	129	128
24-7047	Rear hub washer (felt) ...	133	132
24-7051	Front hub spindle distance piece	123	122

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
24-7058	Rear hub bearing ...	131	130
24-7065	Exhaust pipe legshield screw	57	56
24-7065	Rear hub dust plate screw ...	133	132
24-7065	Front number plate securing screw ...	141	140
24-7065	Chainguard strap bolt... ..	165	164
24-7068	Rear hub dust plate washer...	133	132
24-7068	Front and rear chaincase fixing washer... ..	163	162
24-7068	Clutch cover screw washer ...	203	202
24-7127	Front brake cam ...	125	124
24-7127	Rear brake cam ...	137	136
24-7178	Gearbox inspection cover screw	77	76
24-7343	Silencer clip bolt ...	57	56
24-7385	Rear mudguard chainstay bridge clip ...	147	146
24-7565	Ignition control complete less cable and cover ...	205	204
24-7568	Ignition control lever body ...	179	178
24-7729	Clutch cable nipple control end (bottom) ...	177	176
24-7767	Front brake shoe complete (right-hand) ...	125	124
24-7767	Rear brake shoe complete (right- hand) ...	135	134
24-7768	Front brake shoe complete (left- hand) ...	125	124
24-7768	Rear brake shoe complete (left- hand) ...	135	134
24-7775	Front brake shoe lining ...	125	124



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
24-7775	Rear brake shoe lining ...	135	... 134	24-9569	Throttle twist grip friction spring	185	... 184
24-7800	Front brake cam operating lever	125	... 124	24-9570	Throttle twist grip friction screw	185	... 184
24-7810	Front brake shoe spring ...	125	... 124	24-9571	Throttle twist grip friction screw locknut ... ..	185	... 184
24-7810	Rear brake shoe spring ...	135	... 134	24-9572	Throttle twist grip cable stop	185	... 184
24-7848	Front brake cable adjusting screw complete ... ..	175	... 174	24-9573	Throttle twist grip body screw	185	... 184
24-7849	Front brake cable adjusting screw locknut ... ..	175	... 174	25-496	Crankcase and cylinder base fixing stud ... ..	31	... 30
24-7911	Rear brake anchor bolt washer	137	... 136	25-4251	Clutch push rod thrust pin ...	77	... 76
24-7990	Brake shoe lining rivet (front and rear) ... ..	not illust'd	... 124-134	25-5226	Steering damper adjusting knob	109	... 108
24-8045	Front brake shoe fulcrum pin washer... ..	127	... 126	25-5241	Steering damper bottom plate	109	... 108
24-8045	Rear brake fulcrum pin washer (serrated) ... ..	135	... 134	25-5247	Steering damper star washer...	109	... 108
24-8328	Cylinder head timing bolt ...	13	... 12	25-7151	Exhaust legshield clip nut ...	57	... 56
24-8328	Bottom bracket chainstay bridge bolt ... ..	153	... 152	25-7151	Front number plate securing screw nut ... ..	143	... 142
24-8504	Petrol filter washer (fibre) ...	169	... 168	25-7151	Bottom chainguard bottom screw locknut ... ..	165	... 164
24-8713	Transmission chain (rear) (95 links) ... ..	197	... 196	25-7151	Legshield strap bolt nut ...	207	... 206
24-8784	Spring washer ... ..	various		25-7180	Front brake cam washer ...	125	... 124
24-8930	Transmission chain (front) (68 links) ... ..	195	... 194	25-9360	Clutch cable adjusting screw complete ... ..	177	... 176
24-8931	Transmission chain (front) (69 links) ... ..	195-197	... 194-196	25-9365	Clutch cable adjusting screw locknut ... ..	177	... 176
24-8932	Transmission chain (front) (70 links) ... ..	195-197	... 194-196	26-650	Clutch chainwheel roller ...	87	... 86
24-8944	Cable clip (shamrock pattern)	195	... 194	26-1253	Oil return pipe banjo screw ...	19	... 18
24-9511	Throttle cable cover ... ..	185	... 184	26-4138	Clutch operating cap bush washer	203	... 202
				26-6689	Rear hub packing washer ...	133	... 132
				26-6824	Rear wheel spoke (right-hand)	129	... 128
				26-6855	Rear hub spindle sleeve locking washer... ..	133	... 132



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
26-6861	Rear hub bearing locknut ...	131	130
26-6865	Rear hub retaining cup ...	133	132
26-6890	Rear hub bearing ...	131	130
26-9461	Bottom chainguard screw washer	165	164
27-181	Crankcase plug screw ...	27	26
27-207	Chaincase inspection cap washer	163	162
27-209	Chaincase inspection cap ...	163	162
27-261	Ball bearing (gear side) ...	29	28
27-279	Crankcase stud (short) ...	31	30
27-347	Layshaft sliding gear key ...	69	68
27-1037	Crankcase connecting stud (medium)	33	32
27-1111	Valve rocker thrust washer ...	21	20
27-1163	Exhaust lifter cable holder ...	23	22
27-1163	Clutch cable stop ...	79	78
27-1239	Engine shaft rivet ...	not illust'd	38
27-1386	Idler pinion key ...	47	46
27-1589	Timing cover dowel ...	35	34
27-1589	Gearbox inner cover dowel ...	63	62
27-4027	Gearbox mainshaft ballrace ...	63	62
27-4033	Gearbox oil retaining washer...	63	62
27-4057	Gearbox sprocket nut ...	71	70
27-4063	Gearbox sprocket nut lockwasher	71	70
27-4093	Gearbox mainshaft spring ring	63	62
27-4099	Gearbox mainshaft spring ring retaining ring ...	63	62
27-4106	Kickstarter ratchet pinion ...	75	74
27-4112	Kickstarter ratchet ...	75	74
27-4146	Layshaft 1st gear pinion (30T)	67	66
27-4258	Gearbox inspection cover screw	77	76
27-4267	Layshaft thrust washer ...	69	68

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
27-4290	Layshaft sleeve bush ...	69	68
27-4401	Gearbox cover stud nut ...	61	60
27-4401	Rear wheel adjusting screw nut	95	94
27-4401	Legshield stay bolt nut ...	207	206
27-4411	Clutch push rod thrust pin nut	77	76
27-4424	Mainshaft sliding pinion (27T)	67	66
27-4429	Mainshaft gear (22T) ...	65	64
27-4436	Layshaft sliding gear ...	69	68
27-4447	Kickstarter ratchet spring ...	75	74
27-4517	Rear brake rod toggle end screw	157	156
27-5135	Ball head clip bolt ...	111	110
27-5135	Front fork top yoke clip bolt	115	114
27-5152	Steering damper anchor plate	109	108
27-5156	Cylinder head bolt (long) ...	13	12
27-5156	Dynamo strap clip bolt ...	45	44
27-5446	Front stand support bolt ...	101	100
27-5674	Gearbox connecting bolt ...	93	92
27-5676	Gearbox connecting bolt nut washer... ..	97	96
27-5683	Crankcase shield stud (front and rear) ...	59	58
27-5683	Gearbox connecting stud ...	95	94
27-5683	Engine yoke plate frame stud (long) ...	93	92
27-5683	Front down tube and exhaust pipe stud ...	101	100
27-5684	Engine yoke plate frame stud (short)... ..	93	92
27-5710	Gearbox adjusting screw ...	97	96
27-5768	Carburettor flange stud ...	205	204



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
27-6043	Engine steady stay bolt washer (spring) ... ..	<i>various</i>	
	... and seat lug bolt ... ..	93	92
27-6260	Cylinder head bolt (short) ...	13	12
27-6275	Frame, crankcase and exhaust pipe lug stud ... ..	93	92
27-6311	Rear brake pedal return spring bolt ... ..	155	154
27-6312	Pillion footrest spindle bolt ...	161	160
27-6510	Saddle rear connecting bolt ...	95	94
27-6716	Rear hub spindle loc nut ...	131	130
27-6732	Rear hub spindle nut ...	131	130
27-6738	Rear hub adjusting plate ...	133	132
27-6808	Spoke nipple ... ..	131	130
27-6810	Front wheel spoke nipple ...	121	120
27-6813	Front wheel spoke nipple ...	121	120
27-6813	Rear wheel spoke nipple ...	131	130
27-7166	Front mudguard support bolt washer ... ..	141	140
27-7768	Exhaust cable nipple ...	181	180
27-7979	Legshield support bar frame clip nut ... ..	199	198
27-7979	Legshield stay tube sleeve nut	207	206
27-8039	Rear hub spindle distance collar	131	130
27-8059	Rear brake pedal shaft nut ...	155	154
27-8059	Footrest rod nut ... ..	157	156
27-8436	Petrol filter ... ..	169	168
27-8443	Petrol filter ... ..	169	168
27-8447	Petrol tank support bolt sleeve	169	168

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
27-8448	Petrol tank support rubber (front) ... ..	169	168
27-8449	Petrol tank buffer cup (rubber)	169	168
27-8552	Petrol tap ... ..	169	168
27-8553	Petrol tap ... ..	169	168
27-8560	Washer (plain) ... ..	<i>various</i>	
27-8746	Front chain connecting link ...	197	196
27-8746	Rear chain connecting link ...	197	196
27-8805	Front chain connecting link (cranked) ... ..	197	196
27-8805	Rear chain connecting link (cranked) ... ..	197	196
27-8810	Front chain double connecting link ... ..	197	196
27-8810	Rear chain double connecting link ... ..	197	196
27-8925	Tappet adjusting spanner ...	191	190
27-8958	Inflator ... ..	193	192
27-9001	Toolbox fixing clip ... ..	189	188
27-9021	Lamp bracket (top) ... ..	195	194
27-9329	Clutch cable nipple (control end (bottom) ... ..	177	176
27-9330	Front brake cable nipple (bottom)	175	174
27-9353	Front brake cable cover cap...	175	174
27-9353	Clutch cable cover cap ...	177	176
27-9426	Throttle twist grip handlebar clip ... ..	183	182
27-9428	Throttle twist grip end plug...	183	182
27-9429	Throttle twist grip end screw	183	182



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
27-9433	Throttle twist grip cantilever pin ... ..	183	182
27-9439	Throttle twist grip long slide	183	182
27-9443	Ignition control cable nipple (control end) ... ..	179	178
27-9443	Air control cable nipple (control end) ... ..	185	184
27-9443	Throttle cable nipple (control end) ... ..	187	186
27-9443	Combined mag and exhaust control cable nipple ... ..	187	186
27-9444	Throttle twist grip rubber grip	183	182
27-9450	Twist grip handlebar clip screw	183	182
27-9452	Throttle twist grip locknut ...	183	182
27-9454	Throttle twist grip short slide	183	182
27-9457	Throttle twist grip cantilever with guide strip ... ..	183	182
27-9470	Throttle twist grip washer ...	183	182
27-9473	Helix tube and strip ... ..	183	182
27-9480	Throttle twist grip less cable and cover ... ..	183	182
27-9482	Throttle twist grip rubber grip (left-hand) ... ..	183	182
27-9506	Air control cable nipple (carburettor end) ... ..	185	184
27-9506	Throttle cable nipple (carburettor end) ... ..	187	186
27-9515	Air control cable ... ..	185	184
27-9554	Combined mag and exhaust control division plate ...	187	186

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
27-9561	Combined mag and exhaust control cap ... ..	187	186
27-9567	Ignition control centre body cap screw ... ..	179	178
27-9567	Air lever centre body cap screw	181	180
27-9567	Combined mag and exhaust control bolt ... ..	187	186
27-9573	Ignition control body cap ...	179	178
27-9573	Air lever control body cap ...	181	180
27-9579	Ignition control cable cover cap	179	178
27-9579	Exhaust control cable cover cap	181	180
27-9579	Air control cable cover cap ...	185	184
27-9579	Throttle cable cover cap ...	185	184
27-9600	Ignition control spring washer	179	178
27-9600	Air lever spring washer ...	181	180
27-9600	Combined mag and exhaust control spring washer ...	187	186
28-43	Gearbox drain plug ... ..	77	76
28-118	Valve rocker trunnion nut ...	21	20
28-243	Crankcase drain plug ... ..	29	28
28-243	Gearbox oil level plug ... ..	77	76
28-2080	Grease nipple ... ..	<i>various</i>	
28-2338	Electric horn fixing bolt ...	101	100
28-2338	Prop stand clip bolt ... ..	103	102
28-2338	Front mudguard bridge fork fixing bolt ... ..	143	142
28-2338	Mudguard and chainstay bridge fixing bolt ... ..	151	150
28-2338	Chainguard strap bolt ... ..	165	164
28-2338	Petrol tank support bolt (front)	169	168



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
28-4265	Grease gun ... ..	191	190
29-224	Valve push rod... ..	51	50
29-252	Inlet tappet head ... ..	49	48
29-410	Valve retaining split collar (in- let and exhaust) ... ..	17	16
29-541	Shakeproof washer ... ..	<i>various</i>	
29-565	Crankcase and cylinder base fixing stud (front) ... ..	31	30
29-776	Crankpin nut ... ..	39	38
29-778	Crankpin roller... ..	39	38
29-905	Timing pinion locking nut ... ..	41	40
29-2109	Cylinder valve guide (inlet) ... ..	15	14
29-2110	Cylinder valve guide (exhaust) ... ..	15	14
29-2111	Cylinder base paper washer ... ..	13	12
29-2120	Cylinder valve (inlet) ... ..	15	14
29-2121	Cylinder valve (exhaust) ... ..	15	14
29-2124	Cylinder valve (inlet) ... ..	15	14
29-2128	Timing cover (outer) ... ..	33	32
29-2129	Timing cover with fixed fittings (inner)... ..	35	34
29-2132	Timing cover joint washer (outer) ... ..	33	32
29-2133	Timing cover joint washer (inner) ... ..	35	34
29-2134	Camshaft timing cover bush (outer) ... ..	47	46
29-2135	Camshaft timing cover bush (inner)... ..	47	46
29-2136	Timing cover inner screw (long) ... ..	35	34
29-2141	Camshaft bush (crankcase) ... ..	47	46
29-2148	Inlet and exhaust cam rocker ... ..	49	48
29-2158	Tappet recess cover screw ... ..	51	50

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-2159	Tappet recess cover screw washer ... ..	51	50
29-2162	Camshaft pinion ... ..	47	46
29-2164	Camshaft ... ..	47	46
29-2165	Camshaft shim ... ..	49	48
29-2170	Cam rocker spindle distance piece circlip ... ..	49	48
29-2171	Cam rocker spindle distance piece ... ..	49	48
29-2172	Camshaft dynamo sprocket lock washer... ..	49	48
29-2173	Cam rocker spindle ... ..	49	48
29-2177	Dynamo strap stud ... ..	45	44
29-2180	Inlet and exhaust tappet ... ..	49	48
29-2182	Timing pinion ... ..	41	40
29-2187	Camshaft dynamo sprocket ... ..	49	48
29-2196	Crankpin... ..	39	38
29-2198	Dynamo driven sprocket ... ..	45	44
29-2199	Dynamo driving chain ... ..	45	44
29-2201	Dynamo strap ... ..	45	44
29-2203	Dynamo strap eyebolt ... ..	45	44
29-2240	Crankcase air release adaptor body ... ..	29	28
29-2241	Crankcase air release adaptor ... ..	29	28
29-2242	Crankcase air release adaptor screw ... ..	29	28
29-2255	Cylinder barrel ... ..	13	12
29-2256	Cylinder head with valve guides and studs ... ..	13	12
29-2259	Cylinder head stud ... ..	13	12
29-2260	Rocker valve cover ... ..	17	16



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-2261	Rocker valve cover joint washer	17	16
29-2262	Cylinder base paper washer ...	13	12
29-2265	Cylinder head washer ...	13	12
29-2266	Valve rocker trunnion...	21	20
29-2267	Valve rocker trunnion bolt ...	21	20
29-2268	Inlet and exhaust valve rocker	21	20
29-2269	Valve rocker trunnion locking plate ...	21	20
29-2270	Valve rocker spindle spring ...	21	20
29-2271	Rocker adjusting screw ...	21	20
29-2274	Piston only ...	25	24
29-2276	Connecting rod complete with bush ...	37	36
29-2280	Valve cover breather complete	17	16
29-2285	Inlet and exhaust cam rocker	49	48
29-2286	Camshaft ...	47	46
29-2311	Piston only ( $\frac{1}{2}$ mm. oversize)...	See Piston Chart	
29-2312	Piston only (1mm. oversize) ...	See Piston Chart	
29-2319	Crankcase (gear side) with fixed fittings ...	27	26
29-2321	Crankcase (drive side) with fixed fittings ...	27	26
29-2326	Crankcase (gear side) with fixed fittings ...	27	26
29-2330	Crankcase air release pipe with nipple ...	29	28
29-2332	Crankcase stud (top) ...	31	30
29-2544	Cylinder barrel with valve guides	13	12
29-2547	Cylinder head ...	13	12
29-2554	Tappet recess cover ...	51	50

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-2561	Piston complete with gudgeon pin, rings, and retaining springs ...	not illust'd ... 22	
29-2562	Piston complete ( $\frac{1}{2}$ mm. oversize)	See Piston Chart	
29-2563	Piston complete (1mm. oversize)	See Piston Chart	
29-2568	Piston complete with gudgeon pins, rings and retaining springs ...	not illust'd ... 22	
29-2569	Piston complete ( $\frac{1}{2}$ mm. oversize)	See Piston Chart	
29-2570	Piston complete (1mm. oversize)	See Piston Chart	
29-2620	Piston ring ...	25	24
29-2621	Piston ring ( $\frac{1}{2}$ mm. oversize) ...	See Piston Chart	
29-2622	Piston ring (1mm. oversize) ...	See Piston Chart	
29-2632	Flywheel (drive side) with engine shaft assembled ...	39	38
29-2634	Cush drive bearing distance collar ...	41	40
29-2971	Exhaust pipe complete ...	55	54
29-2975	Silencer complete ...	57	56
29-2980	Exhaust pipe complete ...	55	54
29-3183	Mainshaft packing washer (.005")	63	62
29-3184	Mainshaft packing washer (.010")	63	62
29-3240	Gearbox outer cover with fixed fittings ...	61	60
29-3242	Gearbox cover stud nut ...	61	60
29-3243	Control shaft retaining pin plug	75	74
29-3244	Kickstarter crank ...	73	72
29-3245	Clutch control lever complete	77	76
29-3248	Gear operating spindle ...	81	80



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-3250	Footchange operating pedal rubber... ..	85	84
29-3254	Gearbox shell complete with fixed fittings... ..	61	60
29-3255	Gearbox shell ... ..	<i>not illust'd</i>	60
29-3258	Gearbox inner cover with fixed fittings ... ..	61	60
29-3260	Clutch push rod bush (mainshaft)	79	78
29-3265	Gear operating spindle bush...	81	80
29-3266	Gear control shaft bush (inner cover) ... ..	75	74
29-3267	Kickstarter quadrant bush (inner cover) ... ..	73	72
29-3268	Kickstarter quadrant bush (outer cover) ... ..	73	72
29-3269	Footchange return spring stop	83	82
29-3272	Mainshaft oil seal ring ...	63	62
29-3274	Mainshaft shim... ..	63	62
29-3282	Gear control shaft ... ..	75	74
29-3284	Operating fork (high gear) (mainshaft) ... ..	75	74
29-3286	Operating fork (low gear) (lay- shaft) ... ..	75	74
29-3287	Layshaft packing washer ...	69	68
29-3288	Gearbox layshaft ... ..	67	66
29-3289	Layshaft sliding gear lockwasher	69	68
29-3290	Kickstarter quadrant ... ..	72	71
29-3296	Gearbox inspection cover ...	77	76
29-3297	Gearbox inspection cover joint washer... ..	77	76

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-3298	Gear control quadrant complete	81	80
29-3302	Footchange return spring ...	83	82
29-3303	Pawl spring ... ..	83	82
29-3304	Gearbox cover stud (long) ...	61	60
29-3307	Kickstarter crank spring ...	73	72
29-3308	Kickstarter crank return stop rubber... ..	73	72
29-3312	Gearbox cover joint washer (outer) ... ..	61	60
29-3313	Gearbox cover joint washer (inner)... ..	61	60
29-3314	Operating plate stop ... ..	83	82
29-3319	Washer (shakeproof) ... ..	<i>various</i>	
29-3404	Pawl carrier plate complete ...	83	82
29-3412	Footchange operating pedal ...	85	84
29-3431	Gearbox mainshaft ... ..	63	62
29-3432	Gearbox sprocket (17T) ... ..	71	70
29-3791	Clutch push rod ... ..	87	86
29-3794	Clutch push rod thrust pin ...	77	76
29-3825	Gearbox pinion sleeve... ..	65	64
29-3835	Gearbox sprocket nut... ..	71	70
29-3836	Gearbox sprocket nut lockwasher	71	70
29-3837	Layshaft pinion sleeve with bushes... ..	69	68
29-3839	Kickstarter ratchet pinion sleeve	75	74
29-3850	Kickstarter ratchet spring ...	75	74
29-3857	Gearbox mainshaft ballrace ...	63	62
29-3858	Pinion sleeve oil retaining washer	65	64
29-3860	Clutch push rod ... ..	87	86
29-4075	Engine plate (front) ... ..	91	90



Compt No.	DESCRIPTION.	Page illustrated.	Page described.
29-4100	Crankcase and engine plate stud	97	96
29-4101	Crankcase connecting stud ...	33	32
29-4101	Legshield bottom bracket and crankcase stud ... ..	199	198
29-4102	Backstay frame bolt ... ..	99	98
29-4103	Engine frame bolt (front plate)	93	92
29-4132	Chainstay engine plate bolt ...	99	98
29-4181	Chainstay central stand anchor lug ... ..	99	98
29-4183	Engine plate (rear) (left and right-hand) ... ..	91	90
29-4253	Frame front complete ... ..	91	90
29-4257	Backstays complete ... ..	97	96
29-4259	Chainstay complete ... ..	97	96
29-4654	Battery carrier complete ... ..	105	104
29-4655	Battery carrier bracket ... ..	105	104
29-4657	Battery carrier strap ... ..	105	104
29-4661	Battery carrier strap bolt ... ..	105	104
29-4662	Battery carrier strap bolt saddle washer ... ..	105	104
29-4662	Dynamo strap eye bolt washer	45	44
29-4664	Battery carrier strap hinge plate	105	104
29-4665	Battery bracket locating strip complete ... ..	105	104
29-4840	Central stand engine plate dis- tance piece ... ..	103	102
29-4860	Central stand complete ... ..	103	102
29-4876	Handlebar ... ..	not illust'd	104
29-5156	Kickstarter pedal bolt ... ..	71	70
29-5264	Front fork assembled ... ..	not illust'd	108

Compt No.	DESCRIPTION.	Page illustrated.	Page described.
29-5273	Front fork shaft ... ..	115	114
29-5283	Front fork shaft plug ... ..	115	114
29-5286	Front fork bottom yoke com- plete ... ..	115	114
29-5289	Front fork bottom yoke bolt ...	115	114
29-5290	Front fork steering stem ad- justing sleeve ... ..	115	114
29-5291	Steering stem adjusting sleeve cap ... ..	115	114
29-5292	Front fork top yoke ... ..	115	114
29-5293	Fork end bolt (nearside) ... ..	115	114
29-5294	Fork sliding tube complete (nearside) ... ..	115	114
29-5303	Fork sliding tube complete (offside) ... ..	115	114
29-5310	Front fork oil seal holder com- plete ... ..	115	114
29-5313	Front fork oil seal ... ..	115	114
29-5314	Front fork spring ... ..	113	112
29-5315	Front fork top yoke clip bolt nut ... ..	115	114
29-5320	Front fork top bearing circlip	115	114
29-5322	Sealing tape ... ..	not illust'd	114
29-5335	Front fork top bush shim (.010" thick) ... ..	117	116
29-5336	Front fork top bush shim (.020" thick) ... ..	117	116
29-5337	Front fork top bush shim (.030" thick) ... ..	117	116



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-5340	Front fork outer sleeve complete (nearside) ... ..	113	112
29-5342	Front fork outer sleeve (offside)	113	112
29-5346	Front fork top bearing ...	115	114
29-5347	Front fork bottom bearing ...	115	114
29-5700	Rear hub cone ... ..	131	130
29-5701	Rear hub cup ... ..	131	130
29-5702	Rear hub cone (adjusting) ...	131	130
29-5710	Rear hub retaining cup ...	133	132
29-5715	Rear hub retaining washer (felt)	133	132
29-5737	Speedometer drive ... ..	127	126
29-5738	Speedometer drive ... ..	137	136
29-5766	Rear brake cover plate with fixed fittings ... ..	135	134
29-5770	Front wheel complete (less brake and tyre) ... ..	not illust'd	118
29-5771	Front wheel complete (less brake and tyre) ... ..	not illust'd	118
29-5772	Front wheel spoke (right-hand)	119	118
29-5776	Front wheel rim ... ..	119	118
29-5776	Rear wheel rim ... ..	129	128
29-5777	Front wheel rim ... ..	119	118
29-5777	Rear wheel rim ... ..	129	128
29-5791	Rear hub spindle ... ..	131	130
29-5792	Speedometer drive nut ...	137	136
29-5825	Front hub complete with bear- ings ... ..	121	120
29-5832	Front hub cup ... ..	121	120
29-5833	Front hub cone (adjusting) ...	121	120
29-5834	Front hub cone (fixed) ...	121	120

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-5835	Front hub spindle sleeve ...	123	122
29-5836	Front hub spindle distance piece ... ..	123	122
29-5837	Front hub spindle ... ..	123	122
29-5839	Front hub spindle nut ...	123	122
29-5840	Front hub felt washer retaining cup ... ..	121	120
29-5841	Front hub felt washer retaining cup washer ... ..	121	120
29-5842	Front hub cone locknut ...	121	120
29-5843	Front brake cover plate with fixed fittings ... ..	123	122
29-5846	Front wheel spoke (right-hand)	119	118
29-5871	Front brake cable toggle end	175	174
29-5905	Rear hub oil retaining washer	133	132
29-6110	Rear brake anchor bolt ...	137	136
29-6170	Rear wheel complete (less brake and tyre) ... ..	not illust'd	128
29-6175	Rear wheel complete (less brake and tyre) ... ..	not illust'd	128
29-6181	Rear hub shell complete with bearings ... ..	131	130
29-6186	Rear hub chainwheel ... ..	133	132
29-6187	Rear hub flange and chainwheel bolt ... ..	133	132
29-6188	Rear hub flange and chainwheel lockstrip ... ..	133	132
29-6551	Front mudguard with fixed fittings ... ..	139	138
29-6552	Front mudguard bottom stay	139	138



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-6553	Front mudguard top stay ...	139	138
29-6554	Front mudguard support bridge	141	140
29-6865	Rear mudguard with fixed fittings	145	144
29-6869	Rear mudguard tail with bridge	145	144
29-6871	Rear mudguard bottom stay (right-hand) ...	149	148
29-6875	Rear mudguard front stay (right-hand) ...	149	148
29-6881	Lifting handle and mudguard stay ...	147	146
29-6882	Rear mudguard bottom stay (left-hand) ...	149	148
29-6883	Rear mudguard stay (left-hand)	147	146
29-6885	Rear number plate ...	147	146
29-7025	Carrier complete ...	105	104
29-7327	Rear brake pedal return spring	155	154
29-7328	Rear brake toggle end bush ...	157	156
29-7360	Rear brake operating lever with stud ...	137	136
29-7362	Rear brake operating lever ...	155	154
29-7363	Rear brake pedal ...	153	152
29-7365	Rear brake rod with toggle end	157	156
29-7368	Rear brake adjusting nut ...	157	156
29-7388	Rear brake pedal shaft ...	155	154
29-7504	Footrest distance tube (engine plate) (left-hand) ...	159	158
29-7529	Footrest rod (right-hand) ...	157	156
29-7530	Footrest distance tube (right- hand) ...	159	158

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-7531	Footrest distance tube (front chaincase) (left-hand) ...	159	158
29-7532	Footrest distance tube (left- hand) ...	159	158
29-7534	Footrest brake rod pedal stop plate ...	159	158
29-7540	Footrest rod brake pedal stop plate ...	not illust'd	200
29-7544	Footrest rod (left-hand) ...	157	156
29-7545	Footrest distance tube (chain- case and engine plate (left- hand) ...	159	158
29-7549	Footrest bracket (offside) ...	159	158
29-7550	Footrest bracket (nearside) ...	159	158
29-7551	Footrest bracket rubber ...	159	158
29-7558	Pillion footrest assembly (off- side) ...	159	158
29-7559	Pillion footrest assembly (near- side) ...	159	158
29-7560	Pillion footrest anchor bolt (offside) ...	161	160
29-7561	Pillion footrest with stiffening piece ...	161	160
29-7564	Pillion footrest swivel bolt ...	161	160
29-7565	Pillion footrest anchor bolt distance piece ...	161	160
29-7605	Legshield complete assembly...	199	198
29-7606	Legshield bottom support strip	199	198
29-7607	Legshield bottom bracket (off- side) ...	199	198



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
29-7608	Legshield bottom bracket (near-side) ... ..	199	198	29-8087	Chaincase (rear) with fixed fittings and sliding plate ...	163	162
29-7609	Legshield top support bar complete ... ..	199	198	29-8325	Chainguard with fixed fittings (top) ... ..	165	164
29-7611	Distributor shield ... ..	199	198	29-8740	Gear control shaft bush thrust washer... ..	75	74
29-7613	Legshield (left-hand) ... ..	199	198	29-8760	Throttle cable and cover complete ... ..	not illust'd	184
29-7614	Legshield (right-hand)... ..	199	198	29-8761	Throttle cable ... ..	185	184
29-7868	Knee grip plate (left-hand) ...	167	166	29-8762	Throttle cable cover ... ..	185	184
29-7869	Knee grip plate (right-hand)...	167	166	29-8780	Exhaust lifter cable cover ...	205	204
29-7886	Petrol pipe complete with nuts	167	166	29-8810	Front brake control complete less cat ½ and cover ...	175	174
29-7890	Petrol pipe complete ... ..	not illust'd	200	29-8811	Front brake control body ...	175	174
29-7898	Petrol filler (quick release type)	167	166	29-8812	Front brake control lever ...	175	174
29-7910	Petrol tank badge (left and right-hand) ... ..	169	168	29-8813	Front brake control lever screw	175	174
29-7920	Petrol tank ... ..	167	166	29-8813	Clutch control lever screw ...	177	176
29-7921	Petrol tank ... ..	not illust'd	200	29-8814	Clutch control lever nut ...	177	176
29-7932	Petrol pipe complete with nuts	167	166	29-8814	Front brake control lever nut	175	174
29-7943	Crankcase oil pipe with nipple	173	172	29-8815	Front brake cable and cover complete ... ..	not illust'd	174
29-7949	Oil tank breather pipe extension	173	172	29-8816	Front brake cable ... ..	175	174
29-7962	Oil tank filter complete ...	171	170	29-8817	Front brake cable cover ...	175	174
29-7971	Oil feed pipe union washer (fibre)	171	170	29-8818	Front brake control lever lock washer... ..	175	174
29-7974	Oil feed pipe with union ...	171	170	29-8818	Clutch control lever lockwasher	177	176
29-7976	Oil return pipe with nipple ...	173	172	29-8820	Clutch control complete less cable and cover ... ..	177	176
29-7981	Oil tank with fixed fittings ...	169	168	29-8821	Clutch control body ... ..	177	176
29-7984	Oil tank with fixed fittings ...	not illust'd	200	29-8827	Clutch cable and cover complete	not illust'd	176
29-7985	Oil tank filler cap complete ...	not illust'd	200				
29-7987	Oil tank filler cap chain ...	not illust'd	200				
29-8060	Chaincase stiffening washer ...	163	162				
29-8085	Chaincase front with fixed fittings.	163	162				



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt No.	DESCRIPTION.	Page illustrated.	Page described.
29-8828	Clutch cable ... ..	177	176	31-111	Valve spring collar ... ..	17	16
29-8829	Clutch cable cover ... ..	177	176	31-212	Crankcase stud (top) (rear) ...	31	30
29-8832	Clutch control lever ... ..	177	176	31-222	Scavenge cover fixing stud ...	33	32
29-9125	Toolbox complete ... ..	189	188	31-298	Crankpin nut ... ..	39	38
29-9132	Toolbox fixing screw ... ..	189	188	31-300	Crankpin locking washer ...	39	38
29-9151	Tool roll complete with tools... <i>not illust'd</i> ...	190	190	31-424	Clutch operating spindle nut washer... ..	79	98
29-9152	Tool roll complete with tools... <i>not illust'd</i> ...	190	190	31-4070	Front down tube and chainstay distance washer ... ..	97	96
29-9215	Tool roll only ... ..	191	190	31-7011	Battery bracket and frame stud	107	106
29-9220	Licence holder ... ..	<i>not illust'd</i> ...	200	31-8430	Crankcase air release adaptor washer... ..	29	28
29-9221	Licence holder ... ..	195	194	31-8430	Timing cover air release adaptor washer... ..	35	34
29-9251	Dynamo spanner ... ..	191	190	33-4089	Saddle front fixing bolt ...	91	90
29-9252	Tyre lever ... ..	191	190	33-4160	Chainstay lug stud ... ..	97-95	96-94
29-9253	Tommy bar ... ..	191	190	33-5544	Front brake shoe fulcrum pin	125	124
29-9254	Hub bearing attachment spanner	191	190	33-5544	Rear brake fulcrum pin ...	135	134
29-9255	Front hub cone spanner ...	191	190	33-5545	Front brake shoe fulcrum pin washer (serrated) ... ..	127	126
29-9290	Air cleaner ... ..	<i>See Air Cleaners</i>		33-5545	Rear brake fulcrum pin washer	135	134
29-9291	Air cleaner adaptor ... ..	<i>See Air Cleaners</i>		33-8255	Petrol tank connecting pipe complete ... ..	167	166
29-9296	Speedometer clamp rod complete	193	192	33-9051	Lamp bracket (bottom) ...	195	194
29-9323	Speedometer cable clip ...	193	192	35-698	Split pin (1" x $\frac{1}{16}$ ") ... ..	<i>various</i>	
29-9326	Speedometer cable complete ...	193	192	35-701	Exhaust lifter split pin ...	23	22
29-9340	Pillion seat ... ..	195	194	35-705	Connecting rod bolt split pin...	37	36
29-9355	Saddle ... ..	<i>See Equipment.</i>		35-705	Gear control link split pin ...	81	80
30-659	Petrol tank support bolt washer	167	166	35-706	Rear brake anchor strap split pin ... ..	155	154
30-660	Rear brake pedal shaft washer	155	154				
30-660	Petrol tank support bolt washer	167	166				
30-729	Front chaincase sealing washer	159	158				
30-733	Central stand nut washer ...	103	102				
31-103	Valve stem cap (exhaust) ...	15	14				
31-106	Valve spring (outer) ... ..	15	14				
31-108	Valve spring (inner) ... ..	15	14				



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
35-707	Oil tank filler cap split pin ...	171	170
35-709	Cush drive bearing nut split pin	41	40
35-710	Steering damper rod split pin.	109	108
35-1086	Cylinder head bolt (short) ...	13	12
35-1202	Connecting rod bolt (big end)	37	36
35-1896	Camshaft pinion key ...	47	46
35-4005	Crankcase and gearbox fixing stud ...	33	32
35-4005	Gearbox fixing stud ...	—	—
35-4224	Dynamo driving sprocket washer	45	44
35-5016	Chainstay bridge tube grease nipple ...	99	98
35-5016	Central stand grease nipple ...	103	102
35-5864	Gearbox connecting bolt ser- rated washer ...	95	94
35-6432	Front brake shoe lining ...	125	124
35-6432	Rear brake shoe lining ...	135	134
35-6436	Rear brake shoe lining rivet... <i>not illust'd</i> ...	...	134
35-6436	Front brake shoe rivet ... <i>not illust'd</i> ...	...	124
35-6440	Rear brake shoe spring ...	135	134
35-6440	Front brake shoe spring ...	125	124
35-7600	Dynamo spanner ...	191	190
35-9235	Front brake shoe complete (left- hand) ...	125	124
35-9235	Front brake shoe complete (right-hand) ...	125	124
35-9235	Rear brake shoe complete (right- hand) ...	135	134
35-9235	Rear brake shoe complete (left- hand) ...	135	134

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
36-11	Cylinder head bolt (long) ...	13	12
36-382	Shakeproof washer ...	various	
36-399	Washer (shakeproof) ...	various	
36-481	Valve rocker spindle nut washer	21	20
36-3528	Idlet pinion thrust washer ...	47	46
36-3528	Front hub spindle distance piece washer ...	123	122
36-4140	Petrol tank support bolt rubber (top) ...	169	168
65-37	Cylinder valve guide (inlet and exhaust) ...	15	14
65-42	Inlet and exhaust valve tappet guide ...	49	48
65-93	Cylinder head washer ...	13	12
65-109	Rocker valve cover bolt ...	17	16
65-112	Sparking plug ...	15	14
65-114	Sparking plug ...	15	14
65-208	Cylinder valve (exhaust) ...	15	14
65-209	Valve stem cap (inlet and ex- haust) ...	15	14
65-213	Sparking plug waterproof cover	15	14
65-292	Mudguard and saddle spring fixing bolt ...	99	98
65-306	Rocker oil feed pipe union screw	19	18
65-311	Valve rocker spindle nut ...	21	20
65-383	Piston only ( $\frac{1}{2}$ mm. oversize)...	<i>See Piston Chart</i>	
65-385	Piston only (1mm. oversize)...	<i>See Piston Chart</i>	
65-387	Exhaust lifter bush ...	23	22
65-401	Exhaust lifter spindle washer (felt) ...	23	22



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-402	Exhaust lifter spindle washer	23	...	22	65-705	Piston only (1mm. oversize) ...	<i>See Piston Chart</i>
65-403	Exhaust lifter spindle spring...	23	...	22	65-721	Piston only (high compression)	23 ... 22
65-405	Piston only ... ..	25	...	24	65-722	Piston only (high compression)	
65-437	Gudgeon pin ... ..	27	...	26		( $\frac{1}{2}$ mm. oversize) ... ..	<i>See Piston Chart</i>
65-438	Gudgeon pin retaining ring ...	27	...	26	65-723	Piston only (high compression)	
65-440	Gudgeon pin ... ..	27	...	26		(1mm. oversize) ... ..	<i>See Piston Chart</i>
65-441	Gudgeon pin bush ... ..	37	...	36	65-730	Piston Scraper Ring ... ..	25 ... 24
65-441	Cam pinion bush ... ..	47	...	46	65-731	Piston Scraper Ring ( $\frac{1}{2}$ mm.	
65-443	Connecting rod complete with					oversize) ... ..	<i>See Piston Chart</i>
	bush ... ..	37	...	36	65-732	Piston Scraper Ring (1mm.	
65-479	Crankpin oil hole plug screw...	39	...	38		oversize) ... ..	<i>See Piston Chart</i>
65-490	Piston scraper ring (high com-				65-735	Piston scraper ring ... ..	25 ... 24
	pression) ... ..	25	...	24	65-736	Piston scraper ring ( $\frac{1}{2}$ mm. over-	
65-491	Piston scraper ring (high com-					size) ... ..	<i>See Piston Chart</i>
	pression) ( $\frac{1}{2}$ mm. oversize) ...	<i>See Piston Chart</i>			65-737	Piston scraper ring (1mm. over-	
65-492	Piston scraper ring (high com-					size) ... ..	<i>See Piston Chart</i>
	pression) (1mm. oversize) ...	<i>See Piston Chart</i>			65-744	Piston ring ... ..	25 ... 24
65-554	Flywheel (gear side) with engine				65-745	Piston ring ( $\frac{1}{2}$ mm. oversize) ...	<i>See Piston Chart</i>
	shaft assembled ... ..	39	...	38	65-746	Piston ring (1mm. oversize) ...	<i>See Piston Chart</i>
65-572	Flywheel (gear side) with engine				65-754	Piston complete (high com-	
	shaft assembled ... ..	39	...	38		pression) ... ..	<i>not illust'd ... 22</i>
65-574	Flywheel (drive side) with engine				65-755	Piston complete (high com-	
	shaft assembled ... ..	39	...	38		pression ( $\frac{1}{2}$ mm. oversize) ...	<i>See Piston Chart</i>
65-691	Timing pinion nut ... ..	41	...	40	65-756	Piston complete (high com-	
65-692	Timing pinion ... ..	41	...	40		pression) (1mm. oversize) ...	<i>See Piston Chart</i>
65-693	Timing pinion key ... ..	41	...	40	65-758	Piston complete with gudgeon	
65-695	Timing pinion locking washer	41	...	40		pin, rings and retaining springs	<i>not illust'd ... 22</i>
65-695	Footrest washer (shakeproof)...	157	...	156	65-759	Piston complete ( $\frac{1}{2}$ mm. oversize)	<i>See Piston Chart</i>
65-703	Piston only ... ..	25	...	24	65-760	Piston complete (1mm. oversize)	<i>See Piston Chart</i>
65-704	Piston only ( $\frac{1}{2}$ mm. oversize)...	<i>See Piston Chart</i>					



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-769	Piston complete (high compression) ( $\frac{1}{2}$ mm. oversize) ...	See Piston Chart		65-788	Piston ring (high compression) (1mm. oversize) (L section)	See Piston Chart	
65-770	Piston only (high compression) ( $\frac{1}{2}$ mm. oversize) ...	See Piston Chart		65-790	Piston complete (high compression) ...	not illust'd ...	22
65-771	Piston complete (high compression) (1mm. oversize) ...	See Piston Chart		65-791	Piston only (high compression)	23	22
65-772	Piston only (high compression) (1mm. oversize) ...	See Piston Chart		65-885	Push rod end (bottom)	51	50
65-775	Piston complete (high compression) ...	not illust'd ...	22	65-930	Push rod cover tube stud nut	51	50
65-776	Piston only (high compression)	25	24	65-1062	Cylinder barrel ...	13	12
65-777	Piston complete (high compression) ( $\frac{1}{2}$ mm. oversize) ...	See Piston Chart		65-1080	Push rod cover tube ...	51	50
65-778	Piston only (high compression) ( $\frac{1}{2}$ mm. oversize) ...	See Piston Chart		65-1082	Push rod gland nut ...	51	50
65-779	Piston complete (high compression) (1mm. oversize) ...	See Piston Chart		65-1084	Push rod complete with ends	51	50
65-780	Piston only (high compression) (1mm. oversize) ...	See Piston Chart		65-1100	Exhaust valve washer with ball ends ...	21	20
65-783	Piston ring (high compression) (plain) ...	25	24	65-1102	Inlet valve rocker with ball ends ...	21	20
65-784	Piston ring (high compression) ( $\frac{1}{2}$ mm. oversize) (plain) ...	See Piston Chart		65-1110	Cylinder valve (exhaust)	15	14
65-785	Piston ring (high compression) (1mm. oversize) (plain) ...	See Piston Chart		65-1111	Cylinder valve (inlet)	15	14
65-786	Piston ring (high compression) (L section) ...	25	24	65-1117	Valve rocker spindle spring	21	20
65-787	Piston ring (high compression) ( $\frac{1}{2}$ mm. oversize) (L section).	See Piston Chart		65-1118	Valve rocker spindle spring washer...	21	20
				65-1119	Rocker oil feed pipe complete.	19	18
				65-1123	Flywheel (drive side) with engine shaft assembled	39	38
				65-1125	Flywheel (gear side) with engine shaft assembled	39	38
				65-1128	Engine shaft (drive side)	39	38
				65-1129	Engine shaft (gear side)	39	38
				65-1137	Exhaust lifter	23	22
				65-1142	Rocker valve inspection cover	17	16







Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-1143	Rocker valve inspection cover washer... ..	17	16
65-1144	Cylinder valve guide (exhaust)	15	14
65-1145	Cylinder valve guide (inlet) ...	15	14
65-1146	Valve spring (inner) ...	15	14
65-1147	Valve spring (outer) ...	15	14
65-1148	Valve spring cup ...	17	16
65-1149	Valve spring collar ...	17	16
65-1153	Engine steady stay ...	19	18
65-1156	Cylinder head with valve guides and studs ...	13	12
65-1159	Cylinder head cover (inlet) ...	13	12
65-1160	Cylinder head cover (exhaust)	15	14
65-1161	Valve rocker fulcrum pin ...	21	20
65-1162	Carburetter flange washer (paper)	15	14
65-1163	Carburetter flange packing washer	15	14
65-1164	Cylinder head cover washer (paper) ...	15	14
65-1165	Exhaust lifter spindle... ..	23	22
65-1166	Cylinder head cover screw ...	15	14
65-1210	Air cleaner adaptor ...	<i>See Air Cleaners</i>	
65-1212	Air cleaner adaptor ...	<i>See Air Cleaners</i>	
65-1215	Oil return pipe with banjos ...	19	18
65-1226	Cylinder head with valve guides and studs ...	13	12
65-1229	Cylinder barrel ...	13	12
65-1232	Carburetter flange washer (paper)	15	14
65-1233	Flywheel complete (drive side)	39	38
65-1235	Flywheel complete (gear side)	39	38
65-1237	Air cleaner adaptor ...	<i>See Air Cleaners</i>	

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-1238	Carburetter flange packing washer	15	14
65-1239	Cylinder valve (inlet) ...	15	14
65-1240	Cylinder valve (exhaust) ...	15	14
65-1241	Cylinder valve guide (inlet) ...	15	14
65-1242	Cylinder valve guide (exhaust)	15	14
65-1243	Valve spring cup ...	17	16
65-1244	Piston complete with gudgeon pin, rings and retaining springs ...	<i>not illust'd ... 22</i>	
65-1245	Piston only ...	25	24
65-1248	Valve spring (inner) (special order only) ...	17	16
65-1249	Valve spring (outer) (special order only) ...	17	16
65-1250	Piston ring ...	25	24
65-1251	Piston ring ( $\frac{1}{2}$ mm. oversize) ...	<i>See Piston Chart</i>	
65-1252	Piston ring (1mm. oversize) ...	<i>See Piston Chart</i>	
65-1253	Piston scraper ring ...	25	24
65-1254	Piston scraper ring ( $\frac{1}{2}$ mm. oversize) ...	<i>See Piston Chart</i>	
65-1255	Piston scraper ring (1mm. oversize) ...	<i>See Piston Chart</i>	
65-1256	Piston complete (high compression) ...	<i>not illust'd ... 24</i>	
65-1257	Piston only (high compression)	25	24
65-1260	Piston complete ( $\frac{1}{2}$ mm. oversize)	<i>See Piston Chart</i>	
65-1261	Piston only ( $\frac{1}{2}$ mm. oversize)...	<i>See Piston Chart</i>	
65-1262	Piston complete (1mm. oversize)	<i>See Piston Chart</i>	
65-1263	Piston only (1mm. oversize)...	<i>See Piston Chart</i>	



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-1264	Piston complete (high compression) ... .. <i>not illust'd</i> ...		24
65-1265	Piston only (high compression)	25	24
65-1266	Piston complete (high compression) ( $\frac{1}{2}$ mm. oversize) ...	<i>See Piston Chart</i>	
65-1267	Piston only (high compression) ( $\frac{1}{2}$ mm. oversize) ...	<i>See Piston Chart</i>	
65-1268	Piston complete (high compression) (1mm. oversize) ...	<i>See Piston Chart</i>	
65-1269	Piston only (high compression) (1mm. oversize) ...	<i>See Piston Chart</i>	
65-1274	Piston complete (high compression) ( $\frac{1}{2}$ mm. oversize) ...	<i>See Piston Chart</i>	
65-1275	Piston only (high compression) (1mm. oversize) ...	<i>See Piston Chart</i>	
65-1276	Piston complete (high compression) (1mm. oversize) ...	<i>See Piston Chart</i>	
65-1277	Piston only (high compression) (1mm. oversize) ...	<i>See Piston Chart</i>	
65-2045	Bearing (drive side) ...	29	28
65-2048	Engine shaft distance collar ...	41	40
65-2052	Engine shaft bush (gear side)	29	28
65-2055	Oil flinger (drive side) ...	39	38
65-2060	Oil pipe connection (rubber)...	171	170
65-2060	Oil tank breather pipe connection (rubber) ...	173	172
65-2143	Timing cover complete ...	33	32
65-2152	Gearbox inner cover stud ...	61	60
65-2153	Gearbox cover stud nut ...	61	60
65-2157	Timing cover outer screw ...	35	34

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-2158	Timing cover outer screw ...	35	34
65-2162	Gearbox outer cover screw (short) ...	61	60
65-2165	Timing cover air release body	35	34
65-2166	Timing cover breather extension pipe ...	35	34
65-2168	Timing cover air release adaptor	35	34
65-2171	Timing cover air release adaptor screw ...	35	34
65-2188	Oil valve spring retaining screw	35	34
65-2240	Crankcase bearing oil retaining washer spring ring (drive side)	29	28
65-2252	Crankcase oil pipe adaptor ...	33	32
65-2316	Magdyno driving pinion oil seal	43	42
65-2330	Dynamo driven sprocket key	45	44
65-2334	Magdyno driving pinion ...	43	42
65-2335	Idler pinion spindle ...	47	46
65-2336	Idler pinion spindle bush ...	47	46
65-2352	Dynamo eye plug (plain) ...	45	44
65-2352	Battery carrier swivel block (plain) ...	105	104
65-2353	Dynamo eye plug (threaded)...	45	44
65-2353	Battery carrier swivel block (tapped) ...	105	104
65-2420	Inlet and exhaust cam pinion complete ...	47	46
65-2425	Cam pinion spindle ...	47	46
65-2430	Engine sprocket (15T) ...	43	42
65-2431	Cush drive sliding sleeve ...	41	40



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-2434	Exhaust camwheel complete (special order only) ...	49	48
65-2436	Exhaust camwheel complete (special order only) ...	49	48
65-2438	Inlet camwheel complete (special order only) ...	49	48
65-2520	Cush drive bearing nut ...	41	40
65-2521	Cush drive bearing locking washer ...	41	40
65-2523	Cush drive bearing ...	41	40
65-2528	Cush drive distance piece (.320" — .325" thick) ...	43	42
65-2529	Cush drive distance piece (.288" — .293" thick) ...	43	42
65-2530	Cush drive distance piece (.256" — .261" thick) ...	43	42
65-2579	Oil pump spindle retaining pin	53	52
65-2596	Oil pump body ...	51	50
65-2598	Oil pump body top plate ...	51	50
65-2599	Oil pump scavenge gear ...	53	52
65-2600	Oil pump feed gear (driven) ...	53	52
65-2601	Oil pump feed gear (driving) ...	53	52
65-2602	Oil pump spindle (driving) ...	53	52
65-2603	Control shaft retaining pin ...	75	74
65-2603	Oil pump spindle retaining pin	53	52
65-2604	Oil pump fixing bolt ...	53	52
65-2606	Oil pump body top plate washer	51	50
65-2611	Crankcase scavenge cover ...	33	32
65-2612	Crankcase scavenge cover joint washer ...	33	32

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-2618	Oil pump washer (crankcase) ...	53	52
65-2619	Oil pump complete ... <i>not illust'd</i> ...	...	50
65-2623	Oil pump filter gauze ...	53	52
65-2625	Oil pump body bottom plate complete ...	51	50
65-2687	Exhaust pipe complete ...	55	54
65-2690	Exhaust pipe complete ...	55	54
65-2695	Exhaust pipe (special order only)	57	56
65-2704	Exhaust pipe legshield ...	57	56
65-2754	Silencer complete ...	57	56
65-2760	Silencer complete ...	57	56
65-2850	Crankcase shield ...	59	58
65-3023	Gearbox cover joint washer (inner) ...	61	60
65-3062	Gearbox outer cover screw (long)	61	60
65-3063	Timing cover outer screw ...	35	34
65-3063	Gearbox outer cover screw (top)	61	60
65-3097	Pinion sleeve with bush ...	65	64
65-3098	Pinion sleeve thrust washer (phosphor bronze) ...	65	64
65-3113	Layshaft thrust washer ...	69	68
65-3116	Mainshaft bush (inner cover) .	63	62
65-3116	Kickstarter quadrant bush (phos bronze) ...	73	72
65-3125	Layshaft thrust washer ...	69	68
65-3131	Dog clutch (high and low gear)	65	64
65-3135	Kickstarter crank spring ...	73	72
65-3137	Gear control quadrant ...	75	74
65-3139	Kickstarter ratchet pinion sleeve nut ...	75	74



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-3140	Kickstarter ratchet pinion sleeve nut locking washer ... ..	75	74
65-3148	Pinion sleeve thrust washer (steel) ... ..	65	64
65-3155	Gear control shaft and forks complete ... ..	75	74
65-3156	Gear control shaft ... ..	75	74
65-3160	Clutch control lever ... ..	77	76
65-3162	Clutch control lever fulcrum pin	79	78
65-3164	Clutch push rod ... ..	87	86
65-3169	Gear indicating plate peg ... ..	85	84
65-3173	Pinion sleeve with bushes ... ..	65	64
65-3212	Kickstarter crank rubber ... ..	73	72
65-3283	Kickstarter ratchet pinion ... ..	75	74
65-3292	Gear operating fork ... ..	75	74
65-3296	Kickstarter return stop plate	73	72
65-3336	Gear control shaft bush ... ..	75	74
65-3337	Layshaft bush ... ..	67	66
65-3344	Gearbox inner cover with fixed fittings ... ..	61	60
65-3346	Gearbox outer cover with fixed fittings ... ..	61	60
65-3353	Kickstarter quadrant complete with bush ... ..	73	72
65-3354	Kickstarter quadrant oil seal .	73	72
65-3355	Gearbox cover joint washer (outer) ... ..	61	60
65-3356	Gearbox outer cover screw (long)	61	60
65-3357	Gearbox outer cover screw (short)	61	60
65-3358	Kickstarter quadrant bush ... ..	73	72

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-3359	Kickstarter quadrant bush (outer cover) ... ..	73	72
65-3360	Clutch push rod lever... ..	87	86
65-3361	Footchange operating pedal clamp bolt ... ..	85	84
65-3364	Primary chain cover oil filler plug ... ..	55	54
65-3364	Gearbox oil filler plug ... ..	77	76
65-3365	Primary chain oil filler plug washer... ..	55	54
65-3365	Gearbox oil filler plug washer	77	76
65-3365	Oil tank filler cap washer ... ..	169	168
65-3367	Speedometer driven gear ... ..	79	78
65-3369	Speedometer driving gear bush screw ... ..	79	78
65-3370	Gearbox sprocket (1ST) ... ..	71	70
65-3371	Mainshaft shim... ..	63	62
65-3372	Mainshaft oil seal ring ... ..	63	62
65-3375	Speedometer driving gear thrust washer... ..	79	78
65-3377	Speedometer pinion bush ... ..	79	78
65-3381	Kickstarter crank ... ..	73	72
65-3382	Gearbox mainshaft ... ..	63	62
65-3383	Clutch control lever complete	77	76
65-3386	Gearbox layshaft ... ..	67	66
65-3388	Layshaft gear (1ST and 21T) .	67	66
65-3389	Layshaft bush ... ..	67	66
65-3390	Speedometer driving gear bush	79	78
65-3391	Speedometer driving gear bush nut ... ..	79	78



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-3392	Speedometer driving gear washer (fibre) ... ..	79	78
65-3393	Gearbox shell complete with fixed fittings ... ..	61	60
65-3394	Gearbox shell ... ..	not illust'd	60
65-3397	Kickstarter crank rubber ...	73	72
65-3398	Gearbox sprocket (15T) ...	71	70
65-3400	Speedometer driving gear bush screw ... ..	79	78
65-3401	Gearbox layshaft ... ..	67	66
65-3402	Speedometer driving gear ...	79	78
65-3403	Clutch push rod adjusting screw complete ... ..	87	86
65-3406	Layshaft gear (1ST and 20T) (close ratio) ... ..	67	66
65-3407	Mainshaft 2nd gear pinion (24T close ratio) ... ..	65	64
65-3408	Mainshaft 1st gear and kick- starter ratchet (19T close ratio)	65	64
65-3409	Layshaft 1st gear pinion (28T close ratio) ... ..	67	66
65-3411	Mainshaft 3rd gear pinion (27T close ratio) ... ..	65	64
65-3413	Layshaft 2nd gear pinion with bush (23T close ratio) ...	67	66
65-3417	Footchange operating pedal ...	85	84
65-3425	Kickstarter crank complete (fold- ing type) ... ..	71	70
65-3426	Kickstarter crank only (folding type) ... ..	71	70

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-3427	Kickstarter pedal (folding type)	71	70
65-3428	Kickstarter pedal spring ...	71	70
65-3475	Mainshaft 1st gear and kick- starter ratchet (17T) ...	65	64
65-3478	Mainshaft 3rd gear pinion bush	65	64
65-3478	Layshaft 2nd gear pinion bush	67	66
65-3479	Layshaft 1st gear pinion bush	67	66
65-3492	Mainshaft 2nd gear (21T) ...	65	64
65-3494	Mainshaft 3rd gear pinion com- plete (26T) ... ..	63	62
65-3494	Layshaft 2nd gear pinion with bush (26T) ... ..	67	66
65-3496	Layshaft 1st gear pinion with bush (30T) ... ..	67	66
65-3816	Clutch sleeve plate ... ..	87	86
65-3822	Mainshaft nut locking washer	63	62
65-3823	Mainshaft nut ... ..	63	62
65-3824	Clutch driven plate ... ..	87	86
65-3825	Clutch driving plate with inserts	87	86
65-3828	Clutch actuating cap with button	89	88
65-3830	Clutch spring cup ... ..	87	86
65-3831	Clutch spring ... ..	87	86
65-3833	Clutch sleeve collar ... ..	87	86
65-3834	Gearbox and chaincase oil re- taining washer ... ..	89	88
65-3857	Clutch driving plate with inserts	87	86
65-3910	Chainwheel ball retaining ring	87	86
65-3911	Clutch ballrace ring (inner) ...	87	86
65-3912	Chainwheel ballrace ring ...	87	86
65-3913	Clutch sleeve ... ..	87	86



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-3914	Clutch centre complete with studs ... ..	87	86
65-3919	Clutch chainwheel complete ...	87	86
65-3922	Clutch chainwheel complete ...	87	86
65-3930	Clutch sleeve ... ..	87	86
65-4184	Gearbox adjusting screw ...	97	96
65-4185	Seat tube and gearbox plate bolt (top) ... ..	93	92
65-4185	Rear mudguard fixing bolt (nearside) ... ..	151	150
65-4185	Petrol tank support bolt (rear)	167	166
65-4189	Gearbox connecting bolt serrated washer ... ..	95	94
65-4190	Gearbox connecting bolt ...	95	94
65-4429	Engine plate (front) ... ..	91	90
65-4431	Engine plate cover (front) ...	91	90
65-4440	Gearbox engine plate (right-hand) ... ..	91	90
65-4441	Gearbox engine plate (left-hand)	91	90
65-4442	Engine plate and chainstay distance piece ... ..	91	90
65-4460	Frame front complete ... ..	91	90
65-4463	Ball head cup ... ..	91	90
65-4610	Chainstay and backstay complete ... ..	97	96
65-4667	Battery carrier complete ...	105	104
65-4668	Battery carrier bracket ...	105	104
65-4669	Battery carrier bracket ...	105	104
65-4727	Central stand spring ... ..	103	102
65-4728	Central stand engine plate stud	103	102

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-4730	Central stand complete ...	103	102
65-4735	Prop stand complete ... ..	103	102
65-4739	Prop stand lug complete ...	103	102
65-4741	Prop stand pivot pin ... ..	103	102
65-4742	Prop stand spring ... ..	103	102
65-4811	Footrest Distance Tube ...	159	158
65-4887	Pillion footrest assembly (offside)	159	158
65-4888	Pillion footrest assembly (nearside) ... ..	159	158
65-4890	Footrest bracket (offside) ...	159	158
65-4891	Footrest bracket (nearside) ...	159	158
65-4894	Footrest pillion anchor bolt (offside) ... ..	161	160
65-4895	Pillion footrest anchor bolt (nearside) ... ..	161	160
65-4960	Handlebar ... ..	105	104
65-5126	Steering head ballrace cone (top)	109	108
65-5127	Steering head ballrace cone (bottom) ... ..	109	108
65-5295	Fork end bolt (nearside) ...	115	114
65-5319	Steering head ballrace cone (top)	109	108
65-5320	Steering head ballrace cone (bottom) ... ..	109	108
65-5321	Steering head dust cap ...	109	108
65-5327	Steering damper anchor plate stud ... ..	109	108
65-5328	Steering damper centre ...	109	108
65-5329	Front fork steering stem adjusting sleeve ... ..	115	114



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-5330	Steering stem adjusting sleeve cap ... ..	115	114
65-5331	Front fork tube nut ... ..	115	114
65-5332	Front fork tube nut washer ...	115	114
65-5333	Handlebar clip ... ..	117	116
65-5334	Ball head clip bolt ... ..	111	110
65-5334	Handlebar clip bolt ... ..	117	116
65-5340	Front fork assembled ... ..	<i>not illust'd</i>	108
65-5352	Front fork shaft ... ..	115	114
65-5353	Front fork bottom yoke com- plete ... ..	115	114
65-5355	Front fork top yoke ... ..	115	114
65-5356	Pivot stud (front stand) ...	109	108
65-5360	Fork sliding tube complete (nearside) ... ..	115	114
65-5362	Fork sliding tube complete (offside) ... ..	115	114
65-5380	Steering damper friction washer	109	108
65-5385	Front fork outer sleeve com- plete (nearside) ... ..	113	112
65-5387	Front fork outer sleeve (offside)	115	112
65-5390	Front fork spring ... ..	113	112
65-5537	Front wheel spoke (left-hand)	121	120
65-5670	Rear hub adjusting sleeve ...	133	132
65-5673	Front brake cam ... ..	125	124
65-5673	Rear brake cam ... ..	137	136
65-5674	Front brake cam bearing oil hole clip ... ..	125	124
65-5674	Rear brake cam bearing oil hole clip ... ..	137	136

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-5832	Rear hub distance piece ...	133	132
65-5870	Front wheel complete (less brake and tyre) ... ..	<i>not illust'd</i>	118
65-5871	Front wheel rim ... ..	119	118
65-5872	Front wheel spoke (left-hand)	121	120
65-5873	Rear wheel spoke (right-hand)	129	128
65-5876	Front hub complete with bearings	121	120
65-5883	Front hub bearing ... ..	121	120
65-5883	Rear hub bearing ... ..	131	130
65-5884	Front hub bearing thrust washer	123	122
65-5884	Rear hub bearing thrust washer	131	130
65-5885	Front hub retaining ring ...	123	122
65-5885	Rear hub ballrace retaining ring	131	130
65-5886	Front hub washer (felt) ...	121	120
65-5886	Rear hub washer (felt) ...	133	132
65-5887	Front hub felt washer retaining ring (left-hand) ... ..	121	120
65-5887	Rear hub retaining ring ...	133	132
65-5888	Front hub felt washer retaining cup ... ..	121	120
65-5889	Front hub spindle sleeve ...	123	122
65-5890	Front hub distance collar ...	123	122
65-5890	Rear hub spindle distance collar	131	130
65-5891	Front hub distance piece ...	123	122
65-5892	Front hub spindle distance piece	123	122
65-5893	Front brake cover plate stud nut	125	124
65-5894	Front hub spindle ... ..	123	122
65-5895	Front brake cover plate with fixed fittings ... ..	123	122
65-5899	Front brake shoe fulcrum pin	125	124



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-5899	Rear brake fulcrum pin ...	135	134
65-5901	Rear brake shoe complete (left-hand) ...	135	134
65-5901	Rear brake shoe complete (right-hand) ...	135	134
65-5901	Front brake shoe complete (right-hand) ...	125	124
65-5901	Front brake shoe complete (left-hand) ...	125	124
65-5903	Front brake shoe lining ...	125	124
65-5903	Rear brake shoe lining ...	125	124
65-5904	Front brake shoe spring ...	125	124
65-5904	Rear brake shoe spring ...	135	134
65-5905	Front brake cam ...	125	124
65-5905	Rear brake cam ...	137	136
65-5907	Front brake cam operating lever	125	124
65-5910	Front wheel spoke (right-hand)	119	118
65-5912	Front brake cable securing clip screw ...	193	192
65-5912	Rear number plate tail lamp screw ...	195	194
65-5915	Front wheel complete (less brake and tyre) ...	not illust'd	118
65-5915	Front wheel complete (less brake and tyre) ...	not illust'd	118
65-5916	Front wheel rim ...	119	118
65-6027	Rear wheel spoke (left-hand)...	129	128
65-6136	Rear hub spindle nut ...	131	130
65-6137	Rear hub spindle washer ...	131	130
65-6161	Rear hub spindle ...	131	130

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-6250	Rear hub shell complete with bearings ...	131	130
65-6261	Rear wheel complete less brake and tyre ...	not illust'd	128
65-6263	Rear wheel rim ...	129	128
65-6266	Rear wheel complete (less brake and tyre) ...	not illust'd	128
65-6267	Rear wheel rim ...	129	128
65-6274	Rear brake screw swivel pin...	137	136
65-6274	Rear brake lever swivel block	157	156
65-6275	Rear brake anchor strap ...	155	154
65-6276	Rear brake cover plate with fixed fittings ...	135	134
65-6279	Rear brake operating lever ...	137	136
65-6281	Rear brake anchor strap ...	155	154
65-6569	Front mudguard with fixed fittings ...	139	138
65-6576	Front number plate ...	143	142
65-6580	Front mudguard top stay ...	139	138
65-6582	Front stand complete ...	101	100
65-6584	Front mudguard support bridge	141	140
65-6591	Front mudguard with fixed fittings ...	139	138
65-6593	Front mudguard top stay ...	139	138
65-6597	Front mudguard bottom stay	139	138
65-6598	Front mudguard stay distance piece ...	141	140
65-6600	Front mudguard support bridge	141	140
65-6770	Rear mudguard backstay bridge bracket complete ...	145	144



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-6771	Rear mudguard backstay bridge bracket only ... ..	145	144
65-6772	Rear mudguard backstay bracket strip ... ..	145	144
65-6835	Rear mudguard with fixed fittings	145	144
65-6836	Rear mudguard tail ... ..	145	144
65-6837	Rear mudguard upright stay (right-hand) ... ..	151	150
65-6838	Rear mudguard upright stay (left-hand) ... ..	151	150
65-6839	Rear mudguard lifting handle and mudguard stay... ..	147	146
65-6840	Rear mudguard bottom stay (right-hand) ... ..	149	148
65-6842	Rear mudguard bottom stay (left-hand) ... ..	149	148
65-6848	Rear mudguard with fixed fittings	145	144
65-6850	Rear mudguard distance collar	153	152
65-6851	Rear mudguard upright stay...	151	150
65-6852	Rear mudguard lifting handle and mudguard stay... ..	147	146
65-6854	Rear number plate ... ..	147	146
65-6897	Carrier complete ... ..	105	104
65-7007	Rear brake rod with toggle end	157	156
65-7028	Rear brake anchor strap bracket	155	154
65-7037	Rear brake operating lever bush	137	136
65-7052	Rear brake pedal ... ..	153	152
65-7054	Rear brake pedal return spring	155	154
65-7286	Legshield top support bar and frame tube clip (right-hand)	199	198

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-7287	Legshield top support bar and frame tube clip (left-hand)...	199	198
65-7550	Chaincase securing bolt ... ..	163	162
65-7578	Chaincase rear with fixed fittings and sliding plate ... ..	163	162
65-7584	Chaincase front with fixed fittings	163	162
65-7715	Chainguard with fixed fittings (top) ... ..	165	164
65-7718	Chainguard with fixed fittings (top) ... ..	164	164
65-8032	Petrol tank support bolt rubber (top) ... ..	169	168
65-8033	Petrol tank support bolt rubber (bottom) ... ..	169	168
65-8034	Petrol tank support bolt (rear)	167	166
65-8150	Petrol pipe complete with nuts	167	166
65-8161	Petrol tank ... ..	167	166
65-8314	Knee grip rubber (right-hand)	167	166
65-8315	Knee grip rubber (left-hand)...	167	166
65-8317	Petrol tank badge screw ... ..	169	168
65-8326	Petrol tank support bolt (front)	169	168
65-8354	Petrol tank (special order only) <i>not illust'd</i>	...	166
65-8419	Oil pipe nipple ... ..	171	170
65-8420	Oil return pipe connection ... ..	173	172
65-8421	Oil return pipe connection washer (fibre) ... ..	173	172
65-8422	Oil pipe ferrule... ..	173	172
65-8422	Oil tank breather pipe connec- tion ferrule ... ..	173	172
65-8424	Oil return pipe connection nut	173	172



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-8442	Oil tank with fixed fittings ...	169	168	65-8716	Ignition control cable cover ...	179	178
65-8461	Oil feed pipe with union ...	171	170	65-8795	Exhaust lifter cable and cover complete ... .. <i>not illust'd</i> ...		178
65-8465	Oil feed and scavenge pipe with nipple ... ..	171	170	65-8796	Exhaust cable only ... ..	181	180
65-8469	Oil feed pipe complete ...	171	170	65-8797	Exhaust cable cover ... ..	181	180
65-8475	Oil scavenge pipe complete assembled ... .. <i>not illust'd</i> ...		170	65-8832	Throttle cable and cover com- plete ... .. <i>not illust'd</i> ...		184
65-8479	Oil tank with fixed fittings ...	169	168	65-8833	Throttle cable ... ..	185	184
65-8485	Oil tank filler cap ... ..	169	168	65-8834	Throttle cable cover (long) ...	185	184
65-8501	Throttle twist grip less cable and cover ... ..	183	182	65-8835	Throttle cable cover (short) ...	185	184
65-8502	Throttle twist grip rubber grip (left-hand) ... ..	185	184	65-8836	Air control cable and cover complete ... .. <i>not illust'd</i> ...		184
65-8503	Throttle twist grip rubber grip	183	182	65-8837	Air control cable ... ..	185	184
65-8504	Throttle twist grip inner sleeve and rotor ... ..	183	182	65-8838	Air control cable cover (long)	185	184
65-8505	Throttle twist grip body (top half) ... ..	185	184	65-8839	Air control cable cover (short)	185	184
65-8506	Throttle twist grip body (bot- tom half) ... ..	185	184	65-9019	Toolbox complete ... ..	189	188
65-8671	Clutch cable and cover complete <i>not illust'd</i> ...		176	65-9021	Toolbox strap ... ..	189	188
65-8672	Clutch cable ... ..	177	176	65-9035	First aid box support plate ... <i>not illust'd</i> ...		200
65-8673	Clutch cable cover ... ..	177	176	65-9071	Tail lamp wire clip ... ..	195	194
65-8675	Front brake cable and cover complete ... .. <i>not illust'd</i> ...		174	65-9080	Toolbox complete ... ..	189	188
65-8676	Front brake cable ... ..	175	174	65-9085	Toolbox Bracket ... .. <i>not illust'd</i> ...		188
65-8677	Front brake cable cover ...	175	174	65-9086	Toolbox complete ... ..	189	188
65-8714	Ignition control cable and cover complete ... .. <i>not illust'd</i> ...		178	65-9088	Toolbox bracket ... .. <i>not illust'd</i> ...		188
65-8715	Ignition control cable ... ..	179	178	65-9089	Toolbox fixing clip ... ..	189	188
				65-9100	Saddle ... .. <i>See Equipment</i>		
				65-9101	Speedometer clamp rod nut ...	193	192
				65-9105	Speedometer clamping disc locating plate ... ..	193	192
				65-9108	Front brake cable securing clip	193	192
				65-9109	Speedometer cable guide plate	193	192



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
65-9110	Front fork top nut spanner ...	193	... 192
65-9111	Speedometer bracket (fork centre mounting) ...	193	... 192
65-9115	Cylinder head bolt spanner ...	191	... 190
65-9130	Tappet feelers complete ...	191	... 190
65-9132	Tappet spanner... ..	191	... 190
65-9133	Tappet adjusting spanner ...	191	... 190
65-9138	Tool roll complete with tools... <i>not illust'd</i> ...	...	190
65-9150	Speedometer cable complete ...	193	... 192
65-9186	Transmission chain (rear) (90 links) ...	197	... 196
65-9188	Transmission chain (rear) (104 links) ...	197	... 196
65-9195	Air cleaner ...	<i>See Air Cleaners</i>	
65-9196	Air cleaner ...	<i>See Air Cleaners</i>	
65-9198	Air cleaner elbow ...	<i>See Air Cleaners</i>	
66-57	Cylinder head ...	13	... 12
66-58	Cylinder head washer ...	13	... 12
66-88	Cylinder barrel with liner and valve guides ...	13	... 12
66-92	Cylinder base paper washer ...	13	... 12
66-93	Cylinder base paper washer ...	13	... 12
66-98	Engine steady stay ...	19	... 18
66-102	Sparking plug washer ...	15	... 14
66-115	Cylinder head securing bolt complete ...	13	... 12
66-127	Carburettor joint washer (Hal- lite) ...	15-205	... 14-204
66-135	Carburettor joint washer ex- tension (Tufinol) ...	205	... 204

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-139	Cylinder valve guide (exhaust)	15	... 14
66-140	Cylinder valve guide (inlet) ...	15	... 14
66-147	Engine steady stay ...	19	... 18
66-221	Valve spring collar ...	17	... 16
66-222	Valve retaining split collar (inlet) ...	17	... 16
66-235	Cylinder valve (inlet) ...	15	... 14
66-236	Cylinder valve (exhaust) ...	15	... 14
66-242	Valve spring cover ...	17	... 16
66-243	Valve cover breather washer...	17	... 16
66-477	Connecting rod with big-end bearing assembly ...	<i>See General Index</i>	
66-478	Connecting rod with big-end bearing assembly ...	<i>See General Index</i>	
66-480	Connecting rod complete with bushes...	37	... 36
66-482	Connecting rod complete with bushes...	37	... 36
66-490	Connecting rod big-end bush...	37	... 36
66-491	Gudgeon pin bush ...	37	... 36
66-492	Gudgeon pin bush ...	37	... 36
66-506	Crankpin roller cage ...	39	... 38
66-545	Crankpin... ..	39	... 38
66-629	Connecting rod thrust washer	37	... 36
66-630	Connecting rod thrust washer rivet ...	<i>not illust'd</i> ...	
66-634	Flywheel (gear side) with engine shaft assembled ...	39	... 38
66-636	Flywheel (drive side) ...	39	... 38
66-640	Engine shaft (gear side) ...	39	... 38



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-644	Engine shaft (drive side) ...	39	... 38	66-1341	Push rod end (top) ...	51	... 50
66-649	Flywheel (drive side) with engine shaft assembled ...	39	... 38	66-1343	Push rod end rivet ...	not illust'd	... 50
66-651	Flywheel (gear side) with engine shaft assembled ...	39	... 38	66-1367	Push rod cover tube gland packing rubber ...	51	... 50
66-660	Engine shaft distance collar ...	41	... 40	66-1379	Push rod cover tube bottom washer... ..	51	... 50
66-661	Engine shaft shim (drive side)	39	... 38	66-1431	Exhaust lever ...	23	... 22
66-698	Engine shaft oil feed pipe ...	41	... 40	66-1432	Exhaust lifter spindle spring...	23	... 22
66-953	Gudgeon pin ...	27	... 26	66-1434	Exhaust lifter bush ...	23	... 22
66-954	Gudgeon pin retaining ring ...	27	... 26	66-1435	Exhaust lifter ...	23	... 22
66-1024	Piston only ...	25	... 24	66-1493	Inlet and exhaust tappet ...	49	... 48
66-1025	Piston only ( $\frac{1}{2}$ mm. oversize)...	See Piston Chart		66-1494	Inlet and exhaust valve tappet guide ...	49	... 48
66-1026	Piston only (1mm. oversize)...	See Piston Chart		66-1495	Exhaust tappet...	49	... 48
66-1039	Piston only ...	25	... 24	66-1497	Inlet tappet head ...	49	... 48
66-1040	Piston only ( $\frac{1}{2}$ mm. oversize)...	See Piston Chart		66-1498	Exhaust tappet head ...	49	... 48
66-1041	Piston only (1mm. oversize)...	See Piston Chart		66-1511	Inlet and exhaust tappet head	49	... 48
66-1090	Piston ring ...	25	... 24	66-1601	Crankcase (gear side) with fixed fittings ...	27	... 26
66-1091	Piston ring ( $\frac{1}{2}$ mm. oversize) ...	See Piston Chart		66-1603	Crankcase (drive side) with fixed fittings ...	27	... 26
66-1092	Piston ring (1mm. oversize) ...	See Piston Chart		66-1613	Crankcase (drive side) with fixed fittings ...	27	... 26
66-1100	Scraper ring ...	25	... 24	66-1616	Crankcase (gear side) with fixed fittings ...	27	... 26
66-1101	Scraper ring ( $\frac{1}{2}$ mm. oversize)...	See Piston Chart		66-1625	Bearing (drive side) ...	29	... 28
66-1102	Scraper ring (1mm. oversize)...	See Piston Chart		66-1627	Crankcase and cylinder base fixing stud ...	31	... 30
66-1190	Piston complete with gudgeon pin, rings and retaining springs not illust'd ...		22	66-1631	Crankcase (drive side) with fixed fittings ...	27	... 26
66-1191	Piston complete ( $\frac{1}{2}$ mm. oversize)	See Piston Chart					
66-1192	Piston complete (1mm. oversize)	See Piston Chart					
66-1198	Piston complete with gudgeon pin, rings and retaining springs	See Piston Chart					
66-1199	Piston complete ( $\frac{1}{2}$ mm. oversize)	See Piston Chart					
66-1200	Piston complete (1mm. oversize)	See Piston Chart					



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-1642	Crankcase (drive side) with fixed fittings ... ..	27	26	66-1937	Tappet recess cover joint washer	51	50
66-1682	Oil valve spring ... ..	35	34	66-2007	Cam pinion spindle bolt ...	47	46
66-1683	Crankcase oil pipe adaptor washer (fibre) ... ..	33	32	66-2008	Timing gear plate complete with bearing ... ..	47	46
66-1683	Oil valve retaining screw washer	35	34	66-2250	Magdyno drive idler pinion with bush ... ..	45	44
66-1684	Oil valve spring ... ..	35	34	66-2251	Idler pinion ... ..	45	44
66-1685	Air release pipe complete with nipple ... ..	29	28	66-2320	Magdyno strap (long) complete	43	42
66-1696	Crankcase air release pipe with nipple ... ..	29	28	66-2321	Magdyno strap (short) complete	43	42
66-1701	Crankcase bearing oil retaining washer spring ring ... ..	29	28	66-2327	Magneto strap (short) ... ..	43	42
66-1705	Cush drive bearing alignment washer... ..	41	40	66-2343	Magneto strap (long) ... ..	45	44
66-1706	Cush drive sleeve spring ...	43	42	66-2347	Magdyno packing washer (.005")	43	42
66-1707	Cush drive bearing alignment washer... ..	41	40	66-2348	Magdyno packing washer (.010")	43	42
66-1708	Cush drive bearing alignment washer... ..	41	40	66-2620	Oil pump driving spindle ...	53	52
66-1910	Gearbox cover stud (short) ...	61	60	66-2725	Crankcase shield front stud nut	59	58
66-1918	Timing cover complete ... ..	33	32	66-2726	Crankcase shield and chainstay stud nut ... ..	59	58
66-1920	Timing cover joint washer (outer)	33	32	66-2732	Crankcase shield complete (solo)	59	58
66-1923	Timing cover oil feed washer (rubber) ... ..	35	34	66-2735	Crankcase shield U bolt ...	59	58
66-1933	Valve spring cover securing screw ... ..	17	16	66-2738	Crankcase shield complete (side-car) ... ..	59	58
66-1933	Distributor clamp fixing screw	45	44	66-2810	Silencer fixing bolt nut ...	57	56
66-1933	Tappet recess cover screw ...	51	50	66-2810	Saddle front fixing bolt nut ...	91	90
66-1936	Tappet recess cover ... ..	51	50	66-2940	Exhaust pipe complete ... ..	55	54
				66-2944	Silencer complete ... ..	57	56
				66-2986	Exhaust pipe ... ..	55	54
				66-2991	Silencer complete ... ..	57	56
				66-2993	Exhaust pipe sleeve ... ..	57	56
				66-3028	Gearbox shell complete with fixed fittings ... ..	61	60



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-3030	Gearbox shell ... ..	not illust'd	60	66-3214	Layshaft bush ... ..	69	68
66-3058	Kickstarter crank spring ...	73	72	66-3214	Mainshaft gear bush (25T) ...	65	64
66-3065	Gearbox outer cover screw (short) ... ..	61	60	66-3215	Layshaft gear with bush (25T)	69	68
66-3068	Gearbox cover joint washer (outer) ... ..	61	60	66-3248	Gear operating fork ... ..	75	74
66-3069	Gearbox cover joint washer (inner) ... ..	61	60	66-3250	Gear control shaft locking washer	75	74
66-3070	Gearbox inspection cover ...	77	76	66-3256	Clutch operating spindle dis- tance piece ... ..	79	78
66-3071	Mainshaft packing washer (.005")	63	62	66-3258	Gear control shaft peg ...	75	74
66-3072	Mainshaft packing washer (.010")	63	62	66-3259	Kickstarter crank return stop rubber ... ..	73	72
66-3074	Gearbox inner cover dowel ...	63	62	66-3415	Footchange operating plate and sleeve complete ... ..	83	82
66-3079	Kickstarter ratchet ... ..	75	74	66-3421	Clutch operating spindle lug complete ... ..	79	78
66-3080	Kickstarter ratchet pinion ...	75	74	66-3781	Clutch spring cup ... ..	87	86
66-3081	Kickstarter ratchet pinion sleeve	75	74	66-3787	Mainshaft nut ... ..	63	62
66-3082	Gear control shaft and fork complete ... ..	75	74	66-3790	Clutch push rod ... ..	87	86
66-3083	Gear control shaft ... ..	75	74	66-3799	Clutch sleeve ... ..	87	86
66-3084	Gear control shaft bush ...	75	74	66-3800	Clutch spring ... ..	87	86
66-3086	Gear control shaft packing washer	75	74	66-3809	Clutch chainwheel complete ...	203	202
66-3087	Gear control shaft packing washer (small) ... ..	75	74	66-3811	Clutch sleeve ... ..	203	202
66-3090	Gearbox and chaincase oil re- taining washer ... ..	89	88	66-3812	Clutch driving plate ... ..	203	202
66-3102	Gearbox outer cover with fixed fittings ... ..	61	60	66-3813	Clutch sleeve cork ring ...	203	202
66-3209	Layshaft gear with bush (29T)	67	66	66-3903	Clutch centre complete with studs ... ..	87	86
66-3211	Layshaft gear bush ... ..	67	66	66-3906	Clutch centre complete with studs ... ..	87	86
66-3212	Mainshaft gear complete with bush (25T) ... ..	65	64	66-3908	Clutch chainwheel complete ...	87	86
				66-4098	Engine yoke plate bolt (top)...	91	90
				66-4128	Frame front complete ... ..	91	90



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-4149	Ball head cup ... ..	91	90
66-4157	Engine plate (rear) ... ..	91	90
66-4158	Engine plate (front) ... ..	91	90
66-4159	Engine plate cover (front) ...	91	90
66-4160	Engine plate crankcase bolt ...	207	206
66-4163	Engine plate, chainstay and seat tube bolt ... ..	91	90
66-4167	Gearbox adjusting stop ... ..	97	96
66-4168	Gearbox connecting bolt (rear)	97	96
66-4169	Gearbox connecting bolt collar	97	96
66-4581	Chainstay distance piece (front)	99	98
66-4601	Chainstay bridge distance collar (right-hand) ... ..	99	98
66-4602	Chainstay bridge distance collar (left-hand) ... ..	99	98
66-4603	Rear wheel adjusting screw ...	95	94
66-4604	Chainstay and seat tube con- necting stud ... ..	99	98
66-4636	Backstay and seat tube lug bolt	93	92
66-4650	Chainstay and backstay complete	97	96
66-4707	Shakeproof washer ... ..	<i>various</i>	
66-4708	Engine frame bolt washer (shake- proof) ... ..	93	92
66-4708	Front brake cam operating lever washer... ..	125	124
66-4708	Rear brake shoe swivel pin washer... ..	137	136
66-4708	Rear brake pedal shaft washer	155	154
66-4727	Front stand complete... ..	101	100
66-4767	Rear stand spring ... ..	101	100

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-4772	Rear stand complete ... ..	101	100
66-4892	Battery carrier complete ... ..	105	104
66-4893	Battery carrier bracket ... ..	105	104
66-4895	Battery bracket with washer... <i>not illust'd</i> ...	...	208
66-4900	Footrest rod ... ..	157	156
66-4902	Footrest washer (cork) ... ..	159	158
66-4903	Chaincase distance sleeve ...	159	158
66-4934	Pillion footrest assembly (off- side) ... ..	159	158
66-4935	Pillion footrest assembly (near- side) ... ..	159	158
66-4936	Pillion footrest spindle (left- hand) ... ..	161	160
66-4938	Pillion footrest spindle (right- hand) ... ..	161	160
66-5065	Front fork middle yoke bush... ..	111	110
66-5065	Steering stem yoke bush ... ..	109	108
66-5065	Ball head clip yoke bush ... ..	111	110
66-5070	Front fork assembled ... .. <i>not illust'd</i> ...	...	108
66-5071	Front fork ... ..	109	108
66-5138	Ball head clip bolt with clips	111	110
66-5144	Steering stem and yoke complete	109	108
66-5151	Front fork spring stop ... ..	113	112
66-5153	Front fork spring ... ..	113	112
66-5165	Shock absorber adaptor knob complete ... ..	111	110
66-5203	Steering head dust cap ... ..	109	108
66-5482	Front wheel rim ... ..	119	118
66-5514	Front brake cover plate with fixed fittings ... ..	123	122



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-5518	Front hub with spindle (less brake) ... ..	not illust'd ...	120	66-6530	Front mudguard with fixed fittings ... ..	139	138
66-5519	Front hub complete with bear- ings ... ..	121	120	66-6535	Front number plate ... ..	143	142
66-5524	Front hub washer ... ..	123	122	66-6542	Front mudguard top stay ...	139	138
66-5525	Front hub washer (left-hand) (felt) ... ..	121	120	66-6740	Rear mudguard tail bolt com- plete ... ..	145	144
66-5526	Front hub spindle ... ..	123	122	66-6835	Rear mudguard with fixed fittings ... ..	145	144
66-5536	Front wheel complete (less brake and tyre) ... ..	not illust'd ...	118	66-6875	Rear number plate ... ..	147	146
66-6054	Rear wheel rim ... ..	129	128	66-6891	Rear mudguard bottom stay complete ... ..	149	148
66-6067	Rear hub shell complete with bearings ... ..	131	130	66-6941	Rear mudguard tail ... ..	145	144
66-6070	Rear brake drum securing bolt	135	134	66-6945	Rear mudguard upright stay	151	150
66-6071	Rear wheel complete (less brake and tyre) ... ..	not illust'd ...	123	66-6947	Lifting handle and mudguard stay ... ..	147	146
66-6096	Rear hub adjusting plate ...	133	132	66-6979	Carrier complete ... ..	105	104
66-6101	Rear hub spindle complete with fixed nut ... ..	131	130	66-7005	Rear brake pedal ... ..	153	152
66-6104	Rear hub spigot and brake drum support ... ..	133	132	66-7010	Rear brake pedal ... ..	205	204
66-6105	Rear hub spigot and brake drum support nut ... ..	133	132	66-7029	Rear brake pedal shaft ...	155	154
66-6107	Rear brake drum and chain- wheel with studs ... ..	135	134	66-7032	Rear brake pedal return spring	155	154
66-6123	Rear brake cover plate with fixed fittings ... ..	135	134	66-7033	Rear brake pedal stop plate...	155	154
66-6257	Rear brake anchor bolt split pin ... ..	137	136	66-7034	Rear brake pedal bush ...	153	152
				66-7035	Rear brake pedal shaft ...	155	154
				66-7315	Legshield stay frame clip (right- hand) ... ..	207	206
				66-7316	Legshield stay frame clip (left- hand) ... ..	207	206
				66-7318	Legshield stay complete ...	207	206
				66-7345	Legshield complete assembly...	207	206
				66-7347	Legshield (left-hand) ... ..	207	206



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-7348	Legshield (right-hand)...	207	...
66-7349	Legshield support tube complete (right-hand) ...	207	...
66-7351	Legshield bottom support tube complete (left-hand) ...	207	...
66-7353	Legshield support tube clip ...	207	...
66-7354	Legshield and footrest fixing strap (left-hand) ...	207	...
66-7355	Legshield bottom inside strap (right-hand) ...	207	...
66-7356	Legshield bottom inside strap (left-hand) ...	207	...
66-7358	Legshield and fixing strap (right- hand) ...	207	...
66-7362	Footrest bracket ...	207	...
66-7363	Footrest rubbers ...	207	...
66-7514	Front chaincase joint washer (cork) ...	163	...
66-7517	Chaincase oil level plug ...	163	...
66-7518	Front mudguard bridge fork fixing bolt washer ...	143	...
66-7518	Chaincase oil drain plug washer (fibre) ...	163	...
66-7518	Chaincase sliding plate bolt washer...	163	...
66-7520	Chaincase sliding plate complete	163	...
66-7523	Chaincase sliding plate bolt ...	163	...
66-7575	Crankcase and chaincase joint washer...	163	...

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-7601	Chaincase (rear) with fixed fittings and sliding plate ...	163	...
66-7806	Chainguard with fixed fittings (top) ...	165	...
66-8089	Petrol tank support bolt (rear)	167	...
66-8091	Petrol tank support bolt rubber (top) ...	169	...
66-8091	Petrol tank support bolt rubber (bottom) ...	169	...
66-8249	Petrol tank ...	205	...
66-8275	Petrol pipe complete ...	205	...
66-8285	Petrol tank ...	167	...
66-8290	Petrol pipe complete with nuts	167	...
66-8292	Petrol pipe complete with nuts	167	...
66-8330	Oil tank breather pipe extension	173	...
66-8332	Oil pipe nipple nut ...	171	...
66-8332	Oil return pipe nut ...	173	...
66-8332	Timing cover breather extension pipe nut ...	35	...
66-8340	Crankcase breather pipe clip...	31	...
66-8340	Oil tank breather pipe clip ...	173	...
66-8340	Speedometer cable clip ...	193	...
66-8347	Horn and saddle spring distance piece ...	99	...
66-8347	Steering damper rod distance washer...	109	...
66-8347	Oil tank bolt distance collar...	171	...
66-8351	Oil tank filler cap ...	169	...
66-8358	Oil tank filter top cap with spring ...	171	...



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-8359	Oil tank filter element with bottom cap ... ..	171 ...	170
66-8402	Oil supply pipe complete ...	171 ...	170
66-8406	Oil supply pipe assembled ...	171 ...	170
66-8406	Oil feed and return pipe assem- bled ... ..	171 ...	170
66-8410	Oil return pipe assembled ...	173 ...	172
66-8411	Oil return pipe complete ...	173 ...	172
66-8502	Exhaust lifter cable ... ..	205 ...	204
66-8507	Exhaust cable toggle ... ..	181 ...	180
66-8511	Exhaust lifter cable complete <i>not illust'd</i> ...	...	204
66-8513	Exhaust control complete less cable and cover ... ..	179 ...	178
66-8514	Exhaust lever only ... ..	179 ...	178
66-8515	Exhaust control body ... ..	179 ...	178
66-8516	Ignition control lever clamp ...	179 ...	178
66-8516	Exhaust lever clamp ... ..	179 ...	178
66-8516	Air control clamp ... ..	181 ...	180
66-8517	Ignition control lever clamp screw ... ..	179 ...	178
66-8517	Exhaust lever clamp screw ...	179 ...	178
66-8517	Exhaust control lever screw ...	179 ...	178
66-8517	Air control clamp screw ... ..	181 ...	180
66-8517	Combined mag and exhaust body clamp screw ... ..	187 ...	186
66-8519	Exhaust control lever screw nut ...	179 ...	178
66-8524	Exhaust lifter cable and cover <i>not illust'd</i> ...	...	178
66-8525	Exhaust lifter cable ... ..	181 ...	180
66-8526	Exhaust lifter cable cover ... ..	181 ...	180
66-8527	Exhaust lifter cable and cover <i>not illust'd</i> ...	...	178

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-8528	Exhaust lifter cable ... ..	181 ...	180
66-8529	Exhaust lifter cable cover ... ..	181 ...	180
66-8576	Clutch cable cover ... ..	177 ...	176
66-8580	Clutch cable and cover complete <i>not illust'd</i> ...	...	176
66-8581	Clutch cable ... ..	177 ...	176
66-8584	Clutch control complete (less cable and cover) ... ..	205 ...	204
66-8584	Front brake control (less cable and cover) ... ..	205 ...	204
66-8746	Front brake cable cover ... ..	175 ...	174
66-8747	Front brake cable nipple (control end, ... ..	175 ...	174
66-8747	Clutch cable nipple (control end) ...	177 ...	176
66-8755	Front brake cable complete ... <i>not illust'd</i> ...	...	204
66-8756	Front brake cable ... ..	205 ...	204
66-8757	Front brake cable cover ... ..	205 ...	204
66-8758	Front brake cable and cover complete ... ..	<i>not illust'd</i> ...	174
66-8759	Front brake cable ... ..	175 ...	174
66-8806	Ignition control cable complete <i>not illust'd</i> ...	...	204
66-8807	Ignition control cable ... ..	205 ...	204
66-8808	Ignition control cable cover ...	205 ...	204
66-8810	Ignition control complete (less cable and cover) ... ..	177 ...	176
66-8811	Ignition control lever ... ..	177 ...	176
66-8815	Combined mag and exhaust con- trol (less cables and covers) ...	187 ...	186
66-8816	Combined mag and exhaust control lever (short) ... ..	187 ...	186



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-8817	Combined mag and exhaust control body ... ..	187	186
66-8818	Combined mag and exhaust control adjusting nut ...	187	186
66-8819	Combined mag and exhaust control locking washer ...	187	186
66-8880	Throttle cable ... ..	185	184
66-8882	Throttle cable and cover complete ... ..	not illust'd	184
66-8896	Air control complete (less cable and cover) ... ..	181	180
66-8897	Air control lever ... ..	181	180
66-8899	Air control cable and cover complete ... ..	not illust'd	184
66-8904	Air control body ... ..	181	180
66-9036	Cylinder base nut spanner ...	191	190
66-9038	Screwdriver attachment ...	191	190
66-9042	Wheel alignment gauge ...	193	192
66-9044	Valve grinding tool holder complete ... ..	193	192
66-9049	Cable clip (rubber) ... ..	195	194
66-9052	Hub adjusting sleeve spanner	193	192
66-9067	Hub spindle nut spanner ...	193	192
66-9068	Detachable wheel spanner ...	193	192
66-9071	Gland nut spanner ... ..	193	192
66-9113	Speedometer cable clip ... ..	193	192
66-9119	Tool roll complete with tools... not illust'd	190	190
66-9132	Spark plug spanner complete	191	190
66-9145	Speedometer cable (fork top mounting) ... ..	193	192

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
66-9148	Oil can with fixing clip ... not illust'd	...	208
66-9154	Insulating tape ... ..	not illust'd	208
66-9161	Tyre valve centre removing tool	not illust'd	208
66-9164	Tyre repair outfit ... ..	not illust'd	208
66-9166	Chain rivet extractor ... ..	not illust'd	208
66-9202	Saddle ... ..	See Equipment	
67-24	Cylinder head with valve guides and studs ... ..	13	12
67-26	Rocker box complete (inlet) ...	17	16
67-27	Rocker box complete (exhaust)	19	18
67-28	Cylinder head washer ... ..	13	12
67-29	Cylinder valve (inlet) ... ..	15	14
67-30	Cylinder valve (exhaust) ...	15	14
67-31	Cylinder valve guide (inlet) ...	15	14
67-32	Cylinder valve guide (exhaust)	15	14
67-33	Valve spring cup ... ..	17	16
67-34	Valve spring collar ... ..	17	16
67-35	Inlet manifold ... ..	13	12
67-36	Inlet manifold joint washer ...	13	12
67-39	Rocker box joint washer (Hallite)	17	16
67-40	Rocker box joint washer (exhaust)	19	18
67-42	Rocker box inspection cap washer... ..	17	16
67-43	Rocker box stud (exhaust) ...	19	18
67-44	Rocker box bolt (inlet and exhaust) ... ..	19	18
67-45	Inlet valve rocker (nearside)...	21	20
67-46	Inlet valve rocker (offside) ...	21	20
67-47	Exhaust valve rocker (nearside)	21	20
67-48	Exhaust valve rocker (offside)	21	20



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-50	Cylinder barrel ... ..	13	12
67-56	Rocker adjusting screw ...	21	20
67-57	Valve push rod (inlet) ...	51	50
67-58	Valve push rod (exhaust) ...	51	50
67-59	Valve rocker fulcrum pin (inlet)	21	20
67-60	Valve rocker thrust washer ...	21	20
67-61	Valve rocker thrust washer ...	21	20
67-62	Valve rocker spindle spring washer... ..	21	20
67-63	Rocker box steady strap ...	19	18
67-64	Valve rocker fulcrum pin (ex- haust) ... ..	21	20
67-65	Rocker adjusting screw nut ...	21	20
67-66	Rocker inspection plug ...	19	18
67-67	Rocker box inspection cap ...	17	16
67-70	Cylinder base paper washer ...	13	12
67-71	Cylinder head stud ...	13	12
67-72	Cylinder head bolt (long) ...	13	12
67-74	Crankcase and cylinder base fixing stud ... ..	31	30
67-75	Cylinder head unit ...	13	12
67-79	Engine steady stay ...	19	18
67-81	Piston complete with gudgeon pin, rings and retaining springs <i>not illust'd</i> ...		22
67-82	Piston only ... ..	25	24
67-83	Piston complete ( $\frac{1}{2}$ mm. oversize)	<i>See Piston Chart</i>	
67-84	Piston only ( $\frac{1}{2}$ mm. oversize)...	<i>See Piston Chart</i>	
67-85	Piston complete (1mm. oversize)	<i>See Piston Chart</i>	
67-86	Piston only (1mm. oversize)...	<i>See Piston Chart</i>	
67-87	Piston ring ... ..	25	24

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-88	Piston ring ( $\frac{1}{2}$ mm. oversize)...	<i>See Piston Chart</i>	
67-89	Piston ring (1mm. oversize) ...	<i>See Piston Chart</i>	
67-90	Scraper ring ... ..	25	24
67-91	Scraper ring ( $\frac{1}{2}$ mm. oversize) .	<i>See Piston Chart</i>	
67-92	Scraper ring (1mm. oversize) .	<i>See Piston Chart</i>	
67-93	Piston complete ... ..	<i>See Piston Chart</i>	
67-94	Piston only ... ..	<i>See Piston Chart</i>	
67-95	Piston complete ( $\frac{1}{2}$ mm. oversize)	<i>See Piston Chart</i>	
67-96	Piston only ( $\frac{1}{2}$ mm. oversize)...	<i>See Piston Chart</i>	
67-97	Piston complete (1mm. oversize)	<i>See Piston Chart</i>	
67-98	Piston only (1mm. oversize)...	<i>See Piston Chart</i>	
67-100	Gudgeon pin ... ..	27	26
67-101	Gudgeon pin retaining ring ...	27	26
67-103	Piston complete ... ..	<i>See Piston Chart</i>	
67-104	Piston only ... ..	<i>See Piston Chart</i>	
67-105	Piston complete ( $\frac{1}{2}$ mm. oversize)	<i>See Piston Chart</i>	
67-106	Piston only ( $\frac{1}{2}$ mm. oversize)...	<i>See Piston Chart</i>	
67-107	Piston complete (1mm. oversize)	<i>See Piston Chart</i>	
67-108	Piston only (1mm. oversize)...	<i>See Piston Chart</i>	
67-110	Sparkling plug ... ..	15	14
67-120	Carburettor drip shield ...	15	14
67-130	Crankcase breather ... ..	31	30
67-132	Timing cover outer screw (long)	35	34
67-133	Timing cover screw (inner) ...	35	34
67-133	Timing cover screw (outer) ...	35	34
67-134	Crankcase breather oil seal ( $\frac{1}{8}$ " thick) ... ..	31	30
67-135	Crankcase breather oil seal ( $\frac{3}{32}$ " thick) ... ..	31	30



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-136	Crankcase breather oil seal ( $\frac{3}{16}$ " thick) ...	31	30
67-137	Crankcase breather oil seal ( $\frac{3}{16}$ " thick) ...	31	30
67-138	Timing cover plug ...	35	34
67-140	Crankcase breather pipe ...	31	30
67-142	Timing cover with fixed fittings (inner)...	35	34
67-144	Timing cover joint washer (inner)	35	34
67-146	Timing cover (outer) ...	33	32
67-147	Timing cover joint washer (outer)	33	32
67-161	Rocker oil feed pipe complete	19	18
67-210	Gudgeon pin bush ...	37	36
67-224	Connecting rod bolt nut ...	37	36
67-226	Connecting rod bush (big-end) (split) ...	37	36
67-228	Connecting rod complete with bushes, bolts and nuts ...	37	36
67-614	Crankshaft, flywheel, and con- necting rod assembled ...	not illust'd	36
67-615	Crankshaft and flywheel assem- bled ...	37	36
67-634	Crankshaft shim (.030") ...	41	40
67-635	Crankshaft shim (.025") ...	41	40
67-636	Crankshaft shim (.020") ...	39	38
67-637	Crankshaft shim (.015") ...	39	38
67-638	Crankshaft shim (.010") ...	39	38
67-639	Crankshaft shim (.005") ...	39	38
67-641	Crankshaft pinion ...	41	40
67-642	Crankshaft pump gear ...	41	40

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-643	Crankshaft nut ...	41	40
67-644	Crankshaft nut locking washer	41	40
67-645	Crankshaft pump gear washer	41	40
67-648	Crankshaft bush (gear side) ...	37	36
67-682	Camshaft pinion ...	47	46
67-685	Camshaft pinion lockwasher ...	47	46
67-686	Camshaft bush (crankcase) ...	47	46
67-687	Idler pinion spindle bush (crank- case) ...	47	46
67-695	Camshaft ...	47	46
67-705	Idler pinion complete ...	47	46
67-706	Idler pinion ...	45	44
67-707	Idler pinion spindle ...	47	46
67-708	Idler pinion spindle oil seal ...	47	46
67-709	Idler pinion spindle bush (inner timing cover) ...	47	46
67-721	Dynamo driving sprocket ...	45	44
67-725	Dynamo driven sprocket ...	45	44
67-1021	Tappet guide (inlet) ...	49	48
67-1022	Tappet guide (exhaust) ...	49	48
67-1023	Tappet guide fixing plate ...	49	48
67-1024	Inlet and exhaust tappet ...	49	48
67-1025	Tappet guide fixing plate bolt	51	50
67-1227	Crankcase drive side complete with fixed fittings ...	27	26
67-1231	Crankcase (gear side) with fixed fittings ...	27	26
67-1239	Crankcase shim (drive side) ...	27	26
67-1240	Crankcase ball bearing (drive side) ...	29	28



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-1242	Crankcase oil seal ... ..	31	30
67-1243	Crankcase oil seal washer ... ..	31	30
67-1245	Exhaust rocker box stud ... ..	19	18
67-1245	Magneto fixing stud ... ..	45	44
67-1246	Crankcase connecting stud ... ..	33	32
67-1247	Crankcase plug screw ... ..	27	26
67-1248	Crankcase connecting bolt nut lockwasher ... ..	31	30
67-1250	Crankcase stud (rear) ... ..	31	30
67-1251	Frame, crankcase and exhaust pipe lug stud ... ..	93	92
67-1258	Magneto joint washer ... ..	45	44
67-1259	Magneto fixing nut (long) ... ..	45	44
67-1261	Primary chain tensioner ... ..	55	54
67-1262	Primary chain tensioner stud ... ..	55	54
67-1263	Primary chain tensioner spring plate ... ..	55	54
67-1264	Primary chain tensioner stud nut ... ..	55	54
67-1265	Primary chain tensioner adjust- ing screw ... ..	55	54
67-1266	Primary chain tensioner adjust- ing screw nut ... ..	55	54
67-1267	Primary chain tensioner stud nut wire ... ..	not illust'd	54
67-1275	Crankcase scavenge pipe com- plete ... ..	33	32
67-1280	Crankcase scavenge pipe fixing bolt ... ..	33	32

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-1281	Crankcase scavenge pipe fixing bolt lockwasher ... ..	33	32
67-1285	Crankcase scavenge cover ... ..	33	32
67-1288	Crankcase scavenge cover joint washer... ..	33	32
67-1291	Crankcase connecting bolt com- plete (top) ... ..	31	30
67-1292	Crankcase connecting bolt nut (top) ... ..	31	30
67-1381	Oil pump complete ... ..	not illust'd	50
67-1382	Oil pump body... ..	51	50
67-1383	Oil pump feed gear (driving)... ..	53	52
67-1384	Oil pump feed gear (driven)... ..	53	52
67-1385	Oil pump scavenge gear (driver) ... ..	53	52
67-1386	Oil pump scavenge gear (driven) ... ..	53	52
67-1387	Oil pump spindle (driven) ... ..	53	52
67-1388	Oil pump driving spindle housing ... ..	53	52
67-1389	Oil pump spindle (driving) ... ..	53	52
67-1390	Oil pump spindle spring ring ... ..	53	52
67-1391	Oil pump end plate ... ..	51	50
67-1392	Oil pump bolt ... ..	53	52
67-1393	Oil pump washer (crankcase)... ..	53	52
67-1394	Oil pump washer (fibre) ... ..	53	52
67-1395	Oil pump stud (long) ... ..	53	52
67-1396	Oil pump stud (short) ... ..	53	52
67-1400	Oil valve spring ... ..	35	34
67-1401	Oil valve spring retaining screw ... ..	35	34
67-1461	Oil pipe union with pipes com- plete ... ..	35	34
67-1466	Oil pipe union joint washer ... ..	35	34



Compt No.	DESCRIPTION.	Page illustrated.	Page described.	Compt No.	DESCRIPTION.	Page illustrated.	Page described.
67-1467	Oil pipe union fixing bolt ...	37	36	67-2054	Cush drive bearing nut ...	41	40
67-1490	Oil release valve complete ...	37	36	67-2055	Cush drive sliding sleeve ...	41	40
67-1491	Oil release valve body complete	37	36	67-2675	Exhaust pipe complete (offside)	55	54
67-1496	Oil release valve spring ...	37	36	67-2679	Exhaust pipe (nearside) ...	55	54
67-1497	Oil release valve body plug ...	37	36	67-2690	Exhaust pipe finned collar ...	57	56
67-1498	Oil release valve body washer (fibre) ...	37	36	67-2700	Silencer complete (offside) ...	57	56
67-1499	Oil release valve washer (fibre)	37	36	67-2701	Silencer complete (nearside) ...	57	56
67-1701	Primary chain cover ...	53	52	67-3014	Gearbox shell complete with fixed fittings ...	61	60
67-1702	Primary chain cover joint washer	55	54	67-3015	Gearbox shell ... <i>not illust'd</i>		60
67-1703	Primary chain (.375" pitch x .250") ...	53	52	67-3017	Gearbox inner cover with fixed fittings ...	61	60
67-1704	Primary chain cover screw (long)	53	52	67-3019	Gearbox outer cover with fixed fittings ...	61	60
67-1705	Primary chain cover screw (short)	55	54	67-3023	Gearbox outer cover stud ...	61	60
67-1705	Gearbox outer cover screw (short)	61	60	67-3024	Gearbox inspection cover ...	77	76
67-1706	Primary chain cover screw (medium) ...	55	54	67-3025	Gearbox oil retaining washer...	63	62
67-1706	Gearbox outer cover screw (long)	61	60	67-3026	Constant mesh gear bearing spring ring ...	71	70
67-1708	Primary chain cover oil level screw ...	55	54	67-3027	Gearbox inspection hole plug .	77	76
67-1709	Primary chain cover oil level screw washer...	55	54	67-3028	Gearbox mainshaft spring ring	63	62
67-1710	Primary chain and bottom chainguard screw nut ...	55	54	67-3031	Gearbox cover joint washer (inner)...	61	60
67-1876	Dynamo strap ...	45	44	67-3032	Gearbox cover joint washer (outer) ...	61	60
67-1878	Dynamo strap stud ...	45	44	67-3033	Gearbox inspection cover joint washer...	77	76
67-2050	Engine sprocket complete with sleeve and key (27T) ...	43	42	67-3034	Gearbox outer cover stud nut	61	60
67-2052	Cush drive sleeve spring ...	43	42	67-3050	Gearbox sprocket (19T) ...	71	70
67-2053	Cush drive bearing ...	41	40	67-3051	Gearbox sprocket (18T) ...	71	70



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-3053	Gearbox sprocket nut... ..	71	70
67-3060	Gearbox mainshaft complete with gear (16T close ratio)...	63	62
67-3061	Gearbox mainshaft (close ratio)	63	62
67-3062	Gearbox mainshaft gear (16T close ratio) ... ..	63	62
67-3063	Gearbox mainshaft with gear (14T wide ratio) ... ..	63	62
67-3071	Constant mesh gear complete (26T close ratio) ... ..	69	68
67-3073	Constant mesh gear bush ...	69	68
67-3074	Mainshaft sliding gear (20T close ratio) ... ..	65	64
67-3075	Mainshaft sliding gear (24T close ratio) ... ..	65	64
67-3076	Constant mesh gear complete (26T wide ratio) ... ..	69	68
67-3078	Mainshaft sliding gear (18T wide ratio) ... ..	65	64
67-3079	Mainshaft sliding gear (22T wide ratio) ... ..	67	66
67-3080	Constant mesh gear bush (drilled 1ST) ... ..	69	68
67-3085	Layshaft complete with speeds and 17T gears ... ..	67	66
67-3086	Gearbox layshaft ... ..	67	66
67-3087	Layshaft gear (17T) ... ..	67	66
67-3088	Speedometer driving gear (6T)	79	78
67-3089	Layshaft sliding gear (23T close ratio) ... ..	69	68

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-3090	Layshaft sliding gear (19T close ratio) ... ..	69	68
67-3091	Layshaft gear complete (27T close ratio) ... ..	69	68
67-3093	Layshaft gear bush (29T) ...	69	68
67-3094	Layshaft thrust washer ...	69	68
67-3095	Layshaft sliding gear (25T wide ratio) ... ..	69	68
67-3096	Layshaft sliding gear (21T wide ratio) ... ..	69	68
67-3097	Layshaft gear with bush (29T wide ratio) ... ..	69	68
67-3099	Layshaft bush (inner cover) ...	69	68
67-3101	Mainshaft and layshaft gear locating ring ... ..	67	66
67-3111	Gear selector cam plate bearing	85	84
67-3112	Gear selector cam plate bearing screw washer ... ..	85	84
67-3113	Gear control cam plate complete	85	84
67-3116	Gear control shaft ... ..	75	74
67-3117	Gear control shaft grub screw	75	74
67-3118	Gear operating fork ... ..	75	74
67-3119	Gear control plunger ... ..	77	76
67-3120	Gear control plunger housing...	77	76
67-3121	Gear control plunger spring ...	77	76
67-3122	Gear control plunger housing nut ... ..	77	76
67-3130	Gear change selector arm com- plete ... ..	85	84



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-3136	Gear change selector arm pivot pin ... ..	85	84
67-3140	Footchange operating lever spindle bush ... ..	85	84
67-3143	Gear change selector lever ...	85	84
67-3144	Gear change selector lever screw	85	84
67-3145	Gear change selector lever re- turn spring lockwasher ...	85	84
67-3146	Gear change selector lever re- turn spring ... ..	85	84
67-3147	Footchange operating pedal spindle	85	84
67-3151	Kickstarter spindle bush ...	71	70
67-3152	Kickstarter quadrant stop ...	71	70
67-3153	Kickstarter lever spindle bush	73	72
67-3154	Kickstarter crank spring re- taining peg ... ..	73	72
67-3157	Kickstarter crank spring ...	73	72
67-3158	Kickstarter ratchet ... ..	75	74
67-3159	Kickstarter ratchet pinion ...	75	74
67-3160	Kickstarter ratchet pinion sleeve	75	74
67-3161	Kickstarter ratchet spring washer	75	74
67-3162	Kickstarter ratchet spring ...	75	74
67-3163	Kickstarter ratchet pinion sleeve nut ... ..	75	74
67-3164	Kickstarter ratchet sleeve nut lockwasher ... ..	75	74
67-3165	Kickstarter crank spindle with quadrant ... ..	71	70
67-3170	Footchange operating spindle bush ... ..	85	84

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-3175	Speedometer driven gear ...	79	78
67-3176	Speedometer driven gear re- taining pin ... ..	79	78
67-3180	Clutch control lever complete...	77	76
67-3183	Clutch push rod ... ..	87	86
67-3237	Clutch centre complete with studs ... ..	87	86
67-3240	Clutch driven plate (rear) ...	87	86
67-3242	Clutch driving plate with inserts	87	86
67-3245	Clutch plate complete ... ..	87	86
67-3247	Clutch spring ... ..	87	86
67-3248	Clutch spring cup ... ..	87	86
67-3249	Clutch spring retaining stud nut	87	86
67-3250	Clutch thrust washer ... ..	87	86
67-3251	Clutch thrust washer abutment ring ... ..	87	86
67-3252	Mainshaft nut ... ..	63	62
67-3253	Mainshaft nut locking washer...	63	62
67-3260	Clutch chainwheel complete ...	87	86
67-3263	Clutch cover ... ..	89	88
67-3264	Clutch cover washer ... ..	89	88
67-3266	Clutch cover nut ... ..	89	88
67-4023	Engine plate (front) (offside)...	91	90
67-4024	Engine plate (front) (nearside)	91	90
67-4026	Engine frame bolt (front plate)	93	92
67-4027	Seat tube and gearbox plate bolt (top) ... ..	93	92
67-4028	Gearbox foot setscrew...	95	94
67-4029	Footrest stud ... ..	101	100



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-4030	Saddle front fixing bolt ...	91	90
67-4032	Rear mudguard stay stud ...	95	94
67-4036	Engine plate insert complete...	91	90
67-4040	Saddle rear fixing stud ...	95	94
67-4050	Frame complete ...	91	90
67-4335	Battery and air cleaner carrier (less element) ...	105	104
67-4540	Air cleaner with fixed fittings (less element) ...	107	106
67-4545	Air cleaner element ...	107	106
67-4546	Air cleaner ferrule ...	107	106
67-4800	Rear wheel adjusting screw (nearside) ...	95	94
67-4801	Rear wheel adjusting screw (offside) ...	95	94
67-4843	Central stand complete ...	103	102
67-4847	Central stand spring ...	103	102
67-4848	Central stand pin ...	103	102
67-4851	Footrest bracket ...	159	158
67-4852	Footrest bracket nut complete	159	158
67-4870	Pillion footrest assembled ...	not illust'd	158
67-4871	Pillion footrest anchor bolt (offside) ...	161	160
67-4871	Pillion footrest anchor bolt (nearside) ...	161	160
67-4880	Prop stand lug complete ...	103	102
67-5005	Front fork assembled ...	not illust'd	108
67-5013	Pivot and front brake anchor stud ...	117	116
67-5013	Front brake cover plate stud...	125	124

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-5014	Front fork shaft ...	115	114
67-5016	Front fork bottom yoke complete	115	114
67-5021	Steering damper adjusting rod complete ...	109	108
67-5023	Front fork steering stem adjust- ing sleeve ...	115	114
67-5024	Steering stem adjusting sleeve cap ...	115	114
67-5028	Front fork top yoke ...	115	114
67-5036	Front fork spring (sidecar machines) ...	113	112
67-5042	Front fork outer sleeve com- plete (nearside) ...	113	112
67-5044	Front fork outer sleeve com- plete (offside) ...	113	112
67-5522	Front hub spindle distance piece	123	122
67-5523	Front hub spindle ...	123	122
67-5524	Front brake cover plate with fixed fittings ...	123	122
67-5528	Front brake distance collar spring ring ...	125	124
67-5530	Front brake drum ...	127	126
67-5531	Front brake drum thrust washer	127	126
67-5532	Front brake drum thrust ball cage complete ...	127	126
67-5534	Front brake cover plate thrust washer... ..	123	122
67-6001	Front wheel complete (less brake and tyre) ...	not illust'd	118



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-6001	Rear wheel complete (less brake and tyre) ... .. <i>not illust'd</i> ...	128	128	67-6044	Front hub end cover complete	123	122
67-6005	Front wheel rim ... ..	119	118	67-6044	Rear hub end cover complete	133	132
67-6005	Rear wheel rim ... ..	129	128	67-6046	Rear brake outrigger strap ...	137	136
67-6007	Front wheel spoke (left-hand)	121	120	67-6047	Rear hub spindle complete with collar ... ..	131	130
67-6007	Rear wheel spoke (right-hand)	129	128	67-6050	Rear brake drum and chain- wheel (49T) ... ..	135	134
67-6008	Front wheel spoke (right-hand)	119	118	67-6051	Front hub shell washer (rubber)	123	122
67-6008	Rear wheel spoke (left-hand)...	129	128	67-6051	Rear hub shell washer (rubber)	131	130
67-6021	Front hub complete with bearings	121	120	67-6526	Front mudguard with fixed fittings	139	138
67-6021	Rear hub shell complete with bearings ... ..	131	130	67-6528	Front mudguard stay ... ..	139	138
67-6027	Front hub spindle sleeve ...	123	122	67-6530	Front stand complete ... ..	101	100
67-6027	Rear hub spindle sleeve ...	131	130	67-6532	Front mudguard support bridge	141	140
67-6028	Rear hub distance piece ...	133	132	67-6752	Rear mudguard with fixed fittings	145	144
67-6030	Rear brake drum bearing sleeve	135	134	67-6753	Rear mudguard tail complete with hinge ... ..	145	144
67-6031	Rear hub spindle nut ... ..	131	130	67-6755	Lifting handle and mudguard stay ... ..	147	146
67-6032	Rear hub collar ... ..	131	130	67-6758	Rear mudguard bottom stay complete ... ..	149	148
67-6033	Rear hub ball journal housing shim ... ..	131	130	67-6760	Rear mudguard fixing bolt (off- side) ... ..	151	150
67-6034	Rear hub ball journal retaining spring ring ... ..	131	130	67-6761	Rear mudguard distance collar	153	152
67-6036	Rear hub driving flange ...	133	132	67-6765	Rear mudguard lifting handle	149	148
67-6037	Rear hub ball journal housing	131	130	67-6921	Carrier complete ... ..	105	104
67-6038	Rear brake drum securing bolt	135	134	67-7002	Rear brake pedal ... ..	153	152
67-6039	Rear brake drum securing bolt locking strip ... ..	135	134	67-7003	Rear brake rod with toggle end	157	156
67-6040	Rear brake drum and chain- wheel (46T) ... ..	135	134	67-7005	Rear brake pedal shaft ...	155	154
67-6041	Rear brake cover plate with fixed fittings ... ..	135	134	67-7006	Rear brake pedal return spring	155	154
				67-7007	Engine steady stay bolt ...	19	18



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-7725	Chainguard with fixed fittings (top) ... ..	165	164
67-7765	Bottom chainguard ... ..	165	164
67-8015	Petrol tank ... ..	167	166
67-8017	Petrol tank badge (left and right-hand) ... ..	169	168
67-8025	Petrol pipe complete with nuts	167	166
67-8309	Oil feed pipe complete ...	171	170
67-8313	Oil tank and air cleaner fixing screw ... ..	171	170
67-8313	Air cleaner fixing screw ...	107	106
67-8314	Oil tank fixing and seat tube greaser ... ..	171	170
67-8320	Oil tank with fixed fittings ...	169	168
67-8324	Oil tank breather pipe extension	173	172
67-8325	Oil tank breather pipe clip ...	173	172
67-8330	Oil tank filler cap ... ..	169	168
67-8521	Throttle cable and cover com- plete ... ..	not illust'd	184
67-8522	Throttle cable ... ..	185	184
67-8523	Throttle cable cover ... ..	185	184
67-8555	Air control cable and cover complete ... ..	not illust'd	184
67-8556	Air control cable ... ..	185	184
67-8557	Air control cable cover ... ..	185	184
67-8601	Front brake cable and cover complete ... ..	not illust'd	174
67-8602	Front brake cable ... ..	175	174
67-8603	Front brake cable cover ... ..	175	174
67-8681	Clutch cable and cover complete	not illust'd	176

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
67-8682	Clutch cable ... ..	177	176
67-8683	Clutch cable cover ... ..	177	176
67-9005	Toolbox strap ... ..	189	188
67-9020	Tool roll complete with tools	not illust'd	190
67-9025	Double ended spanner (B.S.A.)	191	190
67-9033	Pillion seat ... ..	195	194
67-9041	Transmission chain (rear) (102 links) ... ..	197	196
67-9042	Transmission chain (rear) (103 links) ... ..	197	196
67-9043	Rear chain connecting link (cranked) ... ..	197	196
67-9044	Rear chain connecting link ...	197	196
67-9047	Feeler gauge (rocker) ... ..	193	192
67-9050	Saddle ... ..	See Equipment	
67-9057	Speedometer cable complete ...	193	192
No. 26	Chain connecting link (single) ( $\frac{1}{2}$ " x .305") ... ..	not illust'd	208
No. 26	Chain connecting link (single) ( $\frac{1}{2}$ " x $\frac{1}{2}$ ") ... ..	not illust'd	208
A176	Tool box clip bolt distance washer ... ..	189	188
A176	Front mudguard stay bolt washer (right-hand) ... ..	141	140
A178a	Steering damper anchor plate stud ... ..	not illust'd	108
A202	Exhaust lifter cable adjuster...	181	180
A223	Exhaust lifter cable locknut ...	181	180
A223	Toolbox fastener nut ... ..	189	188
B751	Bolt ( $\frac{1}{4}$ ") ... ..	various	



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
B751A	Washer (plain) ... ..	<i>various</i>	
B906	Chainstay and seat tube connecting stud nut ... ..	99	98
C2-97A	Rear brake anchor bolt nut ...	137	136
C2-154	Exhaust cable screw ... ..	181	180
C2-154	First aid box screw ... ..	181	200
C2-154	Front brake cable securing screw	181	192
C2-158	Exhaust cable screw nut ...	181	180
C2-158	Front brake securing clip nut	181	192
C2-158	Rear number plate tail lamp screw nut ... ..	195	194
C2-158	First aid box screw nut ...	195	200
E19	Cylinder head stud nut ( $\frac{3}{8}$ ") ...	<i>various</i>	
E19	Seat tube and gearbox plate bolt nut (top) ( $\frac{3}{8}$ ") ...	<i>various</i>	
E28	Washer (plain) ... ..	<i>various</i>	
EA60	Clutch operating cap bush locknut	203	202
EA62	Distributor shield fixing screw.	199	198
EA62	Crankpin locking washer screw	39	38
EA76	Rear brake pedal return spring bolt ... ..	155	154
EA76	Knee grip plate screw ...	167	166
EA80	Nut ( $\frac{1}{16}$ ") ... ..	<i>various</i>	
EA82	Nut ( $\frac{3}{8}$ ") ... ..	<i>various</i>	
EA95	Oil tank drain plug ... ..	171	170
EA101	Crankpin key ... ..	39	38
EA101	Camshaft pinion key ... ..	47	46
EA111	Front stand bolt nut ... ..	101	100
EA129	Pillion footrest anchor bolt washer (plain) ... ..	161	160

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
EA132	Oil tank drain plug washer ...	171	170
EB35	Clutch operating spindle washer	79	78
EB56	Kickstarter crank cotter pin ...	73	72
EB57	Kickstarter crank cotter pin nut	73	72
EB58	Engine steady stay bolt washer	<i>various</i>	
EB68A	Battery carrier and oil tank fixing bolt ... ..	107	106
EB70	Battery carrier and oil tank fixing bolt ... ..	107	106
EB70	Chainguard strap bolt ... ..	165	164
EB72	Rear brake rod toggle end screw	157	156
EB72	Front brake cable toggle end screw ... ..	175	174
EB72	Legshield top support bar screw	199	198
EB75A	Rear brake anchor strap bolt.	155	154
EB76	Washer (plain) ... ..	<i>various</i>	
EB76A	Cylinder head bolt washer (plain)	<i>various</i>	
EB77	Front fork spring bottom sleeve split pin ... ..	113	112
EB102	Nut ( $\frac{1}{4}$ ") ... ..	<i>various</i>	
EB106	Nut ( $\frac{3}{8}$ ") ... ..	<i>various</i>	
EB112	Bottom bracket chainstay bridge screw ... ..	153	152
EB112	Rear number plate bolt (bottom)	147	146
EB112	Rear mudguard lifting handle top bolt ... ..	147	146
EB113	Nut ( $\frac{1}{4}$ ") ... ..	<i>various</i>	
EB116	First aid box support plate nut	<i>not illust'd</i>	
EB129	Dynamo strap eyebolt nut ...	45	44



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
EB129	Rear hub flange and chaincase bolt nut ... ..	133	132
EB141	Clutch push rod adjusting screw nut ... ..	87	86
EB141	Rear brake drum securing bolt nut ... ..	135	134
EB144	Chainstay, backstay and mud-guard stay bolt ... ..	99	98
EB144	Silencer and toolbox fixing bolt	101	100
EB150	Steering damper adjusting knob washer... ..	109	108
EB150	Front mudguard stay fork end bolt washer ... ..	141	140
EB150	Front mudguard stay and stand fixing stud washer ... ..	141	140
EB171	Nut ( $\frac{1}{8}$ " ) ... ..	various	
EB201	Chainstay, backstay and mud-guard stay bolt nut ... ..	99	98
EB201	Dynamo driving sprocket nut	45	44
EB201	Gear control shaft operating lever nut ... ..	77	76
EB222	Oil pump spindle retaining pin washer... ..	53	52
EB242	Rear mudguard backstay bridge washer (fibre) ... ..	147	146
EB242	Chaincase oil level plug washer (fibre) ... ..	163	162
EB242	Petrol tap washer (fibre) ... ..	169	168
EB259	Double ended spanner (B.S.A.)	191	190
EB262	Adjustable spanner ... ..	191	190

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
EB379	Exhaust legshield clip screw ... ..	57	56
EB379	Clutch cover screw ... ..	203	202
EB664	Ball head clip bolt nut ... ..	111	110
EB673	Fork end drain plug ... ..	113	112
EB673	Legshield and strap bolt ... ..	207	206
F21	Plain washer ... ..	various	
H35	Fork end drain plug washer (fibre) ... ..	113	112
K31	Gear control shaft pin ... ..	75	74
K51A	Washer (spring) ... ..	various	
K56	Operating plate stop screw ... ..	83	82
K56	Air cleaner element fixing screw	107	106
K132	Bolt ( $\frac{1}{4}$ " ) ... ..	various	
K132A	Bolt ( $\frac{1}{4}$ " ) ... ..	various	
K139	Mainshaft key ... ..	63	62
K196	Rear mudguard lifting handle top bolt washer ... ..	149	148
K197	Washer (spring) ... ..	various	
K231A	Clutch control body screw ... ..	177	176
K231A	Front brake control centre body screw ... ..	175	174
K234A	Washer (plain) ... ..	various	
K359A	Lifting handle top bolt washer	149	148
K234B	Rear brake pedal return spring nut ... ..	not illust'd ...	
K457	Kickstarter crank spring anchor screw nut ... ..	73	72
K464A	Crankcase air release pipe nipple nut ... ..	29	28



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
M80	Rear mudguard backstay bridge bracket only ... ..	145 ...	144
M101A	Rear brake pedal shaft washer	155 ...	154
M144A	Pinion sleeve thrust washer (steel)	65 ...	64
M168A	Rocker valve inspection cover screw ... ..	17 ...	16
M196	Gearbox oil filler plug	77 ...	76
M196A	Gearbox oil filler plug washer...	77 ...	76
M202	Layshaft sliding gear nut ...	69 ...	68
M202	Backstay and seat lug bolt nut	93 ...	92
M202	Front down tube and chainstay bolt nut ... ..	97 ...	96
M202	Central stand and engine plate nut ... ..	103 ...	102
M204	Exhaust pipe finned collar screw	57 ...	56
M208	Operating plate and pawl arm stop screw ... ..	81 ...	80
M253	Air cleaner adaptor screw ...	153	<i>see air cleaners</i>
M253	Crankcase connecting bolt ...	31 ...	30
M253	Voltage control support bolt...	153 ...	152
M263	Nuts ( $\frac{1}{4}$ ") ... ..	<i>various</i>	
M281A	Central stand and engine plate washer (spring) ... ..	103 ...	102
M284	Rear mudguard backstay bridge bracket bolt ... ..	145 ...	144
M284	Toolbox and mudguard fixing bolt ... ..	189 ...	188
M284	Toolbox strap bolt ... ..	189 ...	188

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
M365A	Castle nut ( $\frac{1}{4}$ ") ... ..	<i>various</i>	
M413	Battery carrier fixing bolt ...	107 ...	106
M413	Front stand bolt ... ..	101 ...	100
M413	Lifting handle top bolt ...	147 ...	146
M447A	Lifting handle top bolt ...	147 ...	146
M550A	Washer (plain) ... ..	<i>various</i>	
M552A	Rocker inspection plug washer	<i>various</i>	
M552A	Exhaust lifter washer (fibre)...	23 ...	22
M576H	Washer (spring) ... ..	<i>various</i>	
M588	Kickstarter crank spring anchor screw ... ..	73 ...	72
M626	Clutch control lever split pin	79 ...	78
M626	Clutch push rod lever split pin	87 ...	86
M814A	Rocker valve cover bolt washer (fibre) ... ..	<i>various</i>	
M814A	Crankcase drain plug washer (fibre) ... ..	29 ...	28
M814A	Gearbox oil level plug washer (fibre) ... ..	77 ...	76
N566	Crankcase shield U bolt washer	59 ...	58
N566	Mudguard and saddle spring bolt washer ... ..	99 ...	98
N572	Crankcase and cylinder base washer (spring) ... ..	31 ...	30
N572	Seat tube and gearbox plate bolt washer ... ..	93 ...	92
N572	Footrest rod washer (spring)...	157 ...	156
S173	Oil pump driving spindle washer	53 ...	52



# SIDECAR INDEX.

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.	Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
1-5945	Mudguard upright stay screw	221	...	220	3-1253	Rear spring shackle link (plain)	217 ... 216
1-5945	Mudguard front and rear stay screw ... ..	221	...	220	3-1255	Sidecar stand ... ..	217 ... 216
3-944	Rear spring shackle link distance piece ... ..	217	...	216	3-1258	Saddle pillar bottom tube lug	213 ... 212
3-953	Front connecting lug nut ...	213	...	212	3-1259	Front bottom connection ...	213 ... 212
3-953	Tube end spindle nut ...	215	...	214	3-1271	Front connecting lug clip bolt	213 ... 212
3-955	Rear spring shackle link clamp plate ... ..	217	...	216	3-1271	Front bottom connection bolt	213 ... 212
3-1099	Mudguard ... ..	219	...	218	3-1271	Saddle pillar bottom tube lug bolt ... ..	213 ... 212
3-1106	Hub spindle sleeve nut ...	219	...	218	3-1289	Saddle pillar tube bottom lug bolt ... ..	213 ... 212
3-1106	Mudguard support lug and spindle nut ... ..	221	...	220	3-1290	Saddle pillar telescopic tube washer (spherical) ... ..	213 ... 212
3-1115	Mudguard support tube bolt...	221	...	220	3-1364	Front spring connecting bolt retaining ring ... ..	215 ... 214
3-1116	Wheel spindle castle nut ...	219	...	218	3-1369	Front spring bearer bar ...	215 ... 214
3-1117	Mudguard strengthening plate (top) ... ..	221	...	220	3-1372	Front connecting lug bolt ...	213 ... 212
3-1118	Mudguard strengthening plate (front) ... ..	221	...	220	3-1373	Front connecting lug ... ..	213 ... 212
3-1119	Mudguard strengthening plate (rear) ... ..	221	...	220	3-1378	Front spring with bolts (7 coil)	215 ... 214
3-1120	Mudguard front and rear stay screw ... ..	221	...	220	3-1379	Sidecar stand ... ..	217 ... 216
3-1137	Saddle pillar connecting bolt nut ... ..	215	...	214	3-1383	Rear spring shackle bolt ...	217 ... 216
3-1169	Rear spring shackle stirrup bolt	217	...	216	3-1393	Saddle pillar connecting bolt...	215 ... 214
3-1241	Hub spindle cone (fixed) ...	219	...	218	3-1453	Rear spring shackle link with bolts ... ..	217 ... 216
3-1251	Wheel bracket ... ..	215	...	214	3-1455	Rear spring bolt ... ..	217 ... 216
3-1252	Saddle pillar tube bottom lug	213	...	212	3-1509	Rear bearer bar nut ... ..	217 ... 216
					3-1600	Saddle pillar tube complete (adjustable type) ... ..	213 ... 212
					3-1601	Saddle pillar tube top connection (adjustable type) ... ..	213 ... 212



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
3-1603	Saddle pillar tube bottom connection (adjustable type) ...	213	212
3-1605	Front stay complete ...	213	212
3-1607	Front support tube complete with bolts and nuts ...	213	212
3-1608	Front support tube (adjustable type) ...	213	212
3-1628	Rear spring silentbloc ...	217	216
3-1637	Main rear connection ...	215	214
3-1639	Rear spring with silentbloc ...	217	216
3-1642	Rear spring shackle link bottom clamp plate ...	217	216
3-1643	Rear spring shackle link bottom clamp plate ...	217	216
3-1670	Hub shell ...	219	218
3-1671	Hub spindle ...	219	218
3-1672	Hub spindle sleeve ...	219	218
3-1673	Hub grease retaining washer holder ...	219	218
3-1676	Hub grease retaining washer (felt) ...	219	218
3-1677	Wheel spindle bearing locknut	219	218
3-1681	Grease retaining inner ring ...	219	218
3-1682	Grease retaining washer cover complete ...	219	218
3-1685	Hub shell cap ...	219	218
3-1686	Hub distance piece complete...	219	218
3-1688	Hub end cover (large) ...	219	218
3-1700	Main rear connection ...	215	214
3-1701	Wheel bracket ...	215	214

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
3-1702	Hub spindle ...	219	218
3-1703	Rear bearer bar ...	217	216
3-1704	Rear spring shackle complete	217	216
3-1706	Rear spring shackle bush ...	217	216
3-1706	Rear spring bush ...	217	216
3-1707	Rear spring with bush ...	217	216
3-1714	Rear spring plate ...	217	216
3-1715	Rear spring plate clamp stud...	217	216
3-1716	Front support tube (adjustable type) ...	213	212
3-1719	Front support tube complete with bolts and nuts ...	213	212
3-1720	Front stay complete ...	213	212
3-1724	Saddle pillar tube complete (adjustable type) ...	213	212
3-1725	Saddle pillar tube top connection (adjustable type) ...	213	212
3-1727	Front support tube complete with bolts and nuts ...	213	212
3-1728	Front support tube (adjustable type) ...	213	212
3-1730	Mudguard ...	219	218
3-1731	Mudguard stays complete ...	219	218
3-1741	Mudguard stay support tube complete ...	219	218
3-9077	Hub shell complete with cups	219	218
3-9152	Mudguard stays complete ...	219	218
3-9227	Axle tube complete ...	215	214
3-9263	Inside tie with tube liner and tube end spindle ...	215	214



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
31-4070	Sidecar lamp packing washer... <i>not illust'd</i> ...	...	220
31-7275	Mudguard support tube bolt...	221	220
35-705	Rear spring shackle link split pin ... ..	217	216
35-705	Rear spring split pin ... ..	217	216
35-708	Rear bearer bar split pin ... ..	217	216
35-713	Front connecting lug split pin	213	212
35-713	Tube end spindle split pin (in- side tie) ... ..	215	214
35-713	Tube end spindle split pin (out- side tie) ... ..	215	214
35-714	Main rear connection split pin	215	214
35-722	Main rear connection split pin	215	214
65-5883	Hub shell bearing (inner) ...	219	218
C2-57	Main rear connection washer...	215	214
C2-58	Main rear connection washer...	215	214
C2-86	Front spring bracket ... ..	215	214
C2-104A	Wheel bracket shackle pin bush	215	214
C2-105	Rear spring gaiter and laces...	217	216
C2-109	Front bottom tube bolt (motor cycle end) ... ..	213	212
C2-109	Saddle pillar connecting tube lug bolt ... ..	215	214
C2-238	Front spring cup ... ..	215	214
C2-260	Front spring ... ..	215	214
EAS0	Nut ( $\frac{1}{8}$ " ) ... ..	<i>various</i>	
EAS2	Front bottom tube bolt nut ...	213	212
EAS2	Saddle pillar tube lug bolt nut	215	214
EAS2	Front spring connecting bolt nut	215	214
EAS2	Rear spring stirrup bolt nut...	217	216

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
EAS2	Rear bearer bar nut ... ..	217	216
EB113	Mudguard front and rear stay nut ... ..	221	220
EB113	Mudguard upright stay nut ...	221	220
EB144	Front spring connecting bolt (short)... ..	215	214
EB144	Sidecar stand bolt ... ..	217	216
EB150	Sidecar stand bolt nut washer	217	216
EB201	Sidecar stand bolt nut ... ..	217	216
K197	Mudguard upright stay washer	221	220
K197	Mudguard front and rear stay washer... ..	221	220
M101A	Rear bearer bar washer (plain)	217	216
M202	Front bottom connecting nut .	213	212
M202	Saddle pillar bottom tube lug bolt nut ... ..	213	212
M202	Saddle pillar tube lug bolt nut	213	212
M263	Mudguard upright stay nut ...	221	220
M263	Mudguard front and rear stay nut ... ..	221	220
M365A	Main rear connection nut ...	215	214
M413	Mudguard upright stay bolt ...	221	220
M413	Mudguard rear stay bolt ...	221	220
M625	Mudguard upright stay washer	221	220
M625	Mudguard rear stay bolt washer	221	220
N176	Front stay cone nut washer ...	213	212
N177	Front stay cone nut ... ..	213	212
N555	Mudguard support tube lug bolt	221	220
N563	Hub spindle cone (adjusting) .	219	218
N565	Hub spindle cone nut... ..	219	218



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
3-9264	Outside tie with tube liner and tube end spindle ... ..	215	214
3-9274	Front stay complete ... ..	213	212
3-9344	Mudguard stay support tube complete ... ..	219	218
3-9355	Mudguard upright stay complete (outer) ... ..	221	220
3-9380	Sidecar wheel complete less tyre, spindle and bearing... ..	not illust'd	218
3-9381	Wheel rim ... ..	219	218
3-9386	Sidecar wheel complete less tyre, spindle and bearing... ..	not illust'd	218
15-716	Saddle pillar tube bottom lug washer (spring) ... ..	213	212
15-1166	Rear spring nut ... ..	217	216
15-1166	Rear spring shackle link bolt nut	217	216
15-2018	Front spring bolt ... ..	215	214
15-5290	Hub shell grease nipple ... ..	219	218
15-5753	Rear spring shackle nut ... ..	217	216
15-8164	Saddle pillar connecting bolt washer... ..	215	214
24-875	Rear bearer bar thrust washer	217	216
24-4217	Hub shell bearing (outer) ... ..	219	218
24-5860	Mudguard support tube distance nut ... ..	221	220
24-5914	Front connecting lug bolt washer	213	212
24-5914	Tube end spindle washer (inside tie) ... ..	215	214
24-5914	Tube end spindle washer (out- side tie) ... ..	215	214

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
24-7910	Front stay cone nut washer ...	213	212
24-8784	Mudguard upright stay bolt washer... ..	221	220
24-8784	Mudguard rear stay bolt washer	221	220
27-6810	Spoke nipple ... ..	219	218
27-6974	Mudguard support bolt nut ...	221	220
27-7010	Wheel spoke ... ..	219	218
27-8039	Wheel spindle packing washer	219	218
27-8039	Mudguard support lug and spindle washer... ..	221	220
27-8560	Mudguard upright stay washer	221	220
27-8560	Mudguard front and rear stay washer... ..	221	220
28-2080	Hub shell grease nipple ... ..	219	218
28-2080	Main rear connection grease nipple ... ..	215	214
28-2080	Rear spring shackle link grease nipple ... ..	217	216
28-2338	Mudguard upright stay bolt ...	221	220
28-2338	Mudguard rear stay bolt ... ..	221	220
30-650	Front spring connecting bolt washer... ..	215	214
30-650	Rear bearer bar clamp washer	217	216
30-650	Mudguard upright stay washer	221	220
30-650	Mudguard rear stay bolt washer	221	220
30-729	Front connecting lug packing washer... ..	213	212
30-729	Clamp plate bolt washer ... ..	217	216
30-988	Mudguard upright stay screw	221	220
31-68	Rear bearer bar connecting bolt	217	216



## GENERAL INDEX.

	<i>Pages</i>		<i>Pages</i>
Air Cleaners ... ..	106 and 160	Index Numerical (Sidecar Chassis) ...	275-279
Battery Carrier ... ..	104-106	Legshields ... ..	198
Carburettor Settings ... ..	89	Legshields and Special Components (Auto-	
Carrier ... ..	104	mobile Association) ... ..	202-208
Central Stand ... ..	102	Mudguards and Fittings ... ..	138-150
Chaincase, Chainguard and Fittings ...	162-164	Oil Pump (Mechanical) ... ..	50-52
Clutch ... ..	86-88	Oil Tank and Fittings ... ..	168-172
Connecting Rod, Bushes and Crankpin ...	36-38	Petrol Tank and Fittings ... ..	166-168
Connecting Rod Big-end Assembly ...	79	Pillion Footrests ... ..	158-160
Crankcase and Components ... ..	26-32	Pistons ... ..	22-24
Cush Drive and Components... ..	40-42	Pistons (oversize) ... ..	201
Cylinders and Components ... ..	12-14	Rear Brake Control ... ..	152-156
Engine (General) ... ..	12-58	Rear Brake Control ... ..	100-102
Engine and Frame Markings... ..	127	Rear Stand ... ..	212-220
Equipment (Saddles) ... ..	106	Sidecar Chassis ... ..	56
Equipment (Sparkign Plugs) ... ..	24	Silencer and Fittings ... ..	2
Equipment (Electrical) ... ..	153	Spares and Repairs ... ..	200
Equipment (Speedometers) ... ..	117	Special Components (G.P.O.) ... ..	126 and 136
Exhaust Pipes ... ..	54-56	Speedometer Drive ... ..	151
Flywheels and Components ... ..	38-40	Standard Bolts ... ..	126
Footrests ... ..	156-158	Standard Nuts ... ..	93
Frame and Fittings ... ..	90-106	Standard Split Pins ... ..	141
Front Fork and Fittings ... ..	108-116	Standard Washers (Plain) ... ..	107
Front Stand ... ..	100	Standard Washers (Spring) ... ..	93
Gearbox and Control Parts ... ..	60-88	Standard Washers (Shakeproof) ... ..	108
Gear Foot Change ... ..	80-84	Steering Damper Parts ... ..	4-11
Gear Ratios ... ..	116 and 143	Stockists of B.S.A. Spare Parts ... ..	48-50
Guarantee ... ..	3	Tappets and Components ... ..	188-196
Handlebars ... ..	104	Tools and Sundries ... ..	14-16
Handlebar Controls ... ..	174-186	Valves and Fittings ... ..	118-136
Index Numerical (Motor Cycle) ...	222-274	Wheels, Hubs and Fittings ... ..	



Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
N566	Front spring connecting bolt		
	washer... ..	215	214
N566	Rear spring plate washer	217	216
N566	Mudguard support tube bolt		
	washer... ..	221	220
N566	Mudguard upright stay bolt		
	washer... ..	221	220
N566	Mudguard rear stay bolt washer	221	220
N572	Front connecting lug bolt washer	213	212
N572	Saddle pillar tube lug bolt		
	washer... ..	213	212
N574	Mudguard upright stay washer	221	220
N574	Mudguard front and rear stay		
	washer... ..	221	220
N584	Saddle pillar connecting bolt		
	washer... ..	215	214
N584	Rear spring shackle bolt washer	217	216

Compt. No.	DESCRIPTION.	Page illustrated.	Page described.
N585	Saddle pillar tube lug bolt		
	washer... ..	215	214
N585	Front spring connecting bolt		
	washer... ..	215	214
N585	Rear spring shackle link bolt		
	washer... ..	217	216
N585	Rear bearer bar washer	217	216
N589	Hub spindle cone washer	219	218
N590	Hub spindle split pin...	219	218
N590	Wheel spindle split pin	219	218
N605	Hub cup (large)	219	218
N606	Hub cup (small)	219	218
N607	Mudguard upright stay washer	221	220
N607	Mudguard front and rear stay		
	washer... ..	221	220
N620	Front spring connecting bolt		
	clamp washer	215	214
N620	Mudguard stay packing washer	221	220



# British Only

## MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM  
GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

**WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS**

45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

SPECIALIZING IN  
VINTAGE MOTORCYCLE PARTS

**TRIUMPH**

**Norton**

**BSA**

**THE BIGGEST!**

ENGINE REBUILDING PARTS  
GASKET - SEALS - BEARINGS  
BUSHINGS - PISTONS - RINGS  
CLUTCHES - TUNE UP PARTS  
SPEED EQUIPMENT

**THE BEST!**

STOCK AND CUSTOM PARTS  
SEATS - HANDLEBARS - CHAINS  
TIRES - TUBES - EXHAUST PIPES  
MUFFLERS - GAS TANKS - FENDERS  
RESTORATION PARTS

**THE ONLY!**

**Central Wheel  
Components**

**Barnett**  
Clutches & Cables

**CLASSIC  
TRANSFERS**  
ROBERT DERRICK LTD

**RENOLD**

**Lucas**

**AMAL**

**IEMIGO**  
Your Powersport Supplier

**BRITURO**  
ENGLAND

**JP PISTONS**

**HASTINGS**

**UH**

VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORG  
ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S  
L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL  
ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING  
TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

**PARTS SHIPPED WORDLWIDE !!!**

**VISA**

**MasterCard**

**Discover**

**AMERICAN  
EXPRESS**

VISIT OUR EBAY STORE

<http://stores.ebay.com/British-Only-Motorcycles-And-Parts>



# British Only

## MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM  
GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

**WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS**

45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

SPECIALIZING IN  
VINTAGE MOTORCYCLE PARTS

**TRIUMPH**

**Norton**

**BSA**

**THE BIGGEST!**

ENGINE REBUILDING PARTS  
GASKET - SEALS - BEARINGS  
BUSHINGS - PISTONS - RINGS  
CLUTCHES - TUNE UP PARTS  
SPEED EQUIPMENT

**THE BEST!**

STOCK AND CUSTOM PARTS  
SEATS - HANDLEBARS - CHAINS  
TIRES - TUBES - EXHAUST PIPES  
MUFFLERS - GAS TANKS - FENDERS  
RESTORATION PARTS

**THE ONLY!**

**Central Wheel  
Components**

**Barnett**  
Clutches  
& Cables

**CLASSIC  
TRANSFERS**  
ROBERT DERRICK LTD

**RENOLD**

**Lucas**

**AMAL**

**IEMIGO**  
Your Powersport Supplier

**BRITURO**  
ENGLAND

**JP PISTONS**

**HASTINGS**

**UH**

VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORG  
ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S  
L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL  
ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING  
TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

**PARTS SHIPPED WORLDWIDE !!!**

**VISA**

**MasterCard**

**Discover**

**AMERICAN  
EXPRESS**

VISIT OUR EBAY STORE

<http://stores.ebay.com/British-Only-Motorcycles-And-Parts>







---

FOLD

---

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_

State \_\_\_\_\_ Zip \_\_\_\_\_

USE  
FIRST CLASS  
LETTER  
POSTAGE

**British Only**  
MOTORCYCLES AND PARTS INC.  
32451 PARKLANE ST  
GARDEN CITY, MI 48135 USA

---

FOLD

---



**MOTORCYCLES AND PARTS INC.**

PHONE: **800-278-6659**

**FAX: 734-422-9253**

WWW.BRITISHONLY.COM  
INFO@BRITISHONLY.COM

Date \_\_\_\_/\_\_\_\_/\_\_\_\_ Customer # \_\_\_\_\_ Salesperson \_\_\_\_\_

Card Number \_\_\_\_\_ Expires \_\_\_\_\_

Name \_\_\_\_\_

Address \_\_\_\_\_

City/State/Zip \_\_\_\_\_

Phone \_\_\_\_/\_\_\_\_ Fax \_\_\_\_\_

Email \_\_\_\_\_

Signature \_\_\_\_\_

<b>Subtotal</b>	
<b>Insurance</b>	
<b>Shipping</b>	
<b>Total</b>	
<b>Michigan Residents Add 6% Sales Tax</b>	
<b>Amount Enclosed</b>	



---

FOLD

---

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_

State \_\_\_\_\_ Zip \_\_\_\_\_

USE  
FIRST CLASS  
LETTER  
POSTAGE

**British Only**  
MOTORCYCLES AND PARTS INC.  
32451 PARKLANE ST  
GARDEN CITY, MI 48135 USA

---

FOLD

---