

REPLACEMENT PARTS CATALOGUE No. 5

"C" RANGE MODELS TWENTY-ONE (3TA) SPEED TWIN (5TA) TIGER 90 (T90) TIGER 100 (T100 S/S) from Engine No. H 32465 September 1963

T.RIUMPH ENGINEERING COMPANY LIMITEDMERIDEN WORKS · ALLESLEY · COVENTRY · ENGLANDTELEPHONE MERIDEN 331TELEGRAMS "TRUSTY COVENTRY"

PUBLISHED JANUARY 1964 20-10131 6087

REF. 877/64

.*

British Only MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS 45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES! CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE



VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS



TRIUMPH GUARANTEE

- 1. In this Guarantee the word "machine" refers to the motor cycle, scooter, motor-cycle combination or sidecar as the case may be, purchased by the Purchaser.
- 2. In order to obtain the benefit of this Guarantee, the Purchaser must have correctly completed the registration form and returned it to us within fourteen days of the purchase.
- 3. We will supply, free of charge, a new part in exchange for, or, if we consider repair sufficient, will repair free of charge any part proved within six months of the date of purchase of any new machine, (3 months overseas) or within three months of its renewal or repair in the case of a part already renewed or repaired, to be defective by reason of our faulty workmanship or materials. We do not undertake to bear the cost of fitting such new or repaired part or accessory.
- 4. Any part considered to be defective must be sent to our Works, carriage paid, accompanied by the following information:-
 - (a) Name of purchaser and his address;
 - (b) Date of purchase of machine;
 - (c) Name of dealer from whom the purchase was made;
 - (d) Engine number and model
- 5. This Guarantee shall not extend to defect or damage appearing after misuse, neglect, abnormal stress or strain, or the incorporation or affixing of unsuitable attachments or parts and in particular:-
 - (a) Hiring out;
 - (b) Racing and Competitions;
 - (c) Adaptation or alteration of any part or parts after leaving our Works;
 - (d) The attaching of a sidecar in a manner not approved by us or to an unsuitable motor-cycle.

This Guarantee shall not extend to machines whose trade mark, name or manufacturing number has been altered or removed, or in which has been used any part not supplied or approved by us, or to tyres, saddles, chains, speedometers, revolution counters and electrical equipment or to parts supplied to the order of the Purchaser and different from our standard specification.

- 6. Our liability and that of our dealer who sells the machine, shall be limited to that set out in this guarantee, and no other claims for consequential damage or injury to person or property, shall be admissible. All other conditions and warranties statutory or otherwise and whether express or implied are hereby excluded and no guarantee other than that expressly herein contained applies to the machine to which this Guarantee relates or any accessory or part thereof.
- 7. We reserve the right to modify or deviate from the Published Specification without notice.

REPAIRS GUARANTEE

- 1. Whilst the highest standard of workmanship and materials is aimed at, we cannot accept liability for any defects appearing more than three months after the machine, assembly or component has left our Works after being repaired.
- 2. We will repair or replace at our option free of charge any defective work, materials or parts relating to the repairs carried out by us appearing within that time but shall not be under any further, or other liability for any other loss or damage whether direct or consequential and our liability shall be limited to the cost of so making good. We do not undertake to bear the cost of fitting any replacement or repaired part.
- 3. We do not accept liability in respect of parts of proprietary manufacture, e.g. tyres, saddles, chains speedometers, revolution counters and electrical equipment which may be used by us in effecting a repair. All other conditions and waranties statutory or otherwise express or implied are hereby excluded.

.

TRIUMPH SPARES

HOW TO ORDER. Every part is indicated by number, and this should be quoted together with the description. In order to assist customers, dimensions have been given in many cases where parts are similar. Parts where possible have been listed in order of assembly and a number of the illustrations show the assembly order also. With these aids there should be no difficulty in identifying the parts you require. Always head your order with the engine number, stamped on the left side of the crank case underneath the cylinder flange, together with the prefix letters.

WHERE TO OBTAIN. Triumph Spare Parts can only be obtained from an authorised Triumph Dealer, and we recommend our customers to place their orders with the Triumph Dealer in their district. When parts not usually asked for are required, and for which the Dealer may have to write or obtain specially, the postage or carriage incurred becomes payable.

Triumph Spares are not supplied to private owners direct from the factory. If difficulty is experienced in obtaining the required parts, the matter should be taken up directly with the Triumph Spares Department.

Customers are warned against the risk incurred by purchasing parts that are not of genuine Triumph manufacture. This risk is eliminated if parts are ordered as instructed from recognised Dealers.

PATTERNS AND PARTS FOR REPAIR. It is not necessary to send patterns if the part number is quoted. The sending of patterns often delays the order as parcel post or rail takes longer than letter post.

Parts sent to Coventry for repair, replacement, or as patterns should bear the sender's name and address and clear instructions should accompany the parts. In your own interest send a copy of the advice note under separate cover. All parts must be forwarded carriage paid and care should be taken to ensure that all remittances are sent separately and not enclosed with the parts. Fragile units such as cylinders, etc., should always be boxed to avoid damage in transit. Complete machines should have all fitments such as windscreens, driving mirrors, tools, etc., removed by the sender before despatch, as it is impossible for us to accept responsibility in the event of loss in transit. We are always pleased to give estimates for overhauling and repairs, but should an estimate not be accepted, a charge will be made covering cost of dismantling and re-assembling, if carried out.

Communications relating to Parts should be addressed to the SPARES DEPARTMENT and for repairs, guarantee claims and technical advice to the SERVICE DEPARTMENT, Triumph Engineering Co. Ltd., Meriden Works, Allesley, Coventry. In order to facilitate quick reference, the quoting of any number, invoice number or reference from previous communications is essential. Accessories not of our manufacture should be sent direct to the actual makers, whose names and addresses appear below.

PROPRIETARY GROUP

Ancillary equipment which is fitted to our motor cycles is of the highest quality and is guaranteed by the manufacturer and not by ourselves. Any repairs or claims should be made to the actual makers or their local agents who will always give owners every possible assistance. The following are the addresses of the various manufacturers:---

CARBURETTERS Messrs. Amal Ltd., Holdford Rd., Witton, Birmingham 6.

CHAINS Renold Chains Ltd., Wythenshawe, Manchester.

ELECTRICAL EQUIPMENT Messrs J. Lucas Ltd., Gt. Hampton St., Birmingham, 18.

TYRES Dunlop Rubber Co. Ltd., Fort Dunlop, Birmingham, 24. SPARKING PLUGS Champion Sparking Plug Co. Ltd., Feltham, Middlesex.

SPEEDOMETERS Messrs. Smiths Motor Accessories Ltd., Cricklewood Works, London, N.W.2.

SUSPENSION UNITS Messrs. Girling Ltd., Kings Road, Tyseley, Birmingham, 11.


ILLUSTRATION INDEX

Fig. No.	Description	P	age No.
1	CRANKSHAFT AND CONNECTING RODS		12
2	CRANKCASE		14
3	OIL PUMP, RELEASE VALVE AND INLET MANIFOLD		16
4	CYLINDER BLOCK AND HEAD, 3TA AND T90	1	8, 20
5	CYLINDER BLOCK AND HEAD 5TA AND T100SS		22
6	TIMING COVER, CONTACT BREAKER AND COILS		24
7	GEARBOX SHAFTS, BEARINGS AND INNER COVER		26
8	GEARBOX OUTER COVER AND LEVERS		28
9	CLUTCH		30
.10	CHAINCASE AND CHAINS		32
11	ENGINE FITTINGS AND EXHAUST SYSTEM		34
12	FRAME		36
13	SWINGING FORK, SUSPENSION UNITS AND CHAINGUARD		38
14	TELESCOPIC FRONT FORK, 3TA AND 5TA	•••	40
15	NACELLE, HEADLAMP AND SWITCHES		42
16	TELESCOPIC FRONT FORK, T90 AND T100SS		44
17	FRONT WHEEL		46
18	REAR WHEEL		48
19	QUICKLY DETACHABLE REAR WHEEL		50
20	MUDGUARDS		52
21	PANELS AND TWINSEAT		54
22	PETROL AND OIL TANKS		56
23	BATTERY, TOOLKIT AND AIR FILTER		58
24	HANDLEBARS AND CONTROL LEVERS		60
25	CONTROL CABLES		62
26	CARBURETTER, 3TA AND 5TA		64
27	CARBURETTER, T90 AND T100SS		66
28	T90 AND T100SS HEADLAMP, WIRING HARNESS AND SWITCHES		68
29	SPEEDOMETER, TACHOMETER AND TAIL LAMP		70

INDEX

				Page						Page
AIR FILTER				59	MANIFOLD					17
ALTERNATOR	•••			13	MUDGUARDS			•••		53
BATTERY CARRIER				59	NACELLE					43
CARBURETTER			6.	5, 67	OIL PUMP			••	•••	17
CARTON PACKS				10	OIL TANK			• •	• •	57
CENTRE STAND				37	PETROL TANK	<	•••			57
CHAINCASE				33	PILLION FOOT	TREST	5			37
CHAINS				33	PISTONS					13
CLUTCH				31 25	PROP STAND					37
COIL CONTACT BREAKER	۰۰۰ ۲			25	Q.D. REAR W	HEEL		•••		51
CONTROL CABLES				63						
CONTROL LEVERS				61	REAR PANELS				•••	55
CRANKCASE				15	REAR WHEEL		•••		•••	49
CRANKSHAFT				13	RECTIFIER				4	3, 69
CYLINDER HEAD			19	9, 23	SILENCERS					35
ENGINE PLATES				35	SPARK PLUGS					25
EXHAUST PIPES				35	SPEEDOMETER			.,.		71
EXHAUST HILS				35	STEERING RAG	CES			•••	37
FOOTRESTS				37	SUSPENSION L	JNITS				39
FRONT FORKS			41		SWITCHES					43
FRONT WHEEL				47	TIMING GEAR	S				13
					TOOLKIT					59
GASKET SETS			•••		TWINSEAT					55
GEARBOX		•••	27	, 29						
					VALVES	•••		•••	1	9,23
HANDLEBARS				61						
HORN				43	WIRING HARN	1ESS			4	3, 69

i

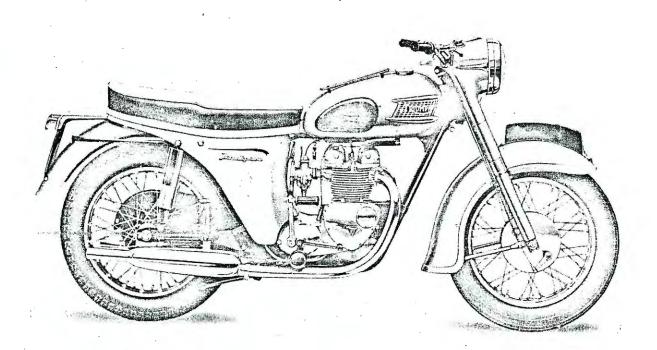

TWENTY-ONE (3TA) TECHNICAL DATA

Main Jet

Needle

Front

Rear

Front

Rear

Fuel Tank

Primary Chaincase

Front Forks (each leg)

Front and Rear, diameter

Oil Tank Gearbox

Needle Jet

Throttle Valve Pilot Jet

Bore and stroke

Capacity Compression Ratio Sparking Plugs Carburetter

Gearbox Sprocket Chains

Capacities

Brakes

Tyre Size

58.25 x 65.5 mm. 2.292 in. x 2.578 ins. 348 c.c. (21.23 cu. ins.).

7.5:1

Champion N4

Amal Monobloc 375 100 .106 Type B 375/3¹/₂ 25


19 teeth

흫 in. Duplex x 78 links 흫 in. x 흫 in. x 103 links

 $\frac{3\frac{1}{2}}{2}$ galls. (16 litres) 5 pints (2.8 litres) 2/3 pint (375 c.c.) $\frac{1}{2}$ pint (300 c.c.) $\frac{1}{3}$ pint (190 c.c.)

7 in. (17.78 cm.)

3.25 x 17 3.25 x 17

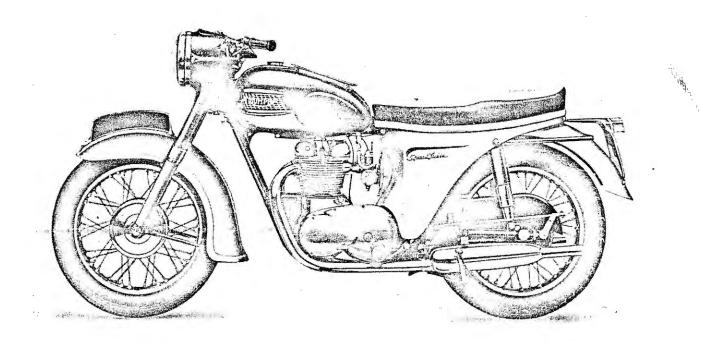

SPEED TWIN (5TA) TECHNICAL DATA

Main Jet

Needle Throttle Valve

Pilot Jet

Front

Rear

Fuel Tank

Oil Tank Gearbox

Front

Rear

Primary Chaincase Front Forks (each leg)

Front and Rear, diameter

Needle Jet

Bore and Stroke

Capacity

Compression Ratio Sparking Plugs Carburetter

Gearbox Sprocket Chains

Capacities

Brakes Tyre Size 69 x 65.5 mm. 2.716 x 2.578 ins.

490 c.c. (29.8 cu. ins.)

7:1

Champion N4

Amal Monobloc 375 160 .105 Type B 375/3 25


20 teeth

클 in. Duplex x 78 links 툴 in. x 클 in. x 103 links

 $3\frac{1}{2}$ galls. (16 litres) 5 pints (2.8 litres) 2/3 pint (375 c.c.) $\frac{1}{2}$ pint (300 c.c.) $\frac{1}{3}$ pint (190 c.c.)

7 in. (17.78 cm.)

3.25 x 17 3.50 x 17

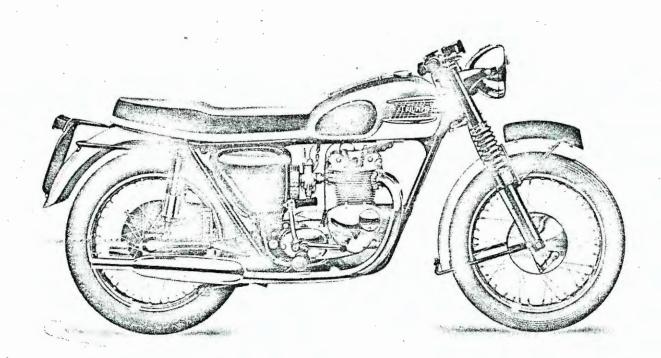

TIGER 90 (T90) TECHNICAL DATA

Main Jet

Front Rear

Front

Rear

Fuel Tank Oil Tank Gearbox

Primary Chaincase Front Forks (each leg)

Front and Rear, diameter

Needle Jet Needle

Throttle Valve Pilot Jet

Bore and Stroke

Capacity

Compression Ratio Sparking Plugs Carburetter

Gearbox Sprocket Chains

Capacities

Brakes Tyre Size 58.25 x 65.5 mm. 2.292 x 2.578 ins.

348 c.c. (21.23 cu. ins.)

9:1

Champion N4

Amal Monobloc 180 .106 Type C 376/3¹/₂ 20


17 teeth

a in. Duplex x 78 links in. x a in. x 102 links

 $3\frac{1}{2}$ galls. (16 litres) 5 pints (2.8 litres) 2/3 pint (375 c.c.) $\frac{1}{2}$ pint (300 c.c.) $\frac{1}{3}$ pint (190 c.c.)

7 in. (17.78 cm.)

3.25 x 18 3.50 x 18

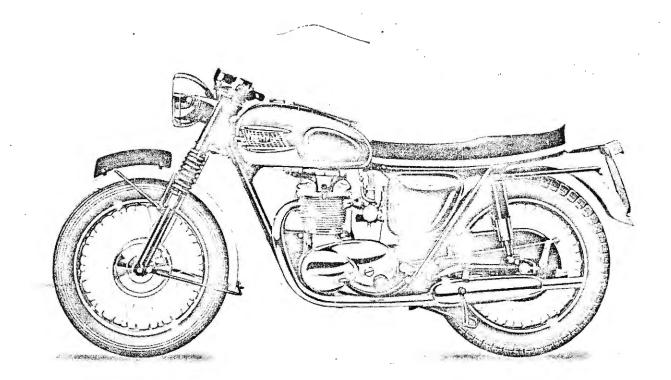

TIGER 100 (T100SS) TECHNICAL DATA

Bore and Stroke

Capacity Compression Ratio Sparking Plugs Carburetter

Gearbox Sprocket Chains

Capacities

Brakes

Tyre Size

Main Jet Needle Jet Needle Throttle Valve Pilot Jet

Front Rear

Fuel Tank Oil Tank Gearbox Primary Chaincase Front Forks (each leg)

Front and Rear, diameter

Front Rear 69 x 65.5 mm. 2.716 x 2.578 ins.

490 c.c. (29.8 cu. ins.)

9:1

Champion N4

Amal Monobloc 190 .106 Type C 376/3¹/₂ 25

18 teeth

音 in. Duplex x 78 links 音 in. x 音 in. x 102 links

 $\begin{array}{l} 3\frac{1}{2} \text{ galls. (16 litres)} \\ 5 \text{ pints (2.8 litres)} \\ 2/3 \text{ pint (375 c.c.)} \\ \frac{1}{2} \text{ pint (300 c.c.)} \\ \frac{1}{3} \text{ pint (190 c.c.)} \end{array}$

7 in. (17.18 cm.)

3.25 x 18 3.50 x 18 The following sub-assemblies are supplied in carton packs under the C.P. part number stated. The contents of these carton packs are preserved and will not deteriorate under adverse conditions.

		Contents	
Brake Lining			
CP 38/AM2	2	NW243	Brake Lining
	16	W129	Rivet
Steering~Races			
C.P. 167	1	H1110	Cone
	1	H1140	Cone and dust cover
		H1130 S70-4	Cup
	48	570-4	Steel balls (3/16 in. diam.)
Pistons (350 c.c.)			
C.P. 164	1	E3689	Piston C.R. 7.5 : 1
	1	E3691	Compression ring (plain)
	1	E3690	Compression ring (taper)
	1	E3692 E1750	Oil control ring
	2	E1750 E1767	Gudgeon pin Circlips
C.P. 164 is also avail	-	0.020 in. and 0.040 in.	
C.P. 198	1	E4670	Piston C.R. 9:1
		E3690	Compression ring (taper
	. 1	E3692 E1750	Oil control ring Gudgeon pin
	2	E1767	Circlips
C.P. 198 is also avail	able in 0.010 in., 0	.020 in. and 0.040 in. ov	
Piston Rings (350	()	F	
a iscon mings (sou		E3691	Compression ring (plain)
C.P. 165			Compression ring (taper)
C.P. 165	2	E3690	
C.P. 165		E3690 E3692	Oil control ring
C.P. 165	2		Oil control ring
C.P. 165 C.P. 165 is also avail	2	E3692	Oil control ring
C.P. 165	2	E3692	Oil control ring oversizes.
C.P. 165 C.P. 165 is also availa Pistons (500 c.c.)	2 2 able in 0.010 in., (1 2	E3692 D.020 in. and 0.040 in. o E4004 E3829	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper)
C.P. 165 C.P. 165 is also availa Pistons (500 c.c.)	2 2 able in 0.010 in., (1 2 1	E3692 D.020 in. and 0.040 in. o E4004 E3829 E3831	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring
C.P. 165 C.P. 165 is also availa Pistons (500 c.c.)	2 2 able in 0.010 in., (1 2 1 1	E3692 0.020 in. and 0.040 in. o E4004 E3829 E3831 WE203E	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin
C.P. 165 C.P. 165 is also avail: Pistons (500 c.c.) C.P. 174	2 2 able in 0.010 in., (1 2 1 1 2 2	E3692 0.020 in. and 0.040 in. o E4004 E3829 E3831 WE203E WE479	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring
C.P. 165 C.P. 165 is also availa Pistons (500 c.c.) C.P. 174 C.P. 174 is also availa	2 2 able in 0.010 in., (1 2 1 1 2 2	E3692 0.020 in. and 0.040 in. o E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes.	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips
C.P. 165 C.P. 165 is also avail: Pistons (500 c.c.) C.P. 174	2 2 able in 0.010 in., (1 2 1 1 2 able in 0.010 in. a 1	E3692 0.020 in. and 0.040 in. o E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes. E4021	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips Piston C.R. 9 : 1
C.P. 165 C.P. 165 is also availa Pistons (500 c.c.) C.P. 174 C.P. 174 is also availa	2 2 able in 0.010 in., (1 2 1 1 2 2	E3692 0.020 in. and 0.040 in. o E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes.	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips Piston C.R. 9 : 1 Compression ring (taper)
C.P. 165 C.P. 165 is also avail: Pistons (500 c.c.) C.P. 174 C.P. 174 C.P. 179	2 2 able in 0.010 in., (1 2 1 1 2 able in 0.010 in. a 1 2	E3692 0.020 in. and 0.040 in. of E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes. E4021 E3829 E3831 WE203E	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips Piston C.R. 9 : 1
C.P. 165 C.P. 165 is also availa Pistons (500 c.c.) C.P. 174 C.P. 174 C.P. 179	2 2 able in 0.010 in., (1 2 1 1 2 able in 0.010 in. a 1 2 1 1 2	E3692 0.020 in. and 0.040 in. of E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes. E4021 E3829 E3831 WE203E WE203E WE479	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips Piston C.R. 9 : 1 Compression ring (taper) Oil control ring
C.P. 165 C.P. 165 is also availa Pistons (500 c.c.) C.P. 174 C.P. 174 C.P. 179	2 2 able in 0.010 in., (1 2 1 1 2 able in 0.010 in. a 1 2 1 1 2	E3692 0.020 in. and 0.040 in. of E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes. E4021 E3829 E3831 WE203E	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips Piston C.R. 9 : 1 Compression ring (taper) Oil control ring Gudgeon pin
C.P. 165 C.P. 165 is also avail: Pistons (500 c.c.) C.P. 174 C.P. 179 C.P. 179 C.P. 179	2 2 able in 0.010 in., (1 2 able in 0.010 in. a 1 2 1 1 2 able in 0.010 in. a	E3692 0.020 in. and 0.040 in. of E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes. E4021 E3829 E3831 WE203E WE203E WE479	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips Piston C.R. 9 : 1 Compression ring (taper) Oil control ring Gudgeon pin
C.P. 165 C.P. 165 is also availa Pistons (500 c.c.) C.P. 174 C.P. 179 C.P. 179 C.P. 179 C.P. 179	2 2 able in 0.010 in., (1 2 able in 0.010 in. a 1 2 able in 0.010 in. a c.c.)	E3692 0.020 in. and 0.040 in. of E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes. E4021 E3829 E3831 WE203E WE203E WE479 nd 0.020 in. oversizes.	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips Piston C.R. 9 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips
C.P. 165 C.P. 165 is also avail: Pistons (500 c.c.) C.P. 174 C.P. 179 C.P. 179 C.P. 179	2 2 able in 0.010 in., (1 2 able in 0.010 in. a 1 2 1 1 2 able in 0.010 in. a	E3692 0.020 in. and 0.040 in. of E4004 E3829 E3831 WE203E WE479 nd 0.020 in. oversizes. E4021 E3829 E3831 WE203E WE203E WE479	Oil control ring oversizes. Piston C.R. 7 : 1 Compression ring (taper) Oil control ring Gudgeon pin Circlips Piston C.R. 9 : 1 Compression ring (taper) Oil control ring Gudgeon pin

.

CARTON PACK LIST-continued

Part No.		Ca	ntents
C.P. 180	4 2	E4135 E4136	Compression ring (taper) Oil control rings
C.P. 180 can only be fitted to I	E4021 Pi	ston body, and sl	hould only be used for high-performance work.
Valve Guides			,
C.P. 170	4	E3208	Valve guides
	4	E3209	Valve guides circlip
Valves (3TA)			
C.P. 166	2	E3738	inlet valve
	2	E3739	Exhaust valve
Valve Springs (3TA)			
C.P. 171	4	E3942	Inner valve spring
2	4		Outer valve spring
Valves (500 c.c.)			1 8
C.P. 176	2	E4012	Inlet valve
	2	E4013	Exhaust valve
Valve Springs (T90 &500 c.c.	.)		
C.P. 177	4	E4010	Inner valve spring
	4	E4011	Outer valve spring

De-coke Gasket Set

1

All models


D/GS 6

PLEASE NOTE

THROUGHOUT THIS LIST, ASSEMBLIES ARE PRINTED IN CAPITALS AND THE COMPONENTS INCLUDED IN THAT ASSEMBLY ARE INDENTED IN THE DESCRIPTION COLUMN, REVERTING TO THE ORIGINAL ALIGNMENT WHEN THE ASSEMBLY IS COMPLETE. TO ORDER THE COMPLETE ASSEMBLY IT IS NECESSARY ONLY TO QUOTE THE ASSEMBLY NUMBER. ANY COMPONENT PARTS LISTED MAY ALSO BE OBTAINED SEPARATELY IF REQUIRED.

SPECIAL WORKSHOP TOOLS

A COMPLETE LIST OF WORKSHOP TOOLS CAN BE MADE AVAILABLE BY EITHER CONTACTING YOUR DEALER OR APPLYING DIRECT TO THE TRIUMPH SERVICE DEPARTMENT. IN MOST CASES THESE TOOLS ARE VERY COSTLY AS THEY ARE MADE ENTIRELY FOR WORKSHOP USE. AND THEREFORE, IT IS NOT RECOMMENDED THAT THE PRIVATE OWNER PURCHASES THE TOOLS IN ORDER TO AID SERVICING THE MACHINE ONCE OR TWICE ONLY. IN THESE CIRCUMSTANCES IT IS FAR MORE ECONOMICAL TO GET IN TOUCH WITH A RECOGNISED DEALER.

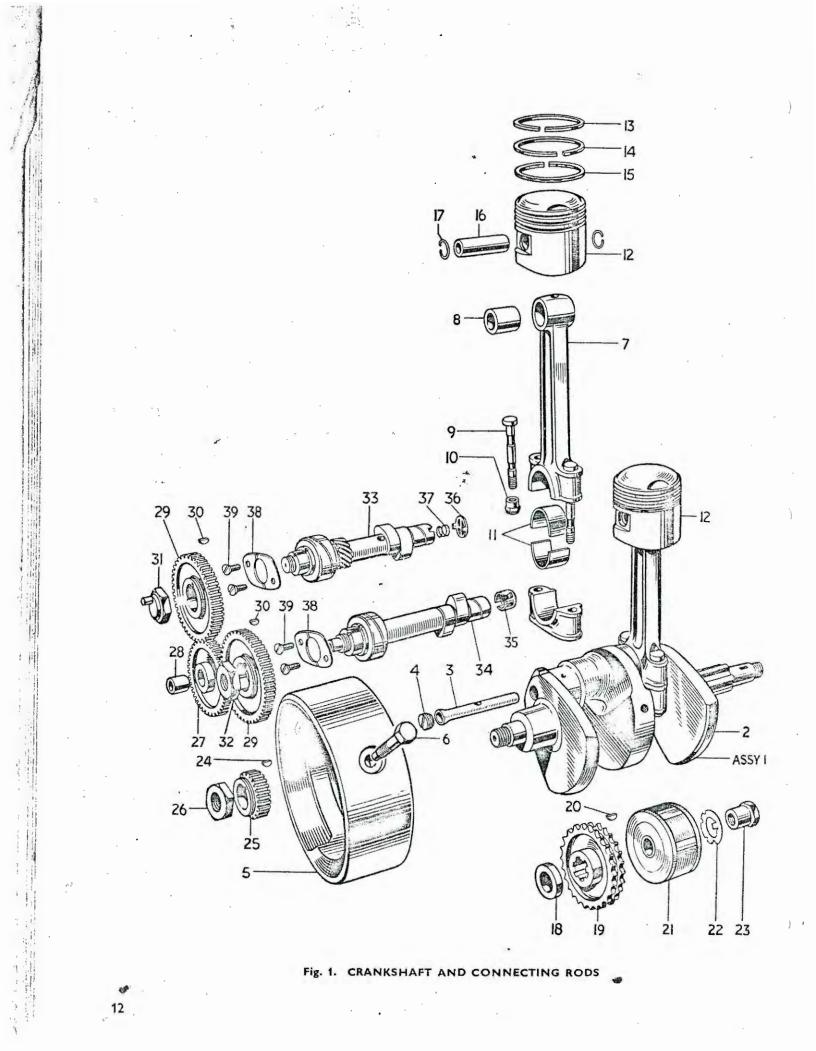


. . . 1º*

CRANKSHAFT AND CONNECTING RODS

		CRANKSHAFT /	N		NN	ECT	ING		TA	5TA	Т90	T100SS
	E3996	CRANKSHAFT AND	FIY	WHEEL	ASSE	MRIY		5	1	1	1	1
1	E3998	Crankshaft		****		1021			1	1	1	1
2	E3999								1	1	1	1
3					•••			•••	1	1	1	1
4	E3711	Screwed plug	•••			•••			1	1	1	1
5	E3712	Flywheel						•••	3	3	3	3
6	*E3713	Flywheel bolt			•••			•••	2	2	2	2
7	E3702	CONNECTING ROI			•••	• • •	***			-	2	2
7	E4001	CONNECTING ROL)				•••		-	2	-	2
8	E1762	Small end bush	•••				•••	•••	2	-	2	-
- 8	E4403	Small end bush	•••						-	2	-	2
9	E3705	Connecting rod	polt						2	2	2	2
10	E2922	Self-locking nut	•••						2	2	2	2
11	E3706	Big end bearing							4	4	4	4
12	CP 164	PISTON COMPLETE	C.R.	7.5:1					2	-	-	-
12	CP 174	PISTON COMPLETE	C.R.	7:1					-	· 2	-	-
12	CP 198	PISTON COMPLETE	C.R.	9:1					-	-	2	-
12	CP 179	PISTON COMPLETE	C.R.	9:1					-	-	-	2
13	E3691	Plain compression							2	-	-	-
13	E3829	Taper compression	_						-	2	-	. 2
14	E3690	Taper compression		-					2	-	4	-
14	E3829	Taper compression		-					-	2	-	2
15	E3692								2	_	2	
	E3831	Oil control ring								2	-	2
15	E1750	-			•••	•••			2	_	2	2
16		Gudgeon pin			•••		•••	••••	-	2	_	2
16	WE 203E	Gudgeon pin						•••	4	-	2	-
17	E1767	Circlip	•••						7	4	-	4
17	WE 479	Circlip					•••	•••	1	1	1	1
18	E4006	Distance collar		•••				•••	-	-		1
19	E4141		Duple	2X	•••	•••			1	1	1	1
20	E3851	Rotor key		•••				•••	1	1	1	
21	54213901	Rotor, type RM 19					•••	•••	1	1	1	1
22	E3975	Tab washer			•••				1	1	1	1
23	E3735	Nut		•••					1	1	1	1
24	E1580	Key							1	1	1	1
25	E1771	Timing pinion							1	1	1	1
, 26	E398	Nut							1	1	1	1
27	E2202	INTERMEDIATE WH	EEL						1	1	1	1
28	E400	Bush							1	1	1	1
29	E1486A	Camshaft wheel		·					2	2	2	2
30	E1558	Camshaft key							2	2	2	2
31	E1463	Inlet camshaft nut							1	1	1	1
32	E4563	Exhaust camshaft nut							1	1	1	1
33	E3838	Inlet camshaft							1	1	-	-
33	E4678	Inlet camshaft							-	-	1	1
		Exhaust camshaft		•••					1	1	_	
34	E5341		 T					•••		-	1	1
34	E4786	EXHAUST CAMSHA			•••	••••				-	1	1
35	E4700	Tachometer drive							1	1	1	1
36	E5316	Rotary breather valve		•••				•••	1	1	1	1
37	E2256	Breather valve spring			•••		•••		2	2	2	2
38	E3727	Retaining plate			••••					4	4	4
39	E3728	Screw (15/32 in. U.H.))					•••	4	4	4	-
*Use [0524 Loctite seal	ant										

V. 13

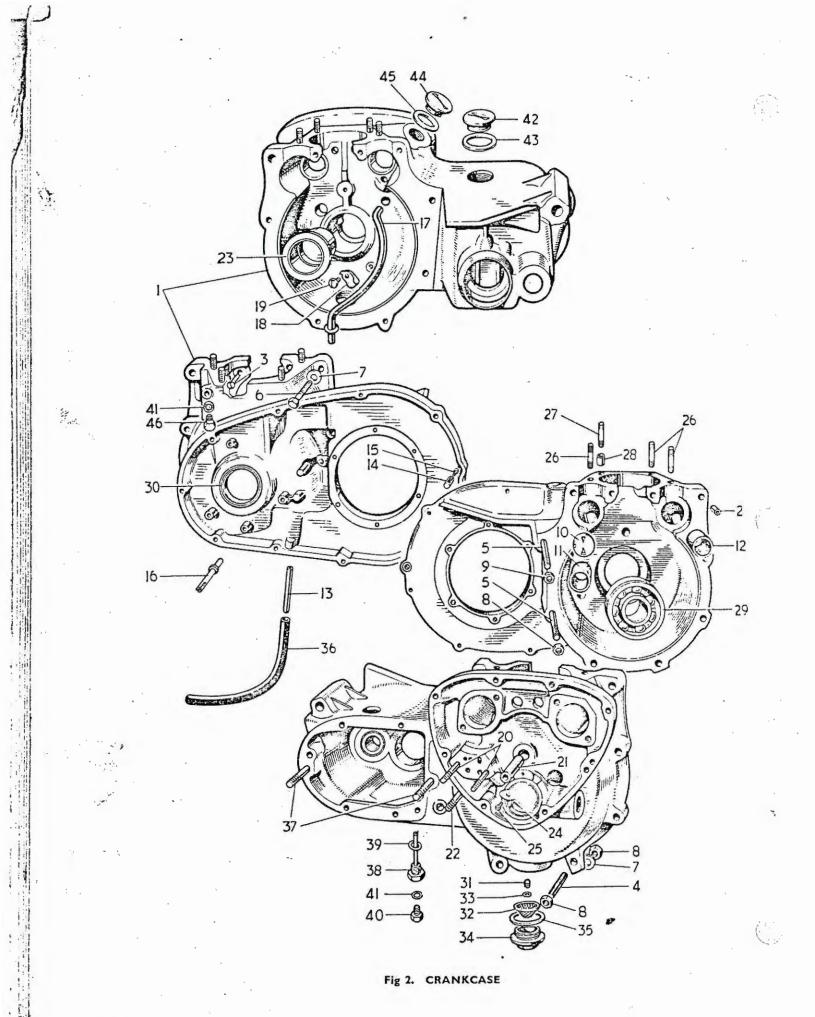


Ref. No. Part No.


Service .

QUANTITY

CRANKCASE

				CRA	NK	CASE							
			an thur of the	CTUDC		NICUT	-		3TA	5TA	T90	T100SS	
	1	E4005/4645	CRANKCASE c/		AND	RIGHT	MAIN	BEAKIN	G 1	1	1	1	
	2	E3716	Hollow dow		•••	*			. 1	-	1	1	
	3	E3859	Screw (21/32				· •••		2	2	2	2	
	4	E3804	Stud (3 in. C					••• •	1	1	1	1	
	5	E3803	Stud (3¾ in.					••• •	2	2	2	2	
	6	E3799	Bolt (1§ in.						1	1	1	1	
	7	\$25-3	Plain washer					;	3	3	3	3	
	8	S1-51	Nut						3	3	3	3	
	9	E1310	Nut .						1	1	1	1	
	10	E3822	Breather dis	c					1	1	1	1	
	11	E3824	Inlet camsha	ft bush					1	1	1	1	
,	12	E3823	Exhaust cam	shaft bush					1	1	1	1	
	13	E2724	Breather pip	e					1	1	1	1	
	14	E3884	Chain oiler i						1	1	1	1	
	15	E3885	Chain oiler j						1	1	. 1	1	
	16	E4147	Chain tensic						1	1	1	1	
	17	E3719	Oil scavenge						1	1	1	1	
	18	E1509	C 1.	· · · · ·					1	. 1	1	1	
	19	E1645	Screw (17/64						. 1	1	1	1	
	20	E3718	Oil pump st						. 2	2	2	2	
	21	E375	Intermediate			,			. 1	1	1	1	
	22	E3717	Oil pipes stu						1	1	1	1	
	23	E4322	Right main b							1	1	1	
			•	-	•••				- I 1	1	1	1	
	24	E4139	Locating pla		•••				. 1	1	1	1	
	25	E4140	Self-tapping							6	6	6	
	26	E3820	Cylinder stu						2	2	2	2	
	27	E3819	Cylinder stu		U.A.)				. 2	2	2	2	
	28	E1534A							. 1			1	
	29	E3835	Left main bearing	g (Ball-jour	rnal)				. 1		1	1	
	30	E3876				•••		••• ••	. 1	1	1	1	
	31	E3724	1 0						. 1	1	1	1	
	32	E3722				•••		••• •	1	1	1	1	
	33	E3723	Sealing washer		••••				. 1	1	1	1	
	34	E1564							. 1	1	1	1	
	35	E1577	Joint washer						1	1	1	1	
	36	E3078	Breather extension		pipe				. 1	1	1	1	
	37	T1399	Stud (3 1/6 in. O.A						. 2	2	2	2	
	38	T1112	Drain plug (with	level tube)				1	1	1	1	
	39	WE 170	Fibre washer						. 1	1	1	1	
	40	T361	Level plug						. 1	1	1	1	
	41	T1257	Ful I						. 2	2	2	2	
,	42	E732	Filler plug						. 2	2	2	2	
	43	NE507	Fibre washer						. 2	2	2	2	
	44	E4587	Distributor hole	plug					. 1	1	1	1	
	45	E4593	Fibre washer						. 1	1	1	1	
	46	E4706	Tachometer drive						4	1	1	1	

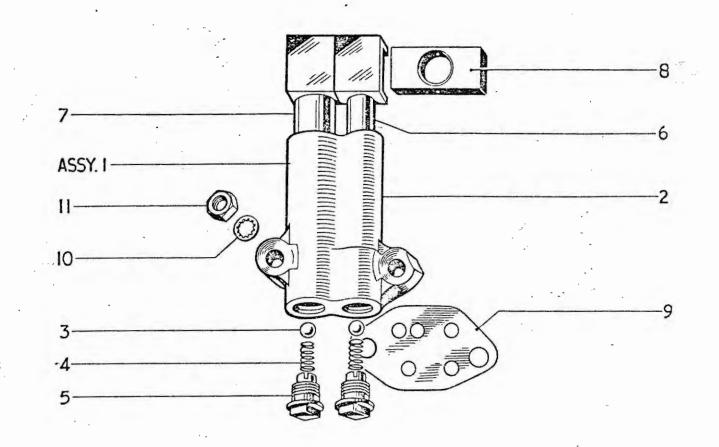

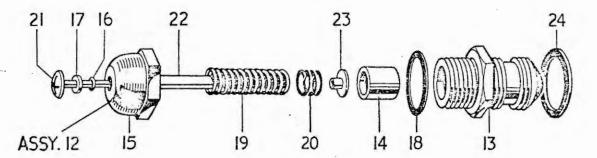

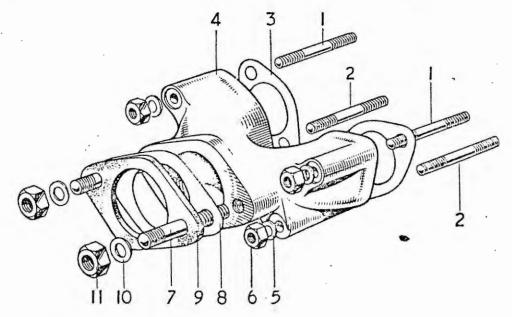


Fig. 3. OIL PUMP, RELEASE VALVE AND INLET MANIFOLD

...

" -


•

OIL PUMP AND RELEAS	EVALVE
---------------------	--------

										3TA	5TA	T90	T100SS
	1	E3878	OIL PUMP							1	1	1	1
	2	E3731	Pump body							1	1	1	1
	3	\$70-7	Valve ball							2	• 2	2	2
	4	E403	Valve spring							2	2	2	2
	5	E2360	Screwed plug							2	2	2	2
	6	G\$153	Feed plunger							1	1	1	1
	7	E1476	Scavenge plunger							1	1	1	1
	8	E495	Drive block							1	1	1	1
	9	E3730	Joint washer							1	1	1	1
•	10	E3887	Serrated washer							2	2	2	2
	11	E3732	Nut							2	2	2	2
	12	E4191	OIL RELEASE VALVI	FAN	DINC					1	1	1	1
	13	E2794	Valve body							1	1	1	1
	14	G\$251	Dise	•••						1	1	1	1
	14	E4192			•••					1	1	1	1
		E4192	Cap							1	1	1	1
	16		Sealing ring							1	1	1	1
	17	E4194	Cup							1	1	1	- 1
	18	GS254	Fibre washer	•••	•••					1	1	1	1
	19	E2788	Main spring	•••	•••			•••			1	1	1
	20	E2789	Auxiliary spring	•••			•••				4	1	1
	21	E2791	Button and shaft	•••	••••	•••				1	1	1	1
	22	E2793	Sealing rubber						••••	1			
	23	E2792	Shaft nut				•••			1	1	1	1
	24	E1670	Fibre washer							1	1	1	1

INLET MANIFOLD


1	E3796	Stud (1 17/32 in. O.A.)		 	 	2	.2	2	2	
2	E3797	Stud (2 in. O.A.)		 	 	2	2	2	2	
3	E2967	Joint washer		 	 	2	2	2	2	
4	E4014	Inlet manifold		 	 	1	1	-	1	
4	E4689	Inlet manifold		 	 	-	-	1	-	
5	S25-13	Plain washer		 	 	4	4	4	4	
6	W103	Nut		 	 	4	4	4	4	
7	E3880	Stud (1 ¹ / ₄ in. O.A.)		 	 	2	2	2	2	
8	NA 43	Joint washer		 	 	1	1	-	-	
8	NA 43A	Joint washer		 	 	-	-	1	1	
9	E3834	Insulating block		 	 ••••	1	1	-		
9	E4504	Insulating block		 	 	-	-	1	-	
9	E2968	Insulating block		 	 	-	-	-	1	
10	S25-3	Plain washer		 	 	2	2	2	2	
11	S1-51	Nut	'	 	 	2	2	2	2	

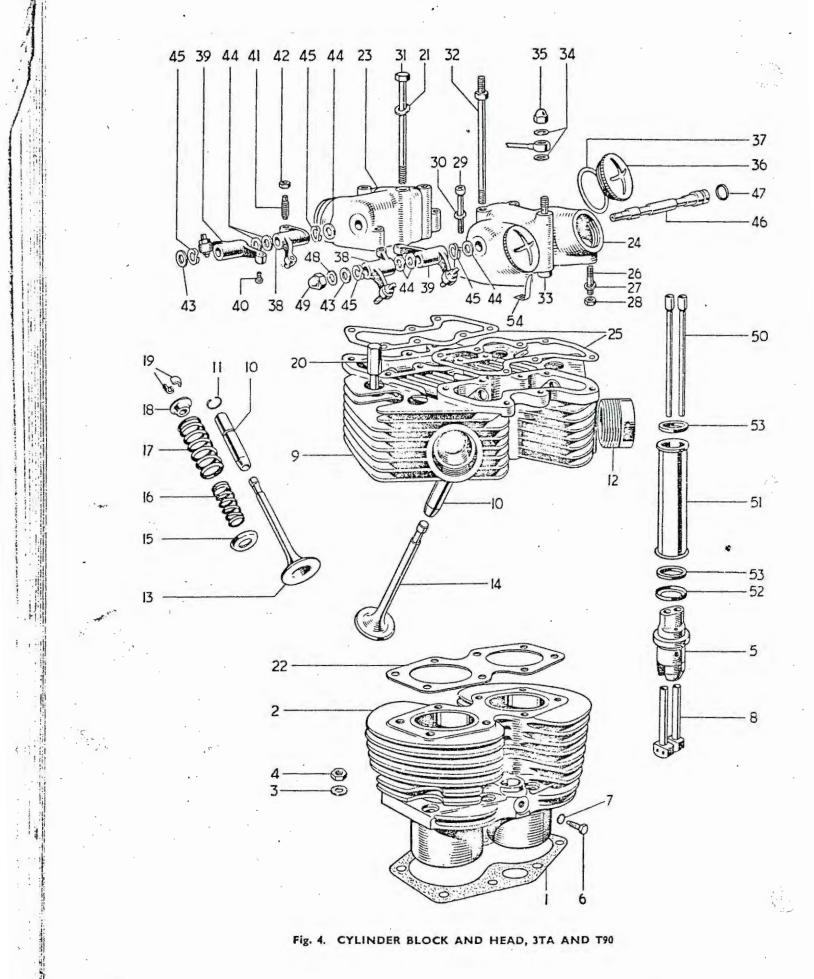

•

CYLINDER BLOCK AND HEAD, 3TA AND T90

	CTI	LINDER BLUC	K AN	υп		D, J					3TA	T90
1	E3798	Cylinder base wash	er								1	1
2	E3698										1	1
3	G\$308										8	8
3	E2412	Nut									8	8
5	E4676	Tappet guide block									2	2
5	H200	Tappet block screw									2	2
o 7	E1612	Serrated washer									2	2
8	E3753										4	4
8	E4779	CYLINDER HEAD									1	-
9	E4779	CYLINDER HEAD									-	1
-	E3208	Valve guide .									4	4
10	E3208	Valve guide cir									4	4
11		Exhaust pipe adapt									2	2
12	E2961										2	-
13	E3738		•• •••								2	2
13	E4640										2	2
14	E3739										. 4	4
15	E3740			•••	•••						4	_
16	E3942	Inner valve spring			•••			•••			4	-
17	E3741	Outer valve spring					•••				-	4
16	E4010	Inner valve spring			••••		•••			•••		4
17	E4011	Outer valve spring			•••						4	4
18	E3742	Top collar									8	8
19	WE259A						•••	•••			4	4
20	E4456	Cylinder head bolt						•••		•••	8	8
21	F2184	Then the second	•• •••							•••	1	1
22	E4674	Cylinder head gask		•••				•••			1	1
23	E3745	Inlet rocker box	•••				•••			•••	1	1
24	©E3744	Exhaust rocker bo		•••		••••		•••		•••	2	2
25	E3743	· · · · · · · · · · · · · · · · · · ·			•••						4	4
26	E3858	Rocker box stud (¦∦ in. O.A.	.)		•••		•••		•••	4	4
27	E3302				•••			••••		•••	4	4
28	F879							•••		•••	4	4
29	E3668	Screw (뷰 in. U.H.)		•••				•••		4	4
30	E3857	Plain washer .								•••	2	2
31	E3794	Cylinder head bolt								•••	2	2
32	E3795	Cylinder head toro	que stay bo	olt	•••					•••	-	-
33	E3809						•••			•••	2	2
34	F1880				•••	•••				•••	6 2	6 2
35	H400					•••		•••		•••		4
36	E4610		•• •••							•••	4	
37	E3751						•••			•••	4	4
38	E3749	ROCKER (Right e:			•••						2	2
39	E3750	ROCKER (Left ext		t inlet)					•••	•••	2	2
40	E3222	Rocker ball pi	n								4	4
41	E3223	Rocker adjusting p	in		•••					.21	4	4
42	G\$662	Adjuster lock nut									4	4
43	E1330	Thrust washer, $\frac{3}{8}$ i			•••						2	2
44	E2534	Thrust washer, 78	in								6	6
45	E3224	Spring washer			•••					•••	4	4
46	E3748	D 1 1 1									2	2
47	E3253	Sealing rubber									2	2
48	E1335									•••	2	2
			(Cor	tinued)								

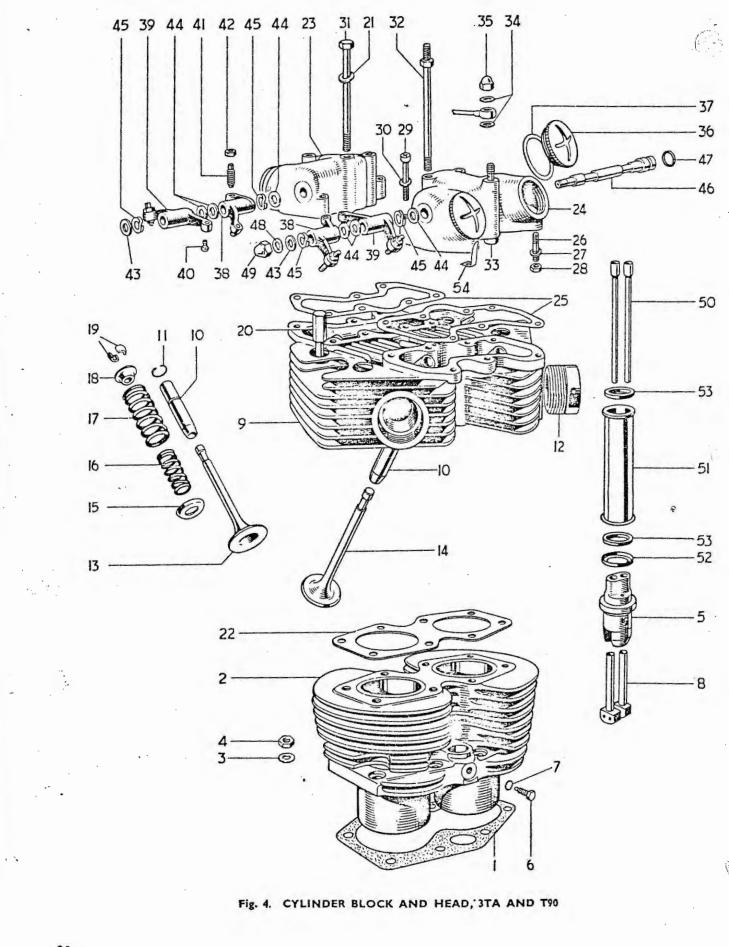

. :


ŧ

21

CYLINDER BLOCK AND HEAD, 3TA AND T90

(Continued)

				,				3TA	T90
49	E1435	Domed nut	 		 	 	 	2	2.
50	E3759	Push rod	 		 *	 	 	4	4
51	E4751	Cover tube	 		 	 	 	2	2
52	E4746	Bottom cup	 		 	 	 	2	2
53	E4752	Rubber washer	 		 	 	 	4	4
54	E4671	Locking spring	 		 	 	 	4	4

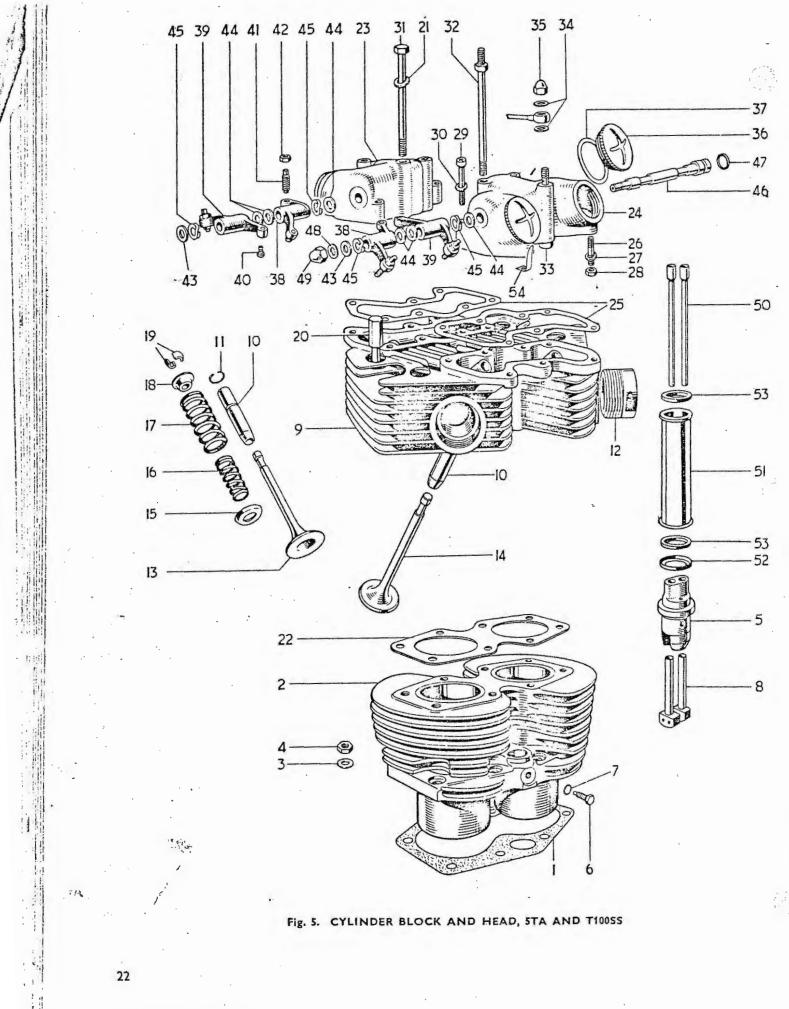


.

QUANTITY

CYLINDER BLOCK AND HEAD, 5TA AND T100SS


	CILI	NDER BLOC	K A	ND	H C A	чD,	JIA	AIN		1100	33		
												5TA	T100SS
1 .	E3798	Cylinder base wa		•••	•••	•••						1	1
2	E4000	Cylinder block										1	1
3	GS308	Plain washer										8	8
4	E2412	Nut				••••						8	8
5	E4676	Tappet guide blo			•••							- 2	2
6	H200	Tappet block scre	ew (7	in. U.I	H.)				•••			2	2
7	E1612	Serrated washer											2
8 -	E3753	Tappet '							•••	•••		4	4
9	E4785	CYLINDER HEA	D c/w	GUID	DES							1	1
10	E3208	Valve guide								•••		4	4
11	E3209	Valve guide (4	4
12	E2961	Exhaust pipe ada										2	2
13.	E4012	Inlet valve										2	2
14	E4013	Exhaust valve										2	2
15	E3740	Bottom cap										4	4
16	E4010	Inner valve spring										4	4 .
17	E4011	Outer valve sprin										4	4
18	E3742	Top collar										4	4
19	WE259A	Split cotter										8	- 8
20	E4456	Cylinder head bo										4	4
21 .	F2184	Plain washer										8	8
22	E4675	Cylinder head ga										1	1
23	E3745	Inlet rocker box	SKEL							,		1	1
23	E3744	Exhaust rocker box		•••							•••	1	1
								•••• •	•••	•••		2	2
25	E3743	Joint washer		0.4.					•••			4	4
26	E3858	Rocker box stud						•••				4	. 4
27	E3302	Plain washer					••••		•••	•••		4	4
28	F879	Nut								•••		4	4
29	E3668	Screw (음 in. U.F					•••					4	4
30	E3857	Plain washer								•••			
31	E3794	Cylinder head bo				•••					•••	2	2
32	E3795	Cylinder head to		tay bol	t			•••	••••				2
33	E3809	Oil feed bolt	••••		•••		•••	•••		•••		2	
34	F1880	Copper washer						•••				6	6
., 35	E400	Domed nut						•••				2	2
36	E4610	Inspection cap										4	4
37	E3751	Fibre washer						•••				4	4
38	E3749	ROCKER (right e										2	2
39	E3750	ROCKER (left ex		right i	nlet)							2	2
40	E3222	Rocker ball p	oin									4	4
41	E3223	Rocker adjusting	pin									4	4
42	GS662	Adjuster lock nut										4	4
43	E1330	Thrust washer, 3	in.									2	2
44	E2534	Thrust washer, 7	in.									6	6
45	E3224	Spring washer					••••					4	4
46	E3748	Rocker spindle										2	2
47	E3253	Sealing rubber										2	2
48	E1335	Copper washer										• 2	2
49	E1435	Domed nut										2	2
50	E4008	Push rod										4	4
51	E4751	Cover tube										2	2
52	E4746	Bottom cup										2	2
53	E4752	Rubber washer										4	4
54	E4671	Locking spring										4	4
21	210/1												

23

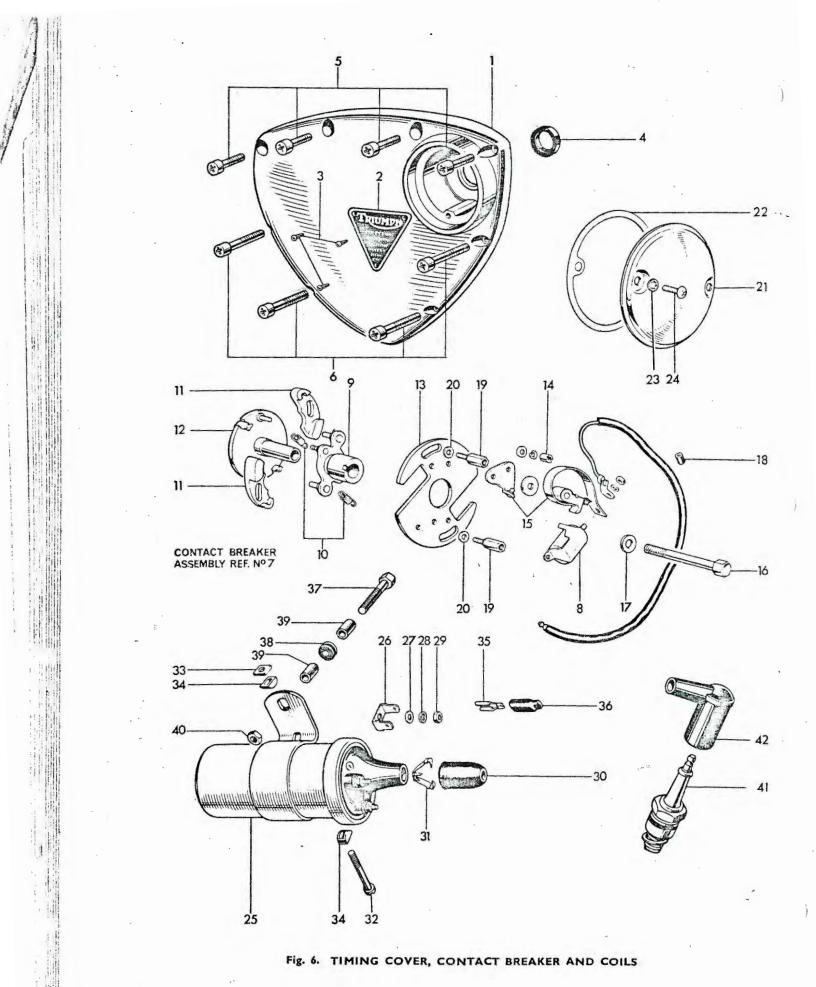

TIMING COVER, CONTACT BREAKER AND COILS

	TIMIN	G COVER, CO	DNT	NTACT		BREAKER							
									3TA	5TA	T90	T100SS	
1	E4630	Timing cover							1	1	1	1	
2	E4016	Patent plate							1	1	1	1	
3	D208-5	Hammer-drive screw	N						3	3	3	3	
4	E4568	Oil seal				'			1	1	1	1	
5	E3800	Screw (7 in. U.H.)							4	4	4	4	
6	E3801	Screw (11 in. U.H.)							4	4	4	4	
7	47605	CONTACT BREAK	ER, type	e 4CA					1	1	1	1	
8	425377	Condenser							2	2	2	2	
9	54441729	Cam							1	1	1	1	
10	54415642	Spring set							1	1	1	1	
11	425379	Weight							2	2	2	2	
12	54415751	Sleeve and actic	on plate						1	1	1	1	
13	425370	Base plate							1	1	1	1	
14	169194	Slotted nut							4	4	4	4	
15	54415803	Contact set							2	2	2	2	
16	E5451	Bolt (2 in. U.H.)							1	1	1	1	
17	S25-43	Plain washer							1	1	1	1	
18	E4707	Grommet							1	1	1	1	
19	E4747	Pillar bolt							2	2	2	2	
20	E2351	Plain washer							2	2	2	2	
21	E4571	Cover				·			1	1	1	1	
22	E5049	Joint washer							1	1	1	1	
23	GS299	Serrated washer							2	2	2	2	
24	F4715	Screw (15/32 in. U.H							2	2	2	2	
25	45152	IGNITION COIL, t		5					2	2	2	2	
26	54190108	Lucar terminal							. 4	4	4	4	
27	131023	Plain washer (E	2351)						4	4	4	4	
28	188330	Serrated washe)	3				4	4	4	4	
29	166043	Nut (F3799)							4	4	4	4	
30	421554	Rubber gromm	et						2	2	2	2	
31	421863	Cable clip							2	2	2	2	
32	100104	Screw							· 2	2	2	2	
33	169160	Square nut							2	2	2	2	
34	422369	"D" washer							4	4	4	4	
35 .	54942078	Lucar connector							4	4	4	4	
36	54190042	Insulating cover							. 4	4	4	4	
37	F3809	Bolt (13 in. U.H.)							2	2	2	2	
38	F5466	Rubber grommet							2	2	2	2	
39	F5467	Distance piece							4	4	4	4	
40	E3290	Self-locking nut							2	2	2	2	
41		Sparking plug (Chan			******				2	2	2	2	
42	D297	Plug cover and supp			•••				2	2	2	2	
42	D262	Plug cover							Α	A	A	A	

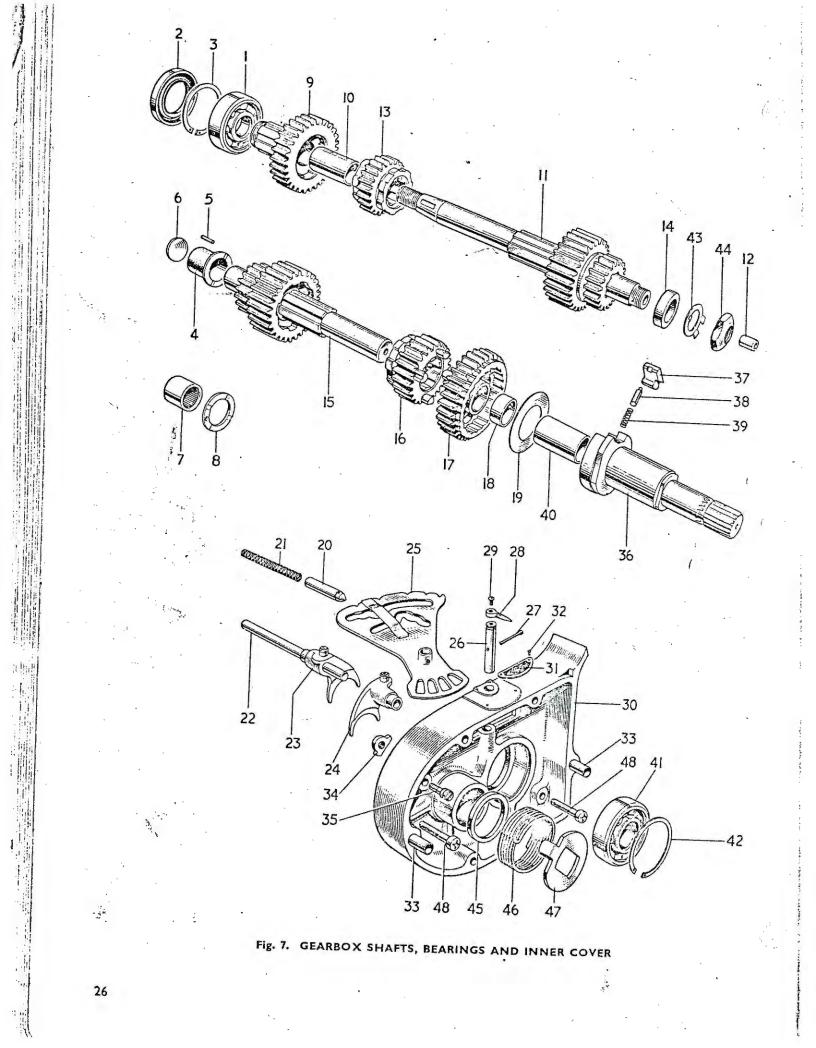


QUANTITY

GEARBOX SHAFTS, BEARINGS AND INNER COVER

	GEARDO	DX SHAFTS, BEARINGS AND INNER COVER 3TA 5TA T90 T	10055
1	T665	High gear bearing (ball journal) 1 1 1	1 1
2	T1478		1
3	W680	Oil seal 1 1 1 1. Circlip 1 1 1	1
4	T1367	Layshaft bush 1 1 -	
5	T912	Por 1 1	-
6	T981	Blanking disc	-
7	T1606	Layshaft bearing	1
8	T1607	These sectors	1
9	T1947	MAINING AFT LUCIL CEAD (00T)	1
10	T1405		1
11	T1948	MAINSHAFT c/w THIRD AND LOW GEARS (16/24T) 1 1 1	1
12	T1391		1
13	T1922		1
14	T1411		
15	T1965		1
15		Layshaft c/w second and high gears (15/23T) 1 1 -	-
	T1949	Layshaft c/w second and high gears (25/23T) 1	1
16	T1839	Layshaft third gear (20T) 1 1 1	1
17	T1950	LAYSHAFT LOW GEAR (27T) 1 1 1	1
18	T1393	Low gear bush 1 1 1	1
19	T1426	Pawl retaining disc 1 1 1	1
20	T1471	Camplate index plunger 1 1 1	1
21	T373	Index plunger spring 1 1 1	1
22	T1457	Selector fork spindle 1 1 1	1
23	T1480	Mainshaft selector fork 1 1 1 1	1
24	T1481	Layshaft selector fork 1 1 1	1
25	T1768	Gear selector camplate 1 1 1 1	1
26	T1418	Camplate spindle 1 1 1 1	1
27	$\frac{1}{8}$ in. $x \frac{3}{4}$ in.	Split pin 1 1 1 1	1
28	T1416	Gear indicator pointer 1 1 1	1
29	H688	Screw (유 in. U.H.) 1 1 1 1	1
30	T1448	Inner cover 1 1 1	1
31	T417	Gear indicator plate 1 1 1 1	1
32	D208-5	Indicator plate rivet 2 2 2	2
33	T1440	Hollow dowel 2 2 2 2	2
34	T1157	Kickstarter stop plate 1 1 1	1
35	T1390	Stop plate and anchor screw 1 1 1	1
36	T1445	KICKSTARTER SPINDLE 1 1 -	-
36	T1981	KICKSTARTER SPINDLE 1	1
37	T1431	Kickstarter pawl 1 1 1	1
38	T1282	Plunger 1 1 1	1
39	T1161	Plunger spring 1 1 1	1
40	T1897	Bearing 1	1
40	T1446	Floating bush 1 1 -	-
41	T1469	Mainshaft bearing (Ball journal) 1 1 1	1
42	T280	Circlip 1 1 1	1
43	T732	Tab washer 1 1 1	1
44	E2419	Mainshaft nut 1 1 1	1
45	T1464	Distance piece 1 1 1	1
46	T1441	Kickstarter return spring 1 1 1	1
47	T1422	Return spring plate 1 1 1	1
48	E3204		2
	LJLUT	Screw (1 In. U.H.) 2 2 2 2	-

Г÷.,,

27

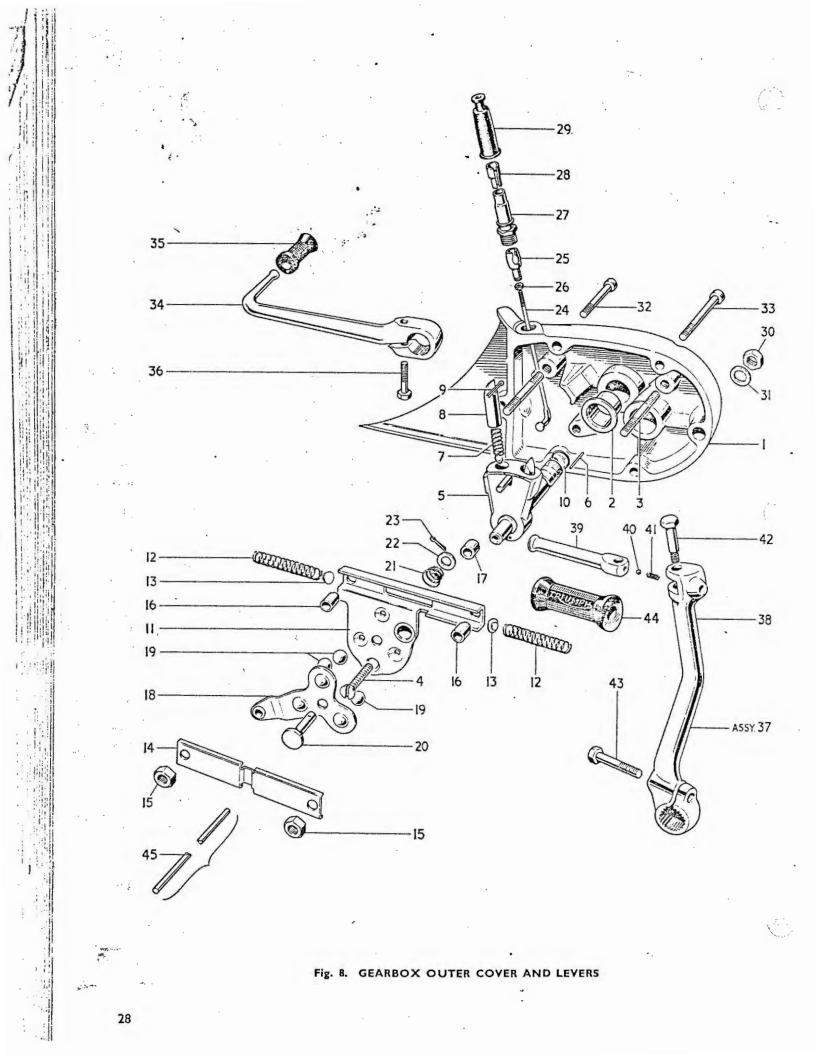


QUANTITY

	GE	ARBOX OUT	ERG	COV	EK	AN	D	LEVE	- K 5				
									3TA	5TA	T90	T100SS	
	T1870	GEARBOX OUTER	OVER						1	1	1	1 10035	,
1	T1395	Gearchange spine					•••		1	1	1	1	
2							•••	•••	2	2	2	2	
3	T1944	Stud (1 등 in. O.A.)	•••					•••	1	1	1	1	
4	T1875	Screw (⁷ / ₈ in. O.A.)		 T		•••	•••	•••	1	4	1	1	
5	T1942	GEARCHANGE QU			••		•••		2	2	2	2	
6	T1474	Spring retaining			••		***	11	2	2	2	2	*
7	T1436	Plunger spring			• •		•		2	2	2	2	
8	T1396	Selector plunger		••• •		•••	1		2	2	2	2	
9	$5/64 \text{ in. } x \frac{5}{8} \text{ in.}$	Split pin		•••	••		•••		4	4	4	1	
10	E3309	Sealing ring		•••	••	•••		***	1				
11	T1871	Return spring housin	g .		••	•••	•••		1	1	1	1	
12	T1877	Return spring	•••	••• •	••	***			2	2	2	2	
13	T1878	Thrust button		••• •	77				2	2	2	2	
14	T1977	Cover				•••	•••		1	1	1	1	
15	W103	Nut						•••	3	3	3	3	
16	T1876	Distance piece						•••	2	2	2	2	
17	T1874	Distance piece			••				1	1	1	1	
18	T1880	Clutch lever				•••			1	1	1	1	
19	T1771	Ball, 콜 in. diam.				•••	•••	•••	3	3	3	3	
20	T1710	Shaft				•••			1	1	1	1	
21	T1712	Spring							1 2	1	1	1	
22	G5127	Plain washer						***	1	1	1	1	
23	5/64 in. x ½ in.	Split pin							1	1	1	1	
24	T1945	Spoke							1	1	1	1	
25	T1946	Connector						***	1	1 .	1	1	
26	T1937	Nut							1	1	1	1	`
27	T1644	Abutment							1	1	1	· . 1	
28	-T1645	Adaptor							1	1	1	1	
29	T1646	Rubber cover							1	1	1	· 1	
30	S1-51	Nut							2	2	2	2	
31	S25-3	Plain washer							2	2	2	2	
32	T1401	Screw (2 ³ / ₈ in. U.H.)							2	2	2	2	
33	T1402	Screw (2 ⁵ / ₈ in. U.H.)						•••	2	2	2	2	
34	T1435	Gearchange lever							1	1	1	1	
	T449	B 1 1 1 1	•••	•••					1	1	1	1	
35	W932	Bolt (1 in. U.H.)			••				i	1	1	1	
36		KICKSTARTER LEVE		DI ETE	••				i	1	1	1	
37	T1677	Kickstarter crank					•••		1	1	1	1	
38	T1678			•••	••		•••		1	4	1	1	
39	T1272	Kickstarter peda		•••		•••	•••	•••	1	1	1	1	
40	S70-3	Steel ball $(\frac{1}{4}$ in. d		•••	•			• • •	4	1	1	1	
41	T1.167	Index spring		••• ••			•••	•••	4	1	1	1	
42	T1273	Pivot bolt		••• ••		•••			1	1	1	4	
43	T1439	Clamp bolt (1 🔒	n. U.H.))		•••		•••	1	1		4	
44	F1814	Pedal rubber			•	•••	•••	• • •	1	1	1	1	
		Clusch as a main a word							1	-	-	-	
45 45	T1456 T1970	Clutch operating rod Clutch operating rod			•					1	1	1	


29

. . .

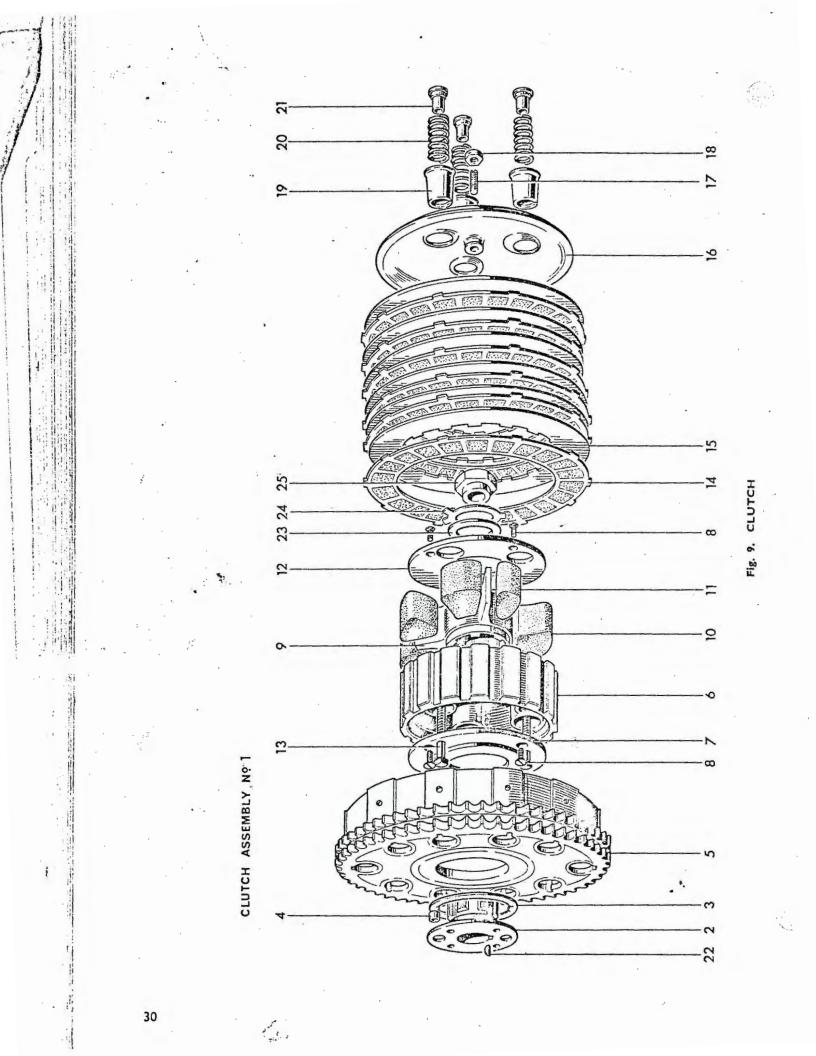

CLUTCH

									3TA	5TA	T90	T100SS
1	T1933	CLUTCH COM							1	-	-	-
1	T1935	CLUTCH COM	PLETE						-	1	1	1
2	T1751	Hub .				• •••			1	1	1	1
3	T1735	Thrust wash	ier			· · · ·			1	1	1	1
4	T394	Roller .							20	20	20	20
5	T1442	Sprocket an	d housing						1	-	-	-
5	T1570	Sprocket an	d housing						-	1	1	1
6	T1718	Centre (Sho	ck absorber	body)			•••		1	-	-	-
6	T1719	Centre (Sho							-	1	1	1
7	T1720	Inner plate							1	1	1	1
-8	- T1040	Countersun	k screw (0.4	17 in. l	J.H.)				6	6	6	6
9	T1721	Shock absor	ber spider						1	1	1	1
10	T1722	Drive rubbe					•••		3	3	3	3
11	T1723	Rebound ru	bber (small)				•••		3	3	3	3
12	T1724	Outer plate							1	1	1	1
13	T423	Screwed pin	(1 19/32 in.	U.H.)					3	-	_	1 -
13	T423A	Screwed pin	(1 27/32 in.	U.H.)					-	3	3	3
14	T1362	Driving plat	e (bonded)						5	6	6	6
15	T1363	Driven plate	(plain)						5	6	6	6
16	T1929	Pressure pla	te						1	1	1	1
17	T1256	Adjuster pin							1	1	1	1
18	GS662	Nut						••••	1	1	1	1
19	T1934	Spring cup				•••			3	-	-	_
19	T1931	Spring cup							-	3	3	3
20	T1752	Spring					***		3	-	-	_
20	T1560	Spring			•••				-	3	3	3
21	T427	Brass nut							3	3	3	3
22	S66-1	Кеу							1	1	Fil in	1
23	T1045	Cupped washer					•••		1	1	1	1
24	T1046	Tab washer				4			1	1	1	1
25	T1047	Nut				· É.			1	1	1	1
				-								

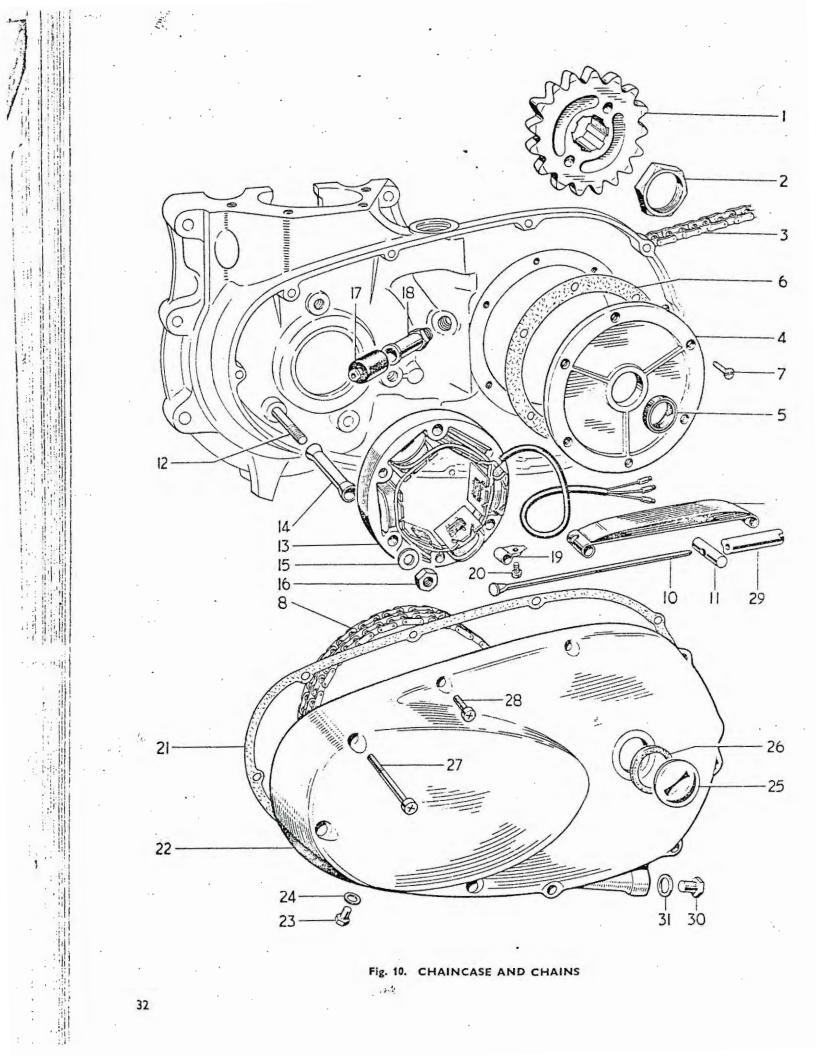

-


CHAINCASE AND CHAINS

.

									3TA	5TA	T90	T100SS
1	T1476	Gearbox sprocket (1)	8 teeth))					-	-	-	1
1	T1558	Gearbox sprocket (1	7 teeth))					-	_	1	-
1	T1569	Gearbox sprocket (2)	0 teeth))		····			_	1	-	-
1	T1476/19	Gearbox sprocket (1	9 teeth))					1	-	-	-
2	T1434	Gearbox sprocket nu	It						1	1	1	1
3	D481	Rear chain, 5 in. x 3	in. x 10	3L					1	1	-	-
3	D444	Rear chain, $\frac{5}{8}$ in. x $\frac{3}{8}$	in. x 10	2L					-	-	1	1.
4	E3789	Cover place							1	1	1	1
5	E3833	Oil seal							1	1	1	1
6	E3832	Joint washer							1	1	1	1
7	E3821	Countersunk screw (16 in. L	J.H.)					6	6	6	6
8	D358	Primary chain, 3 in. I	Duplex	78L					1	1	1	1
9	E4149	Chain tensioner blad	e						1	1	1	1
10	E4152	Tie rod			'				. 1	1	1	1
11	E4148	Trunnion							1	1	1	1
12	E3811	Stud (3 3 in. O.A.)							3	3	3	3
13	47164	Stator, RM 19							1	1	1	1
14	E3810	Distance piece							3	3	3	3
15	S25-3	Plain washer			•••				3	3	3	3
16	E5324	Nut							3	3	3	3
17	E4144	Rubber grommet							1	1	1	1
18	E4772	Sleeve nut							1	1	1	1
19	E1509	Clip	•••						1	1	1	1
20	T361	Bolt (¹ / ₄ in. U.H.)			•••				1	1	1	1
21	E4156	Joint washer				•••			1	1	1	1
22	E4122	Chaincase	•••		,			•••	1	1	1	1
23	D\$57	Drain and level plug		*:					1	1	1	1
24	WE170	Fibre washer							2	1	1	1
25	E732	Filler plug							1	1	1	1
26	NE507	Fibre washer				•••			1	1	· 1	1 .
27	E3802	Screw (2 ³ / ₄ in. U.H.)	•••						3	3	3	3
28	E3668	Screw (1 ᇾ in. U.H.)							7	7	7	7
29	E4153	Adjuster sleeve nut					•••		1	1	1	1
30	E4154	Drain plug					•••		1	1	1	1
31	T1738	Fibre washer		··· ·					1	1	1	1

33

al al

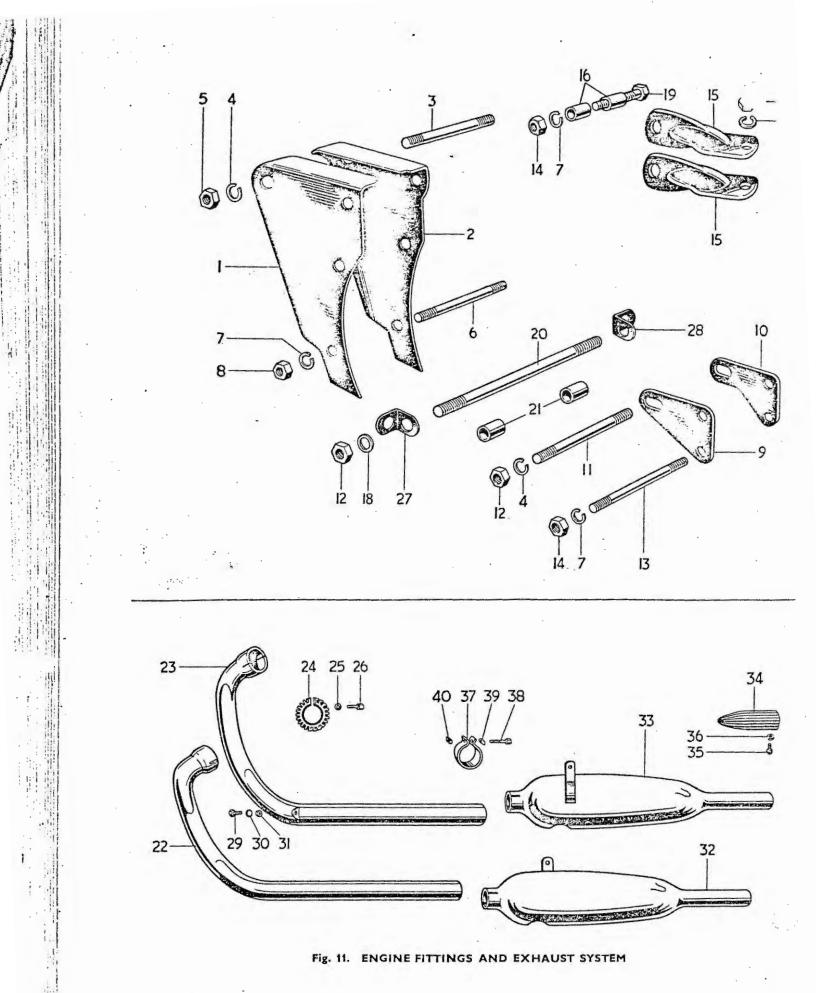


ENGINE FITTINGS AND EXHAUST SYSTEM

	E	NGINE FILLINGS	AND	E X	n A	031	21	315	1 T		
								3TA	5TA	Т90	T100SS
1	F4275	Left front engine plate		•••				1	1	1	1
2	F4276	Right front engine plate			•••			1	1	1	.1
.3	F2825	Stud (3 ¹ / ₄ in. O.A.)		•••4	•••	•••	•••	1	1	1	1
4	S26-1	Spring washer		••••	•••		•••	8	8	8	8
5	PO172A	Nut			•••	•••	•••	2	2	2	2
6	E3804	Stud (3 in. O.A.)		•••		••••	•••	3	3	3	3
7	S26-3	Spring washer		•••			•••	8	8	8	8
8	S1-51	Nut	•••	•••	•••	· • • •	•••	3	3	3	3
9	F4229	Left rear engine plate		•••			•••	1	1	1	1
10	F4230	Right rear engine plate			•••		•••	1	1	1	1
11	E3665	Stud (4¼ in. O.A.)	• • •	•••	•••		•••	1	1	1	1
12	PO172A	Nut			•••			4	4	4	4
13	E3695	Stud (4 등 in. O.A.)	•••	•••	•••			2	2	2	2
14	S1-51	Nut	•••	•••		•••	•••	5	5	5	5
15	E4778	Torque stay	•••					2	2	2	2
16	£5072	Distance piece		•••				2	2	2	2
17	S1-52	Nut			•••		•••	2	2	2	2
18	F5532	Plain washer			•••			2	2	2	2
19	E4165	Bolt (1 뷰 in. U.H.)				•••		1	1	1	1
20	E3812	Stud (7 믆 in. O.A.)					•••	1	1	1	1
21	F4197	Distance piece			•••			2	2	2	2
.55	E3992	Left exhaust pipe				•••		1	1		1
23	E3994	Right exhaust pipe				•••	•••	· 1	1	÷-	1
22	E5325	Left exhaust pipe	•••			•••		-	-	1	-
23	£5327	Right exhaust pipe				•••	•••	-	_	1	
24	E1270	Finned clip				•••		2	2	2	2
25	E410A	Hemispherical washer				•••	•••	2	2	2	2
26	E409	Bolt (1 ³ / ₁₆ in. U.H.)	•••				•••	2	2	2	2
27	F4707	Left bracket						1	1	1	1
28	F4283	Right bracket				•••		1	1	1	1
29	D\$57	Bolt (76 in. U.H.)	•••	•••				2	2	2	2
30	E1612	Serrated washer						2	2	2	2
31	F879	Nut					•••	2	2	2	2
32	E3935	Left silencer					•••	1	1	1	1
33	E3936	Right silencer				•••		1	1	1	1
`34	E4155	Silencer mute						А	А	А	A
35	H689	Screw (¹ / ₄ in. U.H.)				•••		Α	Α	А	A
36	H691	Nut	•••				•••	А	A	А	А
37	E2271	Clip						2	2	2	2
38	TE164E	Bolt (1 귾 in. U.H.)	•••		• • •	•••		2	2	2	2
39	TE164D	"D" washer			•••	•	•••	2	2	2	2
40	TE164C	"D" nut						2	2	2	2
		r.									

. . .

£.....

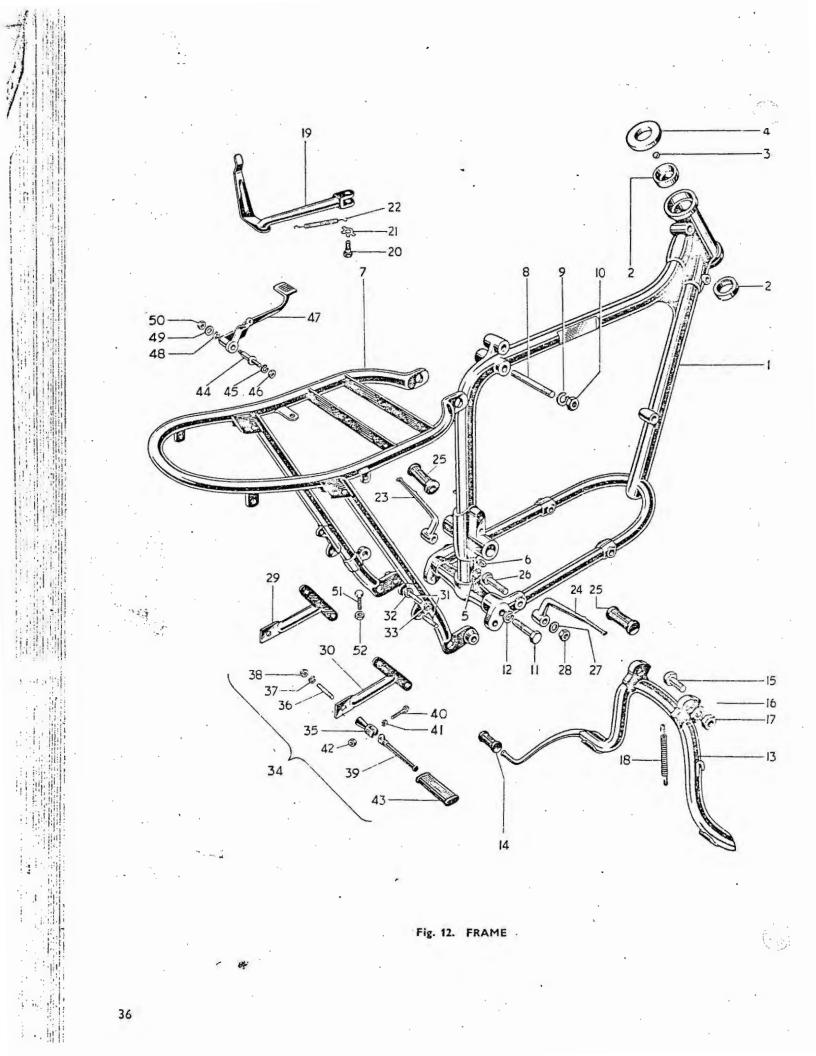


Ref	N	0	Part	No
NCI		U .	1 07 6	110

1. 1. A.

FRAME

			FR	AME								
	· ·								3TA	5TA	T90	T100SS
1	F5406	Front frame							1	1	1	1
2	H1130	Steering race cup							2	2	2	2
3	S70-4	Steel ball (3 in. U.H.	.)						48	48	48	48
4	H1140	Top cone and dust co				*			1	1	1	1
5	NW100	Grease nipple							1 .	1	1	1
6	WE170	Fibre washer							1	1	1	1
7	F6223	Rear frame							1	1	1	1
8	F4510	Stud (43 in. O.A.)							1	1	1	1
9	526-1	Spring washer							2	2	2	2
10	S1-52	Nut							2	2	2	2
11	F3780	Bolt (1 1/6 in. U.H.)							2	2	2	2
12	PCW73A	Spring washer							2	2	2	2
13	F5529	Centre stand							1	1	-	-
13	F5153	Centre stand		***					-	-	1	1
14	T449	Pedal rubber							1	1	1	1.
15	F3619	Pivot bolt (1 7 in. U.							2	2	2	2
16	F4484	Tab washer							2	2	2	2
17	F2725	Nut							2	2	2	2
18	F3617	Return spring				·	3		1	1	. 1	1
19	F4388	Prop stand							1	1	-	
19	F3723	Prop stand							_	-	1	1,
20	F3097	Pivot bolt							1	1	1	1
21	F3096	Tab washer						·	1	1	1	1
22	F2610	Return spring							1	1	1	1
23	F4214	Left footrest					***		1	1	1	1
24	F4215	Right footrest							1	1	1	1
25	NF704	Pedal rubber			*				2	2	2	2
26	F4369	Bolt (21; in. U.H.)							2	2	2	2
27	F4370	Plain washer							2	2	2	2
28	DS47	Nut		-					2	2	2	2
29	F5087	Left pillion footrest su							1	1	1	1
30	F5088	Right pillion footrest							1	1	1	1
31	E1396	Stud (# in. O.A.)							4	4	4	4
32	S26-3	Spring washer							4	4	4	4
33	S1-51	Nut							4	4	4	4
34	F4327	PILLION FOOTREST							2	2	2	2
35	F2268	Footrest hanger							2	2	2	2
36	F4309	Stud (1 ³ / ₄ in. O.A.)							2	2	2	2
37	S26-1	Spring washer							2	2	2	2
38	PO172A	Nut							2	2	2	2
39	F1694	Pedal							2	2	2	2
40	F2271	Pivot bolt							2	2	2	2
41	F2277	Spring washer							2	2	2	2
42	S1-51	Nut	•••		••••				2	2	2	2
43	F1695	Pedal rubber		••••					2	2.	2	2
44	F4284	Brake pedal spindle		•••	•••				1	1	1	1
45	SCZ45	Spring washer		•••					1	1	1	1
46	DS48	NUM	•••	•••	•••				1	1	1	1
47	F4314	Brake pedal		•••					1	1	1	1
48	S26-16	Spring washer							1	1	1	1
49	S25-2	Di i i		•••		••••			1	1	1	1
50	S1-52	Nut							1	1	1	1
50	F1149	Pedal stop screw (15 in	 	()	•••	•••	····		1	1	1	1
52	F879	A Los	. 0.1		•••				1	1	1	1
52	10/7	Nut			•••							

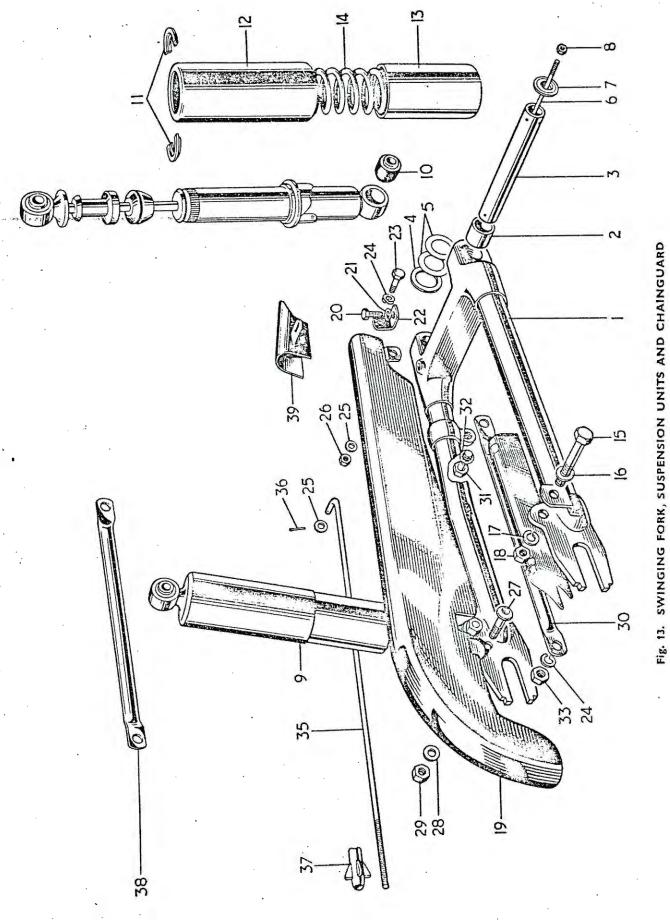

1.01 - 1 10 - 10 -

「「「「「「」」」

•

SWINGING FORK, SUSPENSION UNITS AND CHAINGUARD

	WINGING	FORK, SUSPE	NSIC	N	UN	112	AND	C	HAI	NG	JAR	D
									3TA	5TA	T90	T100SS
1	F4190	SWINGING FORK							1	1	1	1
2	F4076	Pivot bush						··· ·	2	2	2	2
3	F4195	Spindle							1	1	1	1
4	F4078	Spacing washer						•••	1	1	1	1
5	F4385	Shim 0.003 in				**			as re	quired		-
5	F4386	Shim 0.005 in								quired		
6	F3797	Retainer rod							1	1	1.	1
7	F4196	Сар							2	2	2	2
8	F3799	Nut							2	2	2	2
9	64053946	SUSPENSION UNIT							2	-	2	2
10	9054/316A	Bonded bush							4	4	4	4
11	9054/171	Spring retainer							4	4	4	4
12	9054/151	Outer dirt shield	ł						2	2	2	2
13	9054/47	Inner dirt shield							2	2	2	2
14 .	64539963	Spring, 130 lbs. F		nge					2	2	2	2
14	9054/277	Spring, 110 lbs. Red/I							A	A	A	А
14	SA253/5	Spring, 145 lbs. Blue/							A	A	A	A
15	E2113	Unit fixing bolt (1 15							4	4	4	4
16	F2184	Plain washer							2	2	2	2
17	S26-1	Spring washer							2	2	2	2
18	PO172A	Nut							2	2	2	2
19	F5409	Upper chainguard							1	1	1	1
20	D\$57	Bolt (1/6 in. U.H.)							1	1	1	1
21	S26-2	Spring washer							1	1	1	1
22	F4134	Front bracket							1	1	1	1
23	F4135	Pivot bolt							1	1	1	1
24	F2277	Spring washer							1	1	1	1
25	S25-13	Plain washer							2	2	2	2
26	E5269	Nut							1	1	1	1
27	F4136	Stepped bolt							1	1	1	1
28	S25-3	Plain washer							.1	1	1	1
29	S1-51	Nut							1	1	1	1
30	F4199	Lower chainguard							1	1	-	
31	W840	Bolt (17/32 in. U.H.)							1	1	1	1
32	E2288	Serrated washer							1	1	1	1
33	DS47	Nut							1	1	1	1
34	PCW73A	Spring washer							1	1	1	1
35	F3597	Brake operating rod							1	1	1	1
36	$\frac{1}{16}$ in. $x^{\frac{3}{8}}$ in.	Split pin							1	1	1	1
37	F4585	Adjuster nut							1	1	1	1
38	F4201	Brake torque stay			••••					_	1	1
39	F6046	Front chainguard							-	-	1	1

TELESCOPIC FRONT FORK, 3TA AND 5TA

		LESCOPIC PRON		URK,	JIA	AN				3TA	5T	A
1	H1721	FORK ASSEMBLY						•••		1		1
2	H1665	Middle lug and stem	1							1		1
3	H1110	Bottom cone								1		1
4	H941	Pinch bolt (24 in. U	.H.)				•••			2		2
5	S25-2	Plain washer								2		2
6	E2412	Nut								2		2
7	H1667	Distance piece								1		1
8	H1141	Fork stem sleeve nu	it							1		1
9	H1108	Top lug								1		1
10	F1760	Pinch bolt (1 1; in. l	J.H.)							1	11	1
11	H379	Seated nut							•••	1		1
12	H1290	Left nacelle cover								1	1	1
13	H1291	Right nacelle cover								1		1
14	H1756	Felt washer								2	;	2
15	H1661	Upper cover tube								2	;	2
16	H1745	Plain washer								2		2
17	H1660	Main spring (unpain								2		2
18	H1656	Plain washer								2		2
19	H1654	DUST EXCLUDER	SLEEV							2		2
20	-#1500 CD:							·		20		2- 4
21	H431	Plain washer								2		2
22	H441	Top bearing								2		2
23	H1653	Damping sleeve								2		2
24	H1695	STANCHION c/w								2	-	2
25	H443	Lower bearing								2		2
26	H1058									2		2
27	H1659	Cap nut								2		2
28	H519A	Oil filler plug (금 in								2		2
29	H1650	LEFT BOTTOM ME								1		1
30	H1651	RIGHT BOTTOM N								1		1
31	H1053	Spindle cap						•••		2		2
32	\$26-3	Spring washer					•••			4		4
33	H1070	Cap bolt (1 76 in		···· ··		•••			•••	4	1.1	4
34	H1070	D ()					•••	•••		2		2
35	H430									4		4
	H1499	Fibre washer Restrictor					•••			2		2
36 37										~		2
38	H1063 H1062	Flanged bolt (23/32								2		2
		Aluminium washer		••• ••		••••	•••		•••	2		
39	H660	Handlebar "U" bolt			• . •••		1			4		2
40	S25-3	Plain washer	•••			•••	•••		•••			4
41	E1310	Nut	• • •	••• ••		•••			•••	4		4
42	F5075	Left steering stop			• •••		•••	•••		1		1
43	F5076	Right steering stop				•••				1		1
44	F2398	Bolt (1 ¹ / ₄ in. U.H.)			• •••			•••		1		
45	S1-51	Nut				•••		•••	•••	1		1
46	F5077	Fork steering stop					•••			1		1
47	S25-1	Plain washer			• •••			•••		1		1
48	F5078	Screw (§ in. U.H.)								1		1


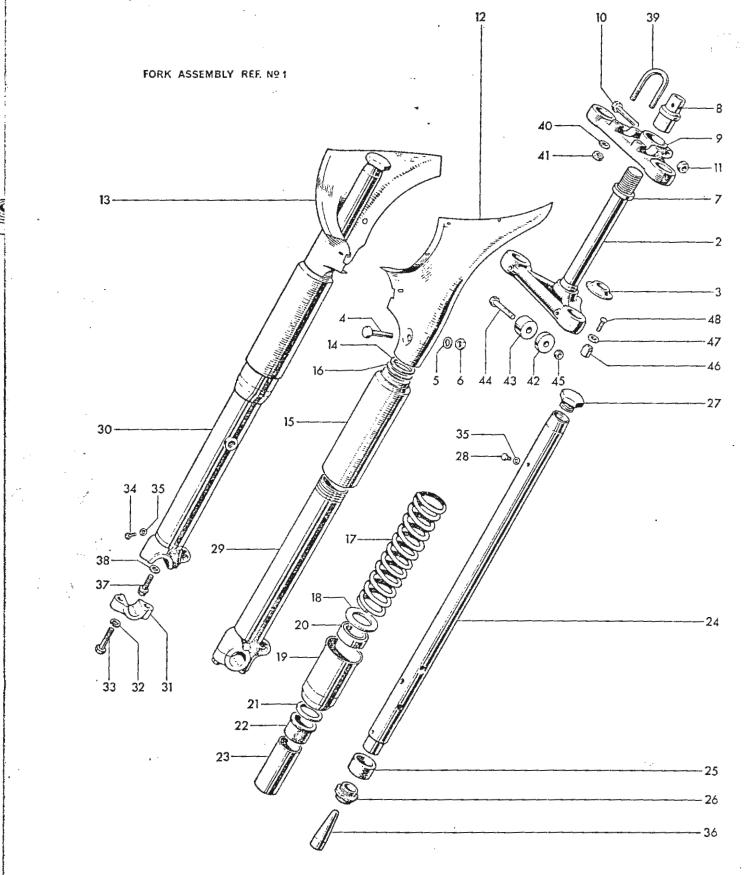


Fig. 14. TELESCOPIC FRONT FORK, 3TA AND 5TA

40

.

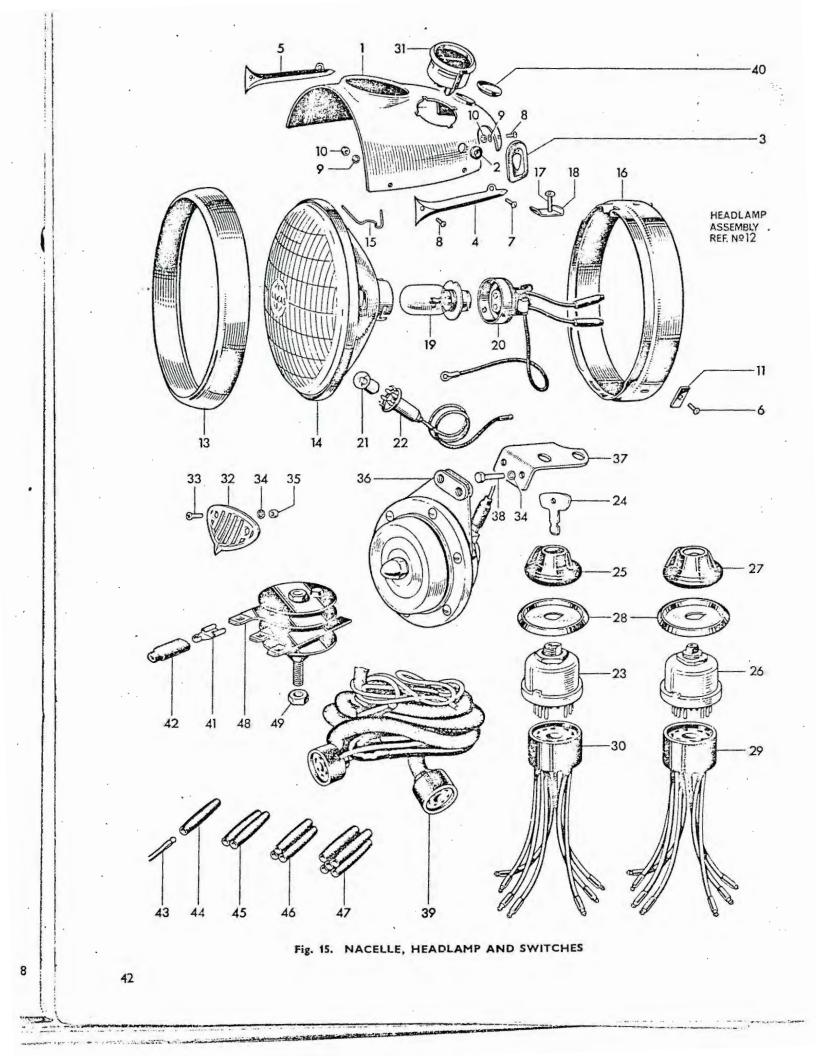


.

NACELLE, HEADLAMP AND SWITCHES

											3TA	5TA
1	H1781	Nacelle top					·	•••	•••		1	1
2	H961	Rubber grommet									3	3
3	H669	Rubber grommet					•••				2	2
4	H877	Left motif			• • • •						1	1
5	H878	Right motif	•••								1	1
6	H689	Screw ($\frac{1}{4}$ in. U.H.)									4	4
7	H687	Screw (ਭ in. U.H.)									2	2
8	H688	Screw (圥 in. U.H.)			•••						2	2
9	E2880	Serrated washer									4	4
.10	H691	Nut				•••			•••		4	4
11	H690	Nut				•••				•••	2	2
12	51860	HEADLAMP	•••		•••						1	1.
13	553248	Rim				•••					1	.1
14	516812	Light unit									1	1
15	504665	Fixing wire									6	6
16	553267	Fixing ring	*** .				•••	•••		. • • •	1	1
17	144921	Screw									1	1
18	534296	Plate					•••	- • •			1	1
19	373	Bulb (30/24 W. L.I	H. Dipp	ing. Pr	e-focus)			•••	•••	1	1
20	554602	Adaptor									1	1
21	988	Bulb (3W.M.C.C.)	•••								1	1
22	554710	Pilot bulbholder								•••	1	1
23	34427	IGNITION SWITCH o	/w KEY	, type	88SA			•••			1	1
24	54336176	Ignition key									1	1
25	54336178	Ignition switch cover				•••					1	1
26	34289	Lighting switch, type 8	8SA								1	1.
27	54330934	Knob c/w screw	•••		•••						1	1
28	54330576	Switch bezel plate		•••			•••				1	1
29	54930007	Replacement harness so									A	A
30	54930008	Replacement harness so	ocket (l	gnition)						A	A
31	36296	Ammeter, type 2AR				•••	•••	•••		•••	1	1
32	H992	Horn grille									1	1
33	H993	Screw (0.540 in. U.H.)				•••					2	2
34	GS299	Serrated washer									4	4
35	F3799	Nut					•••				2	2
36	70163	Horn type 8H				•••					1	1
37	H1420	Horn bracket	•••							•••	1	1
38	F4771	Bolt $(\frac{1}{2}$ in. U.H.)				•••	••••	•••			2	2
39	54933695	Wiring harness		•••		•••					1	.1
40	H1421	Rubber grommet									1	1
41	54942078	Lucar connector				•••					5	5
42	54190042	Insulating cover	•••			•••					5	5
43	900269	Snap connector termina	al						`		as re	quired
44	900288	Single snap connector				•••	•••					quired
45	850641	Double snap connector		•••							as re	quired
46	850844	Triple snap connector			•••	•••				••••	as re	quired
47	850832	Quintuple snap connect	tor								as re	quired
48	49072	Rectifier, type 2DS506									1	1
49	F5338	Nut (156596)		•••	•••				•••		1	1


43

ALC A

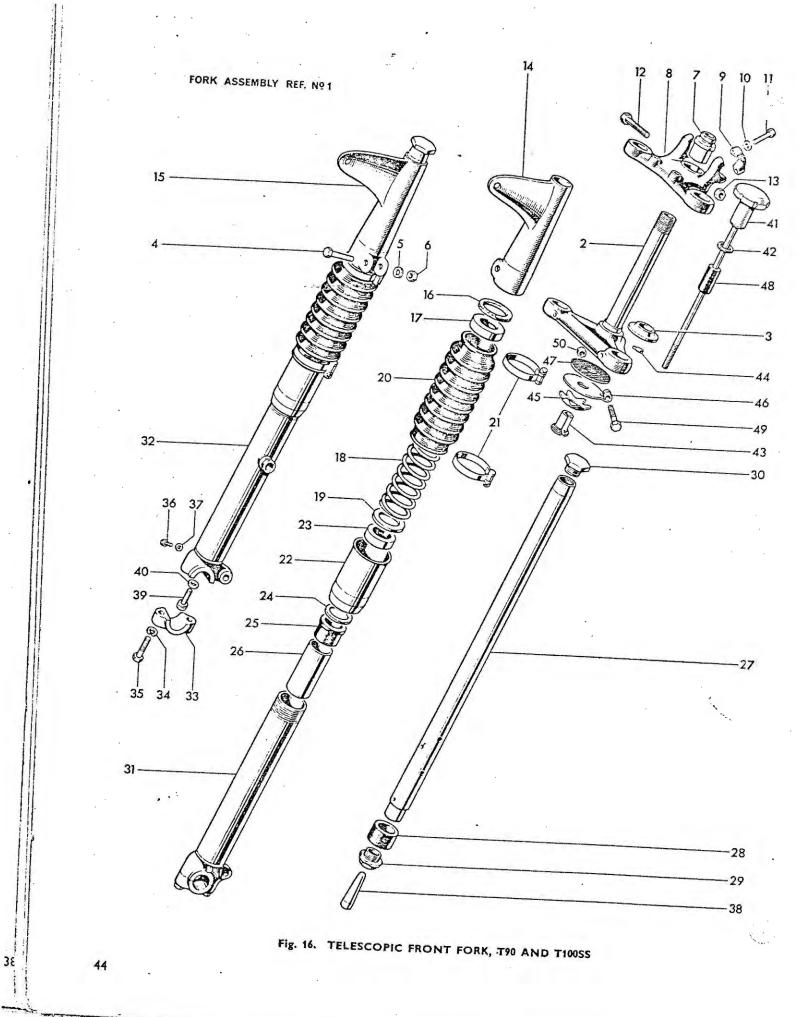

TELESCOPIC FRONT FORK, T90 AND T100SS


	161	ESCOPIC FRONT F	ORM	, 13	70 A	NU	110	035	T90	T100SS
1	H1714	FORK ASSEMBLY							1	110055
2	H1328	Middle lug and stem							 1	1
3	H1110	Bottom cone							 1	1
4	H941	Pinch bolt $(2\frac{1}{4}$ in. U.H.)		'					 2	2
5	\$25-2	Plain washer							 2	2
6	H1335	Nut (23 in. O.A.) used w							 2	2
6	H1329	Nut (1 +; in. O.A.) used v							 Ā	Ā
7	H405	Fork stem sleeve nut							 1	1
8	H1287	TOP LUG c/w CAPS							 1	1
9	H506	Handlebar cap							 2	2
10	\$25-3	Plain washer							 4	4
11	H1340	Bolt (1 ¹ / ₈ in. U.H.)							 4	4
12	F1760	Pinch bolt (1 11 in. U.H.)							 1	1
13	H379	Seated nut							 1	1
14	H1646	Left cover							 1	1
15	H1647	Right cover							 1	1
16	H1756	Felt washer							 2	2
17	H1657	Spring abutment							 2	2
18	H1660	Main spring (Unpainted)							 2	2
19	H1656	Plain washer							 2	2
20	H1645	Telescopic gaiter							 2	2
21	D340 -	Clip							 4	4
22	H1654	DUST EXCLUDER SLEE							 2	2
23	H1500	Oil seal							 2	2
24	H431	Plain washer							 2	2
25	H441	Top bearing							 2	2
26	H1653	Damping sleeve							 2	2
27	H1649	STANCHION C/W BEAR							 2	2
28	H443	Lower bearing							 2	2
29	H1058	Bearing nut							 2	2
30	H1658	Cap nut							 2	2
31	H1650	LEFT BOTTOM MEMBER							 1	1
32	H1651	RIGHT BOTTOM MEMB							 1	1
33	H1053	Spindle cap							 2	2
34	S26-3	Spring washer							 4	4
35	H1070	Bolt (17. in. U.H.)							 4	4
36	H1071	Drain plug							 2	2
37	H430	Fibre washer							 2	2
38	H1499	Restrictor							 2	2
39	H1063	Flanged bolt (23/32 in. U.							 2	2
40	H1062	Aluminium washer							 2	2
41	H1142	Steering damper rod							 1	1
42	H565	Plain washer							 1	1
43	H408	Adjuster sleeve							 1	1
44	H1286	Locating pin							 1	1
45	H95	Spring plate							 1	1
46	H1111A	Anchor plate							 1	1
47	H435	Friction disc							 1	1
48	H1618	Rubber sleeve							 1	1
49	F3468	Bolt (2 ¹ / ₄ in. U.H.)							 1	1
50	S1-51	Nut							 1	1

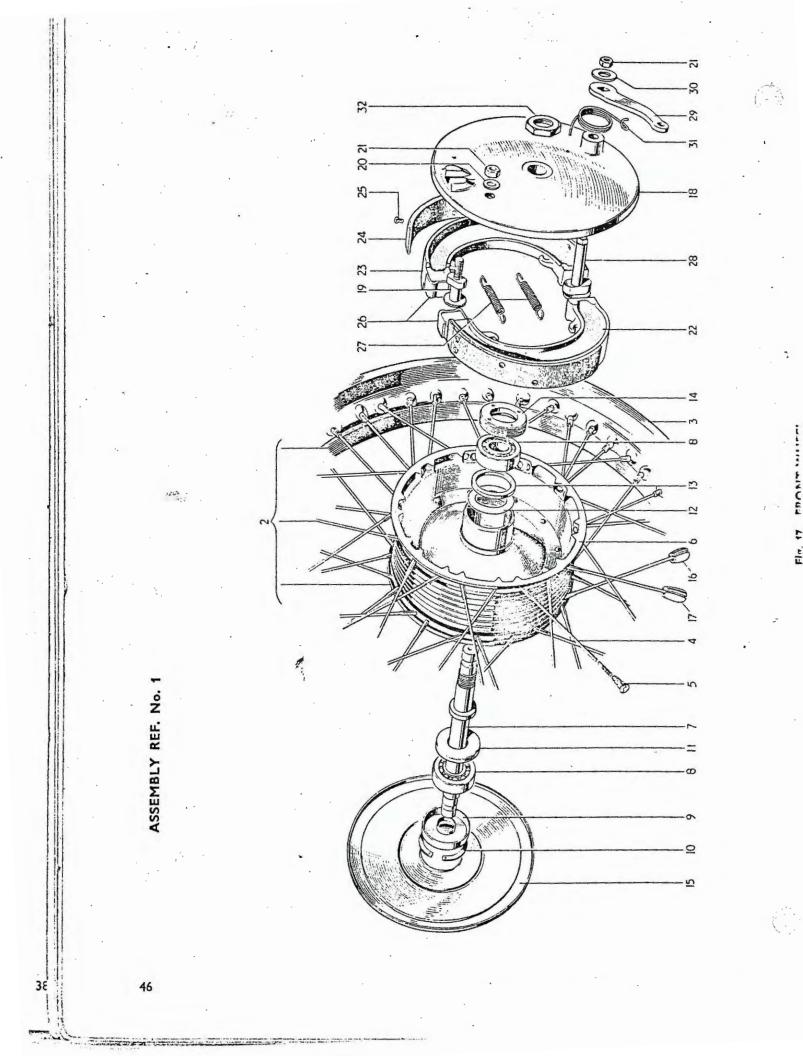

Fla. 17

FRONT WHEEL

								3TA	5TA	T90	T100SS
1	W1311	FRONT WHEEL COM	PLETE					1	1	1	1
1	W1398	FRONT WHEEL COM						-	-	1	1
2	W1273	RIM, SPOKES AN	D HUB	ASSEMB	LY			1	1	-	-
2	W1370	RIM, SPOKES AN						_	_	1	1
3	W1274	Front wheel r						1	1	_	-
. 3	W1373	Front wheel r	•					-	-	1	1
4	W1275	Spoke (8/10G) c/w n	ipple		40	40	-	-
4	W1497	Spoke (8/10G						_	-	40	40
5	S79-2	Spoke nipple.						40	40	40	40
6	W1231	Hub and brake						1	1	1	1
7	W1239	Wheel spindle .						1	1	1	1
8	W653	Bearing						2	2	2	1
9	W1237	Dura cours						1	1	1	1
10	T280	Circlip						1	1	1	1
11	W1481	Grease retainer .						1	1	1	1
12	W1474	Grease retainer (B	rake side	e)				1	1	1	·1
13	W1238	D 1		/				1	1	1	1
14	W582	Detet to to a star						1	1	1	1
15	W1334	Courseline						. 1	1	1	1
16	W1197	Balance weight, $\frac{1}{2}$ c	Z					as r	equired		
17	W1198	Balance weight, 1 c							equired		
18	W1301	Brake anchor place						1	1	1	1
19	W1302	Fulcrum pin .						1	1	1	1
20	S25-2	Plain washer						1	1	1	. 1
21	S1-52	Nut						2	2	2	2
22	W1406	LEADING BRAKE	SHOE	C/W LIN	IING			1	1	1	1
23	W1407	TRAILING BRAKE						1	1	1	1
24	NW243	Brake lining						2	2	2	2
25	W129	Brass rivet						16	16	16	16
26	W1415	Thrust pad						2	2	2	2
27	W135	Shoe return spring						2	2	2	2
28	W1243	Brake cam						1	1	1	1
29	W1298X	Brake cam lever						1	1	1	1
30	S25-6	Plain washer						1	1	1	1
31	W592	Lever return spring						1	1	1	1
32	W1246	Anchor plate nut					•••	1	1	1	1

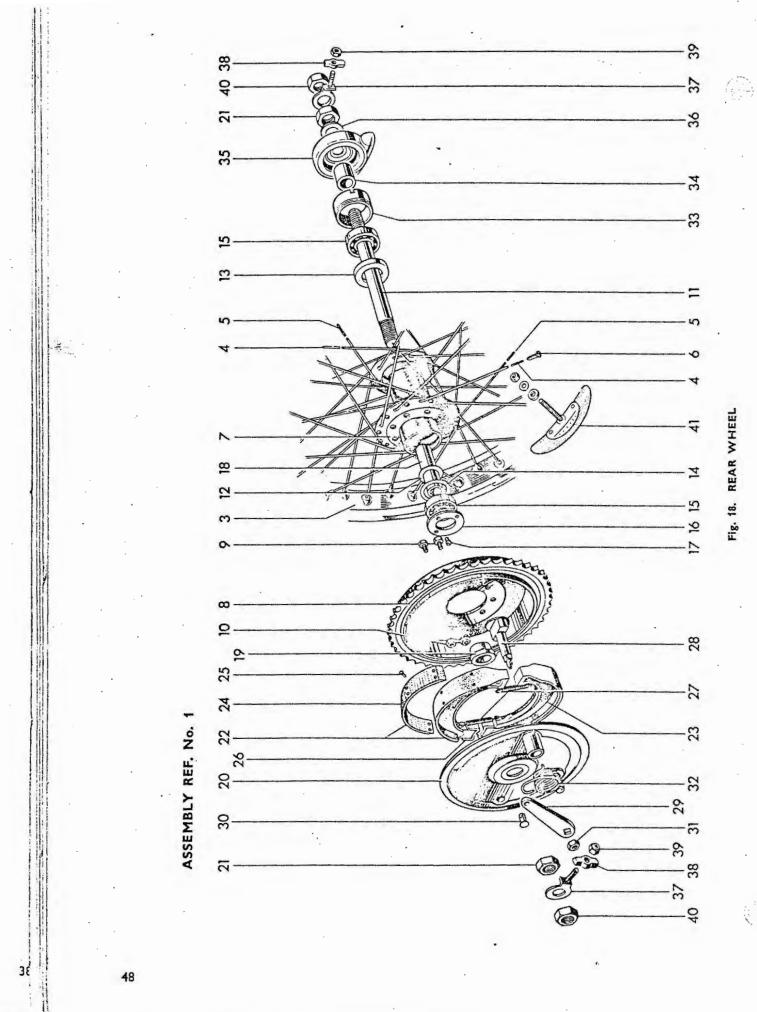

REAR WHEEL

		ĸ	LAN			-			3TA	5TA	T90	TIOOCC
1	W1579	REAR WHEEL CON		-					31A	1	190	T100SS
1	W1484	REAR WHEEL CON								_	1	1
2	W1483	RIM, SPOKES A			SEMB				1	1	-	<u> </u>
2	W1470	RIM, SPOKES A							-	-	1	1
3	W1435	Rear wheel							1	1		-
3	W1471	Rear wheel							_		1	1
4	W1271	Spoke (8/10							20	20		
4	W1107	Spoke (8/10							-	-	20	20
5	W1377	Spoke (8/10							20	20	-	-
5	W1108	Spoke (8/10								-	20	20
6	\$79-2	Spoke nippl	-			ippic		••••	40	40	40	40
7	W1472	Hub							1	1	1	1
8	W951	Sprocket and br							1	1	1	1
9	W62	Sprocket to hub							8	8	8	8
10	W1495	Self locking nut							8	8	8	8
11	W1281	Wheel spindle			••••	•••			1	1	1	1
12	W1474	Grease retainer					•••		1	1	1	1
13	W583	Grease retainer	(01 and				•••	•••	1	1	1	1
14	W1022	Backing ring			••••	•••		••••	1	1	1	1
15	W653			•••	•••			••••	2	2	2	2
16	W1021	Bearing RETAINING RII	NG		•••	•••	••••	•••	1	1	1	1
17	W1079	Locking scre				•••	•••	•••	1	1	1	1
18	W1278	Distance tube							1	1	1	1
19	W1024	Distance piece				•••	•••	•••	i	1	1	1
20	W1112	Brake anchor pla					•••	•••	1	i	1	1
21	W1282	Nut					••••		2	2	2	2
22	W1406	LEADING BRAH							1	1	1	1
23	W1407	TRAILING BRA							1	1	1	i
24	NW243	Brake lining							2	2	2	2
25	W129	Brass rivet							16	16	16	16
26	W1415	Thrust pad							2	2	2	2
27	W135	Shoe return spri							2	2	2	2
28	W1083	Brake cam							1	1	1	1
29	W1466	Brake cam lever							1	1	1	1
30	W1467	Pivot pin							1	1	1	1
31	S1-52	Nut							1	1	1	1
32	W1090	Lever return spr	ing						1	1	1	1
33	W1476	Speedometer add							1	1	1	1
34	W1477	Distance piece							1	1	1	1
35	D544	Speedometer gea							1	1	-	2
35	D373	Speedometer ge							-	-	1	1
36	W1280	Plain washer							1	1	1	1
37	W1134	Chain adjuster							2	2	2	2
38	W1015	Adjuster end plate		••••					2	2	2	2
39	W1058	Self-locking nut							2	2	2	2
40	F1747	Spindle nut	•••						2	2	2	2
41	D106	Tyre security bolt							-	_	2	2
	0100	Tyre security bolt					••••				-	

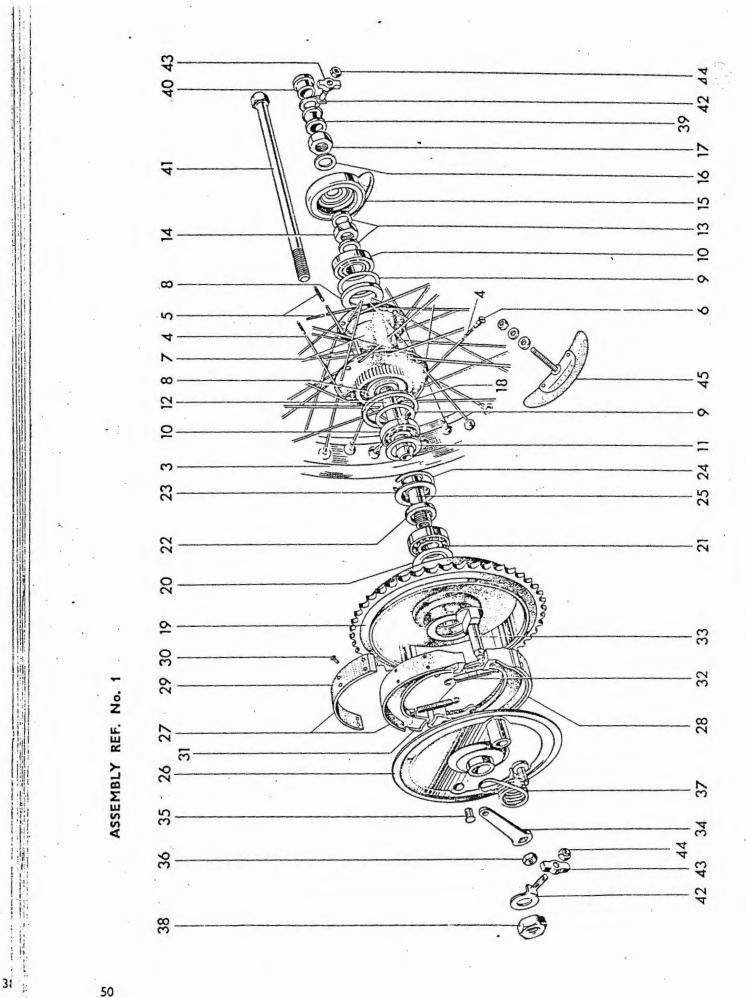



Fig. 19. פעוכאו ע הדד אייייי

-

.

QUICKLY DETACHABLE REAR WHEEL

		dorener bei	~~						3TA	5TA	T90	T10055	
1	W1587	Q.D. REAR WHEEL	CON	MPLETE					1	1	-	-	
1	W1496	Q.D. REAR WHEEL	100	PLETE					-	-	1	1	
2	W1437	RIM, SPOKES A	ND	HUB A	SSEME	BLY			1	1	_	-	
2	W1427	RIM, SPOKES A							1	-	1	1	
3	W1435	Rear wheel				· ···			1	1	2	_	
3	W1007	Rear wheel				·	••••		-	_	1	1	
4	W1271	Spoke (8/10				nipple			20	20	-	_	
4	W1107	Spoke (8/10								-	20	20	
5	W1377	Spoke (8/10							20	20	-	-	
5	W1108	Spoke (8/10							-	_	20	20	
6	S79-2	Spoke nippl							40	40	40	40	
7	W1388	Hub							1	1	1	1	
8	W1480	Grease retainer							2	2	2	2	
9	W1033	Backing ring							2	2	2	2	
10	W1034	Taper roller bea	ring c	omplet	e				2	2	2	2	
11	W1035	Dust cap							1	1	1	1	
12	W1390	Bearing sleeve							1	1	1	1	
13	W1391	Distance piece	•••						2	2	2	2	
14	F1747	Nut							1	1	1	1	
15	D544	Speedometer gea	rbox	(green	washe	r)			1	1	-		
15	D373	Speedometer gea							-	_	1	1	
16	W1280	Plain washer							1	1	1	1	
17	E398	Nut							~ 1	1	1	1	
18	W1091	Rubber sealing r	ng						1	1	1	1	
19	W1040	Sprocket and bra							1	1	1	1	
20	W1143	Grease retainer							1	1	1	1	
21	W1041	Bearing							1 .	1	1	1	
22	W1042	Felt washer							1	1	1	1	
23	W1043	Bearing and felt	retain	er					1	1	1	1 .	
24	W1044	Circlip							1	1	1	1	
25	W1393	Bearing sleeve							1	1	1	1	
26	W1395	Brake anchor pla	te						1	1	1	1	
27	W1046	LEADING BRAK	E SH	OE C/	W LIN	ING			1	1	1	1	
28	W1407	TRAILING BRAN	KE SH	OE C	W LI	VING			1	1	1	1	
29	NW243	Brake lining							2	2 .	2	2	
30	W129	Brass rivet							16	16	16	16	
31	W1415	Thrust pad							2	2	2	2	
32	W135	Shoe return sprin	ng						2	2	2	2	
33	W1083	Brake cam						•••	1	1 .	1	1	
34	W1466	Brake cam lever							1	1	1	1	
35	W1467	Pivot pin							1	1	1	1	
36	S1-52	Nut							1	1	1	1	
37	W1090	Lever return spri	ing						1	1	1	1	
38	W1052	Nut							1	1	1	1	
39	W1392	Inner distance pie	ece						1	1	1	1	
40	W1170	Outer distance p							1	1	1	1	
41	W1055	Spindle							1	1	1	1	
42	W1135	Chain adjuster							2	2	2	2	
43	W1015	Adjuster end plate							2	2	2	2	
44	W1058	Self-locking nut							2	2	2	2	
45	WM3	Tyre security bolt							-	-	1	1	
	10101	.,,											

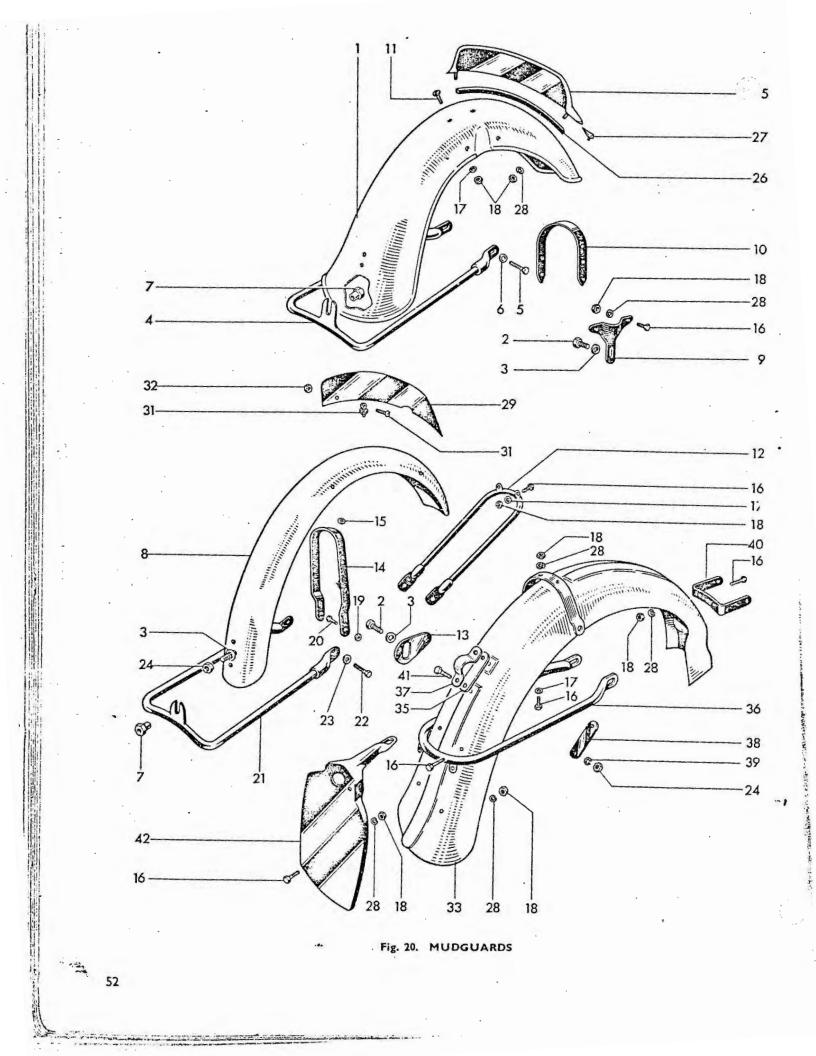

.

2


MUDGUARDS

•

									3TA	5TA	T90	T10055
1	H1689	Front mudguard							1	1	-	-
2	F929	Bolt (1/2 in. U.H.)							2	2	2	2
3	F4299	Plain washer				*			4	4	5	5
4	H1100	Bottom stay							1	1	-	-
5	W62	Bolt (H in. U.H.)							2	2	-	-
6	S25-2	Plain washer							2	2	-	-
7	N\$362	Spigot nut							1	1	1	1
8	H1675	Mudguard blade							-	-	1	1
9	H1540	Bracket							2	2	-	-
10	H1538	Mudguard bridge							2	2	-	-
11	F5001	Bolt (18 in. U.H.)	•••						5	5	-	-
12	H1681	Front stay							-	-	1	1
13	H1685	Bracket							-	-	2	2
14	H1683	Mudguard bridge							-	-	1	1
15	WE170	Fibre washer							-	_	2	2
16	DS57	Bolt (76 in. U.H.)							12	12	10	10
17	S25-1	Plain washer							7	7	6	6
18	F879	Num		•••	•••		•••		17	17	12	12
19.	T224	A.L	••••			•••			-	-	2	2
20	D\$55	Nut Bolt (뷰 in. U.H.)		••••		•••	•••		-	-	2	2
21	H1482		•••	•••	•••	••••			_	_	1	1
22	H424	Bolt (39/64 in. U.H.)	•••	••••					-		2	2
23	S25-71	DI			•••	•••		•••	-	-	2	2
24	S1-51	N	•••	•••	•••			• • •	2	2	3	3
	F2698			••••	•••	•••		•••	1	1	3	3
25 26	H251	Number plate	•••			•••			1		, -	-
20	F4332	Plastic beading		•••	•••	•••				1	-	-
28		Packing piece	•••		•••			•••	1 10	1 10		-
	S26-2	Spring washer			•••	•••			10		6	6
29	F2996	Number plate	•••	•••				•••	-	-	1	1
30	H741	Clip assembly	•••	•••	•••		.#:	•••	-	-	2	2
31	H687	Screw (3 in. U.H.)		•••				•••	-	-	2	2
32	H745	Nut		• •••	***	•••			-	-	2	2
33	F5963	Mudguard blade	•••	•••					• 1	1	-	
33	F5984	Mudguard blade			•••				-		1	1
34	F4860	Mudguard bridge					•••		1	1	1	1
35	F5995	Packing strip			•••			•••	1	1		-
36	F5424	Lifting handle							1	1	1	1
37	F5994	Clip				•1•		•••	1	1	1	1
38	F6031	Backing plate	•••				• • •	•••	1	. 1	1	1
39	S26-3	Spring washer						•••	4	4	2	2
40	F5962	Bracket	•••				•••		1	1	-	-
40	F3599	Bracket							-	-	1	1
11	D\$55	Bolt (뷰 in. U.H.)							2	2	-	-
41	H590	Bolt (유 in. U.H.)							-	-	2	2
42	F5924	Number plate							1	1	1	1
43	D261	Licence holder						•••	1	1	1	1


53

.

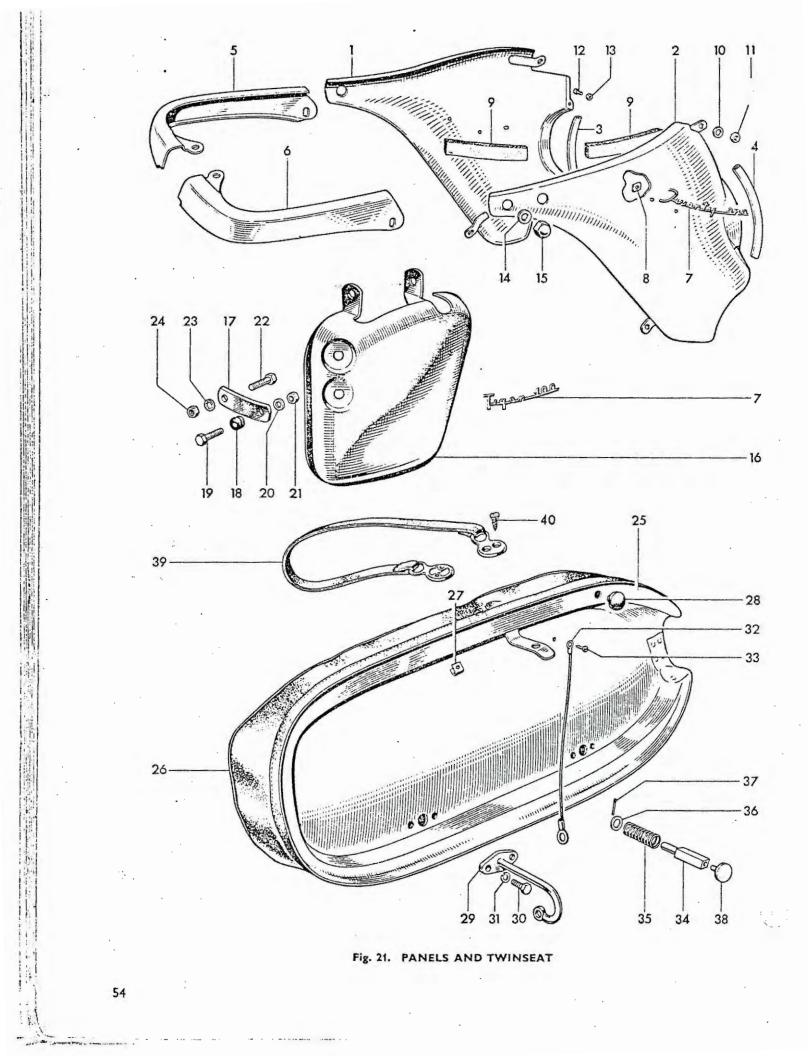

PANELS AND TWINSEAT

		TANLL	- J A	14 0		14.51						
									3TA	5TA	T90	T100SS
1	F5978	Left panel				•••			1	1	-	-
2	F5362	Right panel		•••					1	1	-	-
3	F6104	Left beading	•••						1	1	-	-
4	F6105	Right beading	•••					•••	1	1	-	-
5	F5323	Left valance	•••				•••		1	1	-	-
6	F5324	Right valance							1	1	-	-
7	F4312	Motif "Twentyone"		•••			•••		2	-	-	-
7	F4523	Motif "Speed Twin	•••						-	2	-	-
7	F5372	Motif "Tiger 90"							-	-	1	-
7	F4524	Motif "Tiger 100"					•••		-	-	` -	1
8	F4317	Spire nut							6	6	3	3
9	F5538	Rubber pad							2	2	-	-
10	S25-2	Plain washer			***				2	2	-	-
11	S1-52	Nut							2	2	-	-
12	F4715	Screw (13/32 in. U.	H.)						2	2	-	-
13	F4717	Self-locking nut							2	2	-	-
14	GS308	Plain washer							2	2	-	-
15	E4329	Domed nut							2	2	-	
16	F5559	Switch panel							-	-	1	1
17	F5976	Link							-	-	1	1
18	F5466	Grommet							-	-	1	1
19	F1756	Bolt (3 in. U.H.)							-	-	1	1
20	S25-43	Plain washer							-	-	1	1
21	E3290	Self-locking nut						***	-	-	1	1
22	F1369	Bolt (1: in. U.H.)	***						-	-	1	1
23	E1612	Serrated washer							-	-	1	1
24	F879	Nut							-	• -	12.	1
25	F4239	TWINSEAT							1	1	1	1
26	F4244	Twinseat cover	r c/w cli	ps					1	1	1	1
27	F4475	Clip							as r	equired		
28	F4898	Rubber buffer							1	1	1	1
29	F4222	Hinge							2	2	2	2
30	DS57	Bolt (7 in. U.H.)							4	4	4	4
31	S26-2	Spring washer							4	4	4	4
32	D374	Check wire							1	1	1	1
33	F4483	Self-tapping screw							1	1	1	1
34	F4226	Seat catch plunger							1	1	1	1
35	F4228	Spring							1	1	1	1
36	E1719A	Plain washer							1	1	1	1
37	$3/32$ in. x $\frac{1}{2}$ in.	Split pin							1.	1	1	1
38	F4227	Knob							1	1	1	1
39	F4361	Safety strap							as r	equired		
40	F4365	Self-tapping screw							4	4	4	4

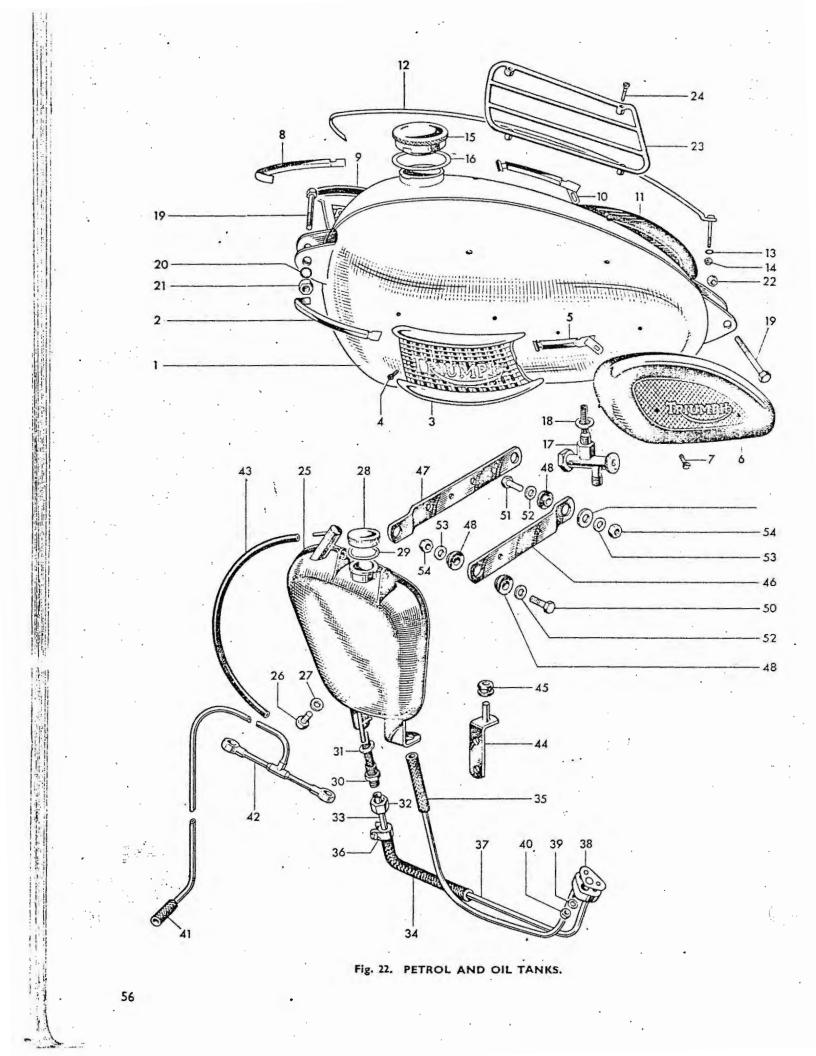


PETROL AND OIL TANKS

		PETROL	AND	01	LT	ANH	< s				-	-
									3TA	5TA	T90	T100SS
1	F5370	Petrol tank		•••		•••			1	1	1	1
2	F4235	Styling strip (Left from						•••	A	A	1	1
3	F4127	Styling unit (Left)			•••	••••			1	1	1	
4	F4129	Styling unit screw (0.4			*** **	•••	•••		4	4	4	4
5	F4323	Styling strip (Left real		•••	••• •	•••		•••	A	A 1	1	
6	F2551	Knee grip (Left)				•••		•••	1		·	
7	F1953	Knee grip screw (§ in						•••	4	4	4	4
8	F4237	Styling strip (Right fr		•••				•••	A	A	1	1
9	F4128	Styling unit (Right)				•••	•••		1	1	1	
10	F4324	Styling strip (Right re			•••				A 1	A 1	1	1
11	F2552	Knee grip (Right)		•••				•••		1	1	1
12	F4398	Centre styling strip	•••	•••				••••	1	1	1	1
13	F4019	Serrated washer	•••	•••		•••			1		1	1
14	H919	Nut	•••			•••			1	1	1	
15	F3220	FILLER CAP			•••			••••	1		1	1
16	F4048	Joint washer		•••	•••				1		1	1
17	F1717	Petrol tap	***	•••				•••	1	1	1	1
18	F1511	Fibre washer	•••	•••	•••			•••	-	1	1	2
19	F4382	Bolt (3 1/32 in. U.H.)				•••		•••	2	2	2	2
20	E2288	Serrated washer		•••					2	2	1	2
21	PO172A	Nut		•••	•••		••••	••••	1	1	1	1
22	W76	Nut		•••					1	1	1	1
23	F3917	Parcel grid					•••		1	1		
24	F2936	Parcel grid screw		•••	•••	•••		•••	4	4	4	4
25	F5381	Oil tank		•••	,	•••	•••	•••			-	
26	F5343	Drain plug	••• •		•-•	***	•••	••••	1			1
27	PT104B	Fibre washer		•••		•••	•••		1		1	1
28	F3216	FILLER CAP		•••						1		
29	F4047	Joint washer			•••	*** - *	•••		1		4	1
30	F3179	Oil tank filter		•••		•••	•••	***		1	1	1
31	E1713	Fibre washer		•••		••• .		••••	1	1	1	1
32	F3182	Union nut		•••				•••	1		1	1
33	F6103	Upper feed pipe			•••	•••	•••		1		1	1
34	E3353	Flexible connector, lo				•••					1	1
35	MF119	Flexible connector, sh	ort		••••	•••				1		
36	E5473	Clip		•••	•••	***.	•••	•••	4	1	4	4
37	E5434	Oil pipes and junction	block	•					1	1	1	1
. 38	E3763	Joint washer	•••	•••	•••	•••		•••	1	1	1	1
39	E3446	Plain washer		••••	•••	•••	•••	•••	1	.1	1	1
40	E1310	Nut	•••	•••						1		1
41	E3383	Rubber connector					•••	••••		1	1	1.
42	E3805	Rocker oil feed pipe		•••				•••	1	1	-	1
43	T1579	Vent pipe		•••	•••	••••	•••	••••	1	1	1	1
44	F5378	Bottom tank bracket		•••					1		-	4
45	F5332	Rubber grommet	•••					•••	1	1		1
46	F5328	Front cross-bar	•••	•••				••••	1	1	1	1
47	F5329	Rear cross-bar		•••		•••		•••	1	1	1	
48	F5247	Spigot rubber		•••					6	6 2	2	6
49	F5248	Rubber washer			•••	***	•••		2	2	2	2
50	F5330	Bolt (31/32 in. U.H.)	•••		•••	•••			2	2	2	2
51	F5331	Bolt (29/32 in. U.H.)		····		•••			2	4	4	2 4
52	S25-2	Plain washer (3 in.)		•••		•••			4	4	4	4
53	S25-3	Plain washer (5 in.)				•••			4	4	4	4
54	T224	Nut							4	4	4	4

57


1

in the second

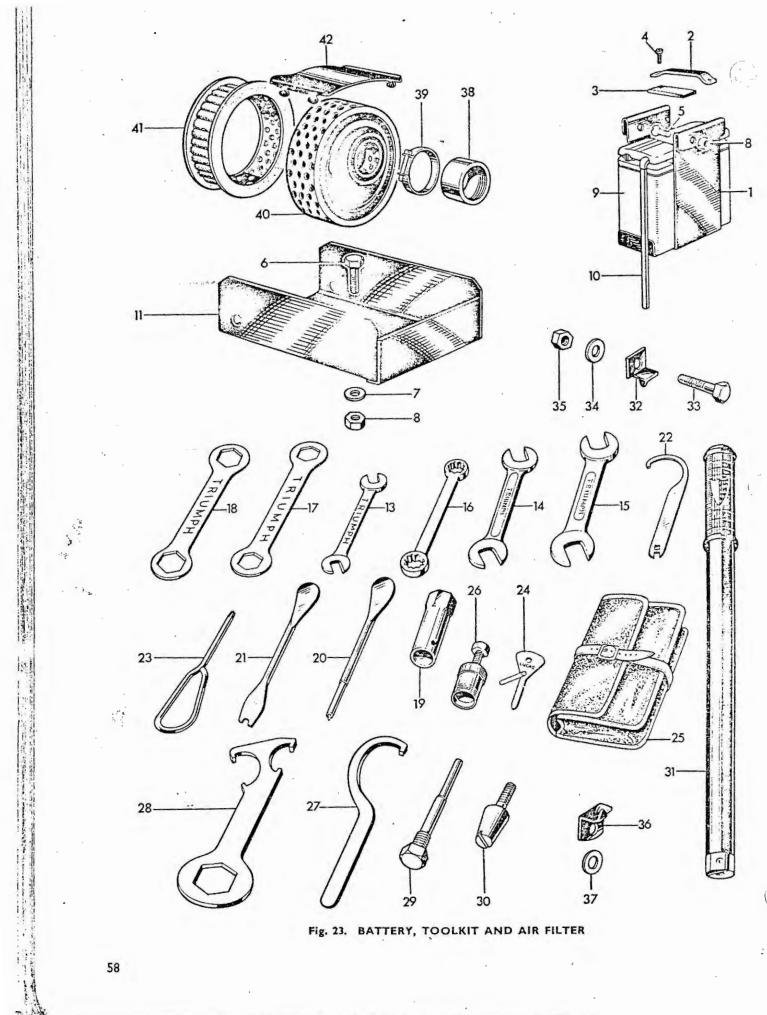


BATTERY, TOOLKIT AND AIR FILTER

		BATTERT, TOOLKI	AND	AIN		3TA	5TA	Т90	T10055
1	F5333	Battery carrier				. 1	1	1	1
2	F4661	Top strap				. 1	1	1	1
3	F4662	Packing rubber				. 1	1	1	1
4	E3200	Screw (# in. U.H.)				. 1	1	1	1
5	E3728	Screw (15/32 in. U.H.)				. 1	1	1	1
6	D\$57	Bolt (7 in. U.H.)				3	3	3	3
7	S25-1	Plain washer				. 3	3	3	3
8	F879	Nut				. 3	3	3	3
9	MLZ9E	Battery c/w lid				. 1	1	1	1
10	F4816	Plastic vent pipe				. 1	1	1	1
11	F5665	Tool tray				. 1	1	1	1
12	D446	TOOL KIT				. 1	1	1	1
13	D360	Open spanner, $\frac{1}{8}$ in. x 5/.	32 in. whit			. 1	- 1	1	1
14	NA55	Open spanner, $\frac{1}{4}$ in. x $\frac{5}{16}$. 1	1	1	1
15	DA16	Open spanner, $\frac{3}{8}$ in. x $\frac{7}{16}$. 1.	1	1	1
16	D370	Ring spanner, 1/2 in. x 1/4				. 1	1	1	1
17	PA57	Ring spanner, ½ in. x 1%				. 1	1	1	1
18	D311	Ring spanner, 5 in. x 11				. 1	1	1	1
19	D87	Box spanner, spark plug				. 1	1	1	1 -
20	D363	Tyre lever and tommy b				. 1	1	1	1
21	D364	Tyre lever and clutch ke				. 1	1	1	1
22	D362	"C" spanner and tappet				. 1	1	1	1
23	D336	Phillips No. 3 screwdrive				. 1	1	1	1
24	400935	Ignition screwdriver and		ge		1	1	1	1
25	WA58	Tool roll				. 1	1	1 .	1
26	DA50/1	Clutch hub extractor			·	A	A	Α.	A
27	D527	Fork spanner (for sleeve nut)				A	A	A	A
28	D220					Α.	Α	A	A
• 29	D484					A	А	Α	A
30	D486	Contact breaker assembly pil	ot			A	А	A	А
31	D296	The second se				1	1	1	1
32	F5432	Inflator top bracket				· 1	1	1	1
33	F1369	D-1- /5 1111)				1	1	1	1
34	S25-43	DL				1	1	.1	1
35	51-40	Nut				1	1	1	1
36	F5433	Inflator bottom bracket				1	1	1	1
37	S25-3	Plain washer				1	1	· 1	1
38	E5194	Adaptor				1	1	-	-
38	F4812	A Janaan				-	-	1	1
39	F5625					1	1	1	1
40	F5334	AID FUTED		•••		1	1	1	1
41	F4811	E11				1	1	1	1
42	F4964	VALUE INCOMENT				-	-	1	1

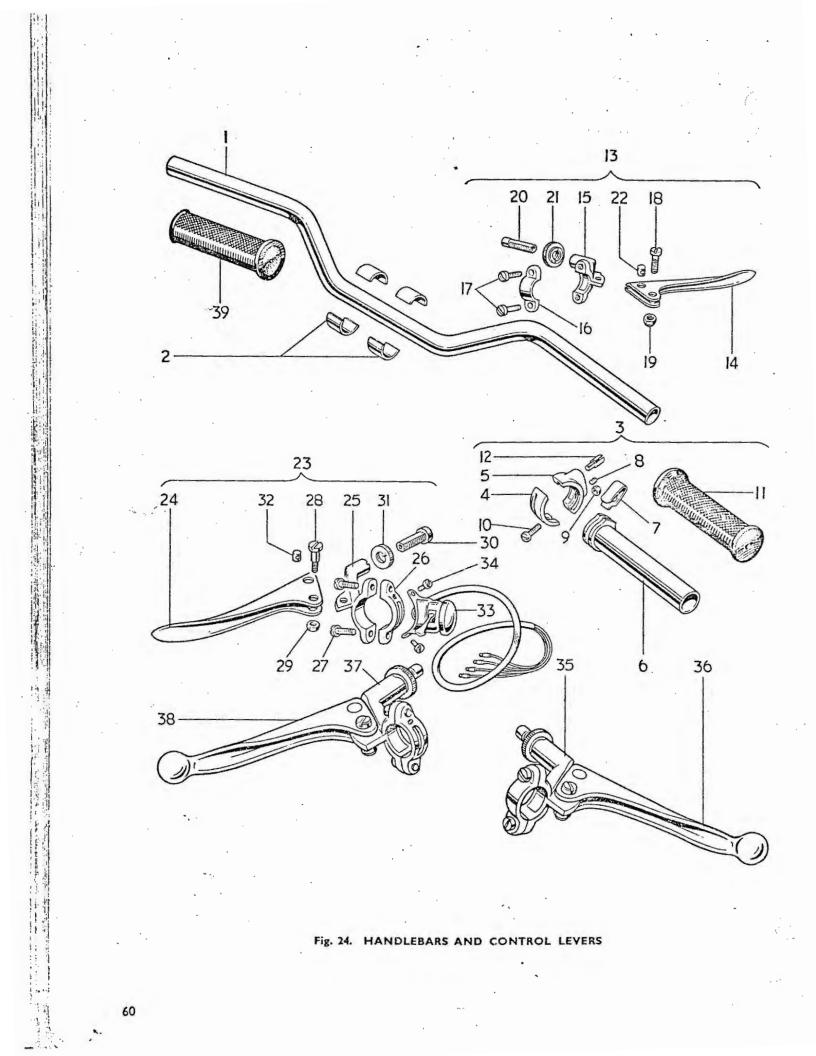

HANDLEBARS AND CONTROL LEVERS

		HANDLEBARS	AN	DC	- ON	IRC	 EVI					
		· · ·						3TA	5TA	T90	T10055	
1	H1484	Handlebar					 	1	1	-	-	
1.	H527	Handlebar					 	-	-	1	1	
1	H1694	American handlebar		•••			 	1	1	-	-	
1	H1519	American handlebar			*		 	-	-	1	1	
2	H1425	Packing piece				· · · ·	 •••	4	4	4	4	
3	16/417	TWISTGRIP					 •••	1	1	1	1	
4	16/328	Body top half					 	1	1	1	1	
5	16/329	Body bottom ha	lf				 	1	1	1	1	
6	16/091	Rotor					 •••	1	1	1	1	
7	16/008	Friction spring					 	1	1	1	1	
8	16/009	Friction spring s	crew				 	1	1	1	1	
9	16/010	Nut					 	1	1	1	1	
10	11/014	Screw					 	2	2	2	2	
11	16/070	Handlebar grip					 	1	1	1	1	
12	16/011	Cable stop					 	1	1	1	1	
13 .	18/995	FRONT BRAKE LEV	ER A	SSEME	SLY		 	1	1	1	1	
14	18/535	Brake lever					 	1	1	1	1	
15	18/912	Brake lever brac	ket				 	1	1	1	1	
16	12/040	Clamp					 	1	1	1	1	
17	11/014	Screw					 	2	2	2	2	
18	18/087	Fulcrum screw					 	1	1	1	1	
19	18/053	Self-locking nut					 	1	1	1	1	
20	18/838	Cable adjuster					 	1	1	1	1	,
21	18/839	Thumb nut					 	1	1	1	1	
22	18/880	Barrel nipple					 	1	1	1	1	
23	18/996	CLUTCH LEVER AS					 	1	1	1	1	
24	18/528	Clutch lever					 	1	1	1	1	
25	18/913	- Clutch lever bra	cket				 	1	1	1	1	
26	18/910	Clamp (H668A)					 	1	1	1	1	
27	61/004	Screw					 	2	2	2	2	
28	18/087	Fulcrum screw					 	1	1	1	1	
29	18/053	Self-locking nut					 	1	1	1	1	
30	18/838	Cable adjuster					 	1	1	1	1	
31	18/839	Thumb nut					 	1	1	1	1	
32	18/880	Barrel nipple					 	1	1	1	1	
33	31563	Horn push and dip sy					 	1	1	1	1	
34	H689	Screw (1/4 in. U.H.)					 	2	2	2	2	
35	18/935	FRONT BRAKE LEV					 	A	A	A	· A	
36	18/754	Brake lever (Ball					 	A	A	A	A	
37	18/993	CLUTCH LEVER AS					 	A	A	A	A	
38	18/752	Clutch lever (Ba		•			 	A	A	A	A	
39	16/069	Handlebar grip					 	1	1	1	1	
	/	0. P 11										

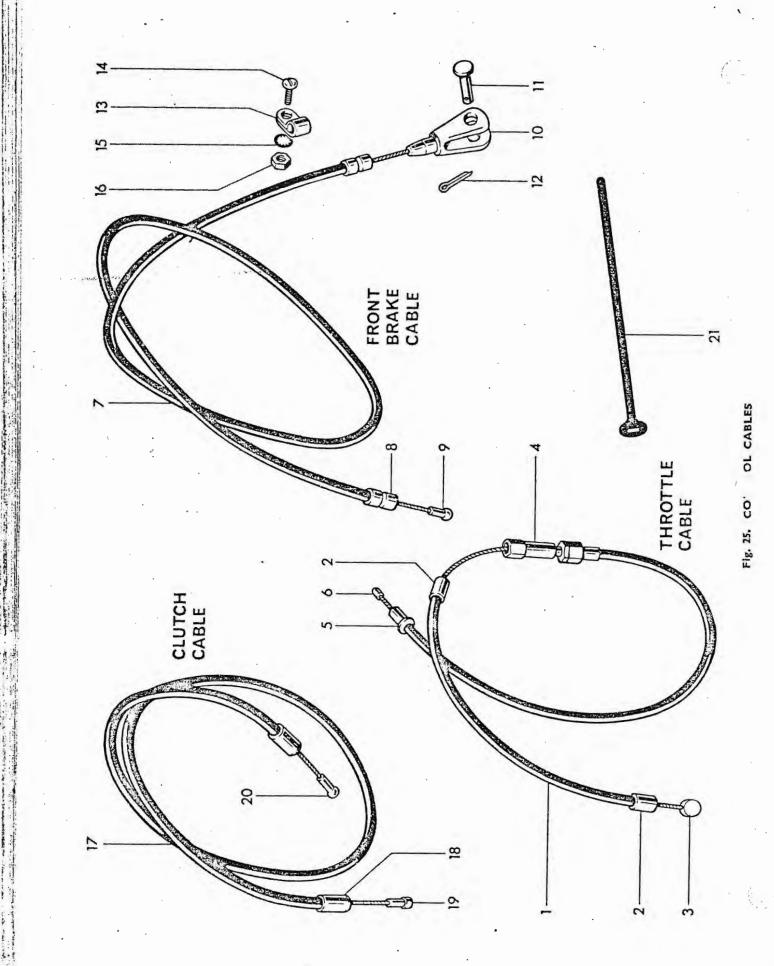

CONTROL CABLES

										3TA	5TA	T90	T10055
1	D531	THROTTLE CA	ABLE							1	1	-	-
1	D495	THROTTLE CA	ABLE							-		1	1
1	D532	AMERICAN TH	ROTT	LE	CABLE		*			A	Α	-	-
2	D101	Ferrule					····			3	3	3	3
3	D83	Nipple								1	1	1	1
4	D104	Adjuster								1	1	1	1
5	6/132A	Ferrule								1	1	1	1
6	NS191	Nipple								1	. 1	1	1
7	D525	FRONT BRAK	E CAB	LE						1	1 .	-	
7	D419	FRONT BRAK								-	-	1	1
7	D419	AMERICAN FR	ONT	BRA	KE CAE	BLE				A	Α	· -	-
8	D103	Ferrule								2	2	2	2
9	D368	Nipple							•••	1	1	1	1
10	W593	Fork end			•••					1	1	1	1
11	WF32	Pivot pin						•••	•••	1	1	1	. 1
12	☆ in. x 를 in.	Split pin								1	1	1	1
13	H1171							••• •		1	1	-	-
14	H916	Screw (9/32 in.	U.H.)							1	1	-	-
15	GS299	Serrated washe	r .							1	1	-	-
16	H745	Nut		•••		•••			•••	1	1	-	-
17	D452	CLUTCH CAB		•••	•••					1	1	1	1
17	D466	AMERICAN CL	UTCH	CA	ABLE			•••	·	A	A	A	A
18	D103	Ferrule				•••				2	2	2	2.
19	D368	Nipple							• •••	1	1	1	1
20	DS73	Nipple								1	1	1	1
21	XA69	Cable clip			•••	•••					as r	equired	l


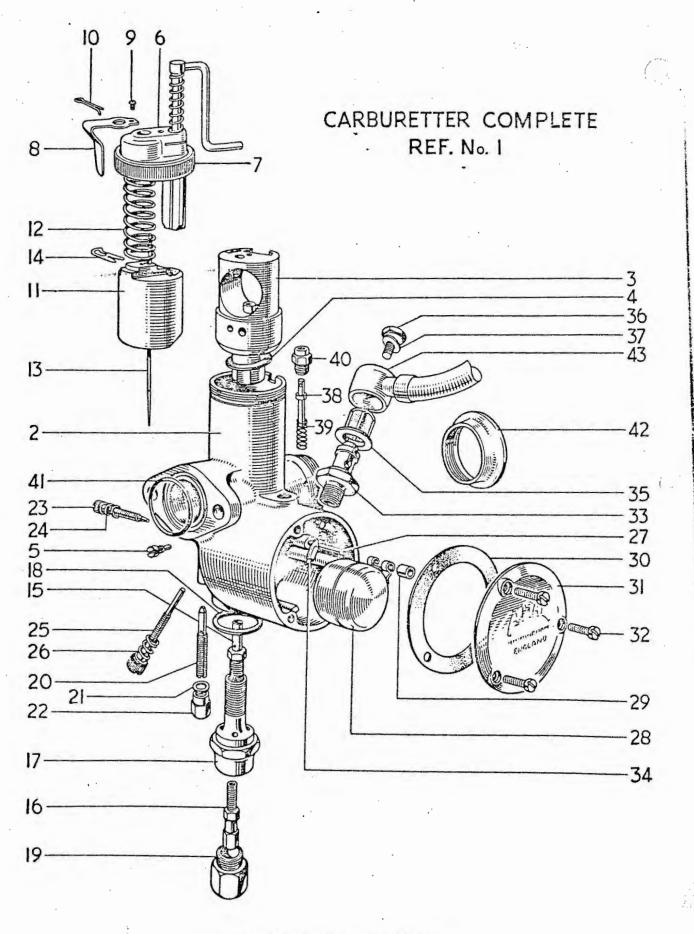


Fig. 26. CARBURETTER, 3TA AND 5TA

e taxii a

CARBURETTER, 3TA AND 5TA

		CARDOR	~ 1 1	,	.							3TA	5TA
1	375/62	CARBURETTER,	25/32 ir	n. chol	ke					•••		1	_
1	375/35	CARBURETTER,				×			•••	•••	•••		1
2	375/003	Mixing chami	ber, 25/.	32 in.	choke	•••		•••			•••	1	-
2	375/005	Mixing chami	ber, 🕺 ir	n. chol	ke		•••	•••	•••	•••	•••	-	1
3	375/057	Jet block, 25			•••	•••	•••	•••	•••			1	
3	375/059	Jet block, 굽 i			•••	•••			•••	•••	•••	-	1
4	375/067	Joint washer				•••	•••	•••	•••	•••		1	1
5	376/070	Peg screw					••••	•••	•••		•••	1	1
6	375/102	AIR VALVE	ASSEM	BLY		•••	•••	•••	•••	•••	•••	1	1
7	375/065	Mixing c	hamber	cap		•••	•••		•••	•••	•••	1	1
-8	375/071	Spring			•••	•••	•••	•••	•••			1	1
9	4/241	Screw			•••	•••	•••	•••	•••	•••	•••	1	1
10	30/064	Spring		••		•••	•••	•••	•••	•••	•••	1	1
11	375/060	Throttle valv	e (3 <u>1</u> cu	taway)	•••	•••		•••	•••	•••	1	-
11	375/060	Throttle valv	e (3 cut	away)			•••	•••	•••	•••	•••	-	1
12	375/079	Throttle retu		ng			•••	•••	•••	•••	•••	1	1
13	375/063	Needle (Type	еB).			•••	• • •	•••	•••	···	•••	1	1
14	4/230	Needle clip			••••			•••	···	•••	•••	1	1
15	376/072	Needle jet (.'	106) .	•••	••••	•••	•••	•••	•••	•••	•••	1	1
16	376/100	Main jet (100) .		•••			•••	•••	•••	•••	1	-
16	376/100	Main jet (160).		•••	•••	•••	•••	•••	•••	•••		1
17	376/073	Jet holder		•••	•••	•••	•••	•••	•••	•••	•••	1	1
18	376/074	Fibre washer		•••	•••	•••	•••	•••	•••	•••	•••	1	1
19	376/075	Cover nut		•••	•••	•••	•••	•••	•••	•••	•••	1	1
20	376/076	Pilot jet (25)		•••			•••	•••	•••	•••	•••	1	1
21	116/162	Fibre washer	•••		•••			•••	•••	•••	•••	1	1
22	376/095	Cover nut		•••		•••	•••	•••	•••	•••	•••	1	1
23	332/017	Air adjusting	screw		•••	•••	•••	***	•••	•••	•••	1	1
24	4/148	Spring		•••	•••	•••	•••	•••	•••	•••	•••	1	1
25	376/068	.Throttle stop	screw		•••	•••	•••	•••	•••	•••	•••	1	1
26	376/069	5pring		•••	•••	•••	•••	•••	•••	•••	•••	1	1
27	376/085	Float spindle			•••	•••	•••	•••	•••	•••	•••	1	1
28	376/083	Float	•••	•••	•••	•••	•••	•••	•••	•••	•••	1	1
29	376/094	Bush	•••	•••	•••	•••	•••	•••	•••	•••	•••	1	1
30	376/078	Joint washer		•••	•••	•••	•••	•••	•••	•••	•••	1	1
31	376/077	Cover	•••	•••	•••	•••	•••	• • •	•••	•••	•••	1	1
32	376/079	Screw		•••	•••	•••	•••	•••	•••	•••	•••	3	3
33	376/088	Needle seatir	י s	•••	•••	•••	•••	•••	•••	•••	•••	1	1
34	376/089	Needle	•••	•••	•••	•••	•••	•••	•••	•••	•••	1 1	1
35	376/093	Filter		•••	•••	•••	•••	•••	•••	•••	•••	-	1
36	376/091	Bolt		•••	•••	•••	•••	•••	•••	•••	•••	1 1	1
37	376/092	Fibre washer		•••	•••	•••	•••	•••	•••	•••	•••	1	1
38	376/086	Tickler			•••	•••	•••	•••	•••	•••	•••	1	1
39	376/087	Spring Tablas body		··· `	•••	•••	•••	•••	***	•••	•••	1	1
40	343/011	Tickler body			•••	•••	•••	•••	•••	•••	•••	1	1
41 ⊿2	244/765	"O" ring sea		••••	•••		•••	•••	•••	•••	•••	A	Å
42 43	229/048	Air Intake tube		•••	•••		•••	•••	***	•••	•••	1	ĩ
, 43	F4308	Petrol pipe		•••	•••		•••	•••		••	•••	'	'

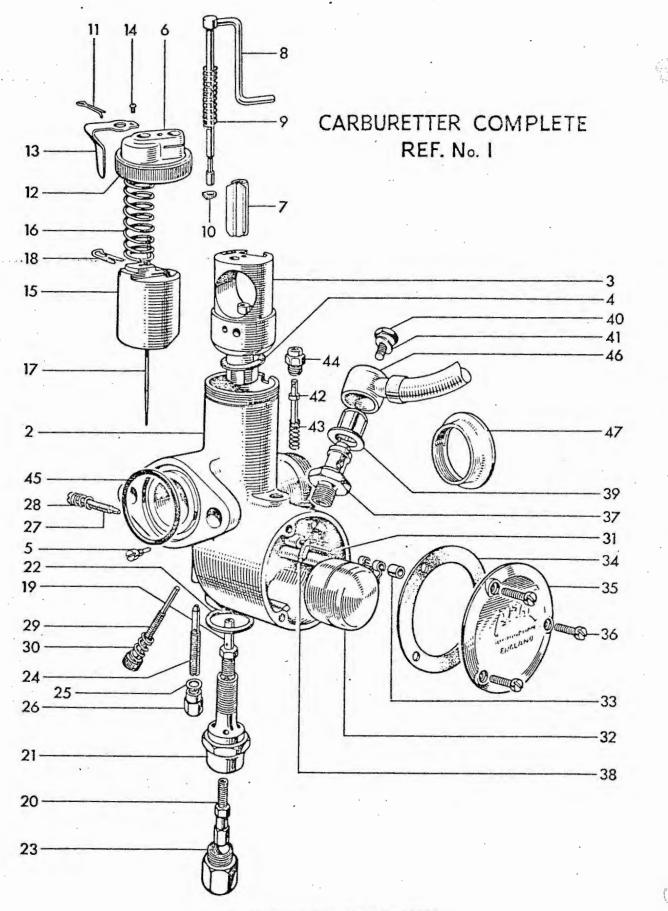

いたいのたいたい

おかえてい

1

Fig. 27. CARBURETTER, T90 AND T10055

CARBURETTER, T90 AND T100SS

			,						T90	T100SS
1	376/300	CARBURETTER, 18 in	. choke		 	***	 		1	-
1	376/273	CARBURETTER, 1 in.	choke	•••	 		 		-	1
2	376/001	Mixing chamber,			 	•••	 • • •		1	-
2	376/002	Mixing chamber, 1	I in. cho	ke	 		 		-	1
3	376/055	Jet block, 뷰 in. c	hoke		 		 	•••	1	-
3	376/056	Jet block, 1 in. ch	oke		 		 		-	1
4	376/067	Joint washer			 		 		1	1
5	376/070	Peg screw			 		 		1	1
6	376/158	Mixing chamber to	ор		 		 		1	1
7	376/197	Air valve			 		 		1	1
8	376/402	Control rod and l	ever		 		 	•••	1	1
9	376/109	Return spring			 		 		1	1
10	376/409	Friction washer			 		 		1	1
11	30/064	Click spring			 		 		1	1
12	376/065	Mixing chamber ca	ар		 		 		1	1
13	29/308	Spring			 		 		1	1
14	4/241	Screw			 		 		1	1
15	376/060	Throttle valve (3 o	utaway)		 		 		1	-
15	376/060	Throttle valve $(3\frac{1}{2})$			 		 		-	1
16	376/061	Throttle return sp			 		 		1	1
17	376/063	Needle (Type C)			 		 		1	1
18	4/230	Needle clip			 		 		1	1
19	376/072	Needle jet (.106)			 		 		1	1
20	376/100	Main jet (180)			 		 		1	-
20	376/100	Main jet (190)			 		 		-	1
21	376/073	Jet holder			 		 		1	1
22	376/074	Fibre washer			 		 •••		1	1
23	376/075	Cover nut	•		 		 		1	1
24	376/076	Pilot jet (20)			 		 		1	-
24	376/076	Pilot jet (25)			 	••••	 		-	1
25	116/162	Fibre washer			 		 		1	1
26	376/095	Cover nut			 		 		1	1
27	332/017	Air adjusting screw	N		 		 		1	1
28	4/148	Spring			 		 		1	1
29	376/068	Throttle stop scree	w		 		 		1	1
30	376/069	Spring			 		 		1	1
31	376/085	Float spindle			 		 		1	1
32	376/083	Float			 		 		1	1
33	376/094	Bush			 		 		1	1
34	376/078	Joint washer			 		 		1	1.
35	376/077	Cover			 		 		1	1
36	376/079	Screw		•••	 		 		3	3
37	376/088	Needle seating			 		 		1	1
38	376/089	Needle			 		 		1	1
39	376/093	Filter			 		 		1	1
40	376/091	Bolt			 		 		1	1
41	376/092	Fibre washer			 		 		1	1
42	376/086	Tickler			 		 		1	1
43	376/087	Spring			 		 		1	1
44	343/011	Tickler body			 		 		1	1
45	244/1048	"O" ring seal			 		 		1	1
46	F4308	Petrol pipe			 		 		1	1
47	376/066	Air intake tube			 	•	 		A	A

.


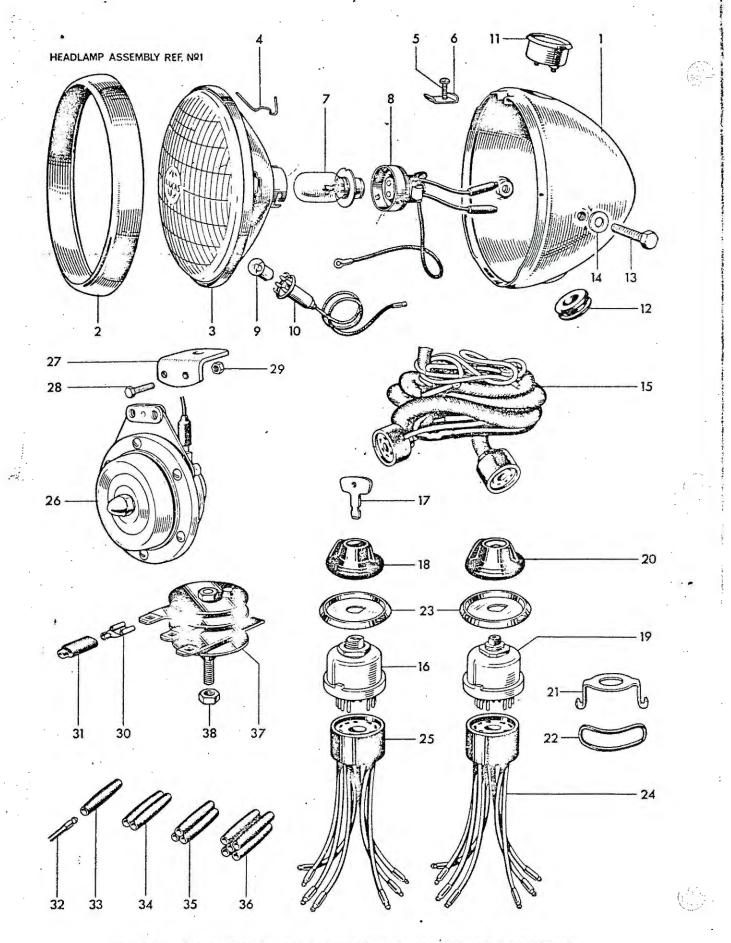


Fig. 28. T90 AND T100SS HEADLAMP, WIRING HARNESS AND SWITCHES

1 2 3 4 5 6	553248 516798 504665 144921		HEADLAMP CO Rim		E (TY	DE CCT	1000			-		
3 4 5	516798 504665 144921					E 3314	JUP)		 		 1	1
4	504665 144921								 		 1	1
5	144921		Light unit						 		 1	1
			Fixing wire				··· ·		 		 6	6
6	524204		Screw						 :		 1	1
0	337270		Plate						 		 1	1
7	312	•	Bulb (30/24V	V Vert	. dip pr	e-focus	5)		 		 1	1
8	554602		Main bulbho	lder					 		 1	1
9	988		Bulb (3W. M	1.C.C.)			•••		 		 1	1
10	554710		Pilot bulbho	Ider					 		 1	1
11	36296		Ammeter (T	ype 2A	R)				 		 1	1
12	862217		Grommet						 		 1	1
13	112201		Bolt						 		 2	2
14	137499		Plain washer						 		 2	2
15	54933182		Wiring harness						 		 1	1
16			IGNITION SWIT		W KEY	, type	88SA		 		 1 .	1
17	54336176		Ignition key						 		 1	1
18		6	Ignition switch co						 	^	 1	1
19			Lighting switch,						 		 1	1
20			Knob c/w screw						 		 1	1
21	F5983		Bracket						 		 2	2
22	F5988		Rubber band						 		 2	2
23	54330576		Switch bezel plat	e					 		 2	2
· 24	54930007		Replacement har		cket (li	ghting)			 		 1	1
25		1	Replacement har						 		 1	1
26	70163		Horn (Type 8H)						 		 1	1
27	F5086		Horn bracket						 ••••		 1	1 .
28	T1076		Bolt (3 in. U.H.)						 		 2	2
29	F3799		Nut						 		 2	2
30	54942078	£ 1	Lucar connector						 		 5	5
31	54190042		Insulating cover						 		 5	5
32	900269		Snap connector t		1			••••	 		 А	A
33	900288		Single snap conne						 		 Α -	Α
34	850641		Double snap con						 		 Α	A
35			Triple snap conne						 		 A	A
36			Quintuple snap c						 		 A	A
37	49072		Rectifier, type 20				• • •		 		 1	1
38			Nut (156596)						 		 1	1.

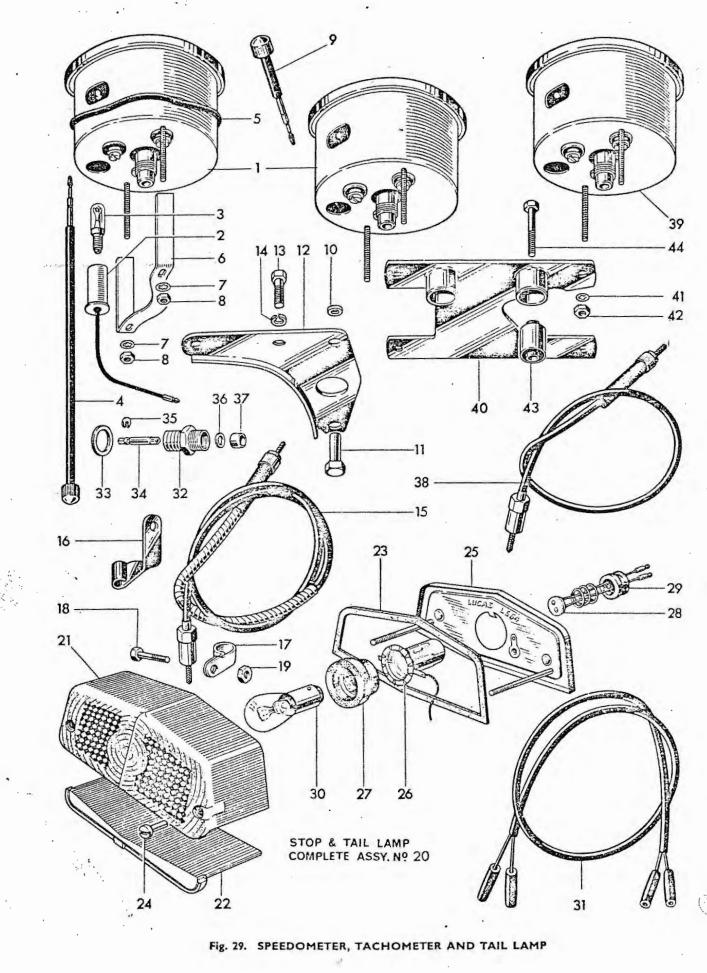

SPEEDOMETER, TACHOMETER AND TAIL LAMP

	SPEED	OMELEK,	TACE	TOME	1 5 1		A D	LAIL					
								3	TA	5TA	T90	T100SS	
1	SSM 5002/00	Speedometer, he	ad, M.P.H	┨、		•••	•••	•••	1	1	*-	– .	
1	SSM 5002/01	Speedometer her	ad, K.P.H		• • •	· • • •	•••	•••	A	А	_	_	
1	SSM 5001/00	Speedometer hea	ad, M.P.H						-	_	1	1	
1	SSM 5001/01	Speedometer hea	d, K.P.H		•••		•••			<u> </u>	Α	А	
2	554734	· · · · · ·				·			1	1	1	1	
3	9 90	Bulb, 3W, M.E.S.				•••			1	1	1	1	
4	41-118-127-72								1	1		_	
5	31-753-778				••••				1	1	_	_	
6	31-674-188-01	F ()							1	1	_	-	
7	30-283-014-11								2	2	_	_	
8	30-277-023-11								2	2	_	_	
9	41-148-203-10								_	_	1	1	
10	°H1702	Distance piece				•••	•••	•••	-	-	2	2	
11	H1701				•••	•••	•••		_	_	2	2	·
12	H1668			•••	•••	•••	•••	•••	_	_	1	1	
12	D\$57				•••	•••	•••	•••	-	-	2	2	
		Bolt (76 in. U.H.)			•••	•••	•••	•••	-	-	2	· 2	
14	S26-2	Spring washer				•••	•••	•••	1	-	∠ 4	2	
15	D490	Speedometer cab			•••		•••	•••	•	•	1	1	
16	H1698	Cable bracket		•••	•••	•••	•••	•••	1	1	-	-	
17	F3098			•••	•-•	•••	•••	•••	1	1	1	1	
18	F3468	Bolt (2 🔓 in. U.H	l.)	•••	•••	•••	•••	•••	-	-	1	1	
19	S1-51			•••	•••	•••	•••	•••	~	-	1	1	
20	53432	STOP AND TAI	l lamp	(Туре 56	4)	•••	•••	• • •	1	1	1	1	
21	573839			•••	•••	•••	•••	•••	1	1	1	1	
22	575200	Window		***			•••	•••	1	1	1	1	
23	575308	Lens seating	gasket	•••	•••	•••	•••		1	1	1	1	
24	575219	Sleeve nut	•••	•••	•••	•••	•••	•••	2	2	2	2	
25	S76002	Base assembl	ly	•••				••••	1	1	1	· 1	
26	575209	Bulbholder			•••			•••	1	1	, 1	1	
27	575207	Grommet			•••		•••	•••	1	1 ·	<u>`</u> 1	1	
28	573828	Contact asse	mbly				•••		1	1	1	1	
29	573825	Grommet	· · · · ·		•••			•••	1	1	1	1	
30	384	Bulb (6/18₩	offset pi	n)		• • •		•••	1	1	1	1	
31	838604	Stop and tail lam						•••	1	1	1	1	
32	E5731	Adaptor						•••			1	1	
33	T1257	Fibre washer							-		1	1	
34	D493	Spade									. 1	1	
35	D494	Circlip						•••	 (· _	1.	1	
36	E4803	"O'' -:						•••	<u></u> ``	_	1	1	
37	E5733	Nylon bush	÷.	•••					~		1	1	
38	D529	Tachometer cable		long)		•••	•••	•••	_	-	- 1 -;	1	
39			• -	10118)	•••		•••	***	_	_	1 *	<u>ି 1</u>	
40	RSM 3001/02			•••		•••	•••	•••	_		1	1	
40 41	H1596	Mounting bracket			•••		•••	•••	_	-	4	4	
41	30-282-014-11	Washer		•••	• • • '	•••	•••	•••	-		4	4	
	30-276-037-11	Nut		•••	•••	•••		•••	-	-	2	2.	
43	H1087	Metalastik bush	、 …		•••	•••					2	2	
44	H1086	Bolt (1 🔒 in. U.H.	.)	•••	•••	•••	vi.	•••	-	-	4.	2	

71

.

British Only MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS 45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES! CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE



VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS



British Only MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST

GARDEN CITY, MI 48135 USA PHONE: 800-278-6659

FAX: 734-422-9253

Year:	Make:	Model:

Engine # Frame #

WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

Total

Amount Enclosed

Michigan Residents Add 6% Sales Tax

Quantity	Part #	Description	Each	Amount
Date/	/ c	ustomer # Salesperson		
Card Number		Expires Su	ıbtotal	
Name				
Address			surance	
			ipping	

_____ Fax _

Phone _ Email _

Signature

	— FOLD		
Name		-	
Address			USE FIRST CLASS
City			LETTER
State Zip			PUSTAGE

British Only

MOTORCYCLES AND PARTS INC. 32451 PARKLANE ST GARDEN CITY, MI 48135 USA

FOLD