20-10252C

REPLACEMENT PARTS

FOR



MOTOR CYCLES

1950

THUNDERBIRD 3T DE LUXE SPEED TWIN TIGER 100

(See Separate List for Trophy Model)

TRIUMPH ENGINEERING COMPANY LTD. MERIDEN WORKS, ALLESLEY

Telegrams (for Spares) "Trusty, Coventry"

COVENTRY.

Telephone Meriden 331

British Only MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS 45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES! CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE



VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS



British Only MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS 45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES! CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE



VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS



Page No.

AIR FILTER GROUP								78
BATTERY CARRIER GROUP							••••	48
CARBURETTER GROUP							•••	80
CARTON PACK LIST		- • •						11
CHAIN GROUP								65
CHAINGUARD GROUP		•						66
	····		•••		•••	*		42
CLOSE RATIO GEAR GROU	٢				•••		•••	72
CONTROL CABLE GROUP		•••			*** .	•••	•••	73
Air Cable		•••	***	•••		***		72
Clutch cable			*	***	•••			72
Front brake cable			•••			•••	•••	72
Throttle cable				***	•••			
ENGINE GROUP					***		•••	18
Connecting rods	•••		•••	• • •	•••		•••	28
Crankcase		•••	•••		•••	•••	•••	28
Crankcase bearings	•••		•••	•••			•••	29 32 ·
Crankcase breather		•••	* * *		•••	•••	***	29
Crankcase studs and bolts			***	• • •	·	•••	•••	28
Crankshaft and flywheel as		/	***	* • • •	•••		•••	18
Cylinder block	•••		•••	•••	••••	• • •	•••	18
Cylinder head	 		• • •	• • •	•••	•••		33
Engine sprocket and shock						***	•••	30
		•••	•••	•••	•••	•••	•••	33
Overhead rocker gear	•••		•••	• • •		•••	•••	19
Pistons	•••		• • •	•••	* * *		•••	32
Push rods Push rod cover tube	•••	***	•••		•••			32
Release valve	•••	•••	•••	•••				31
Rocker oil feed and drain		•••	• • •	•••				33
Tappet and tappet block	pipes							32
Timing cover								31
Timing gear								32
Valves and valve springs								19
ENGINE PLATE GROUP								48
	• • •		•••					34
EXHAUST SYSTEM GROUP	•••	•••						
FOOTREST GROUP		•••	•••	•••	• • • •			73
FRAME GROUP		•••				•••		43
FRONT FORK GROUP								50
Steering cups, cones and b	alls	***						51
Steering damper		•••					- • •	51
FRONT WHEEL GROUP								54
Front wheel brake								56
		,						93
GASKET SETS		•••						

								Page
								No.
GEARBOX GROUP						• • •		35
	•••	•••	•••			•••		40
Clutch Clutch control	••••							42
Gear control (enclosed me								39
Gear control (selector me								39
Gearbox casing							• • •	35
Gearbox fittings						•••		35
Gearbox shell bearings				•••			• • •	39
Gearbox sprocket								40
Kickstarter					• • •			40
Shafts and gears			• • •					35
Wide ratio gears			• • •					42
Close ratio gears								42
GEAR RATIOS								93
HANDLEBAR GROUP								70
Air control								72
Clutch control								70
Front brake control								70
ng li f								70
		•••	•••					70
LUCAS ELECTRICAL EQUIPN	MENT	GROL						89
MAGNETO B.T.H. GROUP						•••		82
MUDGUARD GROUP			• • •					61
	•••		•••		• • •	•••		61
Front mudguard	• • •	• • •		•••		•••		62
Rear mudguard (3T)	 and 47	···		•••	***	•••		62
Rear mudguard (5T, T100				•••			•••	64
NUMPER PLATE GROUP		•••	•			•••	•••	77
PILLION SEAT GROUP		•••		•••		• • •		64
PRIMARY CHAINCASE GROU		• • •		• • •	•••			75
PROP STAND GROUP						•••	•••	73
REAR BRAKE CONTROL GR				• • •	•••		• • •	75
						•••	•••	58
REAR SPRING WHEEL GRO						• • •	•••	20 96
REAR SPRING WHEEL GRO						. , .	•••	56
REAR WHEEL GROUP					• • •			58
Rear wheel brake						•••		50 74
SADDLE GROUP							•••	74
SIDECAR ATTACHMENTS GI		•••			•••		•••	75 79
SPARKING PLUG GROUP		• • •		· • •	• • •			
SPECIFICATIONS 3T, 5T, TIO	0,6T	•••	•••	•••	• • •			7-10
	•••	• • •				- • •		79
• • • • • • • • • • • • • • • • • • • •			•••	•••	• • •		• • •	53
TANK GROUP		•••	•••					67
Parcel Grid			• • •		• • •	•••	•••	69
Petrol tank							•••	67
Oiltank		•••			•••			69
,				• • •		•••	•••	77
TOOLKIT GROUP			•••		•••	•••	•••	77
TORQUE BRACKET GROUP	•••	•••	.,,	•••	•••	•••	•••	43
TWINSEAT GROUP		····		•••			•••	99
WIDE RATIO GEAR GROUP			• · ·		· • •		•••	42

(î

;•.·

.

المراجع المتحالية المنافرة

ILLUSTRATION INDEX

PAGE

							1050
Air Filter							78
Automatic advance conti	rol						84
B.T.H. magneto armatur	e and o	conde	nser				86
B.T.H. magneto contact	breake	er and	housin	g			87
B.T.H. magneto housing	and au	ito ad	vance				85
Carburetter parts					·		81
Crankcase and frame stu	ds, bol	ts and	washe	rs			49
Engine 3T :							24
Crankcase, cylinder	block	and cy	linder	heads,	etc.	•••	26
Engine 3T							20
Crankshaft, connecti	ng roo	ls, pist	cons, tir	ning g	ear, etc.		30
Engine 5T, T100 and 6T			1. 1	1 1			20
Crankcase, cylinder	block	and c	ylinder	neads	, etc.		20
Engine 5T, T100 and 6T							24
Crankshaft, connecti				ning g	ear, etc.		24
Frame and components,						•••	46
Frame and Components,	51, 11	100 an	d 61	• • • •		• • •	44
Front wheel and mudgua	rd arr	angem	ient				55
Gearbox							36-37
Clutch							41
Handlebars and controls							71
Headlamp							91
Petrol and oil tanks with	fitting	zs					68
Primary chaincase and re			ds				65
Rear mudguard							63
1950 Range, with Specif		IS					7-10
Rigid rear wheel axle as							57
Spring wheel Mark I							60
Spring wheel Mark II							97
							52
Telescopic front fork							
Toolkit							76

To assist the owner and dealer in identifying requirements, this book contains numerous exploded views of major assemblies. Each component part is numbered and by cross reference to the illustration index, the part number of the component will be found. Against each part number a page and reference number is shown and by referring to the appropriate page, the full description of the part will be found against the reference number.

Example.


To find the part number of a scraper ring for the model 5T.

1. Refer to illustration index page where it will be found that the exploded view of the 5T engine is on page 24.

2. Note that the number of the scraper ring on the illustration is 2.

- 3. Refer to the index for the illustration in question on page 25.
- 4. Note that No. 2 is part number GE.29, listed on page 23. Reference line No. 21.

THUNDERBIRD

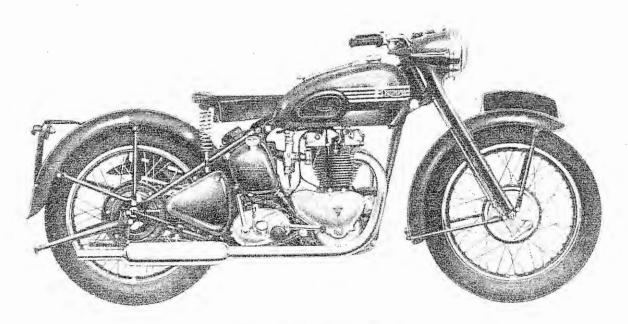

SPECIFICATION


Bore and stroke mm	• • •	7	1 × 82	Tappet clearance, o
Cylinder capacity	• • •		649	Ignition, fully adva
Compression ratio			7.1	Piston ring gap .
Engine sprocket, solo			24	Inlet valve opens, i
Engine sprocket, sidecar			21	Exhaust valve close
Carburettor main jet			170*	Petrol tank, gallon:
Carburettor slide			6/31	Oil tank, pints .
Carburettor needle jet			107	Weight, Ibs. (dry)


Tappet clearance, cold			.001″
Ignition, fully advanced			345
Piston ring gap		.010″	014"
Inlet valve opens, B.T.E	D.C.		2610
Exhaust valve closes, A	.T.D.C		350
Petrol tank, gallons			4
Oil tank, pints			6
Weight, Ibs. (dry)			370

Į.

「日日の中国法の一日西北北

* 190 Without air cleaner

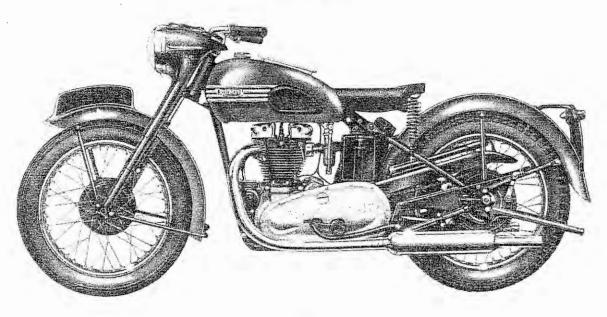

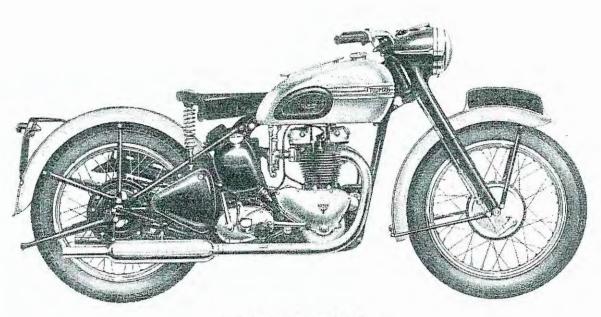


SPECIFICATION


Bore and stroke mm		63	× 80	
Cylinder capacity	•••	• • • •	498	
Compression ratio	•••	7	8:1	
Engine sprocket solo	* * *		22	
Engine sprocket, sidecar		•••	19	
Carburettor main jet	• • •		150*	
Carburettor slide			6/31	
Carburettor needle jet	•••		107	

Tappet clearance, cold			.001″	
Ignition, fully advanced			2)(2)	
Piston ring gap		.010″	014"	
Inlet valve opens, B.T.D	.C.		261°	
Exhaust valve closes, A.	T.D.	с	35°	
Petrol tank, gallons			4	
Oil tank, pints	•••		6	
Weight lbs. (dry)			365	

* 160 Without air cleaner

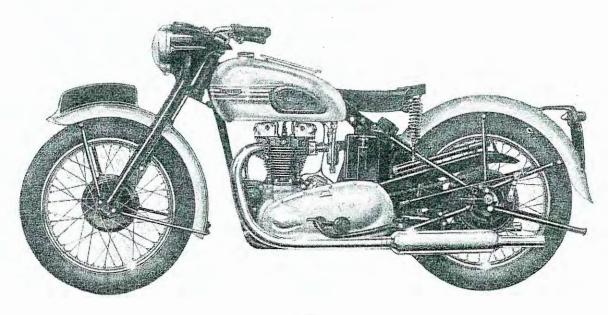

SPEED TWIN

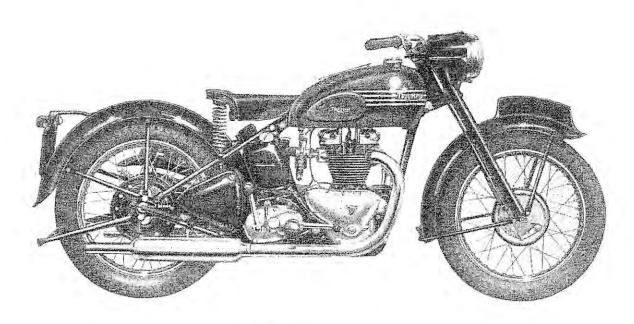


SPECIFICATION


Bore and stroke mm	•••	6	3 × 80	
Cylinder capacity			498	
Compression ratio	•••	•••	7.1	
Engine sprocket solo	•••	•••	22	
Engine sprocket, sideca	Γ		19	
Carburettor main jet			140	
Carburettor slide	•••		6/3 <u>1</u>	
Carburettor needle jet			107	

Tappet clearance, cold001"
Ignition, fully advanced \dots $\frac{3}{8}''$
Piston ring gap010"014"
Inlet valve opens, B.T.D.C 26 ¹³
Exhaust valve closes, A.T.D.C 35 [±]
Petrol tank, gallons 4
Oil tank, pints 6
Weight lbs. (dry) 365

the second

なるのであるのであるのであるかい いたののなため

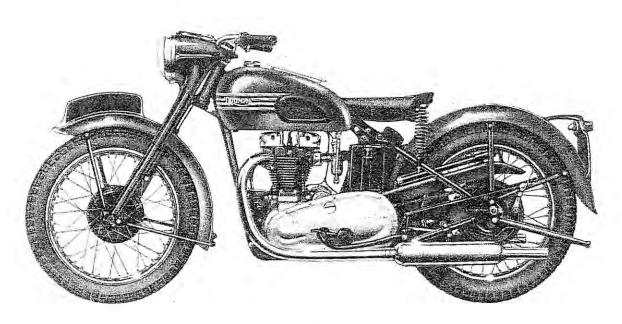


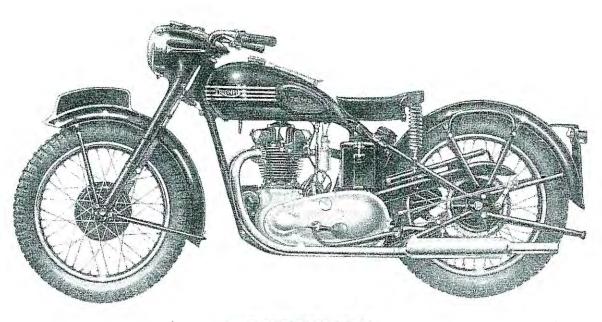

SPECIFICATION

	55×	(73.4	
•••		349	
		6.3-1	
		19	
		120	
		5/4	
	•••	107	
•••		.001″	
	···· , ···	···· 、 ··· ··· ··· ··· ··· ··· ···	349 6.3-1 19 120 5/4

*Ignition, fully advanced	11	/32″	
Piston ring gap	.010/	-14"	
Inlet valve opens, B.T.D.C.		22°	
Exhaust valve closes, A.T.D.C.		25°	
Petrol tank, gallons		3	
Oil tank, pints		6	
Weight, Ibs. (dry)	•••	325	
*9/32 With Low Octane Fuel.			

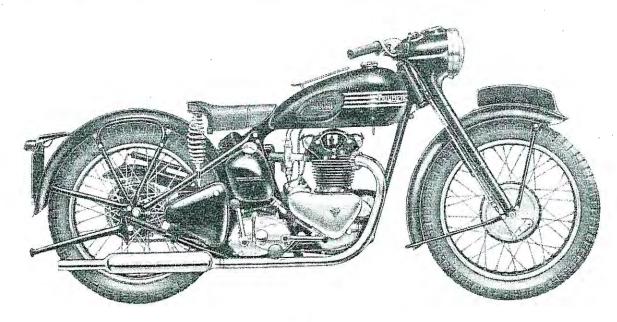

CARTON PACK COMPONENT LIST

The following sub-assemblies are supplied in carton packs under the CP part number stated. The contents of these carton packs are preserved and will not deteriorate under adverse conditions.

Part No.		Desci	ription and Contents
Brake Lining CP.38	2 16	NW.243 W.129	Lining, brake Rivet
CP.66	2 16	W.631 W.129	Lining, brake Rivet
Crankcase Be CP.87	earing 	E.1591 E.2877	Bearing, ball Bearing, roller
Fork (Telesco CP.50	pi c) Ser 2 2 2 4 2 2 2 2 2 2 2 2	vice Pack H.443 H.441 E.1335 H.430 H.452 H.453 H.453 H.454 H.391 H.420	Bearing, lower Bearing, upper Washer, copper Washer, drain filler plug Restrictor, oil Cup, oil restrictor Pin, restrictor cup Washer, dust excluder felt Washer, outer cover felt
Gears, Wide 1 CP.94	Ratio (19 	50) T.969 T.968 T.971 T.974	Gear, mainshaft high Gear, mainshaft 2nd Gear, layshaft high Gear, layshaft 2nd
Gears, Close CP.95		950) T.957 T.956 T.955 T.515C T.959 T.964 T.963 T.961	Gear, mainshaft high Gear, mainshaft 3rd Gear, mainshaft 2nd Gear, mainshaft and low Gear, layshaft high Gear, layshaft 3rd Gear, layshaft 2nd Gear, layshaft low

SEE SPECIMEN ORDER IN PREFACE

Part No.		Desc	ription and Contents
Kickstarte CP.27	er Ratchet 	Gear T.730 T.731 T.488/28 T.732	Pinion, kickstarter Ratchet, kickstart Spring and Sleeve Lockwasher
Piston CP.29	 2 2	E.1563 E.656 GE.29 WE.203E WE.479	Piston Ring, compression Ring, scraper Pin, Gudgeon Circlip
CP.29/10		E.1563/10	Piston + .010 inch
	2	E.656/10	Ring, compression
		GE.29/10	Ring, scraper
		WE.203E	Pin, gudgeon
	2	WE.479	Circlip
CP.29/20		E.1563/20	Piston + .020 inch
	2	E.656/20	Ring, compression
		GE.29/20	Ring, scraper
		WE.203E	Pin, gudgeon
	2	WE.479	Circlip
CP.29/30		E.1563/30	Piston + .030 inch
	2	E.656/30	Ring, compression
		GE.29/30	Ring, scraper
		WE.203E	Pin, gudgeon
	2	WE.479	Circlip
CP.29/40		E.1563/40	Piston + .040 inch
	2	E.656/40	Ring, compression
		GE.29/40	Ring, scraper
		WE.203E	Pin, gudgeon
	2	WE.479	Circlip
CP.30		E.1908	Piston
	2	E.656	Ring, compression
		GE.29	Ring, scraper
		WE.203E	Pin, gudgeon
	2	WE.479	Circlip
CP.30/10		E.1908/10	Piston + .010 inch
	2	E.656/10	Ring, compression
		GE.29/10	Ring, scraper
		WE.203E	Pin, gudgeon
	2	WE.479	Circlip
CP.30/20		E.1908/20	Piston + .020 inch
	2	E.656/20	Ring, compression
		GE.29/20	Ring, scraper
		WE.203E	Pin, gudgeon
	2	WE.479	Circlip
	TREASURY	NOTES MUST	BE REGISTERED

「「ないた」というたけに、「ない」のないので、

TREASURY NOTES MUST BE REGISTERED

Part No.		Desc	cription and Contents
CP.30/30		E.1908/30	Piston + .030 inch
	2	E.656/30	Ring, compression
		GE.29/30	Ring, scraper
		WE.203E	Pin, gudgeon
	2	WE.479	Circlip
CP.30/40	 2	E.1908/40 E.656/40 GE.29/40 WE.203E WE.479	Piston — .040 inch Ring, compression Ring, scraper Pin, gudgeon Circlip
CP.49	 2 2	E.1748 E.1766 E.1819 E.1750 E.1767	Piston Ring, compression Ring, scraper Pin, gudgeon Circlip
CP.49;10	 2 2	E.1748/10 E.1766/10 E.1819/10 E.1750 E.1767	Piston — .010 inch Ring Ring, scraper Pin, gudgeon Circlip
CP.49/20		E.1748/20	Piston + .020 inch
	2	E.1766/20	Ring, compression
		E.1819/20	Ring, scraper
		E.1750	Pin, gudgeon
	2	E.1767	Circlip
CP.49/30		E.1748/30	Piston + .030 inch
	2	E.1766/30	Ring, compression
		E.1819/30	Ring, scraper
		E.1750	Pin, gudgeon
	2	E.1767	Circlip
CP.49/40	 2 2	E.1748/40 E.1766/40 E.1819/40 E.1750 E.1767	Piston — .040 inch Ring, compression Ring, scraper Pin, gudgeon Circlip
CP.43		E.1841	Piston
	2	E.1766	Ring, compression
		E.1819	Ring, scraper
		E.1750	Pin, gudgeon
	2	E.1767	Circlip
CP.43/10		E.1841/10	Piston + .010 inch
	2	E.1766/10	Ring, compression
		E.1819/10	Ring, scraper
		E.1750	Pin, gudgeon
	2	E.1767	Circlip

and to be dealer and

which we are not a set of the

is interesting the posteres attraction of the sector of the state of the sector of the

WHEN IN DOUBT SEND SAMPLE

Part No.		Des	cription and Contents	
CP.43/20	 2 2	E.1841/20 E.1766/20 E.1819/20 E.1750 E.1767	Piston + .020 inch Ring, compression Ring, scraper Pin, gudgeon Circlip	
CP.43/30	 2 2	E.1841/30 E.1766/5 E.1819/5 E.1750 E.1767	Piston + .030 inch Ring, compression Ring, scraper Pin, gudgeon Circlip	
CP.43/40	 2 1 2	E.1841/40 E.1766/40 E.1819/40 E.1750 E.1767	Piston + .040 inch Ring, compression Ring, scraper Pin, gudgeon Circlip	
CP.61	 2 1 2	E.2460 E.656 GE.29 VVE.203E VVE.479	Piston Ring, compression Ring, scraper Pin, gudgeon Circlip	
CP.61/10	 2 2	E.2460/10 E.656/10 GE.29/10 VVE.203E VVE.479	Piston + .010 inch Ring, compression Ring, scraper Pin, gudgeon Circlip	
CP.61/20	1 2 1 1 2	E.2460/20 E.656/20 GE.29/20 VVE.203E VVE.479	Piston + .020 inch Ring, compression Ring, scraper Pin, gudgeon Circlip	
ĊP.61/30	 2 1 2	E.2460/30 E.656/30 GE.29/30 WE.203E WE.479	Piston + .030 inch Ring, compression Ring, scraper Pin, gudgeon Circlip	
CP.61/40	 2 2	E.2460/40 E.656/40 GE.29/40 WE.203E WE.479	Piston + .040 inch Ring, compression Ring, scraper Pin, gudgeon Circlip	
CP.98	 2 2	E.2891 E.2897 E.2898 WE.203E WE.479	Piston Ring, compression Ring, scraper Pin, gudgeon Circlip	
			ALL MALIA ADDED	

DO NOT FORGET TO SIGN YOUR ORDER

Part	No
rait	FYU.

r

Description and Contents

ruit i to:		2000	
CP.98/10	2	E.2891/10 E.2897/10 E.2898/10 WE.203E WE.479	Piston + .010 inch Ring, compression Ring, scraper Pin, gudgeon Circlip
CP.98/20		E.2891/20	Piston + .020 inch
	2	E.2897/10	Ring, compression
	!	E.2898/10	Ring, scraper
	!	WE.203E	Pin, gudgeon
	2	WE.479	Circlip
CP.98/30	2	E.2891/30 E.2897/30 E.2898/30 WE.203E WE.479	Piston + .030 inch Ring, compression Ring, scraper Pin, gudgeon Circlip
CP.98/40	2	E.2891/40 E.2897/40 E.2898/30 WE.203E WE.479	Piston + .040 inch Ring, compression Ring, scraper Pin, gudgeon Circlip
Piston Rings.	4	E.656	Ring, compression
CP.40	2	GE.29	Ring, scraper
CP.40/10	4	E.656/10	Ring, compression
	2	GE.29/5	Ring, scraper
CP.40/20	4	E.656/20	Ring, compression
	2	GE.29/20	Ring, scraper
CP.40/30	4	E.656/30	Ring, compression
	2	GE.29/30	Ring, scraper
CP.40/40	4	E.656/40	Ring, compression
	2	GE.29/40	Ring, scraper
CP.55	4	E.1766	Ring, compression
	2	E.1819	Ring, scraper
CP.55/10	4	E.1766/10	Ring, compression
	2	E.1819/10	Ring, scraper
CP.55/20			

SEE SPECIMEN ORDER IN PREFACE

i,

1.

- 1999 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997


•

		Dee	withing and Contants
Part No.		Desc	cription and Contents
CP.55/30	4 2	E.1766/30 E.1819/30	Ring, compression Ring, scraper
CP.55/40	4 2	E.1766/40 E.1819/40	Ring, compression Ring, scraper
CP.99	4 2	E.2897 E.2898	Ring, compression Ring, scraper
CP.99/10	4 2	E.2897/10 E.2898/10	Ring, compression Ring, scraper
CP.99/20	4 2	E.2897/20 E.2898/20	Ring, compression Ring, scraper.
CP.99/30	4 2	E.2897/30 E.2898/30	Ring, compression Ring, scraper
CP.99/40	4 2	E.2897/40 E.2898/40	Ring, compression Ring, scraper
Rear Spring CP.67	g Wheel I I I	V.837 W.836 W.890 W.664	Spring, inner main Spring, outer main Spring, rebound Locator plate
Sidecar Cor CP.14	nnection 2 2 2 2 	F.2587 F.2600 F.1746 F.2601 F.1743 S1-5 KF.365 F.1747	Connection, front Bolt Nut, sleeved Connection, rear Stud Nut Washer, spring Nut
Steering Ra CP.56	2 2 1 1 44	XS.10 H.433 XS.8 S.70-4	Cup Cone Cone Ball
CP.57	 22 20	H.437 H.111 H.438 H.439 S.70-4 S.70-3	Cup Cup Cone Ball Ball

ALWAYS QUOTE ENGINE NUMBER AND PREFIX

Part No.		De	scription and Contents
Valves	2	E.1955	Valve, inlet
CP.6		E.1956	Valve, exhaust
CP.53	2	E.1751	Valve, inlet
	2	E.1752	Valve, exhaust
CP.96	2	E.2903	Valve, inlet
	2	E.2904	Valve, exhaust
Valve Guide CP.54	es 4	E.1759	Guide, inlet and exhaust
CP.97	2	E.2899	Guide, inlet
	2	E.2900	Guide, exhaust
Valve Sprin CP.5	egs 4 4	E.1488 E.1487	Spring, inner Spring, outer
CP.52	4	E.1777	Spring, inner
	4	E.1778	Spring, outer

TRIUMPH CARTON PACKS

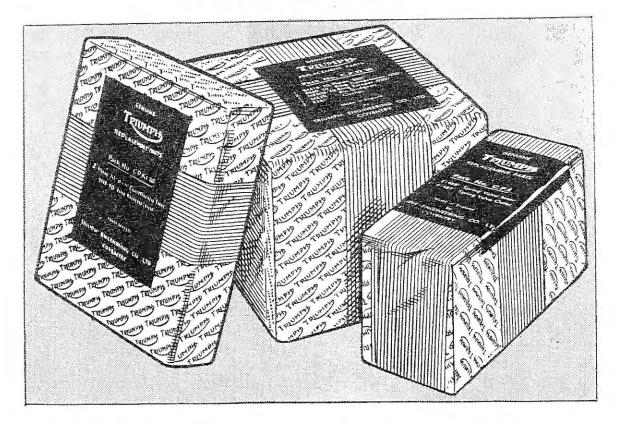

All parts in Triumph Carton Packs are fully preserved and can be stored indefinitely with perfect safety even under adverse conditions.

WHEN IN DOUBT SEND SAMPLE

REPLACEMENT PARTS

ENGINE GROUP

REF. No.	PART	No.		DESC	RIPTIC	N		3T	5T	T100	6T
		CYLINDER	BLOC	СК							
1	E.2937	Block,	cylinde	r				 	1	I	
2	E2461	39						 1			
3	E2895							 -			I
4	E2249		r, cylin	der bas	e			 	1	1	
5	E2677	**		,,				 1			-
6	E2894	"	,,	,,				 	-		I
		CYLINDER	HEAD)							
7	E2928		cylinder		uides			 	1		
8	E2929	**	,,,	,,,	,,			 		8	
9	E2645	**		3.9	,,			 1			
10	E2896	**		33	"			 			I
11	E2248		, cylind					 -	1	I	
12	E2614	**	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,					 1			
13	E2905	**	33	,,				 _			I
14	E327	Bolt,		**	short			 	4	4	4
15	E1484	3.5	22	,,	long	(rear)		 	2	2	2
16	E1596		.,	,,	-	(front)		 	2	2	2
17	E1795	37	**		,,			 4			
18	E2631	,,	,,	,,	short	(front)		 2			
19	E2632	\$ 5	13	,,	,,	(rear)		 2			
20	G\$308	Washe	r, cylind	der hea	d bolt			 8	4	4	4
21	E1675	Manifo	d, inlet					 		F	-
22	E1456		**					 	1		
23	E2913	**	,,					 			
24	E1552	Washe	r, inlet	manifo	Id join	t		 	2		
25	E1676	"		,,				 		2	2
26	E1715	Stud, in	nlet ma	nifold				 		4	
27	E1554	,,	,,	**				 	4	-	-
28	E2920	"	,,	**				 		_	4
29	W103	Nut,	,,	,, S	tud			 	4	4	4
30	S25-13	Washe	r, "		,,			 	4	4	4
31	E.1553	Stud, c	arburet	ter fixi				 	2	2	2
32	E1396	**	.,	,,				 2	_		
33	SI-51	Nut,	,,	,,		d b		 2	2	2	2
34	S25-3	Washe		33				 2	2	2	2
35	E1987	Stud, r						 2			
36	E1912	· Nut,	33	,,	**		led	 2		-	-

SEE SPECIMEN ORDER IN PREFACE


VALVES AND VALVE SPRINGS

1	E1955	Valve, inlet			 	—	2	2	_
2	E1751	,, ,, ,, ,,,			 	2			
3	E2903	** ** ***			 				2
4	E1956	" exhaust			 		2	2	
5	E1752	yy yı			 	2	-		-
6	E2904	,, <u>,,</u>		* * *	 				2
7	E2899	Guide, inlet valve			 		2	2	2
8	E2900	" exhaust valv	е		 	-	2	2	2
9	E1759	" inlet and ex	haust va	alve	 	4			
10	E1488	Spring, valve inner			 		4	4	4
11	E1777	, ,, ,, ,,			 	4			
12	E1487	", ", outer			 		4	4	4
13	E1778	33 33 IJ	***		 	4			_
14	E1543	Collar, valve spring	top		 		4	4	석
15	E1757	,, ,, ,,	,,		 	4			·
16	E1544	Cup, valve spring b	ottom		 		4	4	4
17	E1758		,,			4			
18	WE259A	Cotter, valve split			 	8	8	8	8

PISTONS

19	E1563	Piston	body,	Standard	C.R.	.7:1				2			
20	E1563/10	33	.,	+ .010"		,,	• • -	••••		2			,
21	E1563/20	**	**	+ .020″		32				2			
22	E1563/30	,,	13	+ .030"	>>				-	2			
23	E1563/40	,,		+ .040"	"	5 9				2			
24	E1908	13	23	Standard		7.8 ; 1		***	-		2		
25	E1908/10	,,	* *	+ .010"	,,	••			-		2		
26	E1908/20	,,		+ .020″	21	13			-		2		
27	E1908/30	,,	**	+ .030"	3 9	79		•••			2		
28	E1908/40	5 9	79	+ .040"	* 7					-	2		
29	E2460	11		Standard	,,	8.25 : 1					2		
30	E2460/10	,,		+ .010"							2	-	
31	E2460/20	,,	,,	+ .020″	,,	1 2					2	-	
32	E2460/30	,,	,,	+ .030″						-	2		
33	E2460/40	,,	,,,	+ .040"	,,						2		
34	E2891	19	11	Standard	" >	7:1			-	_		2	
35	E2891/10	.,	,,	+ .010"	**	,,						2	
36	E2891/20	,,	,,	+ .020″		,,						2 2	
37	E2891/30	,,	,,	+ .030″	79	,,						2	
38	E1748	,,		Standard		6.3:1		• • •	2			-	
39	E1748/10	,,	,,	+ .010"	5 3	**			2			-	
40	E1748/20	,,	,,	+ .020″	,,	\$ \$	• • •		2	_		-	
41	E1748/30	"	19	+ .030″	,,	,,			2	-		-	
42	E1748/40	.,	,,	+ .040″	,,				2			-	

SEE PAGES II TO IT FOR CARTON PACKS

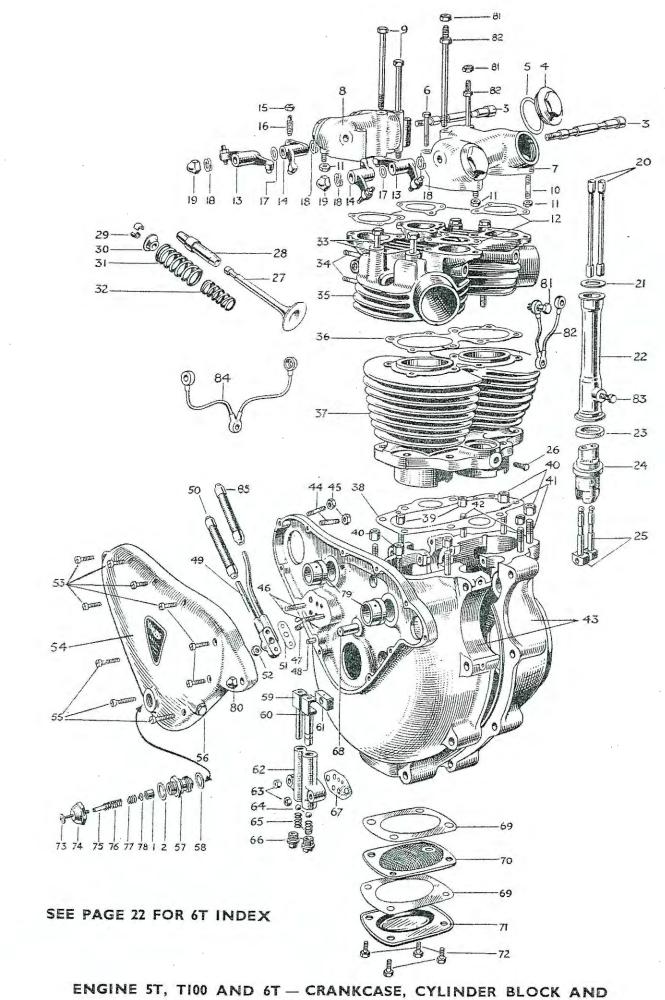

NGINE 5T, TIOO AND 6T — CRANKCASE, CYLINDER BLOCK AND CYLINDER HEAD, ETC.

5T AND TIO MODELS

INDEX TO ILLUSTATION ON PAGE 20

lllust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	GS.251	31	3	39	W.76	28	36
2	G\$.254	31	6	40	PO.172A	28	37
3	E. 1512	33	27	41	E.672	28	32
4	E.1564	33	8	42	E.1614	28	33
č	E.1577	33	11	43	E.2219/20A	28	29
6	E.1545	33	15	44	E.2022	29	47-33
7	E.1462	33	3	45	F.1008	29	2
	E.1462T	33	4	46	E.1536	29	13
8	E.1461	33	I	47	E.1539	29	4
	E.1461T	33	2	48	E.1535	29	3
9	E.1484	18	15	49	E.1526	70	7
10	E.1540	33	6	50	MF.119	70	12
ALC: NO.	F.879	33	7	51	E.1529	70	9
12	E.1650	33	5.	52	S.1-51	70	10
13	E.1458	33	19	53	E.427	32	7.
4	E.1457	33	17	54	E.2218	31	12
5	E.470	33	23	55	E.1049	32	6
\$6	E.1513	33	22	56	E.2615	31	15
17	E.1575	33	25	57	E.2794	31	2
18	E.1574	33	26	58	E.1670	31	5
19	E.1435	33	29	59	G\$.153	30	3
20	E.1693	32	35	60	E.1476	30	4
21	E.1497	32	41	61	E.495	30	5
22	E.1505	32	37	62	GS.35	30	2
23	E.1496	32	39	63	F.879	29	
24	E.1477	32	31	64	S.70-7	30	6
25	E.1478	32	30	65	E.403	30	7
26	H.200	32	33	66	E.386	30	8
27	E.1955 (ln)	19	1	67	E.1537	30	9
	E.1956 (Ex)	19	4	68	E.375	32	22
28	E.2899 (ln)	19	7	69 70	E.487	29	18
20	E.2900 (Ex)	19	8	70	E.529	29	16
29	WE.259A	19	18	71	E.486	29	17 19
30	E.1543	19	14	72 73	MT.63	29 31	8
31	E.1487	19	12	73 74	E.2791	31	о 4
32	E.1488	19	10		E.2790	31	9
33	E.327	18	14	- 75 76	E.2793 E.2788	31	7
34	E.1715	18 18	26 27	77	E.2788 E.2789	31	10
20	E.1554		7	78	E.2787 E.2792	31	11
35	E.2928 E.2929	18 18	8	78 79	E.1479	29	31
36	E.2929 E.2248	18		80	E.2228	89	22
36 37	E.2248 E.2937	18		81	S.1-52	43	32
38	E.2237 E.2249	18	4	82	E.1596	18	16
90	E.4477	10	-r }	02	2.1370	10	10

FOR IDENTIFICATION OF PARTS-SEE PAGE 10

6T MODEL


INDEX TO ILLUSTRATION ON PAGE 20

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
	GS.251	31	3	41	E.672	28	32
2	GS.254	31	6	42	E.1614	28	33
3	E.1512	33	2.7	43	E.2892/3	28	30
4	E.1564	33	8	44	E.2022	29	1
5	E.1577	33	11	45	F.1008	29	2
6	E.1545	33	15	46	E.1536	29	13
7	E.1462	33	3	47	E.1539	29	4
8	E.1461	33	1	48	E.1535	. 29	8
. 9	E.1484	18	15	49	E.1526	70	7
10	E.1540	33	6	50	MF.119	70	12
11	F.879	33	7	51	E.1529	70	9
12	E.1650	33	5	52	S.1-51	70	10
13	E.1458	33	19	53	E.427	32	7
14	E.1457	33	17	54	E.2218	31	12
15	E.470	33	23	55	E.1049	32	6
16	E.1513	33	22	56	E.2615	31	5
17	E.1575	33	25	57	E.2794	31	2
18	E.1574	33	26	58	E.1670	31	5
19	E.1435	33	29	59	GS.153	30	3
20	E.1693	32	35	60	E.1476	30	4
21	E.1497	32	41	61	E.495	30	5
22	E.1505	32	37	62	GS.35	30	2
23	E.1496	32	39	63	F.879	29	14
24	E.1477	32	31	64	S.70-7	30	6
25	E.1478	32	30	65	E.403	30	7
26	H.200	32	33	. 66	E.386	30	8
27	E.2903 (In)	19	3	67	E.1537	30	9
	E.2904 (Ex)	19	6 .	68	E.375	32	22
28	E.2899 (In)	19	7	69	E.487	29	18
	E.2900 (Ex)	19	8	70	E.529	29	16
29	WE.259A	19	18	71	E.486	29	17
30	E.1543	19	14	72	MT.63	29	19
31	E.1487	19	12	73	E.2791	31	8
32	E.1488	19	10	74	E.2790	31	4
33	E.327	18	14	75	E.2793	31	9
34	E.2920	18	28	76	E.2788	31	7
35	E.2896	18	10	77	E.2789	31	10
36	E.2905	18	13	78	E.2792	31	11
37	E.2895	18	3	79	E.1479	29	31
38	E.2894	18	6	80	E.2228	89	22
39	W.76	28	36	81	S.1-52	43	32
40	PO.172A	28	37	82	E.1596	18	16

FOR IDENTIFICATION OF PARTS-SEE PAGE 10

REF. No.	PART No.			DESCR	IPTION		3T	5T	T100	6T
1	E1841	Pistor	n body,	Standard	C.R. 7 : 1	 	2	_		
2	E1841/10	,,	,,	+ .010"))))	 	2			-
3	E1841/20 ×	,,	,,	+ .020")) 1)	 	2		-	
4	E1841/30	,,	3.9	+ .030"	** **	 	2			
5	E1841/40	,,		+ .040"	,, ,,	 	2	-		_
6	E656		piston		ion Standard	 		4	4	_
7	E656/10		. ,,	,,	+ .010"	 		4	4	
8	E656/20	,,	**	,,	+ .020"	 	_	4	4	
9	E656/30	**	22	,,	+ .030"	 		4	4	-
10	E656/40	"	,,	17	+ .040"	 		4	4	
11	E2897		,,	3.9	Standard	 		-		4
12	E2897/10	,,	,,	,,	+ .010"	 			_	4
13	E2897/20	,	>>	33	+ .020"	 				4
14	E2897/30	,,	"	**	+ .030"	 	_	_	_	4
15	E2897/40	,,	,,	3,9	+ .040"	 				4
16	E1766	,,		,,,	Standard	 	4			Byunghabar
17	E1766/10	31	,,	22	+ .010"	 	4		_	
18	E1766/20	,,	,,	"	+ .020"	 	4		-	
19	E1766/30		,,	"	+ .030"	 	4		-	
20	E1766/40	"	,,	19	+ .040"	 	4			
21	GE29	29		scraper.	Standard	 		2	2	
22	GE29/10		,,	"	+ .010"	 		2	2	
23	GE29/20	,,,	**	3 9	+ .020"	 		2	2	
24	GE29/30		,,	"	+ .030"	 		2	2	
25	GE29/40	,,	""	"	+ .040"	 		2	2	
26	E2898	,,	**	**	Standard	 			-	2
27	E2898/10			**	+ .010"	 				2
28	E2898/20	17	,,	77	+ .020"	 			_	2
29	E2898/30	,,	,,	,,	+ .030″	 				2
30	E2898/40	**		,,	+ .040″	 				2
31	E1819	**	**	,,	Standard	 	2	-		
32	E1819/10	.,	,,	,,	+ .010"	 	2	_		
33	E1819/20	**		3.5	+ .020"	 	2			
34	E1819/30	**	,,	""	+ .030"	 	2			
35	E1819/40	,,	,,	,,	+ .040″	 	2			
36	WE203E	Pin, g	udgeon			 		2	2	2
37	E1750	,,	,,			 	2		_	-
38	WE479	Circli	p, gudg	eon pin r	etaining	 		4	4	4
39	E1767	,,	,,	,	••	 	4	-	-	

SEE PAGES II TO 17 FOR CARTON PACKS

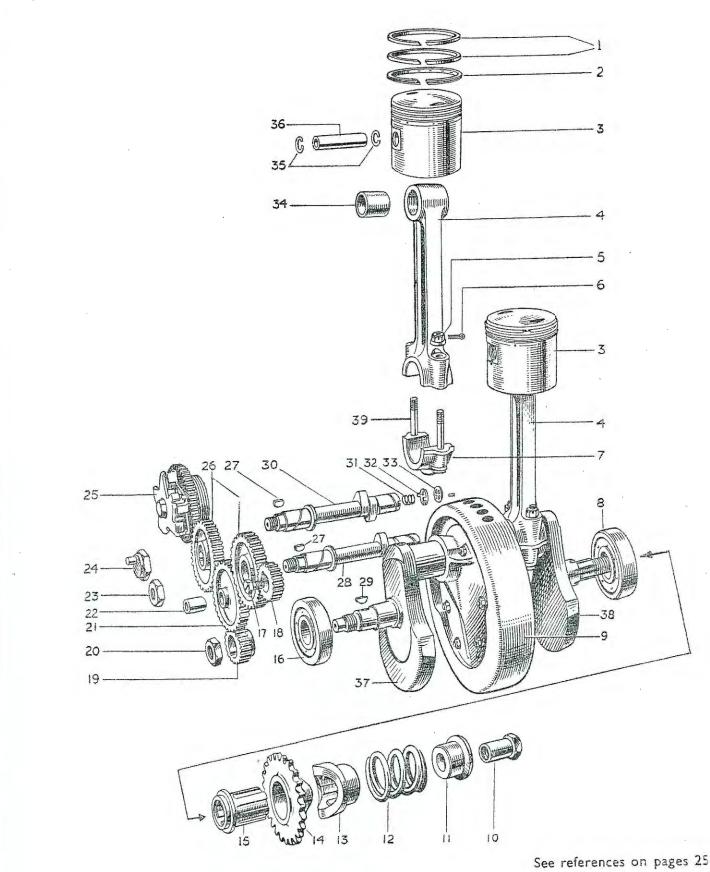

and 28 for items 4, 5 and 39


ENGINE, 5T, TI00 AND 6T-CRANKSHAFT, CONNECTING RODS, PISTONS, TIMING GEAR, ETC.

INDEXES	то	ILLU	STRA	TION	ON	PAGE	24
	5T	AND	T100	MODE	LS		

Illust. No.	Part No.	Page	Ref.	Illust. No,	Part No.	Page	Ref.
1	E.656	23	6	19	E.1472	32	9
2	GE.29	23	21	20	E.398	32	!2
3	E.1563	19	19	21	E. 47	32	19 '
	E.1908	19	24	22	E.400	32	21
₩ 4	E.2932	28	21	23	E.1492	32	17
	E.2932T	28	22	24	E.1463	32	18
※5	E.2922	28	28	25	E.1992	32	23
*6	1/16″ Split Pin		-		47502A	32	24
7	Sold with E.2932	only		26	E.1486	32	15
8	E.1591	29	26	27	E.1558	32	16
9	E.2916	28	5	28	E.2302	32	13
	E.2916T	28	6	29	E.1580	32	11
10	E.509	34	11	30	E.2302	32	13
1	E.396	34	10	31	E.2256	32	28
12	E.2912	34	8	32	E.2254	32	26
13	E.1681	34	6	33	GS.87	32	27
14	E.2826F	33	41	34	E.1511	28	25
	E.2826C	33	43	35	WE.479	23	38
15	E.1521	34	7	36	WE.203E	23	36
16	E.2877	29	24	37	E.2915	28	9
17	111700	89	20	38	E.29[4	28	12
18	E.2451	32	25	*39	E.2490A	28	27

*These are the latest pattern connecting rods fitted with inverted bolts and Simmonds nuts. For replacement bolts and nuts of the early pattern shown in the illustration, see page 28.

llust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	E.2897	23		21	E. 47	[*] 32	19
2	E.2898	23	26	22	E.400	32	21
3	E.2891	19	34	23	E.1492	32	17
4	E.292!	28	23	24	E.1463	32	18
5	E.2922	28	28	25	E.1992	32	23
7	Sold with E.2			-	475,02A	32	24
8	E.1591	29	26	26	E.1486	32	15
9	E.2908	28	7	27	E.1558	32	16
10	E.509	34	11	28	E.2302	32	13
11	E.396	34	10	29	E.1580	32	1
12	E.2912	34	8	30	E.2302	32	13
13	E.1681	34	6	31	E.2256	32	28
4	E.2826D	33	44	32	E.2254	32	26
	E.2826A	33	45	33	GS.87	32	27
15	E.1521	34	7	34	E.1511	28	25
16	E.2877	29	24	35	WE.479	23	38
17	111700	89	20	36	WE.203E	23	36
18	E.2451	32	25	37	E.2902	28	10
19	E.1472	32	9	38	E.2901	28	13
20	E.398	32	12	39	E.2490A	28	27

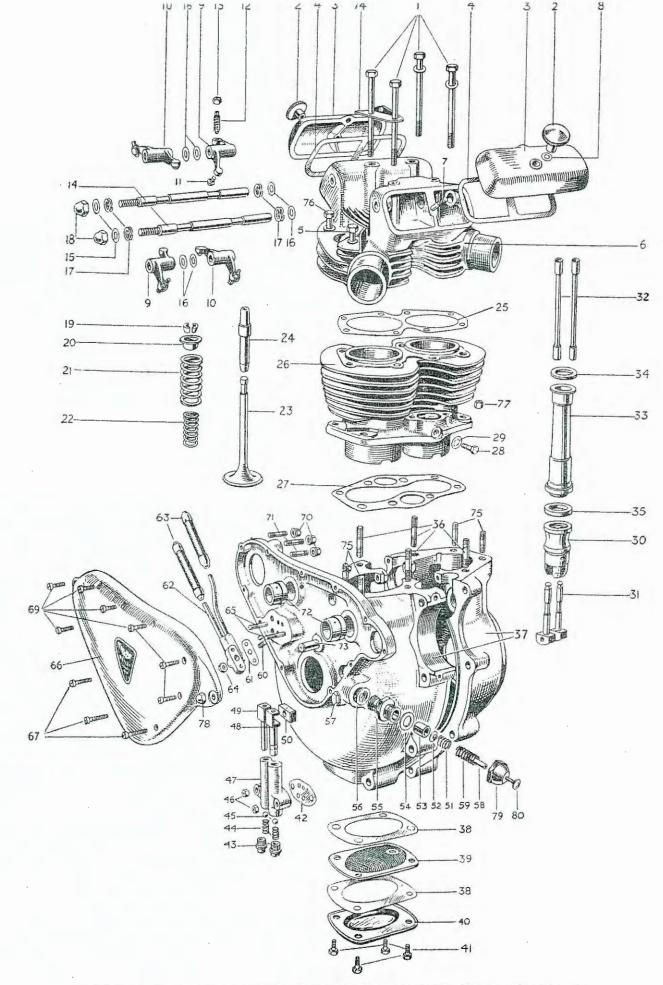

ENGINE 3T-CRANKCASE, CYLINDER BLOCK AND CYLINDER HEAD, ETC.

INDEX TO ILLUSTRATION ON PAGE 26

llust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	F.1795	18	17	40	E.486	29	17
2	E.1912	33	13	41	MT.63	29	19
3	E.1779	33	9	42	E.1537	30	9
4	E.1780	33	12	43	E.386	30	8
5	E.2631	18	18	44	E.403	30	7
6	E.2645	18	9	45	S.70-7	30	6
7	E.1987	18	35	46	F.879	29	14
8	PT.104B	33	14	47	GS.35	30	2
9	E.1755	33	18	48	E.1476	30	4
10	E.1756	33	20	49	GS.153	30	3
11	E.1483	33	21	50	E.495	30	5
12	E.1513	33	22	51	E.2789	31	10
13	E.470	33	23	52	E.2792	31	11
14	E.1813	33	28	53	GS.251	31	3
15	E.1330	33	24	54	GS.254	31	6
16	E.1575	33	25	55	E.2794	31	2
17	E.1574	33	26	56	E.1670	31	5
18	E.1435	33	29	57	E.2615	31	15
19	WE.259A	19	18	58	E.2793	31	9
20	E.1757	19	15	59	E.2788	31	7
21	E.1778	19	13	60	E.1539	29	4
22	E.1777	19	11	61	E.1529	70	9
23	E.1751 (In)	19	2	62	E.2457	70	8
	E.1752 (Ex)	19	5	63	MF.119	70	12
24	E.1759	19	9	64	5.1-51	70	10
25	E.2614	18	12	65	E.1536	29	13
26	E.2461	18	2	66	E.2252	31	13
27	E.2677	18	5	67	E.1049	32	6
28	H.200	32	33	69	E.427	32	7
29	E.2312	32	34	70	F.1008	29	2
30	E.1837	32	32	71	E.2022	29	1
31	E.1478	32	30	72	E.1479	29	31
32	E.1785	32	36	73	E.375	32	22
33	E.1838	32	38	74	F.2380	43	23
34	E.1497	32	41	75	E.2463	28	35
35	E.2425	32	40	76	E.2632	18	19
36	E.2462	28	34	77	W.76	28	36
37	E.2250/51A	28	31	78	E.2228	89	22
38	E.487	29	18	79	E.2790	31	4
39	E.529	29	16	80	E.2791	31	8

CRANKSHAFT AND FLYWHEEL ASSEMBLY

1	E2917	Crankshaft	and fl	ywheel a	ssembly				1			
2	E2917T	**		,,	**			-		1		
3	E2911	,,	,,	3.9	,,				_		1	
4	E2200A	Crankshaft	and f	lywheel	assembly	c/w	con-		Þ			
	1	rods						1				
5	E2916	Flywheel							1		-	
6	E2916T	,,						_		1		
7	E2908	,,						-			1	
8	E1745	,,						1		-		
9	E2915	Crankshaft,	timin	g side					1	1		
10	E2902	,,	,,	,,							- 1	
11	E1747	,,	**	**				1	_			
12	E2914	>>	drivir	ng "					1	1	-	
13	E2901	37	,,	,,							1	
14	E2200	,,	,,	**				1	-			
15	E1790	Tube, crank	<shaft< td=""><td>connecti</td><td>ng</td><td></td><td></td><td>1</td><td></td><td></td><td></td><td></td></shaft<>	connecti	ng			1				
16	E393	Plug, ,	,						1	1	5	
17	E1562	DI	,	to flywh	eel				6	6	6	
18	E1760	,, ,	,	,, ,,				2				
19	W103	Nut, ,	,	., ,,	bolt				6	. 6	6	
20	E1797	,, ,	,	** **	,,			2		-		

CONNECTING RODS

21	+ E2932	Rod, co	nnecting			 		2		
22	+ E2932T	**	,,		••••	 			2	
23	E2921	**	,,			 		-		2
24	E1749	,,	,,			 	2			-
25	E1511	Bush,	,,	rod sma	all end	 		2	2	2
26	E1762	**	,,	,, ,,	,,	 	2			
27	* E2490A	Bolt,	,,	,, cap		 		2	2	2
28	* E2922	Nut,	,,	33 33	bolt	 		2	2	2

⁺These are the latest pattern. If replacements are required for engines prior to No. 7131N, as illustrated on page 24, latest pattern should be ordered, in pairs only.

*For early pattern use E2448 bolt and E1530 nut on 5T and T100.

CRANKCASE

29	E2219/20A	Crankca	se asso	embly less	mair	n beari	ngs	 	1	1		
30	E2892/3			,, ,,	••	,,		 -			1	
31	E2250/51A	,,		,, ,,	,,	17		 1	_		-	
32	E672	Stud, cra	ankcas	e cylinder	base	1		 -	6	6	6	
33	E1614	"	**	,,	**	dowe	1	 	2	2	2	
34	E2462	,,	,,	,,	,,	long		 4			—	
35	E2463	**	,,	,,	,,	short		 4				
36	W76	Nut,	,,	"	**	stud		 8	4	4	4	
37	PO172A	.,	,,	,,	,,	,,		 _	4	4	4	
38	E1534A	Dowel,	,,	,,	,,	for El	614	 	2	2	2	
39	E1579	,,	,,	halves				 1	1	1	1	


CRANKCASE HALVES CANNOT BE SUPPLIED SEPARATELY


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	E2022 F1008 S25-3 E1539 S1-51 S25-3 E1532 E1535 E1508 E1770 E1509 E1645 E1536 F879 E2312 E529 E486	Nut, ,, ,, stud Washer, ,, ,, ,, ,, Stud, oil junction block Nut, ,, ,, ,, Washer, oil junction block Washer, oil junction block stud Washer, oil junction block stud Jowel ,, ,, ,, ,, crankcase to timing cover ,, crankcase oil return ,, ,, ,, Clip, ,, ,, Stud, oil pump fixing Nut, ,, ,, stud Washer, oil pump fixing stud		3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	3 3 1 1 1 1 1	3 3 1 1 1 1 1	3 3 1 1 1 1 1	
2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18	F1008 S25-3 E1539 S1-51 S25-3 E1532 E1535 E1508 E1770 E1509 E1645 E1536 F879 E2312 E529	Nut,,,,,studWasher,,,,,,,Stud, oil junction blockNut,,,,,Washer, oil junction block studDowel,,,,,,crankcase to timing cover,,crankcase to timing coverOlip,,,,,,,Clip,,,,,,,Stud, oil pump fixingNut,,,,,,,Staher, oil pump fixing stud	······································	3 1 1 1 1 1 1 1 1	3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18	S25-3 E1539 S1-51 S25-3 E1532 E1535 E1508 E1770 E1509 E1645 E1536 F879 E2312 E529	 Washer, ", ", ", ", ", ", ", ", ", ", ", ", ",	······································				3	J.M.
4 5 7 8 9 10 11 12 13 14 15 16 17 18	E1539 S1-51 S25-3 E1532 E1535 E1508 E1770 E1509 E1645 E1536 F879 E2312 E529	Stud, oil junction blockNut, ,, ,, ,, ,, ,, ,,Washer, oil junction block studDowel ,, ,, ,, ,, ,, ,,,, crankcase to timing coverPipe, crankcase oil return,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	······································	 				
5 7 8 9 10 11 12 13 14 15 16 17 18	SI-51 S25-3 E1532 E1535 E1508 E1770 E1509 E1645 E1536 F879 E2312 E529	Nut, ", ", ", ", Washer, oil junction block stud Dowel ", ", ", ", " crankcase to timing cover … Pipe, crankcase oil return … ", ", ", ", ", … Clip, ", ", ", ", ", … Screw, ", ", ", ", ", … Stud, oil pump fixing … Nut, ", ", ", stud … Washer, oil pump fixing stud	·· ·· ·· ·· ·· ·· ·· ·· ·· ·· ·· ··	 				
6 7 8 9 10 11 12 13 14 15 16 17 18	S25-3 E1532 E1535 E1508 E1770 E1509 E1645 E1536 F879 E2312 E529	Washer, oil junction block studDowel,,,,crankcase to timing coverPipe, crankcase oil return,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, <td>··· ··· ·· ··· ·· ··· ·· ···</td> <td> 2</td> <td></td> <td></td> <td></td> <td></td>	··· ··· ·· ··· ·· ··· ·· ···	 2				
7 8 9 10 11 12 13 14 15 16 17 18	E1532 E1535 E1508 E1770 E1509 E1645 E1536 F879 E2312 E529	Dowel ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	··· ···	1 - 			 	
8 9 10 11 12 13 14 15 16 17 18	E1535 E1508 E1770 E1509 E1645 E1536 F879 E2312 E529	", crankcase to timing cover Pipe, crankcase oil return ", ", ", ", ", ", ", ", ", ", ", ", ", "	··· ··· ·· ··· ·· ···	 2	 		1	
9 10 11 12 13 14 15 16 17 18	E1508 E1770 E1509 E1645 E1536 F879 E2312 E529	Pipe, crankcase oil return ,, ,, ,, ,, ,, ,, ,, ,, Clip, ,, Screw, ,, Stud, oil pump fixing Nut, ,, Washer, oil pump fixing stud	·· ··· ·· ··· ·· ···	 2	 - 		1	
10 11 12 13 14 15 16 17 18	E1770 E1509 E1645 E1536 F879 E2312 E529	,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,		 2			-	
11 12 13 14 15 16 17 18	E1509 E1645 E1536 F879 E2312 E529	Clip, ,, ,, ,, pipe Screw, ,, ,, ,, ,, ,, , Stud, oil pump fixing Nut, ,, ,, ,, stud Washer, oil pump fixing stud	 	1	1		I	
12 13 14 15 16 17 18	E1645 E1536 F879 E2312 E529	Screw, ", ", ", ", " Stud, oil pump fixing Nut, ", ", " stud Washer, oil pump fixing stud …	 	1	i			
13 14 15 16 17 18	E1536 F879 E2312 E529	Stud, oil pump fixing Nut, ,, ,, ,, stud Washer, oil pump fixing stud		2			1	
14 15 16 17 18	F879 E2312 E529	Nut, ,, ,, ,, stud Washer, oil pump fixing stud		4	2	2	2	,
15 16 17 18	E2312 E529	Washer, oil pump fixing stud		2	2	2	2	
16 17 18	E529			2	2	2	2	
17 18			•• •••					
18	E 404	rineer, erenneere eren		1	1	1	1	
	E400				1	1	1	
19	E487	Washer, ", ", " joint "			2	2	2	
	MT63	Screw, ,, ,, ,, ,,			4	4	4	
20	S26-2	Washer, ", ", ", spring	•• •••	4	4	4	4	
21	E2615	Plug, crankcase oil		1				
22	E1335	Washer, ,, ,, plug		1				
23	E2311	Pin, breather locating		1	1	1	1	
24 25 26 27 28 29 30 31	E2877 E1769 E1591 E1592 E2883 E2296 E489 E1479	Ring, ,, ,, ,, retaining Bush, ,, ,, camshaft) 	 2	 2	 	 	
32	E1516	" driving " " "				1	;	
33	E2260	,, ,, ,, ,, (breather)					Ì	
	CF	ANKCASE STUDS AND BOLTS						
34	E1555		·· . ···	1	1	1	1	
35	S25-3	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		1	1	I	1	
36	E925	Stud, ,, bottom front		1			_	
37	T456	··· ··· ···			1	1	1	
38	S1-51	Nut, ,, ,, ,, stud		2	2	2	2	
39	S25-3	Washer ", ", ", ", "			2	2	2	
40	E1647			2	2	2	2	
		For engine plate studs see pages 47 a	nd 43					


1


N

REF. No.	PART No.	DESCRIPTIC	N			3T	5T	T100	Τ6
	OIL	PUMP							
1	GS326	Pump assembly, oil			• • •	I	I	I	I
2	GS35	Body, oil pump				1	1		1
3	GS153	Plunger, oil pump feed				1	1	I	1
4	E1476	,, ,, ,, scavenge				1	1		1
5	E495	Block, ,, ,, slider				1	1	E	1
6	S70-7	Ball, ,, ,, ,,				2	2	2	2
7	E403	Spring, oil pump valve				2	2	2	2
8	E386	Plug, ,, ,, ,,				2	2	2	2
9	E1537	Washer, ,, ,, joint	· · ·	.17		1	I	1	1

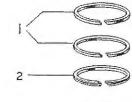

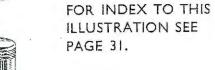

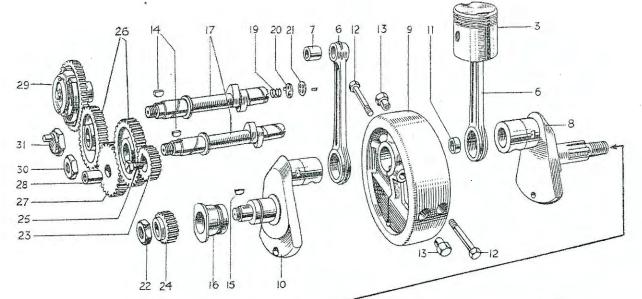

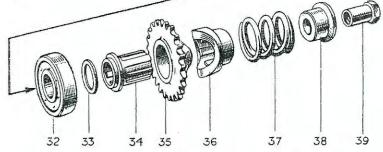



REF. No.	PART No.			DES	CRIPT	ION		3T	5T	T100	6T
	RE	LEASE VAI	LVE		•••						
1	E2795	Valve, rel	ease	and c	il indi	cator	 	1	1	E.	1
2	E2794	-	,,	valve			 	1	1	1	1
3	GS251		,,	,,			 	1	1	1	1
4	E2790	-	,,	**			 	1.	1	1	1
5	E1670	Washer,		,,	body		 	1	1	1	1
6	G\$254	Washer,		11	cap		 	ł	1	I	1
7	E2788		,,	,,	,,		 	1	1	1	1
8	E2791	Shaft, ind					 	1	1	I	1
9	E2793	Tube,	,,		ber		 	1	1	i	1
10	E2789	Spring,	22		iliary		 	1	1	1	1
11	E2792	Nut,	23		ft		 		1	i	1
	11T	MING COV	ER								
12	E2218	Cover, ti	min	g gear	(state	model)	 	-	1	1	and the second
13	E2252	,,	,,	,,			 	1			_
14	E378	Bush,	,,	,,	cover		 •••			1	1
15	E2615	Plug,	,,	33	,,		 	-	1	1	1
16	E1335	Washer,	,,	**	,,	plug	 	-	1		1

INDEX TO ILLUSTRATION ON PAGE 30

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref
1	E.1766	23	16	21	GS.87	32	27
2	E.1819	23	31	22	E.398	32	12
3	E.1748	19	38	23	E.2451	32	25
5	E.1841	23	1	24	E.1771	32	10
4	E.1750	23	37	25	111700	89	20
5	E.1767	23	39	26	E.1486	32	15
6	E.1749	28	24	27	E.2202	32	20
7	E.1762	28	26	28	E.400	32	21
8	E.2200	28	14	29	47502A	32	24
9	E.1745	28	8		E.1992	32	23
10	E.1747	28	11	30	E.1492	32	. 17
11	E.1790	28	15	31	E.1463	32	18
12	E.1760	28	18	32	E.1592	29	27
12	E.1797	28	20	33	E.1732	34	12
14	E.1558	32	16	34	E.1521	34	7
15	E.1580	32	11	35	E.2826F	33	42
16	E.1769	29	25	36	E.1681	34	6
17	E.2266	32	14	37	E.659	34	9
19	E.2256	32	28	38	E.396	34	10
20	E.2254	32	26	39	E.509	34	11

FOR IDENTIFICATION OF PARTS SEE PAGE 10

REF No.	PART No.			DESC	CRIPT	ION			3T	5T	T100	6T
. 1	E1595	Patent	plate							L	_	
2	E1678	1)	**							_	1	_
3	E1891	,,	,,						L			
4	E2909	,,	,,							-		1
5	D208-5		hamme	er driv	rer				3	3	3	3
6	E1049	,,	timing			(long)			2	3	3	3
7	E427		"	,,		(mediu	m)		2	7	7	7
8	E452			"	,,	(short)			6		_	
0	2102	,,	,,	11		```						
	TIMI	NG GI	EAR									
9	E1472	Pinion	, timing			• • •				1	1	1
10	E1771	,,	53						1			
11	E1580	Key, t	iming pi	nion				• • •	1	1	I	1
12	E398	Nut,							1	ł	1	1
13	E2302	Camsh	aft, inle	tore	xhaus	t				2	2	2
14	E2266	**	,,	,,	,,				2			
15	E1486	Whee		,,	,,	camsh	aft		2	2	2	2
16	E1558		amshaft						2	2	2	2
17	E1492	Nut,	17	,,		ust			1	1	F	1
18	E1463			**	inlet				I	1	I	
19	E1403	,, Whee	, intern							1	1	1
	E2202								I			
20	E400	", Bush,		,,	**	wheel			i	1	1	1
21				,,	"				1	i	1	1
22	E375	Spindl			**	"			i	i		i
23	E1992	Gear,	magneto				(B.T.H.)		1	I	1	1
24	47502A	**	, "	,,	**	**	(Lucas)	•••	1	i		1
25	E2451	Pinion	, dynam	0							1	. '
	CRA	NKCA	SE BR	EATH	HER							
26	E2254		crankca						1	1	E	-
27	GS87	Disc,	3.9			lve			L	1	I	1
28	E2256	Spring				15			1	1	E	1
	E2724	Pipe,	, ,, ,,		, eather				1	1	1	ł
29	22/27	ripe,	,,	0.10	action							
	TAP	PET A	ND TA	APPE	T BL	OCK						
30	E1478	Tappet							4	4	4	4
31	E1477		tappet							2	2	2
32	E1837	,,	,,						2			
33	H200		crew, ta	DDet					2	2	2	2
34	E2312		er, tappe						2	2	2	2
51												
	PUSH	H ROD)								<u>.</u>	
35	E1693	Rod, p	ush							, 4	4	4
36	E1785	,,	"				•••		4		-	-
	51.101	1.005			TUD	-						
		H ROE								2	2	2
37	E1505	lube,	push ro	d cove	er	•••		•••	2	2	2	2
38	E1838		** **					•••	2	-	2	2
39	E1496 .	Washe	r, push	rod c	over l	ower se		•••	-	2	2	2
40	E2425	,,	,,	,,	"	»			2	_	2	2
41	E1497	,,	,,	,,		ipper,		•••	2	2	2	2
		ALWA	YS Q	UOT	E PA	RT N	UMBER	S				

REF. No.	PART No.		DESC	RIPTIO	N			3T	5T	T100	6T
	OVE	RHEAD ROCI	KER	GEAR							
1	E1461	Box, inlet rocke			• • •				1		1
2	E146IT							_	-	I	
3	E1462	,, exhaust ro	cker						1	<u> </u>	1
4	E1462T	,,	,,					-		1	
5	E1650	Gasket, rocker			er hea	d			4	4	4
6	E1540	C 1	,, ,						4	4	4
7	F879				23			-	4	4	4
	E1564			, ,, nspectio					4	4	4
8		Сар, "						2	_		
9	E1779	,, ,, Davial	31	"				2			
10	E2423	Dowel, "	"	19	CO D			-	4	4	4
11	E1577	Washer, ,,	"	3 3	cap			2			
12	E1780	,, ,,	**	••	"	•••		2			
13	E1912	Nut, ,,	**	3 9	" (CL					_	
14	PT104B	Washer, "	5 9	3 7	(fibr	e)		2	4	4	4
15	E1545	Screw, "	,,	•••	•••	•••			4		
16	S25-13	Washer, "		crew		•••	•••		4	4	4
17	E1457	Rocker, valve R	.н.		~~~	•••		-	2	2	2
18	E1755	3 9 5 9	"			***		2			
19	E1458	,, ,, L	.н.				• • •		2	2	2
20	E1756	11 37	11					2	maxement		
21	E1483	Pin, valve rocke	er ball	··· *	•••	• • •		4	4	4	4
22	E1513	33 79 59	adju	isting				4	4	4	4
23	E470	Nut, ,, ,,		,, pi	n			4	4	4	4
24	E1330	Washer, valve i	ocker	thrust	3/1			2	2	2	2
25	E1575	11 77	,,		1/1			6	6	6	6
26	EI 574	17 37	19	thacke				4	4	4	4
20	E1512	Spindle, "	,,				***		2	2	2
	E1813	,, ,,	57					2			
28	E1435	Nut, ,,	,,	spindle				2	2	2	2
29	E1335	Machar		-1	nut			4	4	4	4
30			**								
	ROC	KER OIL FEED	AN C	ID DR	AIN	PIPES					6.0
31	E1937A	Pipe, rocker oil	feed				• • •		1	I	1
32	E1781	yy yy yy	19			•••	•••	1		-	-
33	E1947	Connection, pip	be (ru	bber)			• - •		1	I	1
34	XA69	Clip, pipe secur	ing					5	5	5	5
35	GS272	Pipe, rocker dr		let					1	1	1
	GS273			haust					1	1	1
36	E1335	Washer, rocker						·	8	8	8
37	E1601	Adaptor, "	,,	at cylin		ead		-	4	4	4
38	F1880	Washer, "	,,	copper					4	4	4
39	E984	Adaptor, "	12	at cove		2		_	2	2	2
40											
	ENG	INE SPROCK				K AB	SOF	RBER			
41	E2826F	Sprocket, engir				* * \$			1	1	
42	E2826F	** **		(solo)			•••	1	-	-	-
43	E2826C	32 37		(solo)		• • •			1		
44	E2826D	** **		(sideca		•••		-			l
45	E2826A	13 27	24T	(solo)	•••						1
75		WHEN IN F		RT SEI			F				

Sala Parata

ě.

٠,

WHEN IN DOUBT SEND SAMPLE

REF. No.	PART No.			DESCR	RIPTIC	NC		3T	5T	T100	6T
1	E2826H	Sprocke	t, engir	ne I7T			 		As rea	quired	
2	E2826G	,,	.,	18T			 		.,	,,	
3	E2826E	**	,,	20T			 		••	,,	
4	E2826B	,,	,,	23T			 		,,	"	
5	E2826	,,	,,	25T			 		,,	.,	
6	E1681	Slider, s	hock al	bsorbe	r		 	1	1	1	1
7	E1521	,,	,,	,,			 	1	1	1	1
8	E2912	Sleeve,	,,				 	-	1	1	1
9	E659	Spring,	12	53			 	I			
10	E396	Collar,		••	spri	ng	 	1	1	1	1
11	E509	Nut,	**	3.7	slee	ve	 	ł	1	1	1
12	E1732	Washer	, engine	e sprod	ket d	istance	 	I	-		-

EXHAUST SYSTEM GROUP

EXHAUST PIPE

13	E1520	Pipe, ex	haus	t N.S.			•••	 -	1	1	1
14	E2236A	,,	,,	N.S.				 1	-	—	-
15	E1519	,,	,,	O.S.				 -	1	1	1
16	E2237A	,,		O.S.				 1		-	_
17	E1269	Clip, ex	haus	t pipe	to cylin	der hea	bi	 	2	2	2
18	E2269	.,	**		,, ,,	,,		 2		—	
19	E409	Bolt,	,,	,,	clip			 2	2	2	2
20	E410A	Washer	* **	,,	" boli	t		 2	2	2	2

SILENCER


· 21	E1568	Silence	- N.S.				***		-	1	I	ł
22	E2646		,,,						I			
23	E1567	,,	,,							1	1	1
24	E2647	,,	,,		• • • •				1			
25	E688	Bolt, sil	encer	hanger	•				-	2	2	2
26	H570	,,	,,	,,					2	_		
27	T224	Nut,	,,	,,	bolt				2	2	2	2
28	F1335	Washer		,,	,	N.S.			1			
29	TE246	Clip, si	encer	to exh	aust	oipe				2	2	2
30	E2271		**		,,	,,			2		_	
31	TEI64E	Bolt,	,,	,,	,,	" clip			2	2	2	2
32	TEI64C	"D" nu	it, sile	ncer to	exha	ust pipe	clip	·	2	2	2	2
33	TE164D					exhaust		ip	2	2	2	2


ALWAYS QUOTE ENGINE NUMBER AND PREFIX

GEARBOX GROUP

GEARBOX CASING 1 T909 Casing with bushes, gearbox 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <t< th=""><th>F No.</th><th>PART No.</th><th>DESCRIPTION 3T 5T T100 6T</th></t<>	F No.	PART No.	DESCRIPTION 3T 5T T100 6T
2 T989 Dowel, casing to inner cover 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 <td< td=""><td></td><td>GEA</td><td>ARBOX CASING</td></td<>		GEA	ARBOX CASING
2 T989 Dowel, casing to inner cover 2 2 2 2 3 E698 Stud, gearbox casing to outer cover 2 2 2 2 4 S1-51 Nut, ", ", stud 2 2 2 2 5 S25-3 Washer, ", ", ", 2 2 2 2 6 T935 Cover with bushes, gearbox outer 1 1 1 1 1 7 T452 Screw, outer cover to casing (long) 1 1 1 1 1 8 E573 ", ", ", ", ", ", ", ", ", ", ", " 1 1 1 1 1 10 E1049 ", ", ", ", ", ", ", ", ", ", ", ", ", "	1	T909	Casing with bushes, gearbox IIIII
3 E698 Stud, gearbox casing to outer cover 2 2 2 2 4 S1-51 Nut, , , stud 2 2 2 2 5 S25-3 Washer, , , 2 2 2 6 T935 Cover with bushes, gearbox outer 1 1 1 1 7 T452 Screw, outer cover to casing (long) 1 1 1 1 9 E427 , , , , , 1 1 1 1 11 T931 Cover with bushes, gearbox inner 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1<	2		
4 S1-51 Nut, ", ", stud 2 2 2 2 2 5 S25-3 Washer, ", ", ", 2 2 2 2 2 6 T935 Cover with bushes, gearbox outer 1 1 1 1 1 7 T452 Screw, outer cover to casing (long) 1 1 1 1 1 8 E573 ", ", ", ", ", ", ", 1 1 1 1 1 9 E427 ", ", ", ", ", ", ", ", ", ", ", ", ", "			
5 525.3 Washer, ", ", ", ", ", ", ", ", ", ", ", ", ",			
6 T935 Cover with bushes, gearbox outer 1 1 1 1 7 T452 Screw, outer cover to casing (long) 1 1 1 1 8 E573 ,, , , , , , , , , , , 1 1 1 1 1 9 E427 , , , , , , , , , , , , , 2 2 2 2 2 10 E1049 , , , , , , , , , , , , , , , , , , ,			
7 T452 Screw, outer cover to casing (long) 1 1 1 1 1 8 E573 n n n n n n n 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			
8 E573 ",",",",",",",",",",",",",",",",",",",			
9 E427 ,, , , , , , , , , , , , , , , , , , ,			
10 E1049 ",",",",",",",",",",",",",",",",",",",			
11 T931 Cover with bushes, gearbox inner 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			
12 T323A Stud, gearbox inner cover to outer cover 1 1 1 1 13 S1-51 Nut, , , , , , , , , , , , , , , , , , ,			
13 S1-51 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",			
14 \$25-3 Washer, ", ", ", ", ", ", ", ", ", ", ", ", ",			
15 E329 Screw, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,			
16 E427 Screw, ,, , , , , , , , , , , , , , , , , ,			
17 T45 Stop, kickstarter quadrant 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			
18 T912 Peg, layshaft bush inner cover 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			Sciew, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,
19 T400 Cap, gearbox oil filler 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			
20 NT376 Washer, ,, ,, ,, joint			
21 S46-15 Plug, gearbox drain and inner cover level 2 2 2 2 22 PT104B Washer, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,			
22 PT104B Washer, ", ", ", ", ", ", ", ", ", ", 2 2 2 2 GEARBOX FITTINGS 23 T717 Plate, gearbox mounting clamp 2 2 2 2 24 T456 Stud, " clamp tie 2 2 2 2 25 S1-51 Nut, ", ", ", stud 3 3 3 26 T461 Nut, ", ", ", ", ", ", … 1 1 1 27 S26-3 Washer, ", ", ", ", ", ", … 2 2 2 2 28 F1681 Bolt, ", ", ", ", ", ", … 1 1 1 1 29 S4-13 Nut, ", ", ", bolt 1 1 1 1 30 S25-8 Washer, ", ", ", … 1 1 1 1 31 T430 Bolt, ", pivot … 1 1 1 1 32 F126 Nut, ", ", bolt … 1 1			
GEARBOX FITTINGS 23 T717 Plate, gearbox mounting clamp 2 2 2 24 T456 Stud, , clamp tie 2 2 2 25 S1-51 Nut, , , , stud 3 3 3 26 T461 Nut, , , , , 1 1 1 27 S26-3 Washer, , , , 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2			
23 T717 Plate, gearbox mounting clamp 2 2 2 2 24 T456 Stud, ,, clamp tie 2 2 2 2 25 S1-51 Nut, ,, ,, ,, ,, stud 3 3 3 3 26 T461 Nut, ,, ,, ,, ,, ,, ,, ,, 1 1 1 27 S26-3 Washer, ,, ,, ,, ,, ,, ,, 2 2 2 2 28 F1681 Bolt, ,, ,, ,, ,, ,, ,, ,, ,, 1 1 1 1 29 S4-13 Nut, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,	22	PT104B	Washer, ", ", ", ", ", ", … 2 2 2 2 2
24 T456 Stud, ,, clamp tie 2 2 2 2 25 S1-51 Nut, ,, ,, ,, ,, stud 3 3 3 26 T461 Nut, ,, ,, ,, ,, ,, ,, ,, ,, 1 1 1 1 1 27 S26-3 Washer, ,, ,, ,, ,, ,, ,, ,, ,, 1 1 1 1 29 S4-13 Nut, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, 1 1 1 1 29 S4-13 Nut, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,	23		
25 SI-51 Nut, ", ", ", stud 3 3 3 3 26 T461 Nut, ", ", ", ", ", ", 1 1 1 1 27 S26-3 Washer, ", ", ", ", ", ", 2 2 2 2 28 F1681 Bolt, ", ", ", ", ", ", 1 1 1 1 29 S4-13 Nut, ", ", ", ", ", ", 1 1 1 1 30 S25-8 Washer, ", ", ", ", ", ", ", 1 1 1 1 31 T430 Bolt, ", ", ", ", ", ", ", 1 1 1 1 32 F2391 Bolt, ", ", ", ", ", ", 1 1 1 1 33 F1126 Nut, ", ", ", bolt 1 1 1 1 34 S26-1 Washer, ", ", ", ", ", 1 1 1 1 35 T275 Adjuster assembly, primary chain 1 1			1.225, 822.551
26 T461 Nut,,,,,,,, .			
27 S26-3 Washer, ", ", ", ", ", ", … 2 2 2 2 28 F1681 Bolt, ", ", ", ", ", ", … 1 1 1 1 29 S4-13 Nut, ", ", ", ", ", ", ", … 1 1 1 1 30 S25-8 Washer, ", ", ", ", ", … 1 1 1 1 31 T430 Bolt, ", ", ", ", … 1 1 1 1 32 F2391 Bolt, ", ", ", ", … 1 1 1 33 F1126 Nut, ", ", ", bolt … 1 1 1 34 S26-1 Washer, ", ", ", … … 1 1 1 35 T275 Adjuster assembly, primary chain 1 1 1 1 SHAFTS AND GEARS 36 T914 Mainshaft and low gear (16T) 1 1 1 1 37 PT108B Bush, mainshaft for clut			Nue IIIII
27 51255 Hulsher, ", ", ", ", ", ", ", ", ", ", ", ", ",			
29 S4-13 Nut,,,,,,,, .			
30 S25-8 Washer, ,, , , , , , , , , , , , , , , , , ,			
31 T430 Bolt, ,, pivot			
32 F2391 Bolt, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,			
33 F1126 Nut, ", ", ", bolt I. I. I. I. 34 S26-1 Washer, ", ", ", ", I. I. I. I. 35 T275 Adjuster assembly, primary chain I. I. I. I. SHAFTS AND GEARS 36 T914 37 PT108B Bush, mainshaft for clutch rod I. I. I. I. 38 S66-1 Woodruff key No. 6 I. I. I. I.			
34 S26-1 Washer, ,, ,, ,, ,, 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <			
35 T275 Adjuster assembly, primary chain I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I			
SHAFTS AND GEARS 36 T914 Mainshaft and low gear (16T) I I I I 37 PT108B Bush, mainshaft for clutch rod I I I I I 38 S66-1 Woodruff key No. 6 I I I I			
36 T914 Mainshaft and low gear (16T) I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I	35	12/5	Adjuster assembly, primary chain I I I I I
37 PT108B Bush, mainshaft for clutch rod I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I		SHA	AFTS AND GEARS
37 PT108B Bush, mainshaft for clutch rod I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I	36	T914	Mainshaft and low gear (16T) I I I I
38 S66-1 Woodruff key No. 6 I I I I			
	50	T421	Nut, clutch to mainshaft 1 1 1 1
41 T542 Washer, ", ", lock 1 1 1 1	39 40	T420	

ร์ ระกรณ์หรือไม่เรื่องให้เรื่องใจวิตาม อร่างได้เร็ารารกาม แร้นครายงา

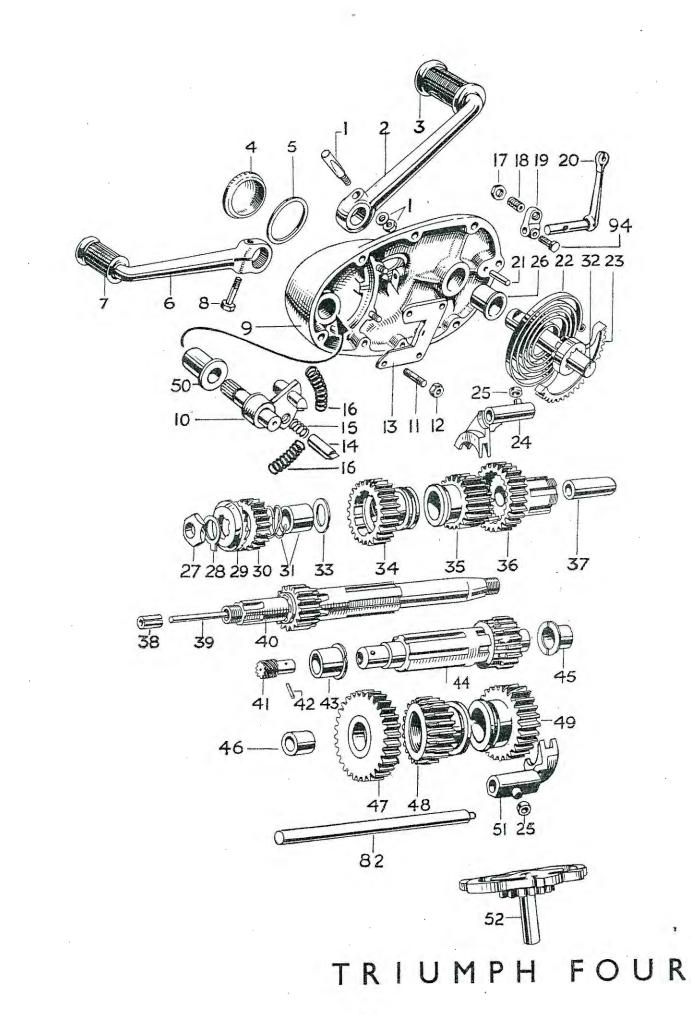

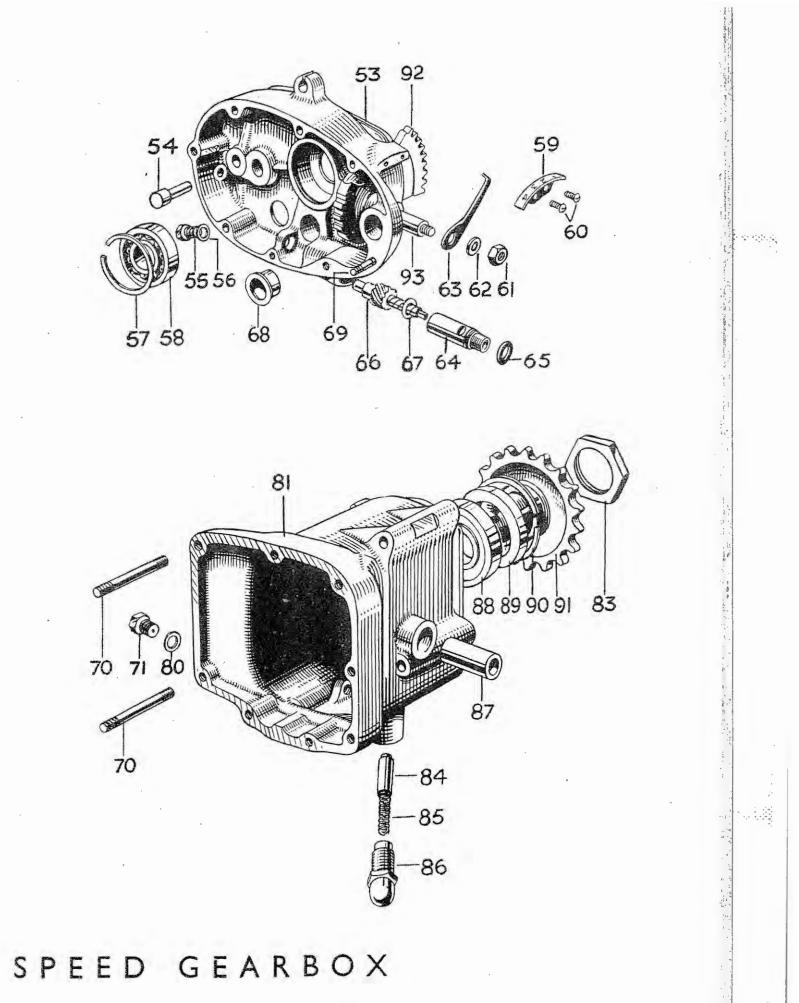

GEARBOX

INDEX TO ILLUSTRATIONS ON PAGES 36 AND 37

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	S.52-1	40	11	43	T.911	39	. 15
2	T.451	40	9	44	T.921	39	5
3	F.1814	40	10	45	T.911	39	15
4	T.400	35	19	46	T.928	39	9
5	NT.376	35	20	47	T.926	39	8
6	T.398	39	41	48	T.930	39	6
7	T.449	40	2	49	T.929	39	7
8	T.450	40	1.	50	T.57	39	20
9	T.935	35	6	51	T.913	39	32
10	T.408/9	39	38	52	T.500	39	26
11	T.454	39	35	53	T.931	35	11
12	F.879	39	36	54	T.45	35	17
13	T.407	39	34	55	S.46-15	35	21
14	T.406	39	39	56	PT.104B	35	22
15	T.405	39	40	57	T.280	39	14
16	T.404	40	3	58	S.35-7	39	13
17	T.453	42	10	59	T.396	40	7
18	T.413	42	9	60	D.208-17	40	8
19	T.402	42	6	61	T.224	40	5
20	T.487	42	4	62	S.25-3	40	6
21	T.47	40	13	63	T.395	40	. 4
22	T.31	40	12	64	Т.933	79	21
23	T.25A	40	14	65	T.948	79	22
24	T.260B	39	31	66	T.934	79	18
25	NT.261	39	27	67	T.825	79	20
26	Т.23	39	21	68	T.412	39	19
27	NT.297	40	19	69	T.323A	35	12
28	Т.732	40	20	70	E.698	. 35	3
29	T.731	40	17	71	S.46-15	35	21
30	T.730	40	16	80	PT.104B	35	22
31	T.488/28	40	18	81	T.909	35	1
32	T.24A	40	15	82	T.291	39	33
33	T.505	40	21	83	T.440	40	23
34	T.917	39	3	84	T.501	39	28
35	T.916	39	4	85	T.373	39	30
36	T.918	39	1	86	T.372	39	29
37	T.920	39	2	87	T.341	39	18
38	PT.108B	35	37	88	T.448	39	10
39	T.455	42	11	89	T.946	39	11
	T.455A	42	12	90	T.489	39	12
	T.455B	42	13	91	T.471A	40	22
40	T.914	35	36	92	T.397	39	24
41	T.924	79	15	93	T.399	39	25
42	T.925	79	17				

No.	PART No.	DESCRIPTION		3T	5T	T100	6T
i	T918	Gear, mainshaft high (26T)	•••	I	1	1	I
2	T920	Bush, ,, ,, gear		1	1	I	I
3	T917	Gear, ,, 3rd (24T)		1	1	1	1
4	T916	Gear, ,, 2nd (20T)		1	1	1	I
5	T921	Layshaft c/w high gear (20T) and speedo	gear	I	1	1	1
6	Т930	Gear, layshaft 3rd (22T)		I	1	1	1
7	T929	Gear, ,, 2nd (26T)		1	1	1	I
8	T926	Gear, ,, low (30T)		1	1	I	1
9	T928	Bush, ,, ,, gear		1	1	1	***
	GEA	RBOX SHELL BEARINGS					
10	T448	Bearing, high gear		I	I	1	1
11	T946	Oil seal, ,, ,, bearing		1	1	1	1
12	E489	Circlip, ,, ,, ,, retaining		1	1	1	ł
13	S35-7	Bearing, mainshaft		1	1	1	1
14	T280	Circlip, " bearing		1	1	I	1
15	T911	Bush, layshaft casing and inner cover		2	2	2	2
16	T912	Peg, layshaft bush		2	2	2	2
17	T981	Disc, layshaft bush		1	1	1	I
18	T341	Bush, gear selector camplate		1	I	1	Ques
19	T412	Bush, footchange spindle inner		1	1	1	1
20	T57	Bush, ", ", outer …		1	1	l	a contra
21	T23	Bush, kickstarter outer		ł	1	1	1
22	T933	Bush, speedo gear inner cover		I	1	I	1
23	T948	Washer, speedo gear inner cover sealing	g	1	I	1	1
	GEA	AR CONTROL (SELECTOR MECH	ANIS	M)			
24	T397	Quadrant, gear operating		1	1	ī	1
25	T399	Spindle, ", ", quadrant		1	1	1	1
20	10//	Split pin 1½" by 옳" dia		1	1	1	I
26	T500	Camplate, gear control		1	1	1	1
27	NT261	Roller, ,, ,, camplate		2	2	2	2 ·
28	T501	Plunger, ,, ,, ,,		1	1	1	1
29	T372	Bush, ,, ,, ,, plunge		1	I	1	1
30	T373	Spring, ,, ,, ,, ,, ,,		1	1	1	1
31	T260B	Fork, gear selector mainshaft		1	I	1	1
32	T913	Fork, ", ", layshaft		1	1	1	1
33	T291	Rod, ,, ,, fork	•••	I	I	1	1
	GEA	AR CONTROL (ENCLOSED FOOT	СНА	NGE)		
34	T407	Plate, footchange guide		1	1	1	1
35	T 454	Stud, ,, ,, plate		4	4	4	4
36	F879	Nut, ", ", stud …		4	4	4	4
00	E2312	Washer, ", ", ", ", …		4	4	4	4
37	T408/9	Plunger assembly, gear quadrant		1	1	1	1
		Plunger, gear quadrant		2	2	2	2
37	T406			2	2	2	2
37 38	T406 T405	Spring, ,, ,, plunger	• • •	2			
37 38 39			•••	1	I	1	I


11 - 1 - 1 - 11

and the second second second second

REF. No.	PART No.	DESCRIPTION		3T	5T	T100	6T
1	T450	Set screw, footchange pedal		I	· 1	ł	1
2	T449	Rubber, ,, ,,		I	. 1	I	1
3	T404	Spring, ", " return …		2	2	2	2
4	T395	Finger, gear indicator		1	1	4	1
5	T224	Nut, ,, ,,		I	1	1	I
6	S25-3	Washer, ", ",		I	I	1	1
7	T396	Quadrant, gear indicator		T	1	1	1
8	D208-17	5		2	2	2	2
0			•			-	
	KICK	STARTER					
9	T451	Crank, kickstarter	•	1	1	I.	1
10	F1814	Rubber, ,, crank	•	1	I	I.	
11	S52-1	Cotter pin c/w nut and washer		I	1	1	1
12	T31	Spring, k/s crank return	•	1	. 1	1	1
13	T47	Peg, ,, anchor		I	1	1	1
14	T25A	Quadrant, kickstarter		1	1	I	
15	T24A	Shaft, kickstarter axle		. 1	1	1	-
16	T730	Pinion, "		1	1	1	I
17	T731	Ratchet, kickstarter		I	1	1	1
18	T488/28	Sleeve and spring, pinion		1	1	1	1
19	NT297	Nut, kickstarter ratchet		1	I	I	1
20	T732	Washer, ,, lock		1	1	1	1
20	T505	Washer, " plain		1	1	1	1
22	T471A	BOX SPROCKET Sprocket, gearbox	0	I	1	ſ	I
23	T440	Nut, gearbox sprocket locking	•		1	1	1
	CLU	СН					
24	T938	Clutch assembly			I	-	
25	Т937	,, ,, ,,		1			
26	T984	··· ··· ··· ···					1
27	T940	Housing, clutch sprocket with			1	1	-
28	Т939	2) <u>1</u> 7 11 23 ····		1		_	
29	T985	······································					I
30	T394	Rollers, "housing		20	20	20	20
31	T417	Centre, clutch			I	- 1	_
32	T417A	Centre, ,,		1		_	
33	T872	Centre, ,,					1
	T418	11.1		I	I.	I	1
34	T414	Plate, clutch driving corked		3	4	4	5
35	NT288	A 1 1		72	96	96	120
36	T415			4	5	5	6
37	T415			4	4	4	4
38	T429	-F			4	4	
39				4			
40	T424	Pin, ", ", ",					4
41	T423A	Pin, ,, ,, ,, ,,		4	4	4	4
42	T427	Nut, ", ", ", pin			,		

いいないないのである

ALL GOODS SENT TO WORKS MUST BE CARRIAGE PAID

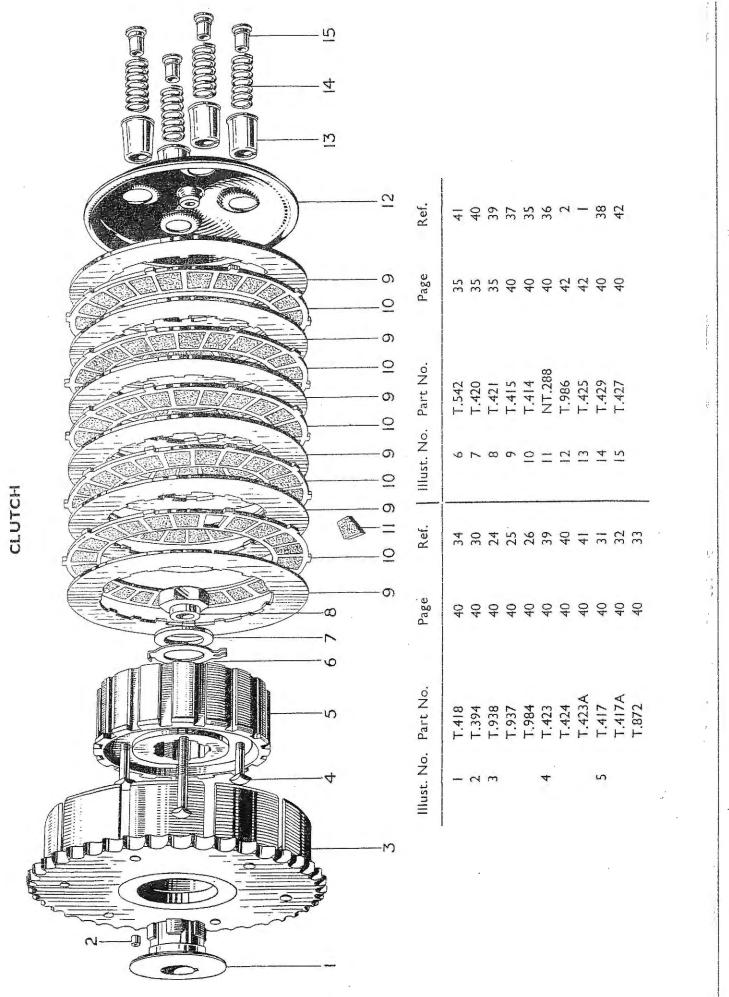

REF. No.	PART No.	•		ЗТ	5T	T100	6T			
1	T425	Cup, clutch		 4	4	4	4			
2	T986	Plate, clutch				 1	I	I	1	
3	T422	Button, "	,,	plate		 I	1	1	1	
	CLU	TCH CON	TROL							
4	T487	Lever, cluto	h operati	ing		 1	I	I	1	
5	T495	Сар, "		lever ru	bber	 1	1	1	1	
6	T402	Arm, ,,	,,	,,		 1	1	1	1	
7	T401	Peg, ,,	,,	,,		 1	1	1	1	
8	E2312	Washer, "		,, pe		 1	1	1	1	
9	T413	Pin, "		djusting		 1	1	1	1	
10	T453	Nut, ,,	,,	,, loc		 1	I	1	1	
11	T455	Rod, ,,		perating		 _	1	1		
12	T455A	Ded				 1				
13	T455B	Ded	**	**					1	
14	PTIO8B	Bush, ,,	,, rod to	,, mainshaft		 1	1	I.	1	

WIDE RATIO GEAR GROUP

15	T969	Gear,	mainsha	ft high 28T			 1	1	1	1	
16	T968	Gear,	,,	2nd 19T			 1	1	1	1	
17	T920	Bush,	,,	high gear			 1	2	1	1	
18	T971	Gear,	layshaft	high 18T (c/w	speedo	gear)	 1	I	1	1	
19	Т974	Gear,	,,	2nd 27T			 1	1	I	I	

CLOSE RATIO GEAR GROUP

20	T995	Mainshaf	t and	d low ge	ear 187	·	 	1	1	1	1	
21	PT108	Bush, ma	insh	aft for a	clutch	rod	 	1	1	1.	1	
22	T957	Gear,	,,	high	24T		 	1	I	1	1	
23	T955	Gear,	,,	2nd	21T		 	1	1	1	1	
24	T956	Gear,	,,	3rd	23T	'	 	1	1	1	1	
25	T920	Bush,	,,	high			 	1	1	1	1	
26	T961	Gear, lay	shaf	t low 28	ЭТ		 	1	1	1	1	
27	T959	Gear,	,,	high I	8T		 	1	1	1	1	
28	T963	Gear,	,,	2nd 2	5T		 	I	1	1	1	
29	T964	Gear,	,,	3rd 23	Т		 	1	I	1	1	
30	T928	Bush,	,,	low			 	1	1	1	1	

SEE PAGE 93 FOR GEAR RATIOS

FRAME GROUP

REF. No.	PART No.	DESCRIPTION 3T 5T T100	6T
	FRO	NT PORTION	
I	F2938	Frame, front portion I I	1
2	F2385	Frame, ", ", l — —	
3	F1561	Stud, seat lug to back stays I I	1
4	E1023	Stud, """""""""""""""""""""""	
5	PO172A	Nut, ,, ,, ,, ,, stud 2 2 2	2
6	S26-1	Washer, seat lug to back stays stud 2 2 2	2
7	F994	Stud, frame to chain stay seat tube I I I	1
8	S1-30	Nut, ,, ,, ,, ,, ,, stud 2 2 2	2
9	SCZ45	Washer, frame to chain stay seat tube stud 2 2 2	2.
10	F1841	Support, petrol tank front I I	6
11	F1451	Bolt, ,, ,, ,, support 1 1	
12	S1-52	Nut, ,, ,, ,, ,, 1	1
13	F3038	Support, ,, ,, rear —	1
14	F2687	Bolt, ,, ,, support 2 2	2
15	S26-3	Washer, ", ", ", ", — 2 2	2
16	NW100	Lubricator, steering column race I I I	I

SEE FRONT FORK GROUP FOR HEAD LUG STEERING RACES

REAR PORTION


17	F3102	Frame, rear	porti	on c/w p	rop star	nd lug			1	1	1
18	F3100	Frame, "	. ,1	,,	,, ,,	,,		1			
19	F969	Screw, rear	chain	adjuster				2	2	2	2
20	F1008	Locknut, ,,	19	,,	screw		÷.,	2			
21	F1824	Locknut "	,,	**	۶:				2	2	2

TORQUE BRACKET GROUP

22	E1597	Stay, engine to frame torque clip 2 2	2
23	F2380	Bracket, ,, ,, ,, ,, ,, I	-
24	E1598	Clip, torque stay to frame I I	I
25	F2381	Clip, " bracket l —	
26	F1031	Bolt, ,, stay clip 1	1
27	D\$55	Bolt, ,, bracket I — — –	-
28	PO172A	Nut, ,, stay clip – 1 1	1
29	SI-51	Nut, ,, bracket I	-
30	S25-3	Washer, torque stay clip I I	1
31	S26-3	Washer, " bracket I — — –	-
32	S1-52	Nut, " stay to engine bolt — 2 2	2
33	S26-1	Washer, ", ", ", ", ", — 2 2	2

FIGURE IN MODEL COLUMN DENOTES QUANTITY PER MACHINE

Break Stand an State - a - sha - a

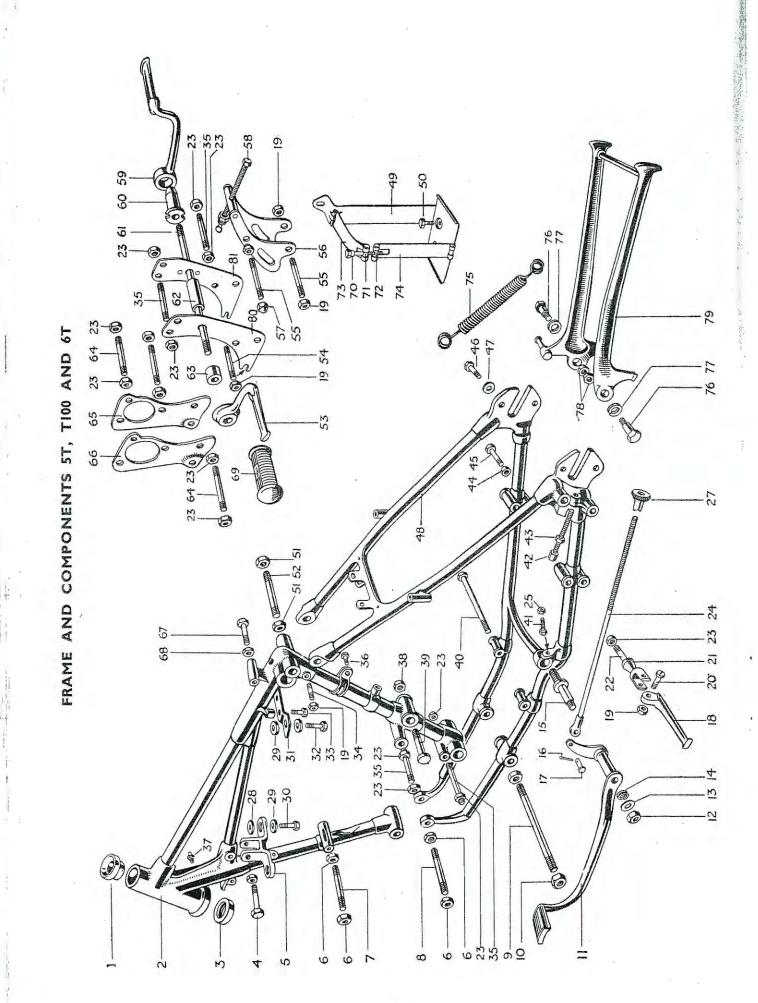


. .

INDEX TO ILLUSTRATION ON PAGE 44

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	H.437	51	20	42	F.969	43	19
2	F.2938	43	1	43	F.1824	43	21
3	H.111	, 51	21	44	T.224	34	27
4	F.1451	43	11	45	E.688	34	25
5	F.1841	43	10	46	E.579	64	4
6	DS.47	48	13	47	S.26-2	64	5
7	F.2414	48	11	48	F.3102	43	17
8	F.1680	48	17	49	F.2876	48	35
9	F.994	43	7	50	F.1715	48	45
10	S.1-30	43	8	51	PO.172A	43	5
11	F.1153	73	15	52	F.1561	43	3
12	S.1-51	73	22	53	F.987	73	33
12	S.25-2	73	23	54	F.839	48	29
14	S.26-16	73	24	55	T.456	35	24
15	F.867	73	19	56	T.717	35	23
15	1/16" Split Pin	15	17	57	T.461	35	26
16	WF.32	73	29	58	T.275	35	35
18	F.1694	74	8	59	F.1731	73	32
19	S.1-51	74	11	60	F.1736	73	35
20	F.2271	74	10	61	F.991	74	1
20	F.2268	74	13	62	F.862	74	6
22	F.1696	74	14	63	T.87	66	3
23	PO.172A	74	15	64	F.1711	48	23
23	F.1015A	73	26	65	E.2223	48	2
27	F.1015B	73	27	66	E.2222	48	1
27	NS.372	. 73	31	67/8	NA.64J	74	32
28	F.1813	67	40	69	NF.704	73	34
29	F.967	69	3	70	E.536	48	39
30	F.1808	69	1	71	E.534	48	37
31	F.3038	43	13	72	E.535	48	38
32	F.966	67	41	73	F.1667	48	40
32	F.2637	43	14	74	F.1668	48	41
34	F.1682	70	1	75	F.975A	53	9
35	F.839	48	29	76	F.977	53	10
36	F.929	69	16	77	F.976	53	12
37	NW.100	43	16	78	W.630	53	11
38	S.4-13	35	29	79	F.1834	53	8
39	F.1681	35	28	80	5.1811	48	4
40	T.430	35	31	81	F.1811A	48	5
41	F.1149	73	17				

FOR IDENTIFICATION OF PARTS SEE PAGE 10 FOR INSTRUCTIONS

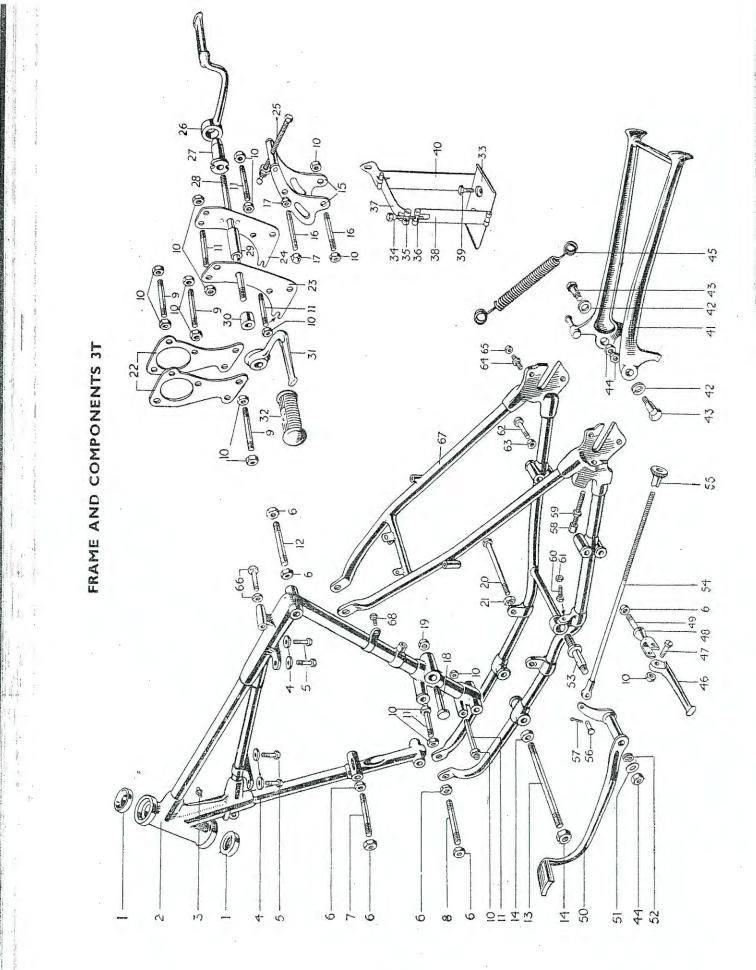

いないのないのであるのです。

INDEX TO ILLUSTRATION ON PAGE 46

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	XS.10	51	19	36	E.535	48	38
2	F.2385	43	2	37	F.1667	48	40
3	NW.100	43	16	38	F.1668	48	41
4	F.967	69	3	39	F.1715	48	45
5	F.966	67	41	40	F.2877/8	48	36
6	PO.172A	48	14	41	F.1834	53	8
7	E.1023	48	12	42	F.976	53	12
8	F.1711	48	18	43	F.977	53	10
9	E.925	48	24	44	W.630	53	11
10	S.1-51	48	26	45	F.975A	53	9
11	E.654	48	30	46	F.1694	74	8
12	E.1023	43	4	47	F.2271	74	10
13	F.994	43	7	48	E.2268	74	13
14	S.1-30	43	8.	49	F.1696	74	14
15	T.717	35	23	50	F.1153	73	15
16	T.456	35	24	51	S.25-2	73	23
17	T.461	35	26	52	S.26-16	73	24
18	F.1681	35	28	53	F.867	73	19
19	S.4-13	35	29	54	F.1015	73	25
20	F.2391	35	32		F.1015C	73	28
21	F.1126	35	33	55	NS.372	73	31
22	F.2235	48	3	56	WF.32	73	29
23	F.2392	48	6	57	1/16" Split Pin	1	
24	F.2396	48	7	58	F.969	43	19
25	T.275	. 35	35	59	F.1008	43	20
26	F.1731	73	32	60	F.1149	73	17
27	F.1736	73	35	61	F.879	73	18
28	F.1092	74	2	62	H.570	34	26
29	F.1081	74	5	63	T.224	34	27
30	T.200	66	4	64	F.946	62	14
31	F.987	73	33	65	F.947	62	15
32	NF.704	73	34	66	NA.64J	74	32
33	F.2876	48	35	67	F.3100	43	18
34	E.536	48	39	68	F.2687	43	14
35	E.534	48	37	1			

FOR IDENTIFICATION OF PARTS SEE PAGE 10 FOR INSTRUCTIONS


ENGINE PLATE GROUP

REF. No.	PART No.		DE	SCR	IPTIC	N			3T	5T	T100	6T	
· 1	E2222	Plate, engi	ne fron	t N.5	S.		·		-	1	1	1	
2	E2223	Plate, "		0.9						1	1	I	
. 3	E2235	Plate, "	,,						2	_			
4	F1811	Plate, "	rear	N.S						1	I	1	
- 5	FISIIA	Plate, ,,	,,	O.S.					-	I	1	1	
6	F2392	Plate, "	,,	N.S.					1		-		
7	F2396	Plate, "	,,	O.S					1				
8	F1117	Dowel, "	••		plate	e			2	. 2	2	2	
9	F2275	Cover, "	plate	e fro	nt					1	1	1	
10	F2395	Cover, "	,,	,,					1				
11	F2414	Stud, engi	ne plate	to f	rame	fron	t top	•••		1	1	1	
12	E1023	Stud, "		,,	,,	13	,,		I		-	-	
13	DS47	Nut, ,,	17	,,	,,	,,	,, st	bu:		2	2	2	
14	PO172A	Nut, ,,		,,	,,	,,	"	,,	2				
15	PCW73A	Washer, ,,		,,		,,		,,		2	2	2	
16	S26-1	Washer, ,,		,,	,,	,,	**	,,	2	_			
17	F1680	Stud, "		,,	,,	,,	,, be	ottom		I	I	1	
18	F1711	Stud, "		,,	,,	>>	,, be	ottom	1			_	
19	DS47	Nut, ,,		,,	7 9	,,	,,	stud		2	2 .	2	
20	PO172A	Nut, ,,	,,	,,	**	**	,,	stud	2	-			
21	PCW73A	Washer, ,,	22	,,	,,	53	,,	stud		2	2	2	
22	S26-1	Washer, ,,	,,	**	,,	,,	39		2		-		
23	F1711	Stud, "	**	,, (ranke	case	front			3	3	3	
24	E925	Stud, "	,1	,,	,,				3				
25	PO172A	Nut, ,,	17	37	23		,, st	ud		6	6	6	
26	SI-51	Nut, ,,	13	,,	,,		**		6				
27	S26-1	Washer, "	**	37	.,		,,			6	6	6	
28	S25-3	Washer, ,,	,,	,,			,,		6				
29	F839	Stud, cran	kcase ar	nd fra	ame r	ear				5	5	5	
30	E654	Stud,	** *	,	,,	,,			5				
31	PO172A	Nut,	,, ,	,		,, S'	tud			10	10	10	
32	S1-51	Nut,	,, ,	,	,,	,,	· · · ·		10				
33	S26-1	Washer,	,,	,	,,	37	,,			10	10	10	
34	S26-3	Washer,	,, ,	,	,,	,,	" …		10				
		BATTER	YC	AR	RIE	R	GRO	DUP					
25	E2976	Carrier as	sambly	hatt	orv				I	I	I	I	

35	F2876	Carrier ass	emb	ly, ba	ttery			 t	1	1	1
36	F2877/8	Base and ba	ack a	assem	bly, ca	rrier		 i	1	1	1
37	E534	Swivel, car	rier	strap	(plain	hole)		 1	1	1	I
38	E535	Swivel, ,	,	,,	(tappe	d hole)		 1	I	I	I
39	E536	Bolt, ,	,	**	swivel			 1	1	I	1
40	F1667	Strap, ,	,	top				 1	1	1	1
41	F1668	Strap, ,	,	front			• • •	 I	ł	I	1
42	F1727	Pin, ,	,	strap	hinge			 2	2	2	2
43	F1682	Stud, ,	,	to sea	at tube	boss		 1	1	1	l
44	S1-51	Nut,	,	,, ,,		,, st	cud	 1	1	I	I
45	F1715	Bolt, ,	,	,, pr	imary (cover		 2	2	2	2

ALWAYS QUOTE PART NUMBER

CRANKCASE FRAME STUDS, BOLTS AND WASHERS

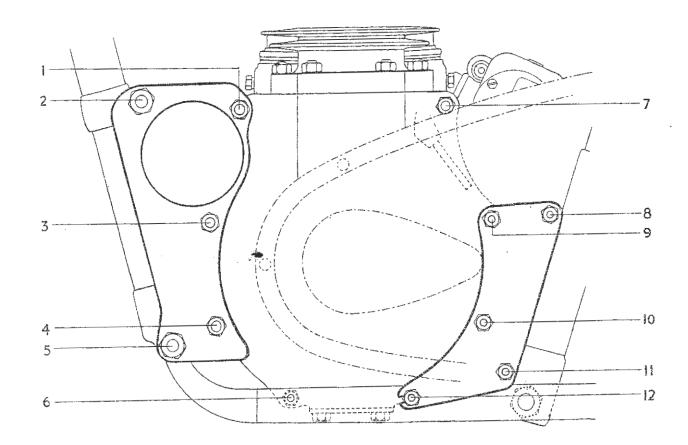

INDEX

350 c.c.

I, 3, 4 & 6	E.925 S.1-51 S.25-3	Stud. Nut. Washer.	5.	F.1711 PO.172A S.26-1	Stud. Nut. Washer.	8, 9, 10 11 & 12		Stud. Nut. Washer.
2.	E.1023 PO.172A S.26-1	Stud. Nut. Washer	7.	E.1555 S.25-3	Bolt. Washer.			
			5	00 c.c. and	650 c.c.			
1, 3, 4	F.1711 PO.172A S.26-1	Stud. Nut. Washer.	5.	F.1680 DS.47 PCW.73A	Stud. Nut. Washer.	7.	E.1555 S.25-3	Bolt. Washer.
2.	F.2414 DS.47 PCW.73A	Stud. Nut. Washer.	6.	T.456 S.1-51 S.25-3	Stud. Nut. Washer.	8, 9, 10 11 & 12.	PO.172A F.839 S.26-1	Nut. Stud. Washer.

FOR IDENTIFICATION OF PARTS SEE PAGE 10, FOR INSTRUCTIONS

1.1.1

FRONT FORK GROUP

REF. No. PART No. DESCRIPTION 3T 5T TI00 6T

FRONT FORK ASSEMBLY


1

7 \$25-3 Washer, ", ", ",	 2 4 4 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 	 	4 4 1 2 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 1 1 1 2 2 1 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2	 bolt 	 n pinch pinch ,, 	 ch t clamp ,, sleeve ,, to stanchior ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	", ", " Lug, fork head top Bolt, head top lug p Nut, ", ", ", b "U" bolt, handleban Washer, ", Nut, ", ", ", Crown and stem, fo Nut, crown and stem Nut, ", ", ", Bolt, ", ", ", Washer, ", ", ", Cover, nacelle N.S. Cover, ", O.S.	H692 H663A F1760 H379 H660 S25-3 S1-51 H695 H404 H405 H570 H518 S25-3 H656	3 4 5 6 7 8 9 10 11 12 13 14 15	
2 H692 ",",",",",",",",",",",",",",",",",",",	4 4 1 2 2 2 1 1 2 2 2 2 1 1 1 2 2 2 2 1 1	4 1 2 2 1 1 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 1 1 1 2 2 1 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2	 bolt 	 n pinch pinch 	 ch t clamp' sleeve sleeve to stanchior ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	", ", " Lug, fork head top Bolt, head top lug p Nut, ", ", ", b "U" bolt, handleban Washer, ", Nut, ", ", ", Crown and stem, fo Nut, crown and stem Nut, ", ", ", Bolt, ", ", ", Washer, ", ", ", Cover, nacelle N.S. Cover, ", O.S.	H663A F1760 H379 H660 S25-3 S1-51 H695 H404 H405 H570 H518 S25-3 H656	3 4 5 6 7 8 9 10 11 12 13 14 15	
3 H663A Lug, fork head top I I I 4 F1760 Bolt, head top lug pinch I I I 5 H379 Nut, ", ", ", bolt I I I 6 H660 "U" bolt, handlebar clamp" 2 2 2 7 S25-3 Washer, ", ", ", 4 4 4 8 SI-51 Nut, ", ", ", ", 4 4 9 H695 Crown and stem, fork I 1 1 10 H404 Nut, crown and stem sleeve I - - 11 H405 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",	4 4 1 2 2 2 1 1 2 2 2 2 1 1 1 2 2 2 2 1 1	4 1 2 2 1 1 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 1 1 1 2 2 1 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2	 bolt	 n pinch pinch , 	ch t clamp ,, sleeve to stanchior ,, ,, ,, ,,	Lug, fork head top Bolt, head top lug p Nut, ,, ,, ,, b "U" bolt, handlebar Washer, ,, Nut, ,, ,, Crown and stem, for Nut, crown and ster Nut, ,, ,, ,, Bolt, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	F1760 H379 H660 S25-3 S1-51 H695 H404 H405 H570 H518 S25-3 H656	4 5 6 7 8 9 10 11 12 13 14 15	
4 F1760 Bolt, head top lug pinch 1 1 1 5 H379 Nut, ", ", ", bolt 1 1 1 6 H660 "U" bolt, handlebar clamp 2 2 2 7 S25-3 Washer, ", ", ", 4 4 8 S1-51 Nut, ", ", ", ", 4 4 9 H695 Crown and stem, fork 1 1 10 H404 Nut, crown and stem sleeve 1 - - 11 H405 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",	4 4 1 2 2 2 1 1 2 2 2 2 1 1 1 2 2 2 2 1 1	4 1 2 2 1 1 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 1 1 1 2 2 1 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2	 bolt 	 n pinch pinch ,, 	t clamp' ,, sleeve to stanchior ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	Bolt, head top lug p Nut, ,, ,, ,, b "U" bolt, handlebar Washer, ,, Nut, ,, ,, Crown and stem, for Nut, crown and ster Nut, ,, ,, ,, Bolt, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	H379 H660 S25-3 S1-51 H695 H404 H405 H570 H518 S25-3 H656	5 6 7 8 9 10 11 12 13 14 15	
5 H379 Nut, ", ", ", bolt 1 1 1 1 6 H660 "U" bolt, handlebar clamp 2 2 2 7 S25-3 Washer, ", ",	4 4 1 2 2 2 1 1 2 2 2 2 1 1 1 2 2 2 2 1 1	4 1 2 2 1 1 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 1 1 1 2 2 1 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2	 bolt 	 n pinch pinch ,, 	t clamp' ,, sleeve to stanchior ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	Nut, ", ", ", b "U" bolt, handieban Washer, " Nut, " Crown and stem, fo Nut, crown and ster Nut, ", ", ", Bolt, ", ", ", Nut, ", ", ", Washer, ", ", ", Cover, nacelle N.S. Cover, ", O.S.	H660 S25-3 S1-51 H695 H404 H405 H570 H518 S25-3 H656	6 7 8 9 10 11 12 13 14 15	
6 H660 "U" bolt, handlebar clamp 2 2 2 7 S25-3 Washer, ,, ,, 4 4 8 S1-51 Nut, ,, ,, 4 4 9 H695 Crown and stem, fork 1 1 1 10 H404 Nut, crown and stem sleeve 1 - - 11 H405 Nut, ,, ,, ,, no. 1 - - 12 H570 Bolt, ,, ,, ,, no. 1 1 12 H570 Bolt, ,, ,, ,, no. 1 1 12 H570 Bolt, ,, ,, ,, no. 1 1 14 S25-3 Washer, n., ,, ,, ,, 1 1 1 16 H657 Cover, ,	4 4 1 2 2 2 1 1 2 2 2 2 1 1 1 2 2 2 2 1 1	4 1 2 2 1 1 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2 2 1 1 2 2 2	4 4 1 2 2 1 1 1 2 2 1 1 1 2 2 2	4 4 1 2 2 2 1 1 2 2	 bolt 	 n pinch pinch ,, 	,, sleeve to stanchior ,, ,, ,, to stanchior ,, ,, ,, ,, ,, ,,	"U" bolt, handlebar Washer, ,, Nut, ,, Crown and stem, for Nut, crown and ster Nut, ,, ,, ,, Bolt, ,, ,, ,, Nut, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	S25-3 S1-51 H695 H404 H405 H570 H518 S25-3 H656	7 8 9 10 11 12 13 14 15	
8 S1-51 Nut, , , , 4 4 4 9 H695 Crown and stem, fork 1 1 1 10 H404 Nut, crown and stem sleeve 1 1 1 11 H405 Nut, , , , 1 1 12 H570 Bolt, , , , n 1 1 12 H570 Bolt, , , , , n 1 1 12 H570 Bolt, , , , , n 1 1 12 H570 Bolt, , , , , n 1 1 14 S25-3 Washer, no Nut, n n n 1 1 16 H657 Cover, , O.S.	4 2 2 2 1 1 2 2 2 2 2 2 1 1	4 1 2 2 1 1 1 2 2 2 1 1 2 2 2 2	4 2 2 2 1 2 2 2 2 2 2 2	4 2 2 1 1 2 2 2 1 2 2 2	4 1 2 2 2 1 1 1 2 2	 bolt 	 n pinch pinch ,,, 	sleeve sleeve to stanchior ,, ,, ,, ,, ,, ,, ,, ,, ,,	Nut, ,, Crown and stem, for Nut, crown and ster Nut, ,, ,, ,, Bolt, ,, ,, ,, Nut, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	S1-51 H695 H404 H405 H570 H518 S25-3 H656	8 9 10 11 12 13 14 15	
9 H695 Crown and stem, fork 1 1 10 H404 Nut, crown and stem sleeve 1 - 11 H405 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",	 	 2 2 2 1 1 1 2 2 2 2 2 2 2 2 2 2	 2 2 2 1 1 2 2 2 2	 2 2 2 1 1 2 2 2 1 1 2 2 2	 2 2 2 1 1 2 2	 bolt 	 n pinch pinch ,, 	sleeve sleeve to stanchior ,, ,, ,, ,,	Crown and stem, for Nut, crown and ster Nut, ,, ,, ,, Bolt, ,, ,, ,, Nut, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	H695 H404 H405 H570 H518 S25-3 H656	9 10 11 12 13 14 15	
10 H404 Nut, crown and stem sleeve 1 11 H405 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",	2 2 1 1 2 2 2 2 2 1 1	2 2 2 1 1 1 2 2 2	2 2 1 1 1 2 2 2	2 2 1 1 1 2 2 2	2 2 1 1 2 2	 bolt 	 n pinch pinch 	sleeve ,, to stanchior ,, ,, ,, ,, ,, ,, 	Nut, crown and ster Nut, ,, ,, ,, ,, Bolt, ,, ,, ,, ,, Nut, ,, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	H404 H405 H570 H518 S25-3 H656	10 11 12 13 14 15	
11 H405 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",	2 2 1 1 2 2 2 2 2 1 1	2 2 2 1 1 1 2 2 2	2 2 1 1 1 2 2 2	2 2 1 1 1 2 2 2	2 2 1 1 2 2	 bolt 	n pinch pinch ,, 	,, to stanchior ,, ,, ,, ,, ,, ,, ,, ,, ,,, ,,,	Nut, ,, ,, ,, ,, Bolt, ,, ,, ,, Nut, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	H405 H570 H518 S25-3 H656	11 12 13 14	
12 H570 Bolt, ", ", ", ", to stanchion pinch 2 2 2 13 H518 Nut, ", ", ", ", ", ", ", pinch bolt 2 2 2 14 S25-3 Washer, ", ", ", ", ", ", ", ", ", ", ", ", ",	2 2 1 1 2 2 2 2 2 1 1	2 2 2 1 1 1 2 2 2	2 2 1 1 1 2 2 2	2 2 1 1 1 2 2 2	2 2 1 1 2 2	bolt	n pinch pinch ,, 	>> >> >> >>	Bolt, ,, ,, ,, Nut, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	H570 H518 S25-3 H656	12 13 14 15	
13 H518 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",	2 2 1 1 2 2 2 2 2 1 1	2 1 1 2 2 2 2	2 2 1 1 2 2 2	2 2 1 1 1 2 2 2	2 2 1 1 2 2	bolt 	pinch ,, 	>> >> >> >>	Nut, ,, ,, ,, ,, Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	H518 S25-3 H656	13 14 15	*
14 S25-3 Washer, ", ", ", ", ", ", ", ", ", ", ", ", ",	2 2 2 2 2 	2 2 2 2	2 2 2 2	2 2 2 2	2 2 2	···· ··· ···	** *** ***	>> >>	Washer, ,, ,, ,, Cover, nacelle N.S. Cover, ,, O.S.	S25-3 H656	14 15	
15 H656 Cover, nacelle N.S. 1 1 1 16 H657 Cover, ,, O.S. 1 1 1 17 H618 Top unit, nacelle 1 1 1 18 H669 Grommet, handlebar rubber 2 2 2 19 H689 Screw, top unit to bottom unit 2 2 2 20 H691 Nut for H689 2 2 2 21 E2880 Washer, for H691 2 2 2 21 E2880 Washer, for H691 1 1 1 23 H624 Motif (flash) N.S. 1 1 1 24 H688 Screw, motif front 2 2 2 2 25 H691 Nut, , , , , 2 2 2 2 2 2	 2 2 2 2 1 	 2 2 2	 2 2 2	 2 2	 2 2	···· ··· ···	 	···· ···	Cover, nacelle N.S. Cover, " O.S.	H656	15	*
16 H657 Cover, "O.S 1 1 1 17 H618 Top unit, nacelle 1 1 1 18 H669 Grommet, handlebar rubber 2 2 2 19 H689 Screw, top unit to bottom unit 2 2 2 20 H691 Nut for H689 2 2 2 21 E2880 Washer, for H691 2 2 2 22 H623 Motif (flash) N.S 1 1 1 23 H624 Motif motif mot 2 2 2 2 25 H691 Nut, " " 2 2 2 2 26 E2880 Washer, for H691 2 2 2 26 E2880 Washer, for H691 2 2 2 27 H687 Screw, top unit to bottom unit< … 2	2 2 1 1	2 2	2 2	 2 2	 2 2	···	 		Cover, " O.S.			
17 H618 Top unit, nacelle 1 1 1 18 H669 Grommet, handlebar rubber 2 2 2 19 H689 Screw, top unit to bottom unit 2 2 2 20 H691 Nut for H689 2 2 2 21 E2880 Washer, for H691 2 2 2 22 H623 Motif (flash) N.S. 1 1 1 23 H624 Motif (, O.S. 1 1 1 24 H688 Screw, motif front 2 2 2 25 H691 Nut, ,, ,, , 2 2 2 26 E2880 Washer, for H691 2 2 2 27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube fel	2 2 1 1	2 2	2 2	2 · 2	2	····	····				1.0	
18 H669 Grommet, handlebar rubber 2 2 2 19 H689 Screw, top unit to bottom unit 2 2 2 20 H691 Nut for H689 2 2 2 21 E2880 Washer, for H691 2 2 2 21 E2880 Washer, for H691 1 1 1 23 H623 Motif (flash) N.S. 1 1 1 23 H624 Motif f., O.S. 1 1 1 24 H688 Screw, motif front 2 2 2 25 H691 Nut,, 2 2 2 26 E2880 Washer, for H691 2 2 2 27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube felt	2 2 1 1	2 2	2 2	2 · 2	2				Top unit pacelle	H657	16	
18 H669 Grommet, handlebar rubber 2 2 19 H689 Screw, top unit to bottom unit 2 2 20 H691 Nut for H689 2 2 21 E2880 Washer, for H691 2 2 21 E2880 Washer, for H691 1 1 23 H623 Motif (flash) N.S. 1 1 23 H624 Motif f., O.S. 1 1 24 H688 Screw, motif front 2 2 2 25 H691 Nut, ,, ,, , 2 2 2 26 E2880 Washer, for H691 2 2 2 27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube felt 2 2 2	2 2 1 1	2 2	2 2	2 · 2	2			rubber	top unit, natene	H618	17	
19 H689 Screw, top unit to bottom unit 2 2 2 20 H691 Nut for H689 2 2 2 21 E2880 Washer, for H691 2 2 2 22 H623 Motif (flash) N.S. 1 1 1 23 H624 Motif , O.S. 1 1 1 24 H688 Screw, motif front 2 2 2 25 H691 Nut, ", ", " 2 2 2 26 E2880 Washer, for H691 2 2 2 27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube felt 2 2 2 29 H414 Cover tube bottom, c/w wheel spindle lug N.S. 1 1 1 30 H415	2 2 1	2	2	. 2						H669	18	
20 H691 Nut for H689 2 2 2 21 E2880 Washer, for H691 2 2 2 22 H623 Motif (flash) N.S. 1 1 1 23 H624 Motif (flash) N.S. 1 1 1 24 H688 Screw, motif front 2 2 2 25 H691 Nut, ", ", " 2 2 2 26 E2880 Washer, for H691 2 2 2 27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube felt 2 2 2 29 H414 Cover tube bottom, c/w wheel spindle lug N.S. 1 1 1 30 H415 Cover ", ", ", ", ", ", ", ", ", ", ", ", ",	2 				2					H689	19	
22 H623 Motif (flash) N.S. I I I 23 H624 Motif ,, O.S. I I I 24 H688 Screw, motif front I I I 24 H688 Screw, motif front I I I 25 H691 Nut, ,, ,, ,, I I I 26 E2880 Washer, for H691 I I I I 27 H687 Screw, top unit to bottom unit I I I I 28 H420 Washer, cover tube felt I I I 30 H415 Cover tube bottom, c/w wheel spindle lug N.S. I I I 30 H415 Cover , , , I, I, I, I, I I I I 31 H519 Plug, cover tube bottom drain I I I 32 H430 Washer, cover tube bottom drain plug I I I <td>l l</td> <td>2 </td> <td>2</td> <td>2</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>20</td> <td></td>	l l	2 	2	2							20	
22 H623 Motif (flash) N.S. I I I I 23 H624 Motif ,, O.S. I I I 24 H688 Screw, motif front I I I 24 H688 Screw, motif front 2 2 2 25 H691 Nut, ,, ,, ,, 2 2 2 26 E2880 Washer, for H691 2 2 2 27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube felt 2 2 2 29 H414 Cover tube bottom, c/w wheel spindle lug N.S. I I I 30 H415 Cover , , , , , , , , , , , , , , , , , , ,	1	1	1		2				Washer, for H691	E2880	21	
23 H624 Motif "O.S	1	1.		1	1					H623	22	
25 H691 Nut, ", ", ",	2		1	t	1					H624	23	
26 E2880 Washer, for H691 2 2 2 27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube felt 2 2 2 29 H414 Cover tube bottom, c/w wheel spindle lug N.S. 1 1 1 30 H415 Cover , , , , , , , , , , , , , , , , , , ,		2	· 2	2 .	2				Screw, motif front	H688	24	
27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube felt 2 2 2 29 H414 Cover tube bottom, c/w wheel spindle lug N.S. 1 1 1 30 H415 Cover ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	2	2	2	2	2				Nut, ,, ,,	H691	25	
27 H687 Screw, top unit to bottom unit 2 2 2 28 H420 Washer, cover tube felt 2 2 2 29 H414 Cover tube bottom, c/w wheel spindle lug N.S. 1 1 1 30 H415 Cover , , , , , , , , , , , , , , , , , , ,	2	2	2	2	2				Washer, for H691	E2880	26	
28 H420 Washer, cover tube felt 2 2 2 29 H414 Cover tube bottom, c/w wheel spindle lug N.S. I I I 30 H415 Cover ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	2	2	2	2	2			ttom unit		H687	27	
30 H415 Cover ,, , , , , , , , , , , , , , , , , ,	2	2	2	2	2					H420	28	
30 H415 Cover ,, , , , , , , , , , , , , , , , , ,	1	1	1	1	I	N.S.	indle lug	w wheel spi	Cover tube bottom,	H414	29	
32 H430 Washer, cover tube bottom drain plug 2 2 2	1 .	1	I	I	i					H415	30	
si iniso intester de contra realizada en esta esta esta esta esta esta esta esta	2	2	2	2	2			om drain	Plug, cover tube bot	H519	31	
22 E1760 Pole N.S. cover tube bottom wheeling pinch []	2	2	2	2	2		n plug	ottom drain	Washer, cover tube	H430	32	
55 FIVE Bolt, N.S. Cover tube bottom wheeling place	1	1	1	1	1	binch	el lug p	bottom whe	Bolt, N.S. cover tube	F1760	33	
34 H379 Nut, N.S. cover tube bottom wheel lug bolt I I	1	1.	I.	1	1	bolt	eel lug	bottom wh	Nut, N.S. cover tub	H379	34	
35 H390 Sleeve, cover tube bottom dust excluder 2 2 2	2	2	2	2	2	•	xcluder	ttom dust e	Sleeve, cover tube b	H390	35	
36 H391 Washer, cover tube bottom dust excluder						uder	st excl	bottom dus	Washer, cover tub	H391	36	
sleeve felt 2 2 2	2	2	2	2	2				sleeve felt			
	2	2		2	2			ng for H391	Washer, inner retain	H445	37	
38 H431 Washer, outer ,, ,, ,, 2 2 2	2	2			2					H431		
39 H441 Bearing, bottom cover tube 2 2 2	2	2						r tube				
40 H382A Stanchion 2 2 2	2	2							-			
41 H519A Plug, stanchion oil filler 2 2 2		•	2		2			er	Plug, stanchion oil fi			
42 H430 Washer, " " " 2 2 2	2 2				-							

ALL GOODS SENT TO WORKS MUST BE CARRIAGE PAID

REF. No.	PART No.	DESCRIPTION	3T	5T	T100	óТ
1	H432A	Nut, stanchion upper sleeve cap	. 2	2	2	2
2	H443	Bearing, stanchion lower	. 2	2	2	2
3	H444	Nut, stanchion hydraulic stop	. 2	2	2	2
4	H385	Spring, main (identification mark white)	. 2			<u>.</u>
5	H384	Spring, ,, (,, ,, red)	. —	2	2	2
6	H505	Spring, " (sidecar identification mark blue	.)	2	2	2
7	H52IA	Pressure tube assembly	. I	1	I	l
8	H399A	Rod, oil restrictor	. 2	2	2	. 2
9	H452	Restrictor, oil	. 2	2	2	ີຼ່
10	H453	Cup, oil restrictor rod	. 2	2	2	2
1	H454	Pin, ,, ,, ,, cup	. 2	2	2	2
12	F879	Nut, ,, ,, ,,	. 2	2	2	2
13	H.394	Tube, pressure	2	2	2	2
14	H395	Body, pressure tube valve	-	2	2	2
15	H397	Sleeve, pressure tube support	. 2	2	2	2
16	H500	Pin, valve body	•	2	2	2
17	H398	Bolt, pressure valve body to lug	~	2	2	2
18	E1335	Washer, ,, ,, ,, ,, ,, ,, ,, bolt	•	2	2	2
		ring cups, cones and balls				
19	XSI0	Cup, frame lug top				
20	H437	Cup, ,, ,, ,,		1	1	ê
2!	HIII	Cup, ,, ,, bottom			-	1
22	XSIO	Сир, ", ", ",	, versus			-
23	H438	Cone, head lug top		ļ	R. F.	ł
24	H433	Cone, ,, ,, ,,	1			
25	H439	Cone, crown and stem, bottom		1	-	1
26	XS8	Cone, ,, ,, ,, ,,	anang a	and with the		
27	S70-4	Ball, top race <u>3</u>	22	22	22	22
28	S70-3	Ball, bottom race 🚽 🦳		20	20	20
- 29	S70-4	Ball, ,, ,, <u>3</u> ^{<i>a</i>}	22			
30	H406	Cover, top cone dust	1			
31	H407	Cover, ,, ,, ,,		1	1	}
	STEE	RING DAMPER				
32	H536	Knob, with rod	1	ł	1	ł
33	H565	Washer, rod	Ì	I	ł	1
34	H408	Sleeve, rod adjusting	1	ł	1	i
35	H409	Pin, securing sleeve	1		1	ł
36	H413	Plate, damper anchor		ł	1	1
37	H434	Plate, ,, ,,	ł			
38	F1718	Bolt, ,, ,, plate	1	1	1	l
39	SI-51	Nut, ", ", ", bolt	I	ł	1	ł
40	S25-3	Washer, ,, ,, ,, ,, ,, ,,	ł	ł	1	1
41	H435	Disc, ,, ,, ,, friction	ł	1	ł	1
42	H95	Plate, friction disc spring	1	1	1	ł

SEE PAGES II TO 17 FOR CARTON PACKS

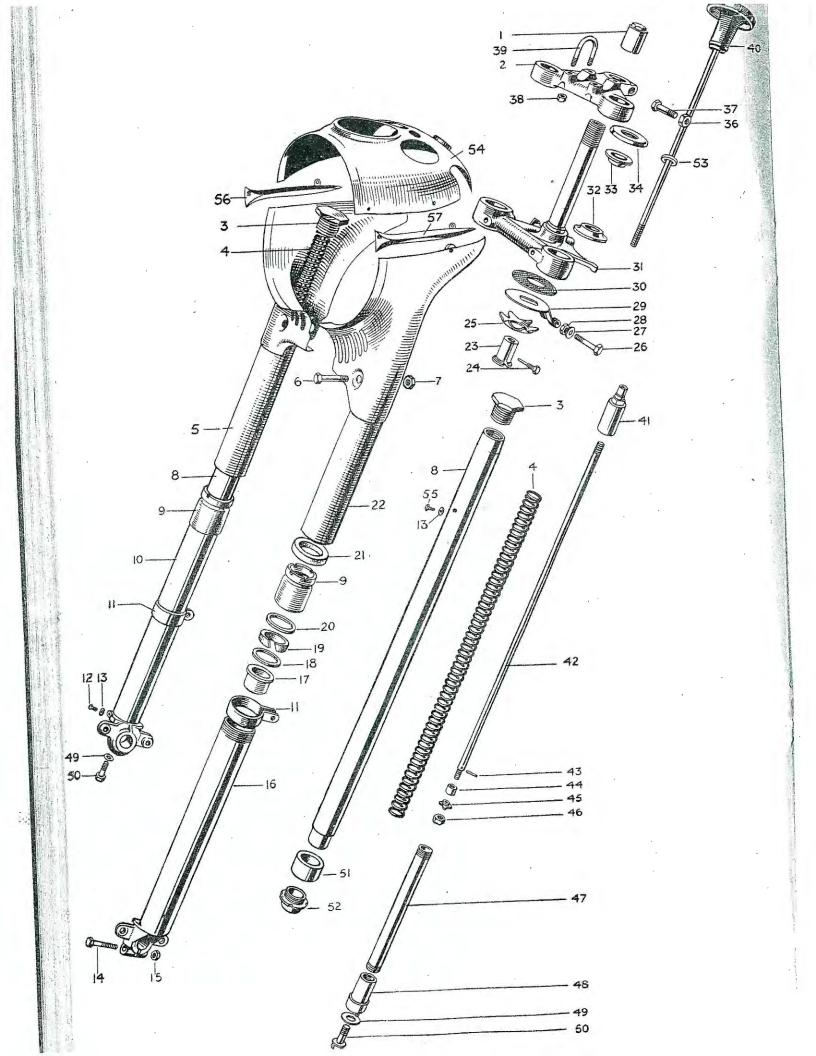

		51		GROUF						
REF. No.	PART No.		DESCI	RIPTION			3T	5T	T100	6T
	FRO	NT STAN	D	1. 24						
1	H412	Stand asser	mbly, front				1	I	1	1
2	DS55	Bolt, front	stand to g	uard			1	1	I	I
3	S1-51	Nut, "	-,, ,,	,, ·			1	1	1	1
4	NS362		,, ,,	,, spigot			1	1	1	1
5	H424	Screw, "	33 37	" pivot			2	2	2	2
6	S25-3			o guard pivot			2	2	2	2
7	H425	Washer, sp		,, ,, ,,		•••	2	2	2	2
,	REA	R STAND								
8	F1834	Rear stand	assembly				1	1	1	1
9	F975A	Spring, rea					1	1	11	1
10	F977	Bolt, "					2	2	2	2
10	W630			, bolt			2	2	2	2
12	F976	Washer, ,,		, ,,			2	2	2	2
12										
Illust. No.		IDEX TO Page	Ref.	Illust. No.			52	Page	F	lef.
		1 450								
1	H.405	50	11	29	H.413			51		36
	H.404	50	10	30	H.435			51		41
2	H.663A	50	3	31	H.695			50		9
3	H.432A	51	1	32	H.439	(51		25
4	H.384	51	5		XS.8			51		26
	H.505	51	6	33	H.438	5		51		23
	H.385	51	4		H.433			51		24
5	H657	50	16	34	H.407			51		31
. 6	H.570	50	12		H.406			51		30
7	H.518	50	13	36	H.379			50		5
8	H.382A	50	40	37	F.176	Ο.		50		4
9	H.390	50	35	38	S.1-51			50		8
10	H.415	50	30	39	H.660			50		6
≠ 1.	H.428	61	7	40	H.536			51		32
12	H.519	50	31	41	H.397			51		15
13	H.430	50	32	42	H.399	A		51		8
14	F.1760	50	33	43	H.454			51		11
15	H.379	. 50	34	44	H.453			51		10
16	H.414	50	29	45	H.452			51		9
17	H.441	50	39	46	F.879			51		12
18	H.431	50	38	47	H.394			51		13
19	H.391	50	36	48	H.395			51		14
20	H.445	50	37	49	E.133			51		18
20	H.420	50	28	50	H.398			51		17
21	H.656	50	15	51	H.443			51		2
	H.408	51	34	52	H.444			51		3
23		51	35	53	H.565			51		33
24	H.409	51	42	54	H.618			50		17
25	H.95	51	38	55	H.519			50		41
26	F.1718			56	H.624			50		23
27	S.25-3	51	40 39	57	H.623			50		22
28	S.1-51	51	37	1 5/	11.02.			50		

.

WHEELS

NOTE. Spokes with specially angled heads ensures very sturdy wheel construction.

- To maintain this condition, state clearly when ordering sundry spokes :---
 - (a) Side of wheel, i.e., brake side or reverse ; N/S or O/S.

(b) Whether head of spoke is toward or away from wheel centre.

83° towards centre90° away from centre88° towards centre94° away from centre


FRONT WHEEL GROUP

REF No.	PART No.	DESCRIPTION		ЗT	5T	T100	6T
1	W571	Wheel, front complete		I	1	1	1
2	W572	Wheel, front less bearing and brake assemb	ly	1	i.	1	4
3	W351	Rim, front wheel		1	1.	1	1
4	W662	Spoke, short $6\frac{13}{32}$ × 10G × 83° O.S.		10	10	10	10
5	W663			10	10	10	10
6	W660	C 011# 100 000 110		10	10	10	10
7	W661	Spoke, long $8\frac{11}{32}$ " × 10G × 90° N.S.		10	10	10	10
8	S79-2	Ninnla anaka		40	40	40	40
. 9	W573A	Hub shall as a shall		1	T	1	1
10	W576	Drum braka accombly		1	1	1	- I
11	W62	Dale hundre during		8	8	8	8
12	S1-51	Nut, brake drum bolt		8	8	8	8
13	W63	Lockalata braka dayan nya		8	8	8	8
14	W578	Coindle frank wheel but		1	1	1	1
15	W761	Closure and college fragmentes to 1		1	I	Ĩ	1
16	W544	Nut		1	1	1	1
17	W545	W/achow		1	1	1	T
18	W653	Bearing front wheel hall		2	2	2	2
19	W581	Distance piece hall beauing		1	1	1	.1
20	W582	Ring hall bearing retaining		1	1	1	1
21	W583	Cap hall bearing dust		1	1	T	1

INDEX TO ILLUSTRATION ON PAGE 55

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.	
I	W.578	54	14	17	W.588	56	2	-
2	W.583	54	21	18	S.25-2	56	4	
3	W.653	54	18	19	PO.172A	56	3	
4	W.581	54	19	20	W.592	56	13	
5	W.761	54	15	21	W.589	56	10	
6	H.569	61	2	22	S.25-6	56	12	
7	W.545	54 .	17	23	S.1-52	56	L)	
8	W.544	54	16	24	H.427	61	6	
9	W.582	54	20	25	DS.55	53	2	
10	S.1-51	54	12	26	DS.57	61	3	
11	W.63	54	13	27	F.879	61	4	
12	W.573A	54	9	28	F.2698	64	6	
13	W.93	56	5	29	S.26-2	64	8	
14	W.135	56	8	30	H.566	61	1	
15	W.386A	56	9	31	H.251	64	9	
16	W.585	56	I					

THE PARAGRAPH ABOVE ON SPOKE HEAD ANGLES IS IMPORTANT

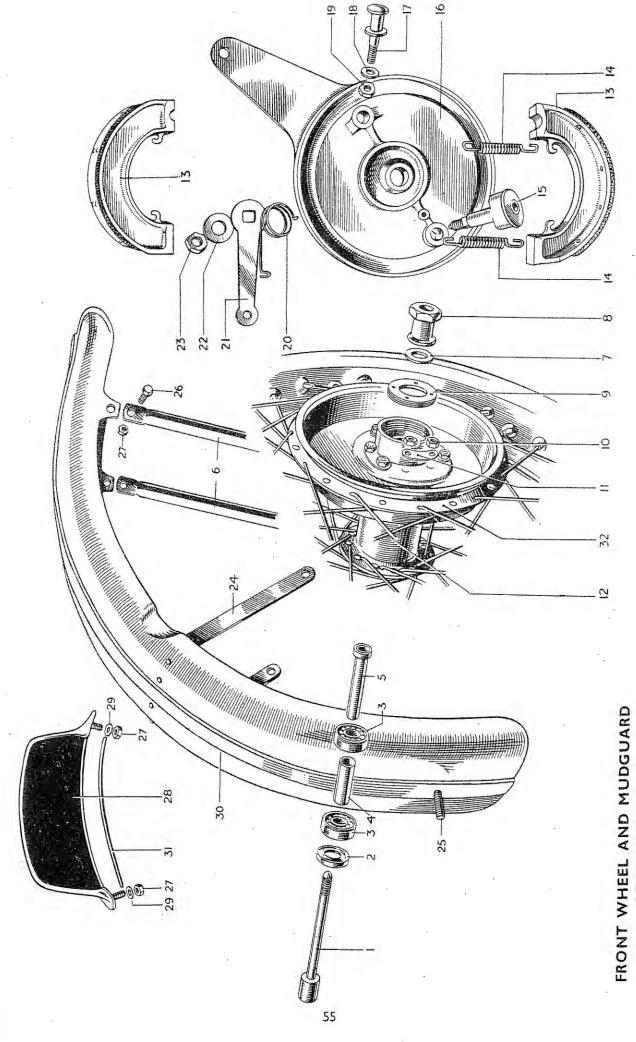

ARRANGEMENT

A Manual and a strategy and

REF. No. PART No. DESCRIPTION

FRONT WHEEL BRAKE


I	W585	Plate, front brake anchor		1	I	1	1
2	W.588	Pin, ,, ,, shoe fulcrum		1	Ĩ	i	i
3	PO172A	Nut, ,, ,, ,, ,, pin		1	1	I.	i
4	S25-2	Washer, ,, ,, ,, ,, ,, ,, ,,		T	1	I	1
5	W93	Shoe, ,, ,, with lining		2	2	2	2
6	NW243	Lining, ,, ,, shoe		2	2	2	2
7	W129	Rivets, shoe lining		16	16	16	16
8	W135	Spring, brake shoe return		2	2	2	2
9	W386A	Cam assembly, brake		1	1	1	I
10	W589	Lever, front brake cam		1	1 '	I.	I
11	SI-52	Nut, ,, ,, ,, lever		1	1	1	1
12	S25-6	Washer, ,, ,, ,, ,, nut		1	I	T	1
13	W592	Spring, ,, ,, ,, ,, return		1	. 1	1	1
14	WF32	Pin, ", " lever pivot …		L	I	1	1
		Split pin, pivot pin $\frac{1}{16}'' \times \frac{1}{2}'' \dots \dots$	•••	I	I	I	1

REAR WHEEL GROUP

15	W863	Wheel, rear complete		1	1	1	1	
16	W860	Wheel, rear less bearing and brake asser	mbly	1	1	1	1	
17	W79A	Rim, rear wheel		1	1	1	1	
18	†NW125X	Spoke, $8\frac{3}{4}'' \times 9G \times 100^\circ$, N.S. and O.S.		20	20	20	20	
19	*NW125	Spoke, $8\frac{3}{4}'' \times 9G \times 76^\circ$, N.S. and O.S.		20	20	20	20	
20	TW5	Nipple, spoke		40	40	40	40	
21	W861	Hub, shell assembly		1	1	1	1	
22	W311 .	Drum, rear brake		I	1	1	. 1	
23	W62	Bolt, rear hub to brake drum		8	8	8	8	
24	SI-51	Nut, hub to brake drum bolt		8	8	8	8	
25	W63	Lockplate, nut to brake drum bolt		8	8	8	8	
26	W61	Spindle, rear wheel hub		I	T	1	1	
27	TS42	Nut, ,, ,, ,,		2	2	2	2	
28	W7A	Bearing, rear wheel ball		2	2	2	2	
29	NW.225	Ring, bearing backing		2	2	2	2	
30	W12	Cap, bearing dust		2	2	2	2	
31	W6	Collar, taking thrust to chain adjuster		2	2	2	2	
32	W4	Nut, rear bearing adjusting lock		2	2	2	2	
33	W56	Sprocket, rear chain wheel 46T		1	1	1	1	
34	W64	Bolt, ,, ,, ,, sprocket		8	8	8	8	
35	E2312	Washer, ,, ,, ,, ,, s'pro	of	8	8	8	8	
36	D106	Bolt, tyre security		I	ł	I	ļ	

+Spoke head towards centre. *Spoke head away from centre.

SERVICE RELINED BRAKE SHOES ENSURE 100% BRAKING EFFICIENCY

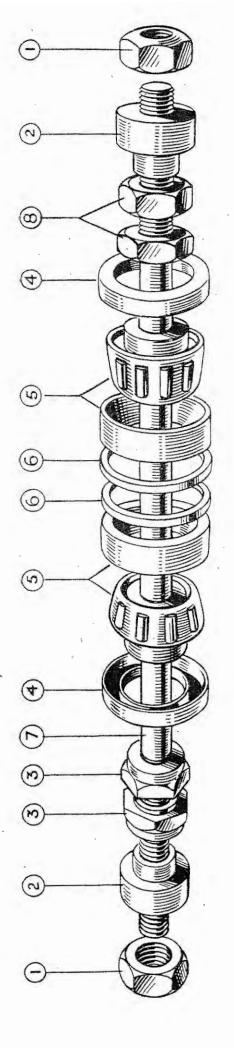

INDEX

llust. No.	Part No.	Page	Ref.	Illust. No.	Illust. No. Part No.	Page	Ref.
-	TS.42	56	27	5	W.7A	56	28
2	W.6	56	31	9	NW.225	56	29
m	W.5	58	e	7	W.61	56	26
4	W.12	56	30	80	W.4	56	32

REAR WHEEL (RIGID) AXLE ASSEMBLY

くどう

日本のないののであるのです。

DESCRIPTION

REAR WHEEL BRAKE

1.	W765A	Plate, rear brake anchor c/w brake sl	hoes		1	L	1	,
2	W762	Plate, rear brake anchor	noes		i	1	1	r
3	W5	locknut rear brake anchor plate		•••	2	2	2	-
4	W764	Thrower rear brake drum	•• 、	••••	4	. 2	2	2
5	W93		••		1	1	1	1
		Shoe assembly, rear with lining			2	-2	2	2
6	NW243	Lining, rear brake shoe			2	2	2	2
7	W129	Rivet, brake shoe lining	1		16	16	16	16
8	W135	Spring brake shoe return			.0		10	10
0					2	2	2	2
9	W856	Cam assembly, rear brake			1.	1	1	1
10	W74A	Lever, rear brake cam			1	i	i i	i
11	S1-52	Nut, ", ", " lever			1			÷
12	W123	Spring, ,, ,, ,, ,, return			i	1	1	l

REAR SPRING WHEEL GROUP

MARK I

1.7	14/070								
13	W879	Wheel, complete	•			-	1	1	1
14	W877	Wheel, "				1	-		
15	W645	Wheel, less internals				1	1	1	1
16	W643	Rim				1	1	1	i
17	W644	Spoke				40	40	40	40
18	S79-2	Nipple, spoke				40	40	40	40
19	W600	Hub, shell assembly				. 1	1	1	1
20	W859	Drum correction and bush-				1	1	1	i
21	W641	Bolt broke drum				8	8	8	8
22	F879	Nut broke down half				8	8	8	8
23	W642	Laskalate bushe during to to				4	4	4	4
24	W611	Race outer				2	2	2	2
25	W610	Page inner				2	2	2	2
26	W609	Pall man mand second l				2	2	2	
27	W601	Plate, hub shell bearing end .			***	1	2	2	2
28	W744	Shim and plate		•••	•••	9	9	9	1
29	W640	Bolt, end plate to hub shell	••			10		-	2
30	E2312	Washer, end plate to hub shel			•••	10	10	10	10
31	F879	Nut, end plate to hub shell bo					10	10	10
32	W884	Plunger guide box assembly			•••	10	10	10	10
33	W602A/3A	Pay alungan avida		••••	•••		1	1	I
34	W885					1	1	1	- 1
35	W886	Pad, front slipper (convex)		•••		2	2	2	2
36	W866	Pad, rear slipper (concave)	•		•••	2	2	2	2.
		Shim, slipper pad, .002" thick			•••		As requ	ired	
37	W867	Shim, slipper pad, .003" thick					,,	,,	•
38	W638	Screw, slipper pads	-			8	8	8	8
39	E1562	Bolt, plunger guide box 👾 🛛	•			2	2	2	2

SEE SUPPLEMENT for MARK II SPRING WHEEL which is identified by two screws securing dust excluder on anchor plate side which are not fitted to the Mark I.

STATE FRAME NUMBER FOR SPRING WHEEL SPARES

REF. No.	PART No.	DESCRIPTION			ЗТ	5T	T100	6T	
1	T450	Bolt, clamp, plunger guide box			4	4	4	4	
2	E2312	Washer, plunger guide box bolt			6	6	6	6	
3	S1-40	Nut, plunger guide box bolt		•••	6	6	6	6	
4	W791A	Axle and guide			1	1	1	1	
5	W616	Block, slipper			2	2	2	2	
6	NW100	Nipple, grease			2	2	2	2	
7	W766	Sleeve, block to axle guide distant	ce		1	1	I	1	
8	W837	Spring, inner main			1	1	I	1	
9	W836	Spring, outer main			ł	I	1	1	
10	W890	Spring rebound			F	I	1	1	
11	W658A	Buffer, plunger			2	2	2	2	
12	W664A	Locator plate, spring			2	2	2	2	
13	W639	Lever, axle shaft anchorage			1	1	1	1	
14	W634	Circlip, axle shaft, split			2	2	2	2	
15	W798	Collar, axle shaft distance O.S.		•••	1	I	1	1	
16	W633	Collar, axle shaft		• • •	2	2	2	2	
17	W635	Nut, axle shaft			2	2	2	2	
18	W849	Ring, dust excluder fixing			2	2	2	2	
19	W794	Plate, dust excluder			2	2	2	2	
20	W799	Spring, " "			2	2	2	2	
21	W797	Sleeve, ", ", centre	••••		2	2	2	2	
	REA	R SPRING WHEEL BRAKE							
22	W620	Plate, brake anchor				1	1	1	
23	W853	Plate, ", ",			1	-	-		
24	W617	Shoe c/w lining, trailing brake			1	1	1	1	
25	W618	Shoe ,, ,, leading ,,		• • •	1	1	I	1	
26	W631	Lining, brake			2	2	2	2	
27	W129	Rivets, brake lining		•••	16	16	16	16	
28	W135	Spring, brake shoe return		•••	2	2	2	2	
29	W856	Cam, brake assembly			1	I	I	1	
30	W74A	Lever, brake cam		*	1	1	1	1	
					1	1	1	1	

31

32

33

34

35

36

37

38

39

40

41

51-52

W123

W626

W855

W784

W630

W743

 $\frac{3}{32}'' \times 1''$

F1015B

F1015C

D106

STATE FRAME NUMBER FOR SPRING WHEEL SPARES

...

. . .

Nut, brake cam lever

Spring, brake cam return

Bolt, brake anchorage link

Nut, brake pedal spindle

Rod, brake operating ...

Bolt, tyre security

22

Locknut, brake anchorage bolt

Split pin, brake pedal spindle nut

...

Link, brake anchorage

Link, "

Rod, "

1

1

2

ł

1

1

1

L

2

T

E

L

2

1

1

1

1

...

. . .

...

....

...

. . .

. . .

1

L

2

I

I

I

1

. . .

. . .

. . .

...

...

...

...

...

. . .

...

. . .

• • •

...


...

...

...

. . .

. . .

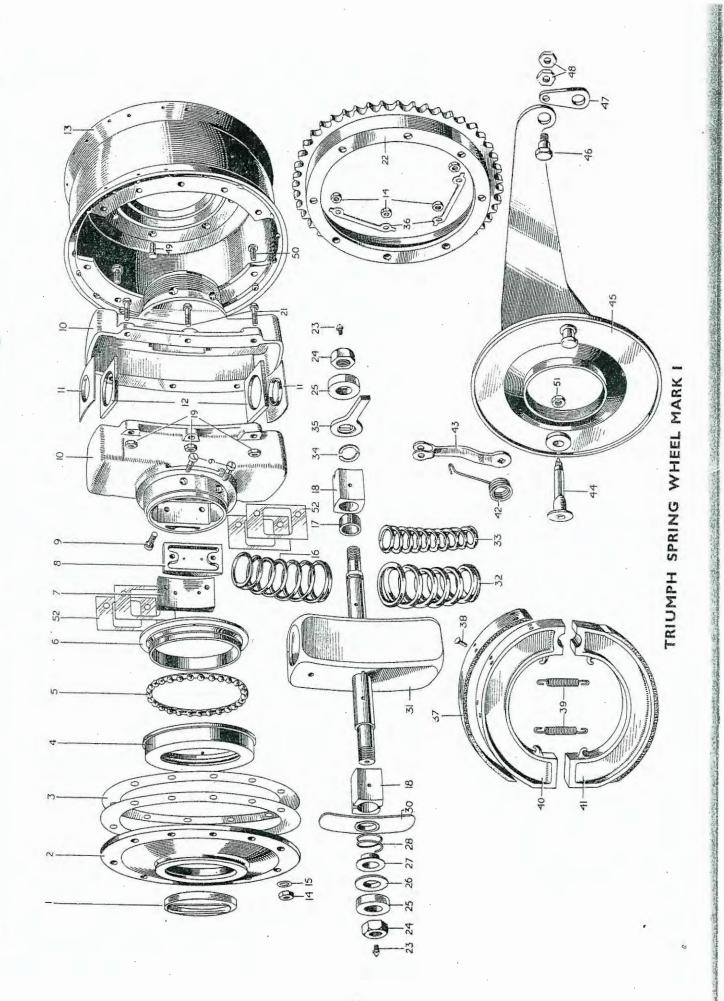

MUDGUARD GROUP

F	REF. No.	PART No.		DE5C	RIPTIC	N			3T	5T	T100	6T	
		FRC	NT MUDGU	ARD				,					
	1	H566	Mudguard ass	embly,	less fro	ont sta	ys		I	1	1	1	
	2	H569	Stay, mudguar	rd fron	t				2	2	2	2	
	3	DS57	Bolt, "	,,	stay				2	2	2	2	
	4	F879	12 22	,,	"				2	2	2	2	
	5	E1612	Washer, "	,,	,,				2	2	2	2	
	6	H427	Bridge, "	,,	suppo	ort			1	1	1	1	
	. 7	H428	Clip, "	,,	bridg				2	2	2	2	
	8	H426	Bolt, clip, N.S						1	1	1	1	
	9	H451	Bolt, clip, O.S						1	1	1	1	
	10	PO172A	Nut, clip bolt						2	2	2	2	
	11	S26-1	Washer, clip						2	2	2	2	
•	12	F929	Bolt, mudguai			c end			2	2	2	2	
	13	S26-3	Washer, ,,	,,		,,			2	2	2	2.	

INDEX TO ILLUSTRATION ON PAGE 60

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref
1	W.849	59	18	30	W.794	59	19
2	W.601	58	27	31	W.791A	59	4
3	W.744	58	28	32	W.836	59	9
4	W.611	. 58	24	33	W.837	59	8
5	W.609	58	26	34	W.634	59	14
6	W.610	58	25	35	W.639	59	13
7	W.886	58	35	36	W.642	58	23
8 .	W.885	58	34	37	W.631	59	26
9	W.638	58	38	38	W.129	59	27
10	W.602A/3A	58	33	39	W.135	59	28
11 .	W.664A	59	12	40	W.618	59	25
12	W.658A	59	11	41	W.617	59	24
13	W.600	58	19	42	W.123	59	32
14	F.879	58	22	43	W.74A	59	30
15	E.2312	58	30	44	W.856	59	29
16	W.890	59	10	45	W.620	59	22
17	W.766	59	7		W.853	59	23
18	W.616	59	5	46	W.784	59	35
19	S.1-40	59	. 3	47	W.626	59	33
21	T.450	59	1		W.855	59	34
22	W.859	58	20	48	W.630	59	36
23	NW.100	59	6	49	W.641	58	21
24	W.635	59	17	50	W.640	58	29
25	W.633	59	16	51	S.1-52	59	31
26	W.798	59	15	52	W.866	58	36
27	W.797	59	21		W.867	58	37
28	W.799	59	20	1			

FOR IDENTIFICATION OF PARTS SEE PAGE 10 FOR INSTRUCTIONS

									7
REF. No.	PART	No.	DE	SCRIPTION) , ,	-	
			UDGUARD				3T 5T	T100	6T
1	E1700								
2	F1722		dguard assembl		•• •••		I _	-	-
3	F1723A		guard, rear mu				1 -	-	-
4	DS57		t, tailguard fixin				2 -	<u> </u>	
5	PF204		o, mudguard to				2		
	F444		e backing, to cl		•••••		2 —		
6	S23-42		ew, fixing plate				4	-	-
. 7	S25-1		sher, plate to cl	ip screw	• •••		4	-	
8	F1087		, tailguard				1		-
. 9	F1369		, tailguard to st		• •••		2 —		
10	F879		, tailguard to st				2 -		-
11	S26-2	Was	sher, tailguard t	o stay bolt			2 _		
12	F1088	Stay	, mudguard fro	nt			1 -		
13	F1088A	/		dle			1 ·		
14	F946	Stud	l, mudguard sta	y to frame j	unction		2		-
15	F947	Nut	, for junction st	ud			2 —		
16	S25-65	Was	her, for junctio	n stud			2		
17	NF733	Hand	dle, lifting				2 -		_
18	F929	Bolt	, lifting handle				4		
		REAR ML	JDGUARD ((5T, T100	and 6	T)			
19	F2756	Mud	guard, front sec	tion					1
20	F3012		guard, rear sect					1	1
21	F2761		centre, N.S.					1	1
22	F2763	Stay,				•••		1	1
23	F2764	Stay,					2	2	2
24	F2335		stay to mudgu				4	4	2 4
25	E2287		ner, stay to mu				4	4	4
26	SI-51		stay to mudgua				4	4	4
27	PF204		mudguard to fr					1	4
28	F444		backing, to clip		•••			1	1
29	S25-1		er, backing pla			—	2	2	1
. 30	S23-42		backing plate		•••		2	2	2 2
							2	2	2
		INDEX -	TO ILLUSTR	ATION (ON PA	GE 63			
Illust. No.	Part No.	Pag	e Ref.	Hust. No	. Part N	o.	Page	Ref	
······································									
1	NF.733	62	17	14	F.1369		64	- 14	
2	F.1722	62	1	15	F.3012		62	20	
3	DS.57	62	3	16	F.2908		64	I	
4	F.1723A	62	2	17	S.1-51		62	26	
5	F.1369	64	14	18	F.2335		62	24	
6	F.879	64	15	19	F.2761		62	21	
7	F.929	64	11	20	F.2763		62	22	
8	S.1-51	64	12	21	F.2764		62	23	
9	F.2728	64	10	22	S.1-51		62	26	
10	F.929	62	18	23	F.2335		62	24	
11	F.1088	62	12	24	F.1720		64	2	
IIA	F 1088A	67	12	20				-	

FOR IDENTIFICATION OF PARTS SEE PAGE 10 FOR INSTRUCTIONS

IIA


F.1088A

F.1087

F.879

S.26-2

F.2756

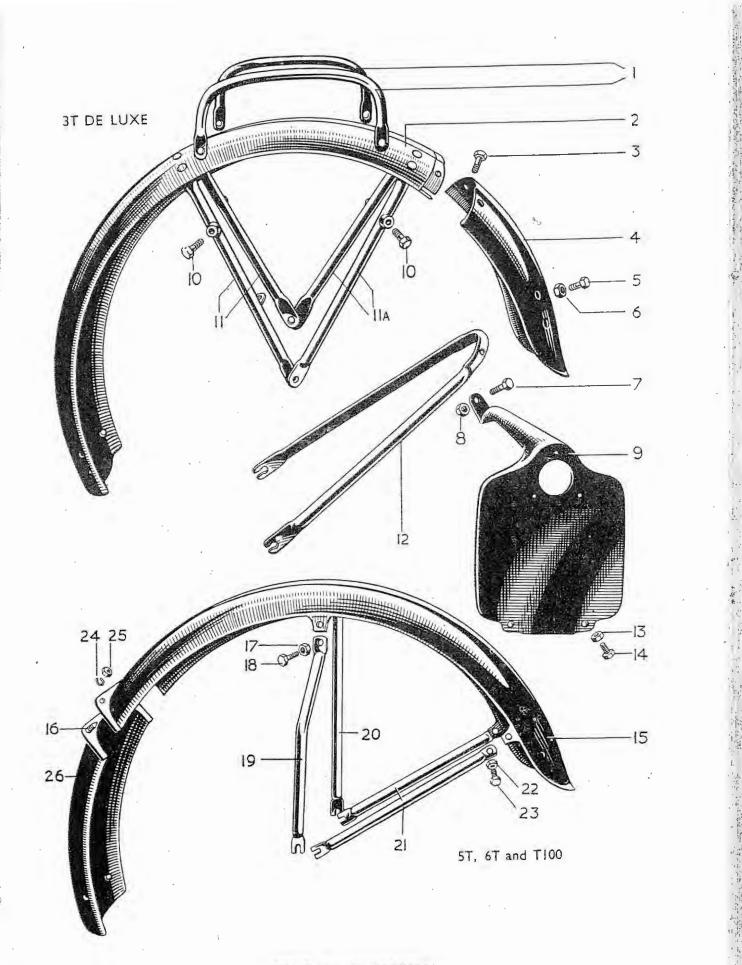

REAR MUDGUARDS

REF. No.	PART No.	DESCRIPTION	ЗТ	5T	T100	6T	
1	F2908	Stud, mudguard front to rear section	•				
2	E1720	Nut and faire from to real section	 -	2	2	2	
-		Nut, rear frame to mudguard stay	 	2	2	2	
3	S26-2	Washer, mudguard front to rear section		2	2	-	
4	E579	Bolt, rear frame to mudguard stay		2	2	2	
5	576.7	boit, real frame to mudguard stay	 	2	2	2	
2	S26-2	Washer for E579	 	2	2	2	

NUMBER PLATE GROUP

FRONT NUMBER PLATE

6	F2698	Plate assembly,	from	t ni	mbor (car	+11	1.1			
7	F879	Nint and	1	ic in	iniber (cas	ung)	 1	1		1
0		Nut, number p					 2	2	2	2
0	S26-2	Washer, "	.,				 2	2	2	2
7	H251	Beading, "	**	,,	base		 I	1	1	ī


REAR NUMBER PLATE

10	F2728	Plate, rea								I.	1	I	I
11	F929	Bolt, num	nber	plate	e top t	fixin	g			I.	1	I	1
12	SI-51	Nut,	,,	. ,,	,,	,,	bol			i.		1	
13	S26-3	Washer,							. ~	;		1	1
14	F1369	Bolt,		"	»	**	**	***		1	1	1	1
15	F879	Nut,	,,	""	Dotte	om t	ixing			2	2	2	2
16	S26-2		"	"	**		,,	bolt		2	2	2	2
		Washer,	"	,,	**		,,	>>		2	2	2	2
17	D68A	Transfer,	,,		(blue	and	whit	:e)		-		I	_
18	D68	Transfer,	,,	,,	(gold	and	whit	:e)		I	-1		1

PRIMARY CHAINCASE GROUP

19	T478A	Cover, c	haind	ase or	ter								
20	T480A	Cover,	,,					•••		1		-	-
21	NT367	Plug,			" filler	-	•••				1	1	1
22	NT376	Washer,	"						•••	1	1	1	1
23	PCE102F	Plug,	"	,, 	,,	plu	g	•••	•••	1	I	1	1
24	WEI70		,,	dr	ain .		•••		•••	1	I	1	1
		Washer,	"	,	, pl	ug				-1	1	1	1
25	NT316	Dowel,	,,	(fo	otres	t)				2	2	2	2
26	T725	Cover,	,,		er	'				ĩ	-	2	2
27	T483A	Cover,	,,				••••	•••				_	_
28	T484	Plate,						•••			1	1	1
29	T91		""	011	retai	ner				1	1	1	1
		Plate,	"	,,			spring			I	1	1	1
30	T177A	Rivets,	,,	,,	,,		plate			2	2	2	
31	T496	Adjuster,					•	•••		2	2	2	2
32	T497		leal	chain						· 1	1	1	1
52	177/	Spring,	,,	. ,,	,,	adju	Ister			T	I	1	1

TREASURY NOTES MUST BE REGISTERED

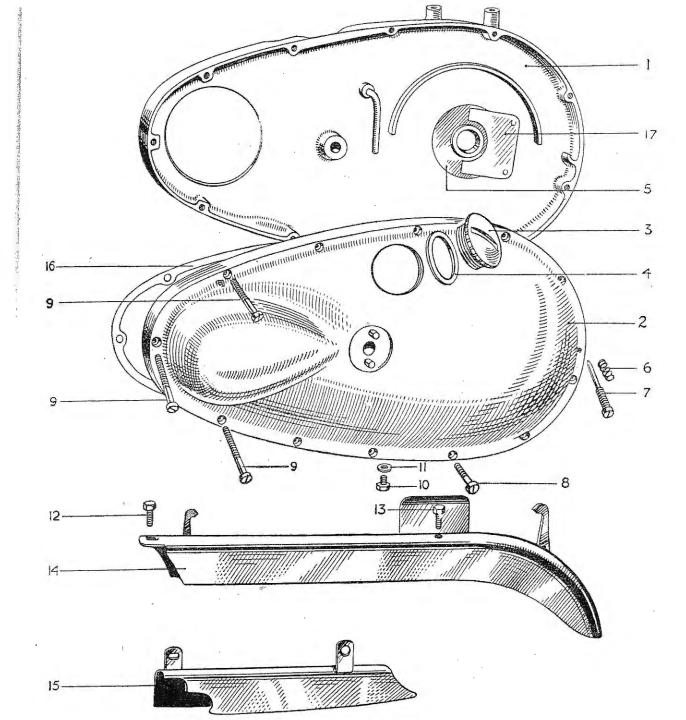

3	N.L	m	-	v
1	N	υ	E	A

きを見

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	T.725	64	26	10	PCE.102F	64	23
	T.483A	64	27	11	WE.170	64	24
2	T.478A	64	19	12	S.23-37	66	12
	T.480A	64	20	13	DS.57	66	11
3	NT.367	64	21	4	T.148A	66	10
4	NT.376	64	22		T.766	66	8
5	T.484	64	28		T.987	66	9
6	T.497	64	32	15	F.1730	66	14
7	Т.496	64	31	16	T.503	66	2
8	E.427	66	5		T.504	66	1
9	E.329	66	7	17	T.91	64	29
	E2691	66	6	1			

REF. No.	PART No.	DESCRIPTION	ЗТ	5T	T100	6T
1	T504	Washer, chaincase joint		1	I	-
2	T503	Washer, ,, ,,	T		_	
3	T87	Distance piece, chain cover to frame		1	1	1
4	T200	Distance piece, ", ", ", ", "	1		_	a la
5	E427	Screw, chaincase cover (short)	9	9	9	9
6	E2691	Screw,			3	3
7	E329	Screw, " " " (") …	3) _

REI

CHAINGUARD GROUP

8	T766	Chainguard, rea	r upper					1	1	i
9	T987	Chainguard, re	ear upper		Stop	Lamp			1	
10	T148A	attachment) Chainguard, rea			•••		1	As req	uired	
11	DS57	Bolt, chainguard			er		1	-	-	-
12	S23-37	Bolt, "		ont upp			i	i	i	1
13	S25-1	Washer, "	bolt				2	2	2	2
14	F1730	Chainguard, rea					1	ī	ī	ī
15	F1369	Bolt, chainguard					i	i	i	i
16	F879	.Nut, "		, bolt	t		1	i	i	1
17	S26-2	Washer, "		, bolt		3	i	i	i	1
18	F1760	Bolt, ,,		, bolt			i	i	i	1
19	SI-52	Nut, "	,, ,	halt			i	i ·	i	i

CHAIN GROUP

20	D120	Chain, primary 78L (solo)	1
21	D121	Chain, ,, 77L (sidecar)	
22	T376	Chain, ,, 74L	
23	D40	Chain, ,, 80L (sidecar)	1
24	DII6	Chain, rear 93L	i
25	D69	Chain, ,, 90L	
26	110-046/49	Kit, primary chain spare parts 1 1 1	1
27	110-056/59	Kit, rear ,, ,, ,,	1

SEE SPECIMEN ORDER IN PREFACE

TANK GROUP

REF. No. PART No.

the star and the second

DESCRIPTION


3T 5T TIOO 6T

PETROL TANK

NOTE. When ordering always state colour and model type.

I	F2964PR	Tank, petrol. Less fittings – I ––	-
2	F2964PS	Tank, ", " " — — 1	
3	F2966PB	Tank, ", ", ", l — —	
4	F2964TB	Tank, ", ", ", — — —	1
5	F1034	Cap, tank filler I I I	1
		Split pin, filler cap $I'' \times \frac{3}{32}''$	1
6	F3080	Band, petrol tank styling N.S – I I	1
7	F3081	Band, ", ", ", O.S — I I	1
8	F3083	Band, ,, ,, ,, N.S I	-
9	F3084	Band, ,, ,, ,, O.S I — —	
10	F1823A	Nameplate, petrol tank 2	
11	F1823	Nameplate, ,, ,, <u></u> 2	
12	F1823C	Nameplate, ,, ,, 2 — —	
13	F1823D	Nameplate, ,, ,,	2
14	F3113	Screw, name plate 4 4 4	4
15	F2124	Tap, petrol feed – I –	1
16	F1717	Tap, ", " I — 2	
17	F1511	Washer, petrol feed tap 2 2 4	2
18	F1721	"U" pipe, connecting I	_
19	F2120	Pipe, connecting	I
20	F2593	Adaptor, ,, pipe	1
21	GS367	Washer, ", " " — 3 —	3
22	F3060	Pipe, petrol feed — I —	1
23	F3059	Pipe, ", ", ! — —	
24	F2918	Pipe, ", " N.S — 1	
25	F2919	Pipe, ", " O.S — — I	-
26	F2958	Adaptor, carburetter to petrol pipe — — I	
27	GS367	Washer, ,, ,, ,, ,, adaptor — 1	-
28	E2570	Washer, sleeve nut to adaptor	
29	F2959	Sleeve nut, adaptor	_
30	F2551	Pad, knee grip, N.S	1
31	F2552	Pad, ", " O.S — 1 1	1
32	F1606	Pad, ", " N.S 1 — —	
33	F1605	Pad, ", " O.S 1 — —	
34	F1607	Plate, ,, ,, N.S 1	-
35	F1607A	Plate, ", " O.S I — —	
36	F1953	Screw, ,, ,, pad (rear) 2 2	2
37	F3082	Screw, ", ", " (front) 2 2	2
38	T361	Screw, ", ", ", 4 — —	
39	S25-1	Washer, knee grip pad (rear) 22	2
40	F1813	Washer, ,, ,, ,, (front) 2 2	2
41	F966	Bolt, petrol tank fixing (rear) 4 2 2	2

ALWAYS GIVE COLOUR WHEN ORDERING

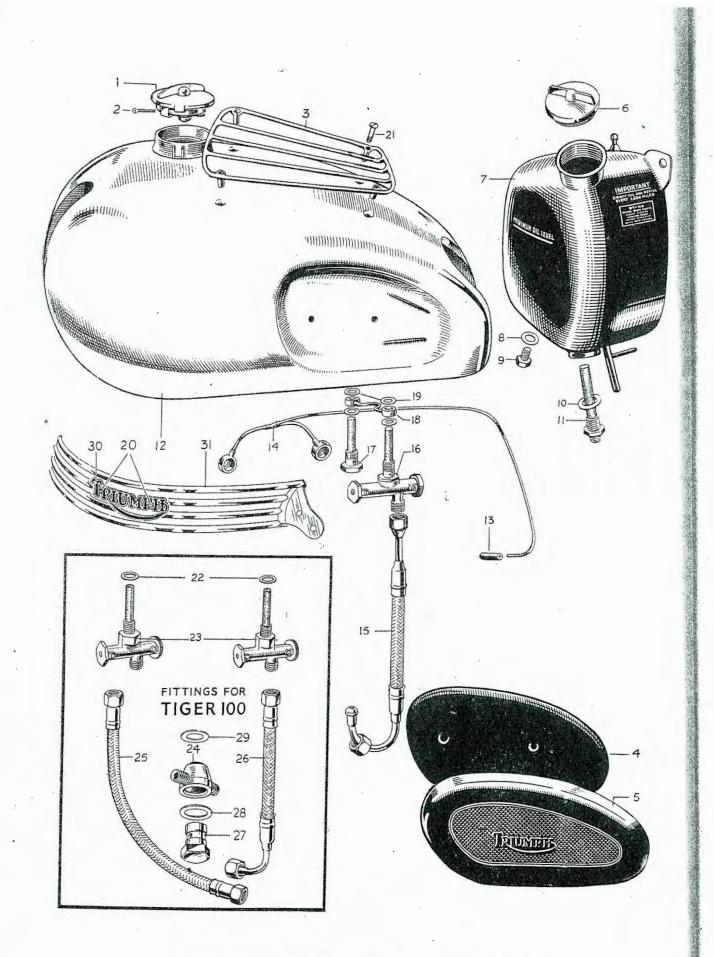

PETROL AND OIL TANKS WITH FITTINGS

REF. No.	PART No.		DESCI	RIPTION			3Т	5T	T100	6T	
	F1808	Bolt, petro	ol tank fixir	ng (front)				2	2	2	
2	S25-27	Washer, p	etrol tank f	fixing bolt			4	4	4	4	
3	F967	Pad, petro	l tank rubb	er			8	6	6	6	
4	F1813	Pad, ,,	** **	(front)			-	2	2	2	
	TAT	NK PARCE	L GRID								
5	F2933	Grid, tank	parcel				1	1	1	1	
6	F2936	Screw "	" grid				4	4	4	4	
7	F3026*	Plug, "	-	screw			4	4	4	4	
		*Tc	o replace F2	936 when gr	id is no	ot in u	ise.				
	OIL	TANK									
8	F1645A	Tank, oil						· 1	1	1	
	E370A		nk filler				i	i	. 1.	1	
9			oil tank filler				1	i		1	
10	E1331		,, ,, dra				1	ī	1	1	
11	F1792						÷	÷	1	1	
12	PT104B		", "plu		-)		1		1	1	
13	F3077			vent (rubbe					1	i	
14	F3076			oppor)		•••	_		3	. 1	
15	F3076A	Pipe, "		,,			-		1		
							1	1	8	+	
16	F929	Bolt, _,,		ge clip					1		
17	F1213	Bolt, "	,, ,, seat	tube clip			1	1	1	1	
	F1213 F1335	Bolt, ,, Distance p	,, ,, seat piece, oil tar	tube clip nk to seat tu	be boli	 t	1	1	ł	1	
17	F1213 F1335	Bolt, "	,, ,, seat piece, oil tar	tube clip nk to seat tu	be boli	 t	1 1 58	1	I	1	
17	F1213 F1335	Bolt, ,, Distance p	,, ,, seat piece, oil tar	tube clip nk to seat tu	be boli	 GE (1 1 58	l I Page	I I R	I ef.	
17 18	FI2I3 FI335 IN Part No.	Bolt, ,, Distance p NDEX TO	,, ,, seat biece, oil tạr ILLUSTR	tube clip nk to seat tu ATION O	be boli	 GE (No.	1 1 58	I I Page 67		ef.	
17 18 Illust. No. 1	F1213 F1335 Part No. F.1034	Bolt, ,, Distance p NDEX TO Page 67	,, ,, seat piece, oil tạr ILLUSTR Ref.	tube clip nk to seat tu ATION O	be bolt N PA Part I	 GE (No.	1 1 58				
17 18 Illust. No. 1 2	F1213 F1335 Part No. F.1034 3/32″ Split P	Bolt, ,, Distance p NDEX TO Page 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5	tube clip nk to seat tu ATION O Illust. No.	be bolt N PA Part 1 F.1717	 AGE (No. 7 3	1 1 58	67		16	
17 18 Illust. No. 1 2 3	F1213 F1335 Part No. F.1034 3/32" Split P F.2933	Bolt, ,, Distance p NDEX TO Page 67 in 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5	tube clip nk to seat tu ATION O Illust. No. I7	be bolt N PA Part 1 F.1712 F.259	 AGE (No. 7 3 0	1 1 58	67 67		16 20	
17 18 Illust. No. 1 2	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552	Bolt, ,, Distance p NDEX TO Page 67 in 69 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31	tube clip nk to seat tu ATION O Illust. No. 17 18 19	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151	 GE No. 7 3 0 1	1 1 58	67 67 67		16 20 19	
17 18 Illust. No. 1 2 3 4	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605	Bolt, ,, Distance p NDEX TO Page 67 in 69 67 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.311	 GE (No. 7 3 0 1 3	1 1 58	67 67 67 67		16 20 19 17	
17 18 Illust. No. 1 2 3	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551	Bolt, ,, Distance p NDEX TO Page 67 67 67 67 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21	be bolt N PA Part 1 F.1712 F.259 F.2120 F.151 F.3112 F.2930	 GE (No. 7 3 0 1 3 6	1 1 58	67 67 67 67 67 69		16 20 19 17 14	
17 18 Illust. No. 1 2 3 4 5	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606	Bolt, ,, Distance p NDEX TO Page 67 67 67 67 67 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30 32	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 21 22	be bolt N PA Part 1 F.1712 F.259 F.2120 F.151 F.3112 F.2936 F.151	 GE (No. 7 3 0 1 3 6 1	1 1 58	67 67 67 67 67 69 67		16 20 19 17 14 6 17	
17 18 Illust. No. 1 2 3 4 5 6	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A	Bolt, ,, Distance p Page 67 in 69 67 67 67 67 67 67 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30 32 9	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.3111 F.2930 F.151 F.151 F.1711	 GE (No. 7 3 0 1 3 6 1 7	1 1 58	67 67 67 67 67 69 67 67		16 20 19 17 14 6 17 16	
17 18 Illust. No. 1 2 3 4 5 6 7	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A	Bolt, ,, Distance p Page 67 in 69 67 67 67 67 67 67 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 31 33 30 32 9 8	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.3111 F.2930 F.151 F.1711 F.2955	 GE (No. 7 3 0 1 3 6 6 1 7 8	1 1 58	67 67 67 67 67 69 67 67 67		16 20 19 17 14 6 17 16 26	
17 18 Illust. No. 1 2 3 4 5 6 7 8	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B	Bolt, ,, Distance p Page 67 in 69 67 67 67 67 67 67 69 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 31 33 30 32 9 8 12	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25	be bolt N PA Part 1 F.1712 F.259 F.2120 F.151 F.3112 F.293 F.151 F.1712 F.2955 F.2915	 GE (No. 7 3 0 1 3 6 6 1 7 8 9	 58	67 67 67 67 67 69 67 67 67 67		16 20 19 17 14 6 17 16 26 25	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792	Bolt, ,, Distance p Page 67 67 67 67 67 67 67 69 69 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 31 33 30 32 9 8 12 11	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.2930 F.151 F.2930 F.151 F.2950 F.2910 F.2910	 GE (No. 7 3 0 1 3 6 1 7 8 9 8	1 1 58	67 67 67 67 67 67 67 67 67 67		16 20 19 17 14 6 17 16 26 25 24	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713	Bolt, ,, Distance p Page 67 in 69 67 67 67 67 67 67 69 69 69 69 69 69 70	,, ,, seat piece, oil tar ILLUSTR Ref. 5 31 33 30 32 9 8 12 11 4	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 23 24 25 26 27	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.3111 F.2930 F.151 F.1711 F.2955 F.2915 F.2915 F.2915	 GE (No. 7 3 0 1 3 6 1 7 8 9 8 9	58	67 67 67 67 67 67 67 67 67 67		16 20 19 17 14 6 17 16 26 25 24 29	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838	Bolt, ,, Distance p Page 67 in 69 67 67 67 67 67 67 69 69 69 69 69 69 70 70	,, ,, seat piece, oil tar ILLUSTR Ref. 5 31 33 30 32 9 8 12 11	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28	be bolt N PA Part 1 F.1712 F.259 F.2120 F.151 F.3111 F.2932 F.151 F.1712 F.2955 F.2912 F.2955 F.2912 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2955 F.2957 F.2955 F.2957 F.2955 F.2957 F.2955 F.2957 F.2955 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957 F.2957	 GE (No. 7 3 0 1 3 6 1 7 8 9 8 9 9 0	1 1 58	67 67 67 67 67 67 67 67 67 67 67		16 20 19 17 14 6 17 16 26 25 24 29 28	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR	Bolt, ,, Distance p Page 67 67 67 67 67 67 67 69 69 69 69 69 69 69 70 70 70 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5 31 33 30 32 9 8 12 11 4 3 1	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28 29	be bolt N PA Part 1 F.1712 F.259 F.2120 F.151 F.2930 F.151 F.2930 F.151 F.2950 F.2910 F.2910 F.2950 F.2570 GS.36	 GE (No. 7 3 0 1 3 6 1 7 8 9 9 8 9 9 8 9 9 7 7	1 1 58	67 67 67 67 67 67 67 67 67 67 67 67		16 20 19 17 14 6 17 16 26 25 24 29 28 27	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR F.2964PS	Bolt, ,, Distance p Page 67 in 69 67 67 67 67 67 69 69 69 69 69 69 69 70 70 70 67 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30 32 9 8 12 11 4 3 1 2	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28	be bolt N PA Part 1 F.1711 F.259 F.2124 F.151 F.2936 F.151 F.2936 F.2916 F.2916 F.2916 F.2916 F.2916 F.2956 F.2956 F.2956 F.2576 GS.366 F.1822	 GE (No. 7 3 0 1 3 6 1 7 8 9 8 9 0 7 3	58	67 67 67 67 67 67 67 67 67 67 67 67 67		16 20 19 17 14 6 17 16 26 25 24 29 28 27 11	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR F.2964PS F.2966PB	Bolt, ,, Distance p Page 67 in 69 67 67 67 67 69 69 69 69 69 69 69 69 69 69 69 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 31 33 30 32 9 8 12 11 4 3 1 2 3	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28 29	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.3111 F.2930 F.151 F.1711 F.2950 F.2910 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.1822 F.1822 F.1822	 GE (No. 7 3 0 1 3 6 1 7 8 9 8 9 9 0 7 3 3 3 3 3 3 3 3 3 3 3 3 3	58	67 67 67 67 67 67 67 67 67 67 67 67 67 6		16 20 19 17 14 6 17 16 26 25 24 29 28 27 11	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11 12	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR F.2964PS F.2964PB F.2964TB	Bolt, ,, Distance p Page 67 67 67 67 67 67 69 69 69 69 69 69 69 69 69 70 70 70 67 67 67 67 67	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30 32 9 8 12 11 4 3 1 2 3 4	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28 29	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.2930 F.151 F.2930 F.151 F.2950 F.2910 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.1822 F.1822 F.1822 F.1822 F.1822 F.1822 F.1822 F.1822	 GE (No. 7 3 0 1 3 6 6 1 7 8 9 9 8 9 9 8 9 9 3 3 4 3 6 7 3 3 3 3 4 3 5 3 3 4 3 5 3 3 4 3 5 5 3 3 4 3 5 5 5 5	1 1 58	67 67 67 67 67 67 67 67 67 67 67 67 67 6		16 20 19 17 14 6 17 16 26 25 24 29 28 27 11 10 12	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11 12 13	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR F.2964PR F.2964PB F.2964TB E.1947	Bolt, ,, Distance p Page 67 67 67 67 67 67 69 69 69 69 69 69 69 69 69 69 69 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30 32 9 8 12 11 4 3 1 2 3 4 33	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28 29 30	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.2930 F.151 F.2930 F.2910 F.2910 F.2910 F.2910 F.2910 F.2910 F.2950 F.2910 F.2950 F.2910 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.1822 F.1822 F.1822 F.1822 F.1822 F.1822	 GE (No. 7 3 0 1 3 6 6 1 7 8 9 9 8 9 9 9 9 0 7 3 3 8 9 9 8 9 9 0 7 3 3 8 9 9 8 9 9 8 9 9 3 3 8 3 0 7 3 3 0 0 1 3 3 6 6 1 1 7 3 3 0 0 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 1 3 3 6 6 1 3 3 6 5 1 1 3 3 8 9 9 8 8 9 9 8 8 9 9 9 8 8 9 9 9 8 8 9 9 9 8 8 9 9 9 8 8 9 9 8 8 9 9 8 8 9 9 8 8 8 9 9 8 8 9 9 9 8 8 9 9 8 8 9 9 8 8 9 9 9 8 8 9 9 9 9 8 8 9 9 9 9 9 8 8 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9	1 1 58	67 67 67 67 67 67 67 67 67 67 67 67 67 6		16 20 19 17 14 6 17 16 26 25 24 29 28 27 11 10 12 13	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11 12	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR F.2964PR F.2964PB F.2964PB F.2964TB E.1947 E.1937A	Bolt, ,, Distance p Page 67 in 69 67 67 67 67 69 69 69 69 69 69 69 69 69 69 69 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 31 33 30 32 9 8 12 11 4 3 1 2 3 4 33 31	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28 29	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.3111 F.2930 F.151 F.1711 F.2950 F.2910 F.2910 F.2910 F.2910 F.2910 F.2910 F.2910 F.2910 F.2950 F.2910 F.2950 F.2910 F.2950 F.2910 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.1822 F.1822 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823 F.1823	 GE (No. 7 3 0 1 3 6 1 7 8 9 8 9 8 9 0 7 3 3 6 1 7 8 9 8 9 0 7 3 3 0 1 3 6 1 7 3 0 1 3 6 1 7 3 0 1 3 6 1 7 3 0 1 3 6 1 7 3 0 1 3 6 1 7 3 0 1 3 6 1 7 3 0 1 3 6 1 7 3 0 1 3 6 1 7 3 0 1 3 6 1 7 3 8 9 8 9 8 9 0 0 3 3 3 3 3 3 3 3 3 3 3 3 3	58	67 67 67 67 67 67 67 67 67 67 67 67 67 6		16 20 19 17 14 6 17 16 26 25 24 29 28 27 11 10 12 13 6	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR F.2964PR F.2964PS F.2964PB F.2964TB E.1947 E.1937A E.1781	Bolt, ,, Distance p Page 67 67 67 67 67 67 69 69 69 69 69 69 69 69 69 69 69 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30 32 9 8 12 11 4 3 1 2 3 4 33 31 32	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28 29 30	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.2930 F.151 F.2930 F.151 F.2950 F.2910 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950	 GE (No. 7 3 0 1 3 6 1 7 8 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 8 9 9 10 10 10 10 10 10 10 10 10 10 10 10 10	58	67 67 67 67 67 67 67 67 67 67 67 67 67 6		16 20 19 17 14 6 17 16 26 25 24 29 28 27 11 10 12 13 6 7	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR F.2964PR F.2964PS F.2964PB F.2964PB F.2964TB E.1947 E.1937A E.1781 F.3060	Bolt, ,, Distance p Page 67 67 67 67 67 67 69 69 69 69 69 69 69 69 69 69 69 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30 32 9 8 12 11 4 3 1 2 3 4 33 31 32 22	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28 29 30	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.2930 F.2930 F.2930 F.2930 F.2910 F.2950 F.2910 F.2950 F.2910 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.1822 F.1823 F.3080 F.3080 F.3080 F.3080	 GE (No. 7 3 0 1 3 6 6 1 7 8 9 9 8 9 9 8 9 9 8 9 9 3 3 4 3 0 1 3 3 6 6 1 7 3 3 6 5 7 3 3 6 5 7 3 3 6 5 7 3 3 0 1 3 3 6 5 1 7 3 0 0 1 3 3 6 5 1 7 3 3 0 0 1 3 3 6 5 1 7 3 3 0 0 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 5 5 1 1 3 3 5 5 5 1 3 3 5 5 5 1 3 3 5 5 5 1 3 3 5 5 5 5	1 1 58	67 67 67 67 67 67 67 67 67 67 67 67 67 6		16 20 19 17 14 6 17 16 26 25 24 29 28 27 11 10 12 13 6 7 8	
17 18 Illust. No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	F1213 F1335 Part No. F.1034 3/32" Split P F.2933 F.2552 F.1605 F.2551 F.1606 E370A F.1645A PT.104B F.1792 F.1713 F.1838 F.2964PR F.2964PR F.2964PS F.2964PB F.2964TB E.1947 E.1937A E.1781	Bolt, ,, Distance p Page 67 67 67 67 67 67 69 69 69 69 69 69 69 69 69 69 69 69 69	,, ,, seat piece, oil tar ILLUSTR Ref. 5 5 31 33 30 32 9 8 12 11 4 3 1 2 3 4 33 31 32	tube clip nk to seat tu ATION O Illust. No. 17 18 19 20 21 22 23 24 25 26 27 28 29 30	be bolt N PA Part 1 F.1711 F.259 F.2120 F.151 F.2930 F.151 F.2930 F.151 F.2950 F.2910 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950 F.2950	 GE (No. 7 3 0 1 3 6 6 1 7 8 9 9 8 9 9 8 9 9 8 9 9 3 3 4 3 0 1 3 3 6 6 1 7 3 3 6 5 7 3 3 6 5 7 3 3 6 5 7 3 3 0 1 3 3 6 5 1 7 3 0 0 1 3 3 6 5 1 7 3 3 0 0 1 3 3 6 5 1 7 3 3 0 0 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 6 5 1 1 3 3 5 5 1 1 3 3 5 5 5 1 3 3 5 5 5 1 3 3 5 5 5 1 3 3 5 5 5 5	58	67 67 67 67 67 67 67 67 67 67 67 67 67 6		16 20 19 17 14 6 17 16 26 25 24 29 28 27 11 10 12 13 6 7	

E.S.S. 1

「「「「「「」」」

FOR IDENTIFICATION OF PARTS SEE PAGE 10 FOR INSTRUCTIONS

REF. No.	PART No.	DESCRIPTION	3T	5T	T100	6T
I	F1682	Stud, oil tank to seat tube				
2	\$1-51				1	1
3	F1838	Nut, ,, ,, ,, ,, ,, stud Filter, ,, ,,	. 1	1	I	1
4	F1713		. 1	1	1	1
5	F1919	Washer, oil tank filter	. 1	1	1	1
		Pipe, feed assembly, top half	. 1	1	1	1
6	S63-1	Union nut, feed pipe assembly	1	1	1	1
7	E1526	Oil pipes and block oil tank to engine		1	i	
8	E2457	Oil pipes	1		. •	1
9	E1529	Washer, oil nine block joint		-	_	
10	SI-51	Nut, oil pipe block	1	1	1	- 1
11	\$25-3	Washen eil sins blad und	1	1	1	1
12	MFI19	Washer, oil pipe block stud	1	1	1	- 1
12	11117	Connection, oil tank to oil pipe	2	2	2	2

HANDLEBAR GROUP

HANDLEBAR

13	H696		Handlebar, complete with	contro	Is and	twist				
14	H659	,	grip	· • • •			1	1	1	1
15	H230		Handlebar bend only				1	1	1	1
	HZ3U		Grip, dummy rubber L.H.		•••		1	1	1	1

THROTTLE CONTROL

10	H697	Twist grip, assembly			1			
17	H698	Head assembly, twist grip		•••	 1	1	1	
18	H665			1	 1	1	1	
19		Adjuster screw, twist grip	•••		 1	1	1	
	H685	Spring, twist grip friction			 1	1	. 1	
20	H686	Spring, ", " screw						
21	H234	Thimkle		•••	 1		1	
22	H237			•••	 1	1	1	
23		Grub screw, twist grip			 1	1	1	1.0
	H700	Sleeve assembly, twist grip			 1	1	1	
24	H233	Plate, twist grip retaining					1	
25	H232				 1	1	1	1
26		Circlip, ,, ,, plate			 1	1	.1	I
20	H230	Grip, " " rubber			 1	1	1	I


FRONT BRAKE CONTROL

27	18/599	Lever, control assembly						
28	18/535	lever only	•••		-	1		1
29	18/174	Description 1	 	••••	1	1	1	1
30	H668	Clamp, brake lever	 •••		1	1	1	1
31	61/004		 ••••		1	1	3	1
32	18/087	Screw, clamp	 		2	2	2	2
33	18/053	Pin, lever fulcrum	 •••		1	1	1	1
34	1	Nut, ,, ,, pin	 		1	1	1	1
54	70/016	Washer,, ", "	 		1	1	1	1

CLUTCH CONTROL

35	18/546	Lever, control	assen	hlv					1		
36	18/528	Lever only				•••		-			1
37	18/174	1		•••			••••	1	1	1.	1
		Bracket, lever			•••			1	1	1	1

IF IN DOUBT SEND SAMPLE

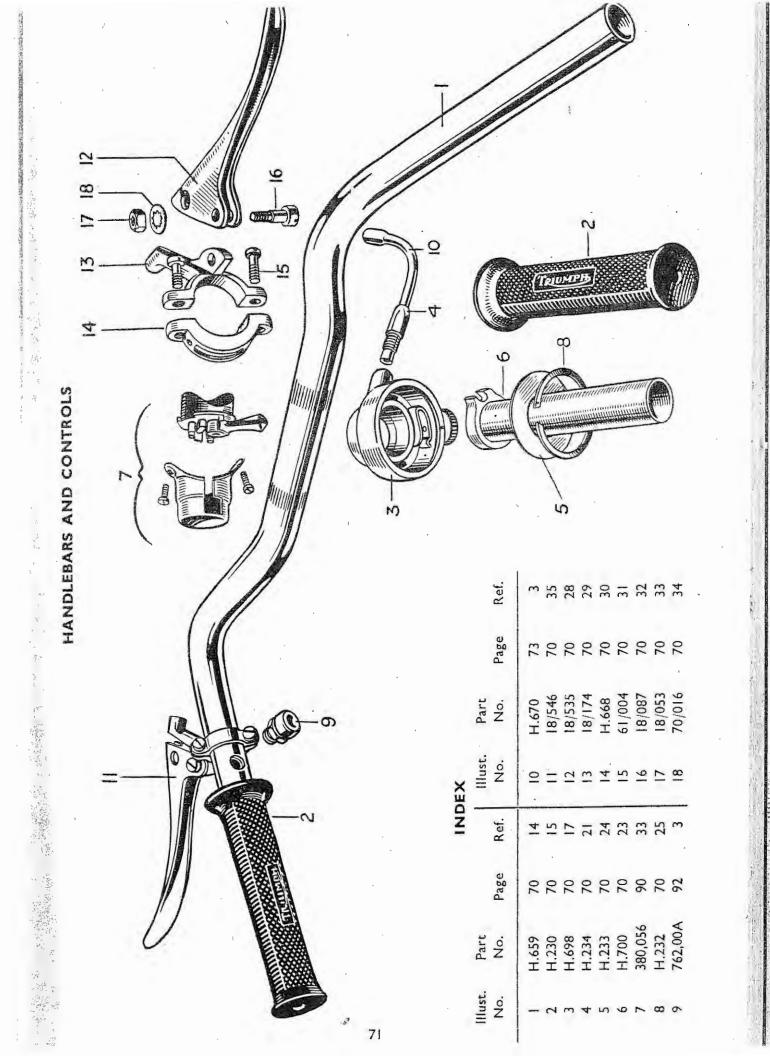

REF. No.	PART No.	DECONDEN	211			-			
ALL. NO.	FART NO.	DESCRIPTIO	NC		3T	5T	T100	6T	
1	12/044	Clamp, bracket lever		 	1	1	1	I	
2	11/014	Screw, lever clamp		 	2	2	2	2	
3	18/087	Pin, lever fulcrum		 	1	1	1	ī	
4	18/053	Nut, ,, ,, pin		 	1	i	I	1	
5	70/016	Washer, ,, ,, ,, ,,		 •••	I	1	1	1	
•	AIR	CONTROL							
6	12/171	Lever assembly air control		 	1	1	1	I	
7	12/017A	Lever, air		 	1	1	1	i	
8	12/029	Bolt, centre		 	1	1	I	i	
9	12/031	Cap, centre		 	1	1	i	. 1	
10	12/033	Washer, spring		 	1	1	1	T	
11	11/014	Screw, clip fixing		 	2	2	2	2	
12	12/040	Clip, fixing		 	1	1	ī	.ī	

CONTROL CABLE GROUP

CLUTCH CABLE

13	D203/X	Cable assembly, clutch		I	1.	1	I
14	D203/W	Wire only, clutch		 1	I	1	I
15	D203/C	Casing only, clutch		 1	1	1	i
16	D103	Ferrule, clutch casing		 2	2	2	2
17	D81	Nipple, clutch wire (handlebar e	nd)	 T	I	1	ī
18	DS73	Nipple (gearbox end)		 1	1	1	i
19	DS74	Adjuster, clutch cable		 1	I	i	i
20	W76	Locknut, clutch cable adjuster		 1	. 1	i	i

FRONT BRAKE CABLE

21	D247	Cable assembly, brake			 1	L	1	1
22	D247W	Wire only, brake			 1	1	ĩ	1
23	D247C	Casing only, brake			 1	1	i.	1.
24	H751	Sleeve, casing rubber			 1	1	i	i
25	D103	Ferrule, brake casing	·		 2	2	2	2
26	D81	Nipple, brake wire (handl	ebar en	d)	1	1	T.	ī
27	H446B	Tube, brake wire			 1	1	-1	i
28	W593	Fork end, brake wire			 1	1	i	I
29	- H447	Cable end, brake			 1.	i	i	1
30	W328A	Adjuster, cable			 1	i	I.	i
31	W591	Abutment, cable adjuster			 1	1	i.	i
32	W329	Thumb nut, cable adjuster			 Ţ	1	i	1

THROTTLE CABLE

33	D224	Cable assembly, throttle	 		-	1	1	I
34	D226	Cable assembly, "	 		I		_	_
35	D224W	Wire only, throttle	 		_	. 1	1	1
36	D226W	Wire only, "	 	•••	1	-	-	_

SEE SPECIMEN ORDER IN PREFACE

EF. No.	PART No.	DESCRIPTION 3	T 5T	T100	6T
1	D224C	Casing only, throttle	1	1	- 1
2	D226C	Casing only, ,,	1 -		
. 2	H670	Guide tube, twist grip	I I	1	1
. 4	D101		2 3	3	3
5	D83	Nipple, " (handlebar end)	1 1	1	1
	NS191	Nipple, ,,	1 1	1	1
6	D104	Cable, adjuster assembly	- 1	1	1
7			8 8	8	8
8	XA69	Clip for cables			
	AIR	CABLE			
9	D225	Cable assembly, air	[[1	1
10	D225W	Wire only, air	1 . 1	1	1
10	D225C	Casing only, air	1 1	1	1
12	D101		2 2	2	2
12	D83	Nipple, handlebar end	1 1	1	ŀ
	NS191	Nipple, carburetter end	1 1	1	1
14					
14		AR BRAKE CONTROL GROU	IP		
	RE	AR BRAKE CONTROL GROU	IP	1	1
15	RE F1153	AR BRAKE CONTROL GROU Pedal, rear brake	IP	1	1
15	RE F1153 F995	AR BRAKE CONTROL GROU Pedal, rear brake Rubber,",, ,, pedal	IP	1	1
15 16 17	RE F1153 F995 F1149	AR BRAKE CONTROL GROUPedal, rear brakeRubber, ,,,,pedalScrew, ,,,,,,,,stop	IP		
15 16 17 18	RE2 F1153 F995 F1149 F879	AR BRAKE CONTROL GROU Pedal, rear brake Rubber,",,, , pedal Screw,, ,, , stop Nut, ,, , , screw	IP		
15 16 17 18 19	RE2 F1153 F995 F1149 F879 F867	AR BRAKE CONTROL GROU Pedal, rear brake Rubber, ,, ,, pedal Screw, ,, ,, ,, stop Nut, ,, ,, ,, ,, ,, screw Spindle, ,, ,, ,, ,, ,, ,, ,, ,,	IP 1 1 1 1 1 1 1 1		
15 16 17 18 19 20	REA F1153 F995 F1149 F879 F867 DS48	Pedal, rear brake Rubber, ,, ,, pedal Screw, ,, ,, ,, ,, stop Nut, ,, ,, ,, ,, screw Spindle, ,, ,, ,, ,, ,, Nut, brake pedal spindle to frame	IP		
15 16 17 18 19 20 21	REA F1153 F995 F1149 F879 F867 DS48 SCZ45	Pedal, rear brakeRubber, ,, ,, pedalScrew, ,, ,, ,, stopNut, ,, ,, ,, ,, screwSpindle, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,	IP		
15 16 17 18 19 20 21 22	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51	Pedal, rear brake Rubber, ,, ,, pedal Screw, ,, ,, ,, stop Nut, ,, ,, ,, ,, screw Nut, brake pedal spindle to frame Nut, j, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,	IP		
15 16 17 18 19 20 21	REA F1153 F995 F1149 F879 F867 DS48 SCZ45	Pedal, rear brakeRubber, ,, ,, pedalScrew, ,, ,, ,, stopNut, ,, ,, ,, ,, screwSpindle, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,	IP		
15 16 17 18 19 20 21 22 23	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2	Pedal, rear brake Rubber,",,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	IP		
15 16 17 18 19 20 21 22 23 24	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2 S26-16	Pedal, rear brake Rubber, ,, ,, pedal Screw, ,, ,, ,, stop Nut, ,, ,, ,, ,, screw Spindle, ,, ,, ,, ,, screw Nut, brake pedal spindle to frame Nut, brake pedal spindle to frame Nut, , ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,			
15 16 17 18 19 20 21 22 23 24 25	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2 S26-16 F1015	Pedal, rear brake Rubber,",,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			· · · · · · · · · · · · · · · · · · ·
15 16 17 18 19 20 21 22 23 24 25 26	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2 S26-16 F1015 F1015A	Pedal, rear brake Rubber, ,, ,, pedal Screw, ,, ,, ,, stop Nut, ,, ,, ,, ,, screw Spindle, ,, ,, ,, ,, ,, screw Nut, brake pedal spindle to frame Nut, brake pedal spindle to frame Nut, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,			
15 16 17 18 19 20 21 22 23 24 25 26 27	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2 S26-16 F1015 F1015A F1015B	Pedal, rear brake Rubber, ,, ,, pedal Screw, ,, ,, ,, stop Nut, ,, ,, ,, ,, screw Spindle, ,, ,, ,, ,, screw Nut, brake pedal spindle to frame Nut, brake pedal spindle to frame Nut, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,			
15 16 17 18 19 20 21 22 23 24 25 26 27 28	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2 S26-16 F1015 F1015A F1015B F1015C	Pedal, rear brake Rubber, ,, ,, pedal Screw, ,, ,, ,, stop Nut, ,, ,, ,, ,, stop Nut, ,, ,, ,, ,, screw Nut, brake pedal spindle to frame Nut, brake pedal spindle to frame Nut, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,			
15 16 17 18 19 20 21 22 23 24 25 26 27	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2 S26-16 F1015 F1015A F1015B	Pedal, rear brake Rubber,",, , , , , , , , , , , , , , , , , ,			
15 16 17 18 19 20 21 22 23 24 25 26 27 28 29	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2 S26-16 F1015 F1015A F1015B F1015C WF32	Pedal, rear brakeRubber, ,, , , pedalScrew, ,, , , , , stopNut, ,, , , , , , screwSpindle, ,, , , , , , , screwNut, brake pedal spindle to frameNut, , , , , , , , , , , , , , , , , , ,			
15 16 17 18 19 20 21 22 23 24 25 26 27 28	REA F1153 F995 F1149 F879 F867 DS48 SCZ45 S1-51 S25-2 S26-16 F1015 F1015A F1015B F1015C	Pedal, rear brake Rubber,",, , , , , , , , , , , , , , , , , ,			

FOOTREST GROUP

32	F1731	Footrest O.S		 •••	 1 -	1	1	1
33	F987	Footrest N.S		 	 1	1	1	ł
34	NF704	Rubber, footrest					2	2
35	F1736	Tube, footrest support	C.S.	 	 1	· 1	1	1

ALWAYS QUOTE PART NUMBER

L

2

3

4

5

6

F991

F1092

DS48

S25-8

F1081

F862

DESCRIPTION

...

...

" O.S. (plain)

...

...

...

11

...

...

...

...

...

...

rod

Tube, distance, footrest rod

,,

3T 5T T100

Т

2

1

L

1

2

1

...

...

...

		A STORE	
I	1		
-	-	- AL	
2	2		
1	1	1	

1

R

6T

PILLION FOOTREST

Washer,,,

Rod,

Nut,

Tube,

Rod, footrest

**

99.

,,

												12
7	F2312	Footrest	asse	mbly, p	illion	•••	 	2	2	2	2	The second
8	F1694	Pedal, foo	otres	t			 	2	2	2	2	Children of
9	F1695	Rubber,	,,	pedal			 	2	2	2	2	Contraction of
10	F2271	Bolt,	,,	,,	pivot		 	2	2	2	2	記録が
11	SI-51	Nut,	15	**	,,	bolt	 	2	2	2	2	17131910 17131910
12	F2277	Washer,	,,	,	,,	,,	 	2	2	2	2	State of
13	F2268	Hanger,	**	**	N.S.		 	2	2	2	2	Sec. Sec.
14	F1696	Stud,	,,	,,	hange	er	 	2	2	2	2	
15	PO172A	Nut,	,,	>>	,,	stud	 	2	2	2	2	12 S.
16	S26-1	Washer,	,,	39	,,	,,	 	2	2	2	2	Number of
												- 1

SADDLE GROUP

17	F1729T	Saddle, co	omp	lete		٠		 			L	1	-
18	F1897	Saddle,	,,					 	1	-	_	_	·
19	F1729A	Cover, sa	ddle	e seat				 			I	1	1
20	F1897A	Cover,	,,	,,				 	1	-	-	_	
21	F2835	Spring,	,,	main	coil			 	2		2	2	2
22	F1729F	Spring, sa	ddl	e seat	73/			 		As	requ	ired	
23	F1729G	Spring,	,,		71/	•		 					
24	F1729H	Spring,	,,		7″			 	'	,,		,	
25	F17291	Spring,	,,	,,	65"			 		,,	,		÷ .
26	F1729J	Spring,	,,		61"		,	 		,,		÷,	
27	F1729K	Spring,			(Fron	t)		 		,,		,	
28	F1897K	Spring,	,,	,,	("	5		 		,,			T only
29	F847	Stud,	,,		ig to f	ram	e	 	2		2	2	2
30	W76	Nut,	,,		- ,,	,,	stud	 	8		8	8	8
31	S25-2	Washer,	,,		,,	,,	**	 	6		6	6	6
32	NA64J	Bolt and						 	I		I	1	1

State Terry or Lycett when ordering saddle parts

DO NOT FORGET TO SIGN YOUR ORDER

PROP STAND GROUP

(for frame less fitted pivot lug)

RE	F. No.	PART No.		DESC	RIPTIC	ИС		3T	5T	T100	6T	
	1	F2612	Prop stand, co	mplete	e		 		1	1	1	
	2	F2611	Prop stand,	,,			 	I.		-		
	3	F2606	Lug, pivot				 	_	1	1	1	
	• 4	F2604	Lug, ,,				 	I.			_	
	5	F2607	Pin, swivel				 	1	1	1	1	
	6	F2608	Peg, spring an	chorag	e		 	1	1	1	1	
	7	F2603	Bolt, lug clam			• • •	 	2	1	1	1	
	8	F2605	Bolt, ,, ,,				 		1	1	1	
	9	F2913	Leg, prop star	hd			 	I	1	1	1	
	10	F2610	Spring, leg te		. • • •		 	I	1	1	1	

(for frame with fitted pivot lug)

11	F3095	Leg, prop stand	 	• • •	_	1	1	1	
12	F3094	Leg, ,, ,,	 • • •		1				
13	F3096	Washer, prop stand lock	 		I	1	I	1	
14	F3097	Pin, swivel	 		1	1	1	1	
15	F2610	Spring, tension	 • • •.	••••	£	1	1	1	

SIDECAR ATTACHMENTS GROUP

and the second


16	F2587	Lug, bot	tom	front co	onnectio	on	•••	 	1	ł	1
17	F1746	Nut, ,	,,	,,	,,	sleev	/e	 -	2	2	2
18	F2600	Bolt,	,,	,,	,,			 -	1	I	1
19	F1747	Nut,	,,	,,	,,	bolt		 	1	1	1
20	F2601	Lug, real	r con	nectior	ı			 	1	1	1
21	F1743	Stud, "		,,				 -	2	2	2
22	S1-5	Nut, "		"	stud			 -	2	2	2
23	KF365	Washer,	rear	conne	ction st	ud	•••	 -	2	2	2

REAR CARRIER GROUP

24	F2278CTE	Carrier, c	omo	lete w	vith fitt	ings				1	1	1
25	F2856	Bridge, ca							-	2	2	2
26	F2857	Plate,	,,	back	ing				-	2	2	2
27	D557	Bolt,	""				•••	• • •	— ,	8	8	8
28	E1612	Washer,	**							8	8	8
29	F879	Nut,	,,			***		• • •		8	8	8

STATE COLOUR WHEN ORDERING

TOOL KIT

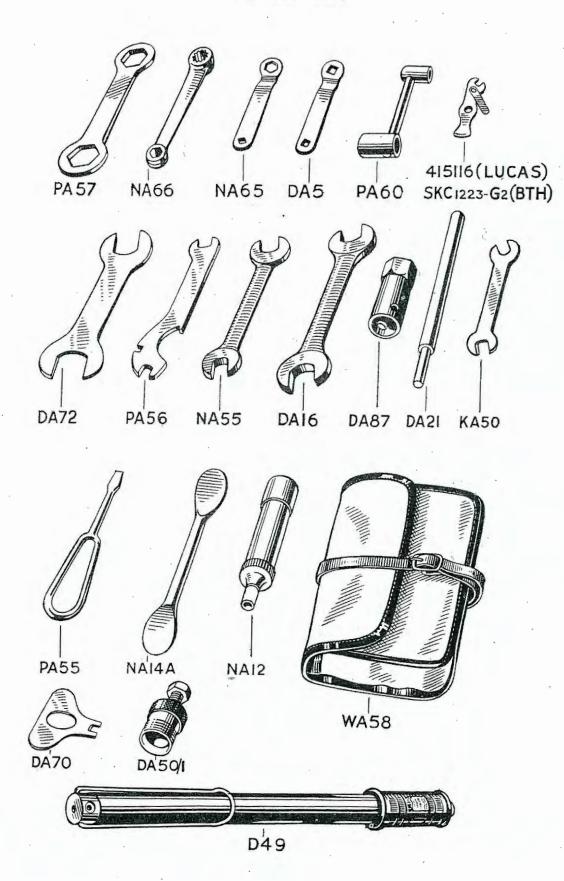

PILLION SEAT GROUP

\$25

の思想を言いたい

and a

REF.	No.	PART No.		DESCRIPTIC	NC		3T	5T	T100	6T	
and the second se	1	NF761	Seat, pillior	n, complete		 	1	. 1	1	1	
	2	S23-42	Bolt, "	seat fixing		 	4	4	- 4	4	
	3	S4-9	Nut, ,,	,, bolt		 • • • •	4	4	4	4	
1. 12 14	4	S25-1	Washer, "	»» »» ···		 •••	4	4	4	4	

TOOL BOX GROUP

5	F1692A	Tool box,	cor	nple	te			 	1	1	1	-1
6	F1735	Ring, seali	ng					 	1	I	I	1
7	ZI	Fastener as	ssei	mbly	1			 · · ·	1	1	-	1
8	F1700	Clip, tooib				e		 	2	1	1	1
9	F1699	Clip, ,		,,	,,			 	-	T	1	1
10	D\$57	Bolt, ,		,,		cli	p	 	2	2	2	2
11	F879	Nut, ,		,,	,,	,,	bolt	 	2	2	2	2
12	S26-2	Washer, ,		,,	33		**	 •••	2	2	2	2


TOOL KIT GROUP

13	DA71	Tool kit, complete	•••		-	1	1	1
14	D209	Tool kit ,,			1			-
15	DA72	Spanner .920" $ imes$ 1.010" open			I	1	. 1	1
16	KA50	Spanner .375" × .338" - ,,			1	1	1	1
17	NA55	Spanner .600" × .525" ,,			1	1	1	1
18	DA16	Spanner .820" × .712" ,,			1	1	1	1
19	NA66	Spanner .600" \times .448" closed			1	ł	1	ľ
20	PA57	Spanner .919" × 1.011" "			1	1	1	1
21	PA60	Spanner box complete			1	1	1	1
. 22	DA5	Spanner rocker adjusting screw		••••	1	I	1	1
23	NA65	Spanner .448" hex. \times .218" sq.			-	1	1	1
24	PA56	Spanner combination		•••	1	1	1	1
25	DA87	Spanner, sparking plug	•••		I	1	1	1
26	SKC1223-G2	Spanner, magneto contact (B.T.H.)		•••	1	1	1	
27	415116	Spanner, " " " (Lucas)			- 1	1	1	1
28	DA21	Bar, tommy	•••	•••	I	1	1	1.
29	DA70	Key, clutch adjusting		•••	I	1	1	1
30	DA50/1	Extractor, clutch centre			1	1	al an	1
31	NA12	Gun, grease	• • •	•••	I	1		1
32	NAI4A	Lever, tyre		•••	1	1		I.
33	PA55	Screwdriver		•••	1	1	I	1
34	WA58	Roll, tool			1	1	1	1
35	D49	Inflator, tyre			1.	1	1	1
36	D220	Spanner, fork cap nut (not included i	n tool l	kit)	I	1	. !	1
37	167	Extractor, chain rivet (not included	in tool	kit)	1	1	1	1

ALWAYS QUOTE PART NUMBER

AIR FILTER GROUP

REF. No.	PART No.	DESCRIPTION	3T	5T	T100	6T
1	V29206	Filter, air	1			
2	V29671	Element, filter cover and	i		1 .	3
3	F2874	Sleeve carburetter to filter	1		1	1
4	F2875	Sleeve.	1			-
5	F2873	Connection, sleeve to filter		1		1 Days
6	F2872	Connection, ", ", " rubber …	1	1	-	-

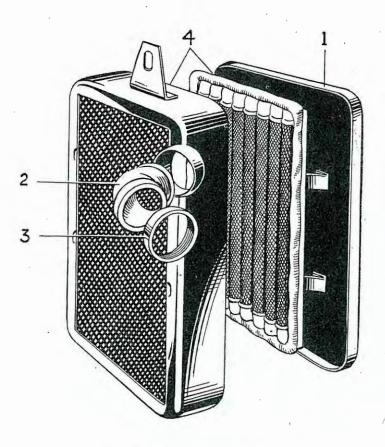

INDEX FOR AIR FILTER

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1.	V.29671	78	2	3	F.2874	78	• 3
2	F.2872	78	6		F.2875	78	4
	F.2873	78	5	4	V.29206	78	L

ENGINE NUMBER IS IMPRESSED ON DRIVING SIDE OF CRANKCASE

SPEEDOMETER GROUP

2			Elman fortunation		rT.	TIOO	6T
REF. N	Vo.	PART No.	DESCRIPTION	3T	5T	T100	01
			c .				
	1	S467/19	Speedometer head 120 m.p.h. (with r.p.m.				
1			scale)	-	1	1	_
	2	S467/43	Speedometer head 120 m.p.h. (with r.p.m.				
		•	scale)				i
	3	S467/17	Speedometer head 80 m.p.h. (with r.p.m.	1			
19. A.			scale)				
	4	S467/23	Speedome er head 180 k.p.h. (with r.p.m.	_	1	1	
	2		scale) Speedometer head 180 k.p.h. (less r.p.m.				
	5	S467/47	scale)	_			1
	,	S467/21	Speedometer head 140 k.p.h. (with r.p.m.				
2.5:	6	5467/21	scale)	1			-
	7	P53279/1	Bulb holder, c/w bulb	1	1	1	
10 <u>0</u> 0.	8	P52305	Bulbonly	1	1	1.	1
1	9	P22469	Rubber ring, speedometer head	1	1	1	1
i	10	25578/2	Clamp-bar " " "	1	1	1	. 1
	11	N1253	Nut, clamp-bar	2	2	2	2
1.1.	12	D245	Cable, speedometer drive (44" long)		1	1	1
A State	13	D246	Cable, ,, ,, $(42\frac{1}{2}'' \log)$	1	-		1
5.37	14	F3098	Clip, ", ", cable				
		SPE	EDOMETER DRIVE AT GEARBOX				
	15	T924	Pinion (10T), standard ratio layshaft	1	I	1	1
41,000,1	16	T973	Pinion (8T), wide ratio layshaft	1	1	1	.1
	17	T925	Peg, layshaft pinion	1	1	1	1
1.12	18	T934	Gear (16T), standard ratio driven	1	1	1	1
2	19	T975	Gear (15T), wide ratio driven	1	1	1	1.
ine .	20	T825	Washer, gear thrust	1	1	1	i
5.7	21	T933	Bush, gear	i	1	i	i
Van Po	22	T948	Washer, gear oil sealing (rubber)			·	
C MA						-	-
10.1							
1. 2.			SPARKING PLUG GROUP				
						2	
	23	F80*	Plug, sparking (K.L.G.)	_	2	2	_
States to	24	HI4*	Plug, " (Lodge)	2	1		_
	25	LIOS	Plug, " (Champion)		_		2 2
	26	LIIS	Plug, ,, (Champion)	2	2	2	2
	27	D105	Cover, ,, plug	-			

* Also supplied for 6T


APPLY TO ACCESSORY MANUFACTURERS FOR SERVICE UNITS

CARBURETTER GROUP

REF. No.	PART No.	DE	SCRIPT	TION		2	3T	5T	T100	6Т
1	276DK/IAT	Carburetter assen	nbly				-	1		
2	276DL/1AT	,, ,,							1	1
3	275AQ/1A	,, ,,					1			
4	276AE/1AT	,, ,, ,,								
5	276/410R	Chamber, mixing				•••		1		1
6	276/411R	,, ,,		•••	•••				1	_
7	275/145R	· · · · · · · · · · · · · · · · · · ·			,		1			Could be
8	6/403	Top mixing chamb			· ···			1	_	-
9	4/032A			•••		•••	1	1	I	
10	6/031	" " " " Cap, " "	,	•••		•••		_		-
11	4/031	Can					-	1	1	0.4
12	6/062	Nut						-		
13	4/062	Nut		•••				1	1	
14	4/276	Spring					1	_	_	-
15	4/235	Spring	cap			•••		1	1	1
- 16	4/241	Serou	,,			•••		-	-	-
17.	6/045	Value ata	,, 5	spring			1	1	1	
18	5/045	Value		•••	• • •	*** *		1	1	- Charles
19	4/046					••••	1		_	-
20	6/047	Spring, air valve Guide, ,, ,,				••••	1	1	4	
21	5/047				•••			1	1	1
22	6/052	Value threattle (171		•••	•••	•••	1			
23	5/052	Valve, throttle 6/3	2	•••		•••	-	. 1	1	1
24	4/263	,, ,, 5/4 Sering		•••		•••	1		-	
25	4/063	Spring, ,, valv			•••	•••	1	1	1	1
26	16/010	Screw, ", "	adjust			•••	I	1	1	-
	13/129	Nut, throttle valve		ng			1	1	1	1
27 28	4/148	Screw, air adjusting					1	1	1	1
	4/042	Spring, " "	screw				1	1	I	1
29	+4/042	Jet, main No. 140	•••	•••			-	I		-
30	4/042	" " No. 150							I	-
31		,, ,, No. 120	•••				1			
32	†4/042	" " No. 170			•••		_	,		1
33	206/057R	Block, jet	•••		***	•••	*		1	
34	206/058R	*** ***							1	1
35	205/058R	»» »» ···					1.0			
36	6/040	Washer, jet block			•••			1	· 1	1
37	4/040	** ** **	•••		• •••		1			
38	4/061	Jet, needle No. 107					1 .	1	1	1
39	6/065	Needle, jet No. 6					1	1	1	1
40	5/065	" " No. 5	•••				I	-		-
41	4/230	Clip, ,, needle					1	1	1	1
42	4/043	Bolt, holding					1	1	1	1
43	4/053	Washer, holding bol					2	2	2	2
44	4/035	Adjuster, throttle ca					1 .			- · ·
45	IAT	Chamber, float (com	plete)		•••			Ι.	1	1
46	IA	ss ss	"				1			+
	45	and the second sec								0.014

[†]For maximum power use 160 main jet (T100), 190 main jet (6T), and disconnect air filter.

DO NOT FORGET TO SIGN YOUR ORDER

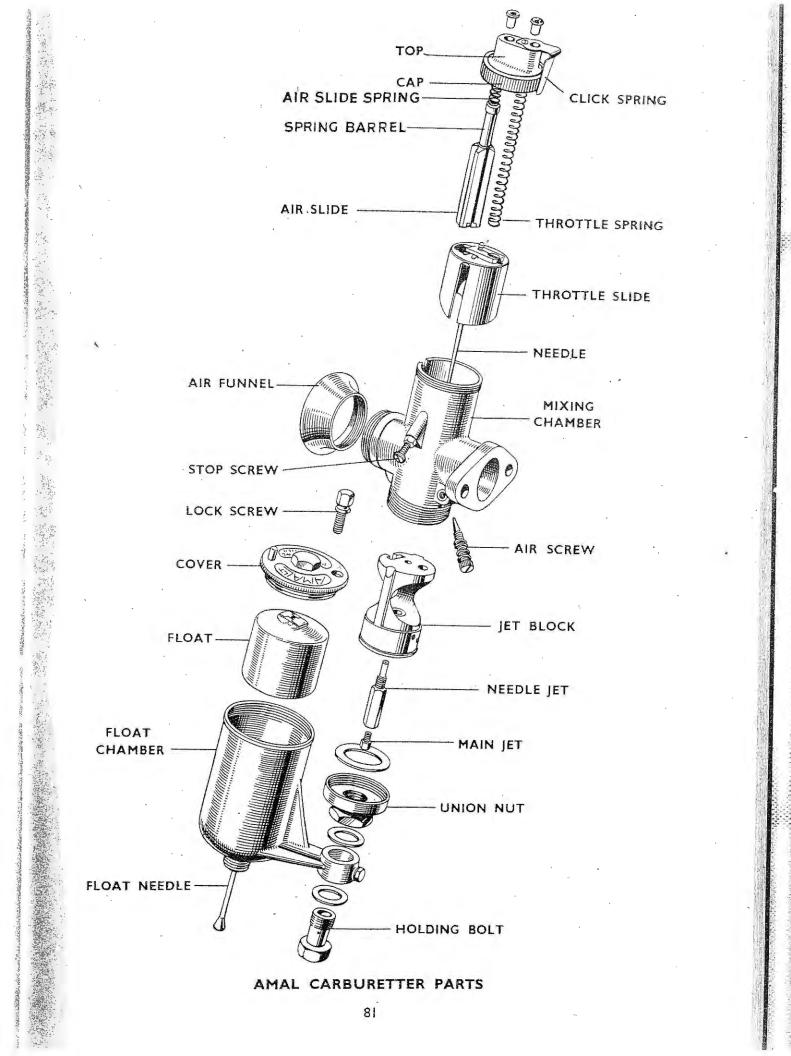

REF. No.	PART No.	i de la compañía de la	D	ESCRIPT	ION			ЗТ	5T	T100	6T
I	64/192	Body, flo	at cham	ber					I	I	1
2	64/156	** **						1			
3	14/208	Cover, "	,					1	I.	1	1
4	14/021	Lock scre						÷.	i	i	-
5	14/015	EL						i	1	÷	1
6	14/024	Needle, v						i	1	-1	1
7	14/209	Tickler						1 .	1	1	1
8	14/210	Stop, tick						ī		1	
9	14/032	Spring, ,				÷		· 1	1	1	l
10	14/289	Cotter, "				•••		I	1	1	
11	13/153	Screw, pl				•••	•••	i	1	1	
12	14/039	Washer,		-	 ew		•••	1	1	-	1
13	14/178	Locknut,		p.06 5ci		•••		1	- 1	1	4
14	14/175	Washer, s	-			•••	•••	1		1	1
15	14/042	Nut, petr	_		•••	•••		1			4
16	14/026	Nipple, p			***	•••	•••	- 1	1	1	4
17	NA43	Washer, o					•••		1	1	
	NA48					••••	• • •	-	1		
19	NA43A	**	,,		•••			1	-		
12	, TATION	2 ¥		**				-		0	1

MAGNETO (B.T.H.) GROUP

20	D152	Magneto, less auto advance			1.	ł	1	1
21	SKC10917-1	Housing, magneto main		1	i	i	i	i
22	SKC741-G1	Ball race			2	2	2	2
23	SKC6123-1	Insulation washer, ball race			2	2	2	2
24	CR22186-1	Shim, bearing adjusting .002" and .			1	1	2	
25	CZ108979	Seal, oil retaining		••••	i.			
26	CR23042-1	Magnet			1	- 1	1	1
27	SKC6245-1	Screw, magnet locating			2	2	2	1
28	SKC24291-1	Cover, magnet	•••	•••	1	1	. 4	4
29	3BA 5/16 rd. hd.			••••	2	2	2	2
30	SKC9952-8	Washer, magnet cover fixing			2	2	. 2	2
31	CR23290-1	Screw, safety gap		••••	1	1	4	2
32	SKC6799-1	Tab, safety gap screw locking			1	. 1 .		1
33	SKC87159-G1	Holder, collector brush		•••	2	2	2	1
34	SKC6306-G2	Collector brush and spring	*** .	•••		2	2	2
35	CR87404-1	Washer, collector holder sealing	•••	•••	2	2	2	2
36	CR87160-1	Nut colleges helden de	•••	•••	2	2	2	2
37	CZ60707-G19	Cable UT	• • •		2	2	2	2
38	SKC6397-1	Comput LIT and I and	··· .	•••			2	2
39	E2415	CIT LIT LL		•••	2	2	2	2
40	CR87403-1	Ferrule, collector holder rubber	•••	• 1.4	1	1	1	1
41	CY50495-GI				2	2	2	2
42	SKC6115-1	Armature c/w condenser and end p			1.	1	I	1
43	SKC6111-1	Screw, armature end plate to core		•••	4	4	4 .	4
15	51(C0111-1	Dowel, ", ", locating			1			1


SEE SPECIMEN ORDER IN PREFACE

1 SKC61141 Screw, armature end plate securing 1 1 1 2 SKC61243 Dowel, , , , , , , , , , , , , , , , , , ,	REF. No.	PART No.	DESCRIPTION	3Т	5T	T100	6T	
3 CXS2078-G3 Condenser, asembly		SKC6114-1	Screw, armature end plate securing	4	4	4	4	
9 SKC6612-G1 Sip ring.		SKC6112-1	Dowel, ,, ,, ,, locating	1	1	1	I	
9 SKC6612-G1 Sip ring.	3	CX52078-G3	Condenser, assembly	1	1	1	I	
9 SKC6012-G1 Skip ring.	4	SKC6636-1	Insulation condenser (large)	2	2		2	
9 SKC6612-61 Slip ring	5	SKC6637-1	,, ,, (small)	2	2	2	2	
 SKC612-10 Silp ring	6	4BAx & "ch.hd.	Screw, condenser securing	2	2	2	2	
9 SKC6612-61 Sippring	7			2	2	2	2	,
9 SKC6612-G1 Slip ring	8	CR20776-1	Bush, condenser insulating	1	1	.1 .	1	
10 SKC6122-1 Washer, slip ring, plain	1			1	1	1	1	
11 SKC6180-1 Washer, slip ring, spring 1 1 1 1 12 CR20774-1 Ring, reinforcing 1 1 1 1 13 CX188-624 Contact breaker, L.H. complete 1 1 1 1 14 SKC74955-G2 Base and check spring assembly, contact 1 1 1 1 15 CZ63472-G2 Lever contact and springs 1 1 1 1 16 SKC6215-1 Spring, contact breaker rever 1 1 1 1 19 SKC6208-1 Screw, contact breaker spring 2 2 2 2 2 10 SKC6208-1 Screw, contact breaker contact 1 1 1 1 20 SKC6216-1 Nut, adjustable screw contact 1 1 1 1 1 21 SKC6210-1 Bush, contact screw locating 1 1 1 1 1 1 1 1 1 1 1 1 <td>10</td> <td></td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td></td>	10			1	1	1	1	
12 CR20774-1 Ring, reinforcing 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <	12			1	1	1	1	
13 CX1883-G24 Contact breaker, L.H. complete 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <td></td> <td></td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>L</td> <td></td>				1	1	1	L	
14 SKC74955-G2 Base and check spring assembly, contact breaker 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 </td <td>5 4</td> <td></td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td></td>	5 4			1	1	1	1	
breaker	te.							
15 CZ63472-G2 Lever contact and springs 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				1	1	1	1	
16 SKC6215-1 Spring, contact breaker spring 2 2 2 2 17 SKC6208-1 Screw, contact breaker spring 2 2 2 2 18 CR29708-1 Wick, contact breaker lever 1 1 1 1 19 SKC620303-G1 Contact, adjustable screw contact 1 1 1 1 20 SKC6216-1 Nut, adjustable screw contact 1 1 1 1 21 SKC6235-1 Block, contact screw locating 1 1 1 1 23 SKC6201-1 Bush, screw insulating block 1 1 1 1 25 SKC6212-1 Bush, block centre 1 1 1 1 26 SKC6214-1 Bush, block centre 1 1 1 1 26 SKC6214-1 Spring, contact breaker securing 1 1 1 1 27 SKC6219-G1 Brush and spring contact breaker carthing 1 1 1 1 28 SKC6214-1 Spring n n	15	C763472-G2		1	1	1	1	
17 SKC6208-1 Screw, contact breaker spring	and a			2	2	2	2	
18 CR29708-1 Wick, contact breaker lever 1 1 19 SKC29303-G1 Contact, adjustable screw 1 1 20 SKC6216-1 Nut, adjustable screw contact 1 1 21 SKC6235-1 Block, contact screw contact 1 1 23 SKC6213-1 Strip, insulating block 1 1 24 SKC6212-1 Bush, screw insulating 1 1 25 SKC6212-1 Bush, block centre 1 1 26 SKC6212-1 Bush, block centre 1 1 27 SKC6219-G1 Brew, contact breaker main 1 1 28 SKC6214-1 Spring, contact breaker securing 1 1 29 CR29487-1 Screw, contact breaker securing 1 1 31 SKC28537 Cover only contact breaker 1 1 1 32 CR29455-1 Strip, , , cover insulating 1 1 33 CR29455-1 Strip, , , cover insulating 3 3 <t< td=""><td>1152</td><td></td><td></td><td></td><td>2</td><td>2</td><td>2</td><td></td></t<>	1152				2	2	2	
19 SKC29303-G1 Contact, adjustable screw 1 1 1 20 SKC6216-1 Nut, adjustable screw contact 1 1 1 21 SKC6235-1 Block, contact screw locating 1 1 1 23 SKC6213-1 Strip, insulating block 1 1 1 24 SKC6209-1 Serew, block securing 1 1 1 25 SKC6212-1 Bush, screw insulating 1 1 1 26 SKC6212-1 Bush, block centre 1 1 1 26 SKC6214-1 Spring, contact breaker main 1 1 1 27 SKC6218-1 Screw, contact breaker securing 1 1 1 28 SKC6214-1 Spring, contact breaker securing 1 1 1 29 CR29487-1 Screw, contact breaker, cover insulating 1 1 1 1 30 CR29455-1 Strip, , ,					1	1	I	
20 SKC6216-1 Nut, adjustable screw contact 1 1 1 21 SKC6235-1 Block, contact screw locating 1 1 1 23 SKC6213-1 Strip, insulating block 1 1 1 23 SKC6210-1 Bush, screw insulating 1 1 1 24 SKC6210-1 Bush, screw insulating 1 1 1 25 SKC6210-1 Bush, block centre 1 1 1 26 SKC6214-1 Spring, contact breaker main 1 1 1 26 SKC6219-G1 Brush and spring contact breaker earthing 1 1 1 27 SKC62180-1 Corer complete, contact breaker 1 1 1 20 CZ26180-1 Corer only, contact breaker 1 1 1 31 SKC28537 Corer only, contact breaker 1 1 1 32 CR29455-1 Strip, , ,	- - - 8			I	1	1	1	
21 SKC9952-8 Washer, adjustable screw contact 1 1 1 22 SKC6235-1 Block, contact screw locating 1 1 1 23 SKC6213-1 Strip, insulating block 1 1 1 24 SKC6209-1 Screw, block securing 1 1 1 25 SKC6210-1 Bush, screw insulating 1 1 1 26 SKC6210-61 Brush and spring contact breaker earthing 1 1 1 26 SKC6210-61 Brush and spring contact breaker main 1 1 1 27 SKC6210-61 Strew, contact breaker securing 1 1 1 28 SKC6214-1 Spring, contact breaker securing 1 1 1 20 CR29457-1 Strew, contact breaker 1 1 1 31 SKC28337 Cover only, contact breaker 1 1 1 32 CR29456-1 Strip, , , contact breaker				1	I	1	1	
22 SKC6235-1 Block, contact screw locating I I I I 23 SKC6213-1 Strip, insulating block I I I 24 SKC6210-1 Bush, screw insulating I I I I 25 SKC6212-1 Bush, block centre I I I 26 SKC6212-1 Bush, block centre I I I 27 SKC6218-1 Spring, contact breaker main I I I 28 SKC6214-1 Spring, contact breaker securing I I I 29 CR29487-1 Screw, contact breaker securing I I I 30 CZ61580-1 Cover complete, contact breaker I I I 31 SKC2837 Cover only, contact breaker I I I 32 CR29458-1 Strip, , , I I 33 <t< td=""><td>1</td><td></td><td></td><td>1</td><td>1</td><td>1</td><td>I</td><td></td></t<>	1			1	1	1	I	
23 SKC6213-1 Strip, insulating block				1	1	L	L	
24 SKC6209-1 Screw, block securing 1 1 1 1 25 SKC6210-1 Bush, screw insulating 1 1 1 26 SKC6219-G1 Brush and spring contact breaker earthing 1 1 1 27 SKC6219-G1 Brush and spring contact breaker earthing 1 1 1 28 SKC6214-1 Spring, contact breaker securing 1 1 1 29 CR29487-1 Screw, contact breaker securing 1 1 1 30 CZ61580-1 Cover complete, contact breaker 1 1 1 31 SKC6215 Strip, , , , 1 1 32 CR29456-1 Strip, , , , 1 1 1 34 CR29455-1 Strip, , , , 1 1 1 35 CR29459-1 Terminal, , , , spring 2 <t< td=""><td></td><td></td><td></td><td>1</td><td>1</td><td>1</td><td>1</td><td></td></t<>				1	1	1	1	
25 SKC6210-1 Bush, screw insulating I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I	8			1	1	I	1	
26 SKC6212-1 Bush, block centre <td.< td=""><td>25</td><td></td><td></td><td>1</td><td>1</td><td>-</td><td>1</td><td></td></td.<>	25			1	1	-	1	
27 SKC6219-G1 Brush and spring contact breaker earthing 1 1 1 1 28 SKC6214-1 Spring, contact breaker main 1 1 1 1 29 CR29487-1 Screw, contact breaker securing 1 1 1 1 30 CZ61580-1 Cover complete, contact breaker 1 1 1 31 SKC28537 Cover only, contact breaker, cover insulating 1 1 1 32 CR89533-1 Bush, contact breaker, cover insulating 1 1 1 33 CR29456-1 Strip, , , contact 1 1 34 CR29456-1 Strip, , , contact 1 1 1 35 CR29459-1 Terminal, , , , , contact 1 1 1 36 4BA Strd. Washer, , , , spring 2 2 2 2 2 2 2 2 2 2 2 2 2 <td>C1 204</td> <td></td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>L</td> <td></td>	C1 204			1	1	1	L	
28 SKC6214-1 Spring, contact breaker main 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <td></td> <td></td> <td></td> <td>I</td> <td>· 1</td> <td>1</td> <td>I</td> <td></td>				I	· 1	1	I	
29 CR29487-1 Screw, contact breaker securing 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <td></td> <td></td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>l</td> <td></td>				1	1	1	l	
30 CZ61580-1 Cover complete, contact breaker 1 1 1 1 31 SKC28537 Cover only, contact breaker 1 1 1 1 32 CR89533-1 Bush, contact breaker, cover insulating 1 1 1 1 33 CR29456-1 Strip, , , , , 1 1 1 34 CR29455-1 Strip, , , , , 1 1 1 1 35 CR29459-1 Terminal, , , , , 1 1 1 1 36 4BA Strd. Washer, , , , spring 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2<				1	1	I	I	
31 SKC28537 Cover only, contact breaker 1 1 1 1 32 CR89533-1 Bush, contact breaker, cover insulating 1 1 1 1 33 CR29456-1 Strip, ,, ,, ,, ,, 1 1 1 1 34 CR29455-1 Strip, ,, ,, ,, contact 1 1 1 1 35 CR29459-1 Terminal, ,, ,, ,, ,, n 1 1 1 1 36 4BA Strd. Washer, ,, ,, spring 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 <t< td=""><td>28 S C A</td><td></td><td></td><td>1</td><td>1</td><td>1</td><td>l</td><td></td></t<>	28 S C A			1	1	1	l	
32 CR89533-I Bush, contact breaker, cover insulating I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I	31	SKC28537		I	1	ł	i	
33 CR29456-1 Strip, ", ", ", ", ", ", ", ", ", ", ", ", ",	32			1	1	1	1	
34 CR29455-1 Strip, ", ", ", contact 1 1 1 1 1 35 CR29459-1 Terminal, ", ", ", ", ", ", 1 1 1 1 1 36 4BA Strd. Washer, ", ", terminal, plain 3 3 3 3 37 SKC9952-6 Washer, ", ", ", spring 2 2 2 2 38 CR26513 Nut, ", ", ", ", Nutreled 1 1 1 1 40 SKC88939-6 Washer, ", ", ", ", ", nut 1 1 1 1 40 SKC88939-6 Washer, ", ", ", ", ", nut 1 1 1 1 41 CR28540-1 Washer, ", ", ", securing 1 1 1 1 42 CR28571-1 Screw, ", ", ", securing 3 3 3 3 43 SKC9952-6 Washer, ", ", ", screw 3 3 3 3 43 SKC952-6 Washer, ", ", ", screw 1 1 1 1 44 SKC33650 Cam, ring 1 1 1 1 45 SKC6344-1 Wick, cam lubricating	R 32			1	1	I	1	
35 CR29459-1 Terminal, ", ", ", ", ", ", ", ", " 1 1 1 1 36 4BA Strd. Washer, ", ", terminal, plain 3 3 3 3 37 SKC9952-6 Washer, ", ", ", spring 2 2 2 2 38 CR26513 Nut, ", ", ", ", ", spring 2 2 2 2 38 CR26513 Nut, ", ", ", ", ", spring 1 1 1 1 39 CR89927-1 Nut, ", ", ", ", ", ", nut 1 1 1 1 40 SKC88939-6 Washer, ", ", ", ", securing 1 1 1 1 41 CR28540-1 Washer, ", ", ", securing 3 3 3 3 42 CR28571-1 Screw, ", ", ", screw… 3 3 3 3 43 SKC33650 Cam, ring … … 1 1 1 45 SKC6344-1 Wick, cam lubricating … … 1 1 1 1 46 SKC28544-G3 Housing, cam ring housing … … <td>34</td> <td></td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td></td>	34			1	1	1	1	
36 4BA Strd. Washer, ", ", terminal, plain … 3 3 3 3 37 SKC9952-6 Washer, ", ", ", spring … 2 2 2 2 38 CR26513 Nut, ", ", ", ", ", lock … 1 1 1 1 39 CR89927-1 Nut, ", ", ", ", ", ", nut 1 1 1 1 40 SKC88939-6 Washer, ", ", ", ", ", ", nut 1 1 1 1 41 CR28540-1 Washer, ", ", ", ", ", nut 1 1 1 1 42 CR28571-1 Screw, ", ", ", securing … 3 3 3 3 43 SKC3850 Cam, ring 1 1 1 1 45 SKC6344-1 Wick, cam lubricating 1 1 1 1 46 SKC28544-G3 Housing, cam ring 1 1 1 1 47 2BAx½″inst.hd. Screw, cam ring housing 1 1 1 1 1 48 SKC88939-20 Washer, ", ", ", ", lock 4 4 4 49 CR26381-1 Screw, timing stop 1 1 1 1 <td>4</td> <td></td> <td>•</td> <td>1</td> <td>1</td> <td>I</td> <td>1</td> <td>4</td>	4		•	1	1	I	1	4
37 SKC9952-6 Washer, ", ", ", ", spring … 2 2 2 2 38 CR26513 Nut, ", ", ", ", ", lock … 1 1 1 1 39 CR89927-1 Nut, ", ", ", ", ", knurled … 1 1 1 1 40 SKC88939-6 Washer, ", ", ", ", ", ", ", nut 1 1 1 1 1 41 CR28540-1 Washer, ", ", ", ", securing … 1 1 1 1 1 42 CR28571-1 Screw, ", ", ", securing … 3 3 3 3 43 SKC9952-6 Washer, ", ", ", screw … 3 3 3 3 44 SKC33650 Cam, ring 1 1 1 1 45 SKC6344-1 Wick, cam lubricating 1 1 1 1 46 SKC28544-G3 Housing, cam ring 1 1 1 1 1 47 2BAx½″inst.hd. Screw, cam ring housing 1 1 1 1 1 1 48 SKC88939-20 Washer, ", ", ", lock 4 4 4 4 49 CR26381-1 S				3	3	3	3	
38 CR26513 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",	5. ·		14/ 1	2	2	2	2	
39 CR89927-1 Nut, ", ", ", ", ", ", ", ", ", ", ", ", ",	A BOOK	-		1	1	1	1	
40 SKC88939-6 Washer,,,,, nut 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 </td <td></td> <td>CR89927-1</td> <td>Nut, ,, ,, ,, knurled</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td></td>		CR89927-1	Nut, ,, ,, ,, knurled	1	1	1	1	
41 CR28540-1 Washer, ., ., ., cover sealing I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I <td< td=""><td></td><td>SKC88939-6</td><td>Washer, ,, ,, ,, ,, ,, nut</td><td>1</td><td>1</td><td>1</td><td>1</td><td></td></td<>		SKC88939-6	Washer, ,, ,, ,, ,, ,, nut	1	1	1	1	
42 CR28571-1 Screw, ,, ,, ,, ,, securing 3 3 3 3 3 43 SKC9952-6 Washer, ,, ,, ,, screw 3 3 3 3 3 44 SKC33650 Cam, ring 1 1 1 1 45 SKC6344-1 Wick, cam lubricating 1 1 1 1 46 SKC28544-G3 Housing, cam ring 1 1 1 1 47 2BAx½"inst.hd. Screw, cam ring housing 4 4 4 48 SKC88939-20 Washer, ,, ,, ,, lock 4 4 4 49 CR26381-1 Screw, timing stop 1 1 1 1 WHEN IN DOUBT SEND SAMPLE			Marken seeling	1	ł	1	1	,
43 SKC9952-6 Washer, ,, ,, ,, screw 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	The second se	CR28571-1	Screw, ", ", securing	3	3	3	3	
44 SKC33650 Cam, ring 1 1 1 1 45 SKC6344-1 Wick, cam lubricating 1 1 1 1 46 SKC28544-G3 Housing, cam ring 1 1 1 1 47 2BAx½″inst.hd. Screw, cam ring housing 4 4 4 48 SKC88939-20 Washer, ,, ,, ,, ,, lock 4 4 4 49 CR26381-1 Screw, timing stop 1 1 1 WHEN IN DOUBT SEND SAMPLE	1. 工業に	/		3	3	3	3	
45 SKC6344-I Wick, cam lubricating I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I	She		Cam, ring	1	1	1	1	
46 SKC28544-G3 Housing, cam ring I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I I		SKC6344-1	Wick, cam lubricating	1	1	1	1	
47 2BAx½"inst.hd. Screw, cam ring housing 4 4 4 48 SKC88939-20 Washer, ,, ,, ,, ,, lock 4 4 4 49 CR26381-1 Screw, timing stop 1 1 1 WHEN IN DOUBT SEND SAMPLE	A STATE OF A	SKC28544-G3	Housing, cam ring	I	1	1	i	
48 SKC88939-20 Washer, ,, ,, ,, ,, lock 4 4 4 4 49 CR26381-1 Screw, timing stop 1 1 I I WHEN IN DOUBT SEND SAMPLE	and the second s	2BAx1/inst.hd	Screw, cam ring housing	4	4	4	4	
49 CR26381-I Screw, timing stop IIIIII WHEN IN DOUBT SEND SAMPLE		· · · · · · · · · · · · · · · · · · ·		4	4	4	4	
WHEN IN DOUBT SEND SAMPLE	The second second	CR26381-1	Screw, timing stop	1	1	I	L	
83								
			83					
			•					


all a la bar bar and a

a land and all the state of the second of the

AUTOMATIC ADVANCE CONTROL

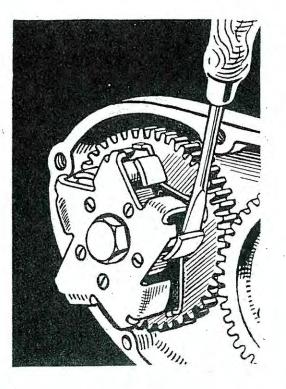



B.T.H.

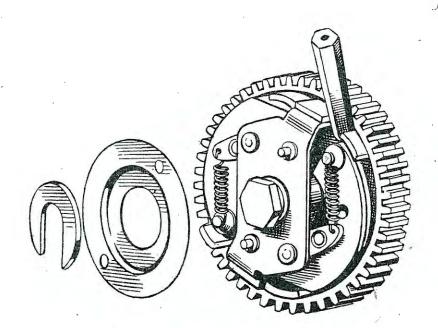


Lucas.

Illustrations showing the two types in use and the method of securing the mechanism in the fully advanced position for timing purposes.

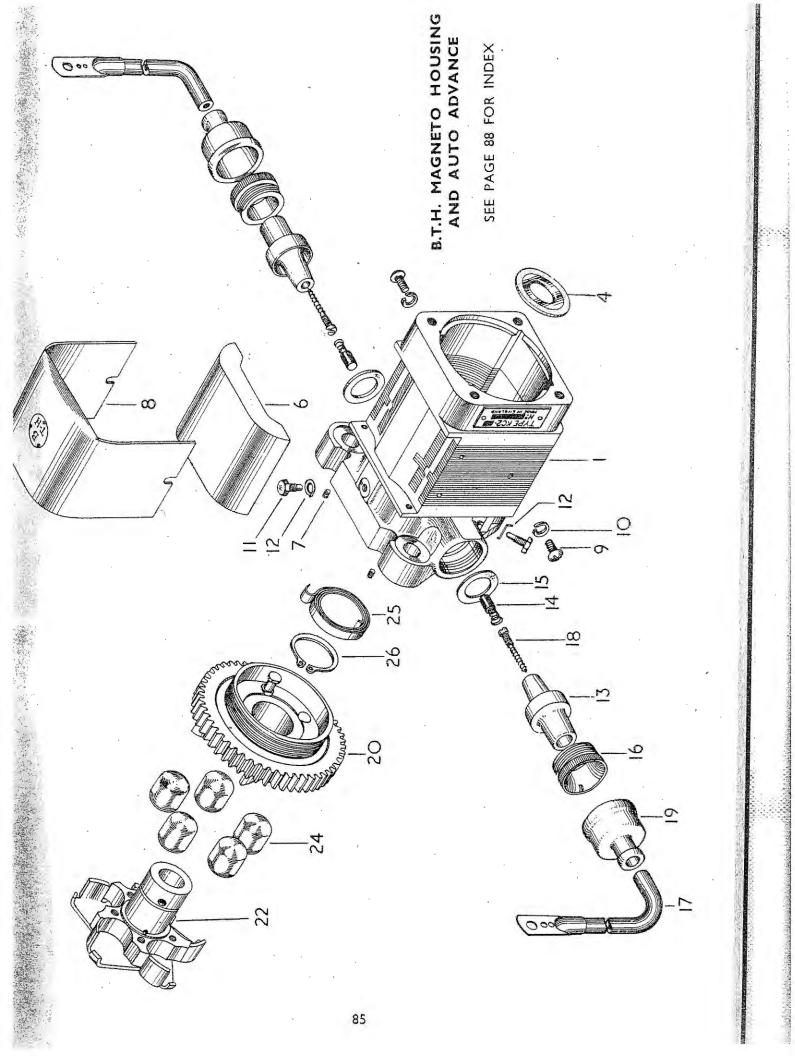

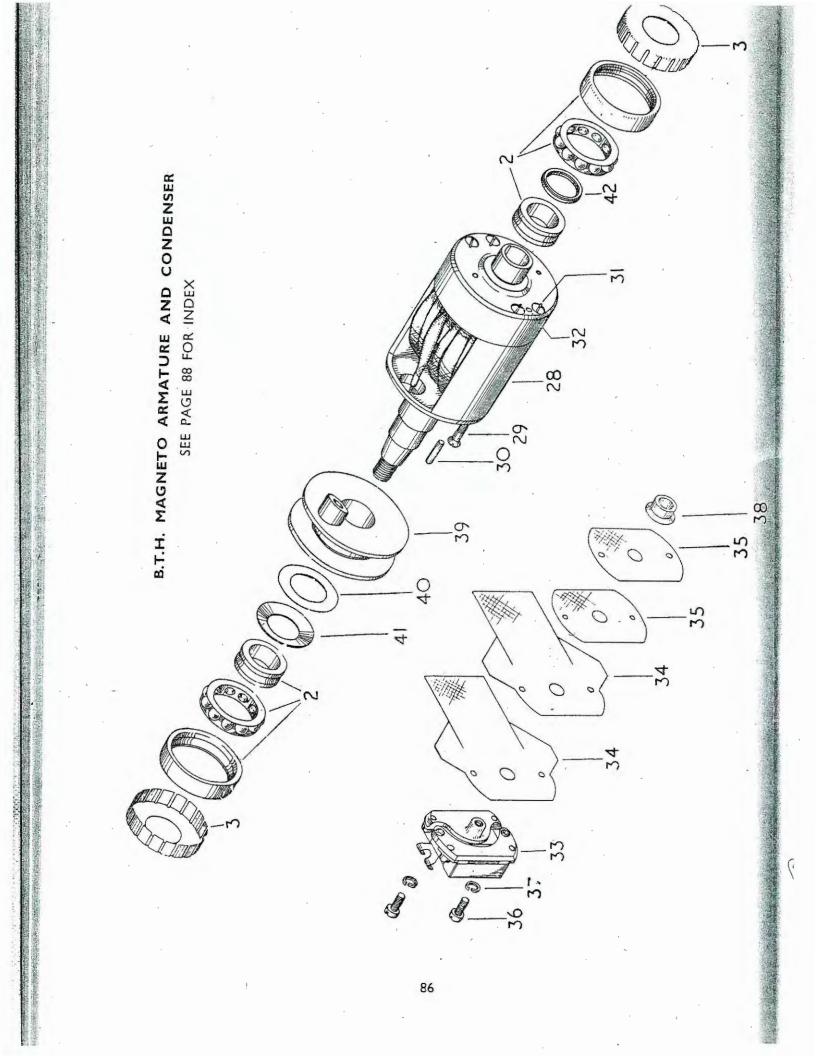

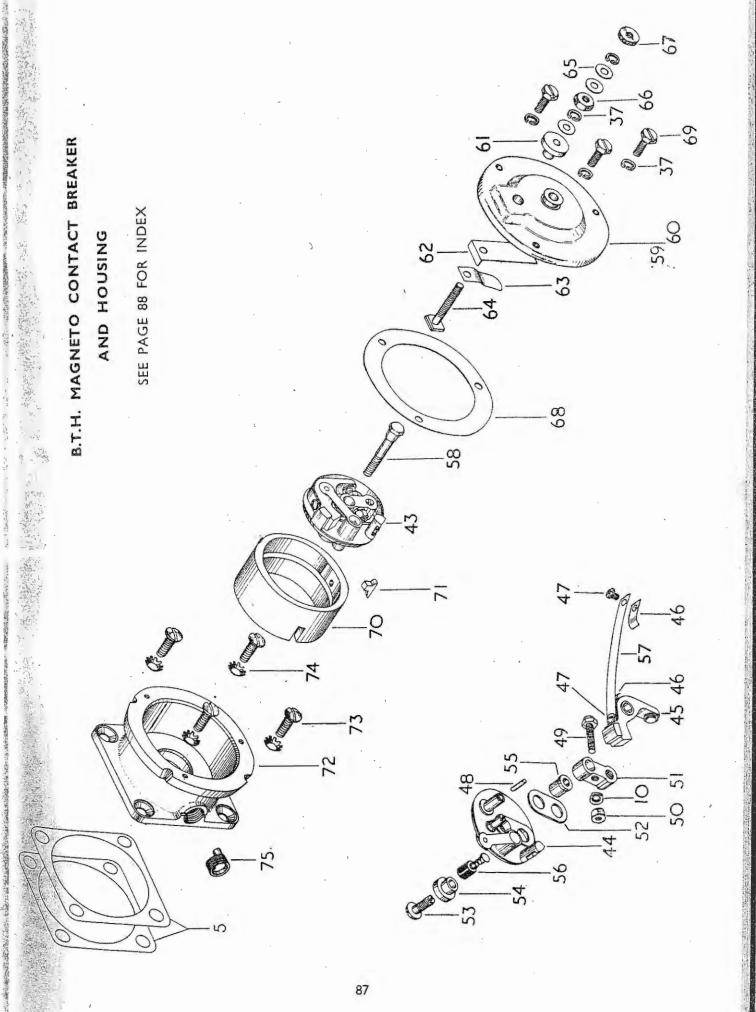

))

REF. No.	PART No.			DES	CRIPTIO	N	1	3T	5T	T100	6T
1	SKC35711-G2	Gear, au	ito ad	vance			 	I	1	1	
2	CZ108934				advance		 	i	1	i	
3	CR35706-1	Roller, a					 	5	. 5	5	5
4	CR35707-1	Spring,		,,	main		 	1	I	1	
5	CR35709-1	Circlip,		,,	,			1	1		
6	CR35705-1	Nut,	13	,,	,, securin		 •••	1	i	1	100

INDEX TO ILLUSTRATIONS ON PAGES 85, 86 AND 87

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	SKC.10917-1	82	21	40	SKC.6122-1	83	10
2	SKC.741-G1	82	22	41	SKC.6180-1	83	11
3	SKC.6123-1	82	,22 23	42	CR.20774-1	83	12
4	CZ.108979	82	25	43	CX.1883-G24	83	13
5	CR.22186-1	82	24	44	SKC.74955-G2	83	14
6	CR.23042-1	82	26	45	CZ.63472-G2	83	15
7	SKC.6245-1	82	27	46	SKC.6215-1	83	16
8	SKC.24291-1	82	28	47	SKC.6208-1	83	17
9	3 BAX 18" rd.hd	. 82	29	48	CR.29708-1	83	18
10	SKC.9952-8	82	30	49	SKC.29303-G1	83	19
11	CR.23290-1	82	31	50	SKC.6216-1	83	20
12	SKC.6799-1	82	32	51	SKC.6235-1	83	22
13	SKC.87159-G1	82	33	52	SKC.6213-1	83	23
14	SKC.6306-G2	82	34	53	SKC.6209-1	83	24
15	CR.87404-1	82	35	54	SKC.6210-1	83	25
16	CR.87160-1	82	36	55	SKC.6212-1	83	26
17	CZ.60707-G19	82	37	56	SKC.6219-G1	83	27
18	SKC.6397-1	82	38	57	SKC.6214-1	83	28
19	CR.87403-1	82	40	58	CR.29487-1	83	29
20	SKC.35711-G2	88	1	59	CZ.61580-1	83	30
22	CZ.108934	88	2	60	SKC.28537	83	31
24	CR:35706-1	88	3	61	CR.89533-1	83	32
25	CR.35707-1	88	4	62	CR.29456-1	83	33
26	CR.35709-1	88	5	63	CR.29455-1	83	34
28	CY.50495-G1	82	41	64	CR.29459-1	83	35
29	SKC.6115-1	82	42	65	4 BA Std.	83	36
30	SKC.6111-1	82	43	66	CR.26513	83	38
31	SKC.6114-1	83	1	67	CR.89927-1	83	39
32	SKC.6112-1	83	2	68	CR.28540-1	83	41
33	CX.52078-G3	83	3	69	CR.28571-1	83	42
34	SKC.6636-1	83	4	70	SKC.33650	83	44
35	SKC.6637-1	83	5	71	SKC.6344-1	83	45
36	$4 \text{ BA} \times \frac{5}{16}$ " ch. hd.	83	6	72	SKC.28544-G3	83	46
37	SKC.9952-6	83	7	73	$2 \text{ BA} \times \frac{1}{2}$ hd.	83	47
38	CR.20776-1	83	8	.74	SKC.88939-20	83	48
39	SKC.6612-G1	83	9	75	CR.26381-1	83	49

FOR IDENTIFICATION OF PARTS SEE PAGE 10 FOR INSTRUCTIONS

	LUCAS	ELECTRICAL EQUIP	MEN	IT (GRC	DUF	9	
REF. No.	PART No.	DESCRIPTION			3T	5T	T100	6T
	DYN	NAMO (TYPE E3L LI-O)						
	20009A	Dynamo, complete			1	1	1	1
2	200712	Armature, Assembly			1	1	1	1
	2000738	Commutator c/w bush			1	1	ł	1
4	189120	Bush, commutator end			ł	1	1	Į
5	200718	Cover, ,, ,,			1	1	1	1
6	200761	Bracket assembly, driving end			1	1	1	1
7	189307	Ball race, driving end			1	1	1	1
8	200641	Seal, end plate with oil			1	1	1	1
9	200609	Band assembly, cover			1	1	i	1
10	188818	Nipple, cable fixing			2	2	2	. 2
11	200212	Plate, clamp			L	1	1	1
-	115850	Screw ,, plate fixing			1	1	1	1
12	200732	Bolt, through fixing			2	2	2	2
13		Nut, ,, ,, bolt			2	2	2	2
14	165078				2	2	2	2
15	188330				ĩ	Ĩ	1	1
16	200737				1	i.	1	1
17	200197	Spring set, brush			i	i	ì	1
18	189386	Key, woodruff		* * *	i	i	1	i
19	E2451	Pinion, dynamo	•••		1	i	1	1
20	111700	Screw, ,, pinion			1		- i	i
21	188378	Washer, ,, ,, screw			1		1	1
22	E2228	Nut (dome), dynamo to gearcase	•••		1		1	1
23	E2414	Stud, dynamo fixing	••••		1	1	1	1
24	E2226	Washer, ,, to crankcase joint			1		1	1.
25	E2230	Strap, "fixing …			1	1	1	1
26	460025	Swivel, " strap			2	2	2	2
27	112450	Screw, ", "	•••		2	2	2	2
	CU	T-OUT AND REGULATOR UN		CR2-	L.	*		
10		Regulator, complete			I	1	1	1
28		Cover, cut out			1	L	1	1
		Clip, cover spring			1	1	1	. 1
30		Bolt, unit to rear stays			2	2	2	2
31		Nut, for DS57			2	2	2	2
32		Washer for F879			2	2	2	2
33					Ξ.			,
14000		ADLAMP (MF 42)	•				. 1	1.
34		Headlamp	•••		1	1	1	
35		Ring, lamp fixing		•••	1	1	1	1
36		Screw, fixing ring to nacelle	•••		3	3	2	3
37	H690	Nut, fixing ring to nacelle	•••		3	3	3	3
38	509487	Rimonly			1	1	1	ł
39	550875	Glass			1	1		
40	the second se	Reflector assembly	•••	•••	1	1		1
41	1	Bead, rubber joint			1	1	1	1
42		Wire, glass fixing			4	4	4	4
43		Catch assembly, rim	•••	• • • •	.1	l	1	1
Comparison of the local data and					1	1	. 1	1
44	504801	Holder assembly, main bulb						

、「「「「「「「」」」」」」

日間北京海市町町を建設会市市市である」、「「「「「」」、「」、


Press Merze

いい、したしたちにあのしいでは通信になるながないに、またのであるないないないできたのではないないないないであった。

REF. No.	PART N	o.	DESCRIPTIC	NC			зт	5T	T100	6T	
1	551807	Clip and screw	, bulb holde	r			1	i	. 1	1	
2	552258	Screw, bulb ho	older clip				1	i	ī	12	
3	500181	Interior, pilot			·		1	i	i	1	
4	188156	Nipple, cable f	ixing				1	i	i		
5	200	Bulb, pilot					1	i	i	1	1
6	169	Bulb, main					i	1	i		
. 7	г	AIL LAMP						1		A. Wilson	
7	53009A										
8	526111	Tail lamp MTII					I	1	1	I	4
. 9	526112	Base assembly,		•••		• • •	1	1	1	1	
10	200	Body assembly,	with glass	•••			I	1	1	1	
11	571395	Bulb					1	I	L	1	
12		Connector				•••	1	1	1	- 1	
13	104460	Screw, tail lam				•••	3	3	2	2	
15	165334	Nut, tail lamp s	screw	•••	•••		3	3	3	3	
	Ċ	OMBINED STOP	AND TA		AMP		-				
14	53122B	Stop and Tail la									
15	526302	Cover lamp and	mp, combine	De			1	1	1	1	
16	190	Cover, lamp an Bulb, tail lamp	d cable rubb	er			1	1	1	1	
17	16543					•••	1	1	1	1	
•••	10545	Screw, fixing Nut, ,, sci			••••		3	3	3 `	3	
18	315725		rew	•••			3	3	3	3	HEADLAMP
19	H687		··· ···	***	***	•••	1	1	I	1	4
20	GS299	Screw, ,, sw	itch to chain	guard			2	2	2	2	
21	F3158	Caula		,	screw		2	2	2	2	A H
22	T988		" operatin	g	*** *		1	- 1	1	ł	I
23	H687	Clip, spring to b			• •••		1	1	1	1	
24	GS299	Screw, clip to be		•••			1	1	1	1	
25	H745	Washer, ,, ,,	,, ,, scre			•••	1	1	I	1	
25	11/15	Nut, ,, ,,	,, ,, & sv	vitch s	screws		2	2	2	2	
	CA	BLE HARNESS					ŕ		,		
26	993921E	Harness, cable co	omplete				1	L	Ľ	1	
27	993928	Harness, headlan	np to main				1	I	1	i	
28	993922	Harness, headlan				h	1	1	i	i	
	NA	CELLE INSTRUM					1		,		
20			LINI FAN	EL							
29 30	351584A	Switch, lighting		•••			1	Ŀ	I	1	
30	351567	Lever, switch, w					1	1	1	1	
32	36129A						1	1	1	1	
32	31071A	Button, cut-out		•••			I	1	I	1	
	DI	MMER SWITCH									
33	380056	Switch, dimmer							1	Y.	
34	H689	Screw, switch to	clamp	•••	***	•••	2	2	1	1	
			ciamp				2	2	2	2	
	BA	TTERY									
35	FUW7E/4	Battery, 6 volt (d	ry)				1	1	1	1	
36	S2263/4	Plug vent, c/w wa					3	3	3	3	
		SEE SPECIMEN		N P	REFAC	F			-	-	- AL
						-					

90

和なないとう

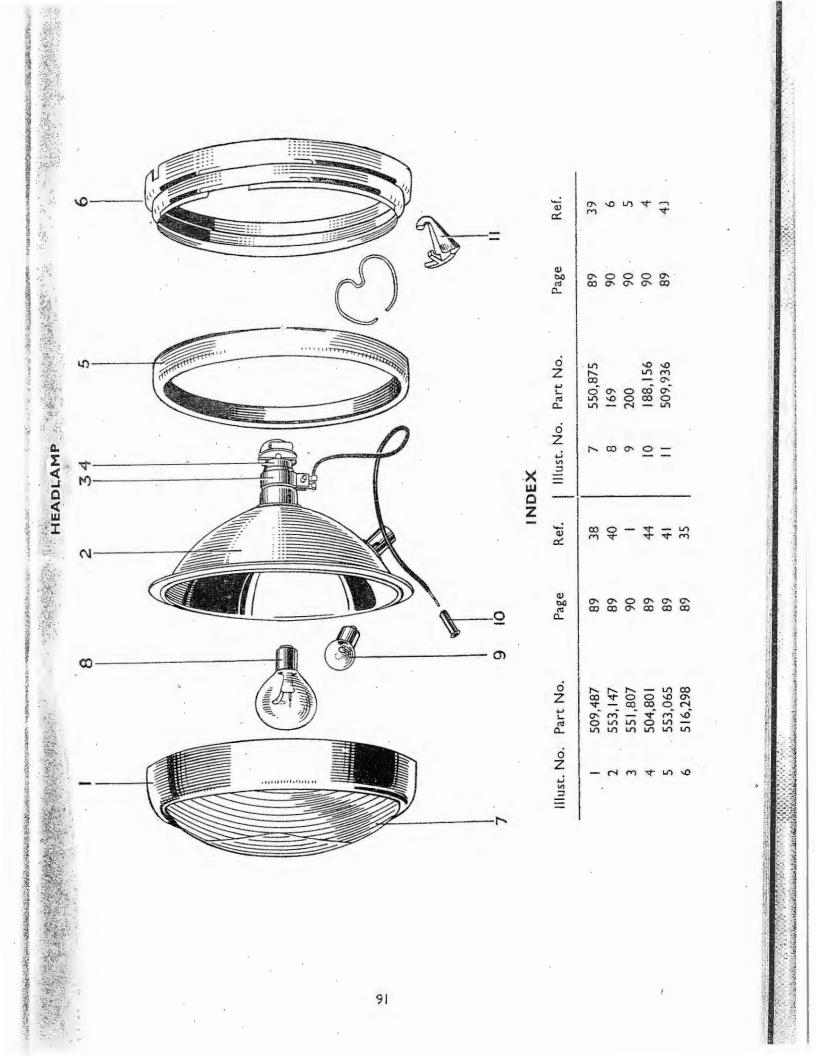

REF. N	lo. PART	No.	DES	CRIPTIC	N		3T	5T	T100	6T
		HORN								- 10 414
	I 70048	B Ho	n, Altette, HFI	441			T	1	T	B.
	2 70185		cket, horn				 i	i	i	p.
	3 76200		h, horn button				 i	i	i	1
		MAGNET	D (LUCAS TY	PE K2	F-R C))				
	4 421118	B Mag	neto c/w auto a	dvance			 1	ł	1	1
	5 458333	3 Arn	nature assembly				 1	1 .	I	ł
	6 455361	I Slip	ring				 1	1	1	1
	7 189291	Bea	ring (C.B.E. and	D.E.)			 2	2	2	2
	8 458339		denser assembly				 1	1	I	ī
	9 458619		er, contact brea				 1	1	1	I.
1	0 470534		tact breaker ass				 I	I	1	ŀ
I	1 122160		w, contact brea				 i	1	1	1
I	2 470609		tact breaker set				 1	I	1	1.
1	3 470688		ng set				 i.	i	1	I
1	4 470537		sh and spring, C				 .1	1.	1	I
1	5 458613		ng pillar, C.B. c				 1	1	i	i
1	6 100020		w, C.B. end plan		-		 i	1	i	1
· 1	7 185037		her, ,, ,, ,, ,,				 i	i	i	E
I			her, " " "	1.			 1	i	. 1	1
1	9 458356		her, ,, ,, ,,				 i	1	i	i
2			assembly				 1	i	i	1
2			plate assembly				 i	i	1	i
2			, bearing, insula				 2	2	2	2
2			h, spring and he				ĩ	ī	ĩ	ĩ
2.		1	h and spring				 i	i	i	i
2			ng pin, pick up f				 2	2	2	2
20			rubber oil				 ĩ	ī	ĩ	ĩ
27			up with brush a				 1	i	i	i
	150611	Tick	T TION DIGUIL	and spin	0 ()					

WHEN IN DOUBT SEND SAMPLE

...

. . .

...

...

•••

...

...

...

...

...

...

...

Pick up with brush and spring (RH)

Brush and spring, pick up

Spring, auto advance

Spanner and point gauge

Auto advance unit

Clip, H.T. lead ...

...

...

...

...

...

...

2

1

2

I

1.

2

1

2

1

1

2

1

2

1

1

2

ī

2

I

1

458643

451260

47502A

498157

415116

E2415

28

29

30

31

32

33

GASKET SETS

Including all necessary gaskets for decarbonising, with the exception of the cylinder head gasket which is supplied separate if required.

GS350T/48	 Gasket	set	for	3T
GS5T/50	 ,,	,,	19	5T
GST100/50	 75	**	,,	T100
GS6T/50	 ,,	,,	,,	6T

GEAR RATIOS

STANDARD RATIO						WIDE	RATIO	
Engine Sprocket	Тор	3rd	2nd	lst	Тор	3rd	2nd	lst
17	6.46	7.70	10.94	15.8	6.46	9.22	14.30	18.85
18	6.10	7.28	10.32	14.9	6.10	8.70	13.50	17.80
19	5.80	6.90	9.80	14.15	5.80	8.25	12.80	16.85
20	5.50	6.55	9.30	13.40	5.50	7.84	12.18	16.00
21	5.24	6.24	8.85	12.80	5.24	7.46	11.58	15.25
22	5.00	5.95	8.45	12.20	5.00	7.13	11.05	14.55
23	4.78	5.69	8.09	11.69	4.78	6.82	10.60	13.90
24	4.57	5.45	7.75	11.20	4.57	6.54	10.14	13.35
25	4.40	5.24	7.45	10.75	4.40	6.26	9.73	12.80
Gearbox Reduction	1.00	1.19	1.69	2.44	1.00	1.425	2.21	2.915

		CLOSE	RATIO	
Engine Sprocket	Тор	3rd	2nd	lst
17	6.46	7.06	8.42	11.00
18	6.10	6.66	7.95	10.40
19	5.80	6.32	7.54	9.84
20	5.50	6.00	7.15	9.35
21	5.24	5.72	6.81	8.90
22	5.00	5.45	6.50	8.50
23	4.78	5.23	6.23	8.12
· 24	4.57	5.00	5.96	7.78
25	4.40	4.80	5.73	. 7.46
Gearbox Reduction	1.00	1.090	1.300	1.695

PARTS REQUIRED TO CONVERT

FROM	STAND	ARD TO W	IDE RA	TIO	FROM	WIDE 7	TO STANDA	RD R	ATIO	
T969		Mainshaft	High	Gear	T918		Mainshaft	High	Gear	
T968		"	2nd	,,	T916		,,	2nd	,,	
T971		Layshaft	High		T921		Layshaft	High	**	
T974		,,	2nd	,,	T925		79.9	2nd	,, .	

93

đ

GUARANTEE

E give the following guarantee with our motor cycles, motor cycle combinations and sidecars including all accessories and component parts other than tyres, saddles, chains and lighting and electrical equipment, and other than accessories and component parts supplied to the order of the Purchaser and differing from those comprised in the standard specifications supplied with our motor cycles, motor cycle combinations and sidecars, but including accessories and parts supplied by way of exchange as hereinafter provided. This guarantee is given in place of any implied conditions or warranties or any liabilities whatsoever statutory or otherwise; no guarantee except that hereinafter contained and no conditions or warranty whatsoever statutory or otherwise is given or is to be implied, nor are we to be under any liability whatsoever except under the guarantee hereinafter contained. Any statement, description, condition or representation contained in any catalogue, advertisement, leaflet or other publication shall not be construed as enlarging, varying or overriding anything herein contained. In the case of machines (a) which have been used for "hiring out" purposes or (b) any motor cycle and/or sidecar used for any dirt tracks, cinder track or grass track racing or competitions (or any competition of any kind within an enclosure for which a charge is made for admission to take part in or view the competition) or (c) machines from which the trade mark, name or manufacturing number has been altered or removed or (d) any. machines in which parts have been used not supplied by or approved by the motor cycle manufacturer, or (e) any machine from which the silencing system as fitted by the manufacturer has been partially or wholly removed or interfered with, no guarantee, condition or warranty of any kind statutory or otherwise is given or is to be implied nor are we to be under any liability whatsoever in respect of any such machine.

We guarantee, subject to the conditions mentioned below, that all precautions which are usual and reasonable have been taken by us to secure excellence of materials and workmanship, but this guarantee is to extend and be in force for six months only from date of purchase, or date of exchange in case of any accessory or part supplied by way of exchange as hereinafter provided, and damages for which we make ourselves responsible under this guarantee are limited to the free repair of or supply of a new part or accessory in exchange for the part of the motor cycle, motor cycle combination or side car or accessory which may have proved defective. We undertake, subject to the conditions mentioned below, to make good in manner aforesaid any part or accessory covered by this guarantee which has proved defective within the said period of six months. We do not undertake to replace or refix, or bear the cost of replacing or refixing any such new part or accessory in the motor cycle, motor cycle combination or sidecar. As motor cycles, motor cycle combinations and sidecars are easily liable to derangement by neglect or misuse, this guarantee does not apply to defects caused by wear and tear, misuse or neglect.

The term "misuse" shall include amongst others the following acts :-

- 1. The attaching of a sidecar to a motor cycle in such a manner as to cause damage or calculated to render the latter unsafe when ridden.
- 2. The use of a motor cycle or of a motor cycle and sidecar combined, when carrying more persons or a greater weight than that for which the machine was designed by the manufacturers.
- 3. The attaching of a sidecar to a motor cycle by any form of attachment not provided, supplied, or approved by the manufacturers, or to a motor-cycle which is not designed for such use.

We do not guarantee tyres, saddles, chains or lighting and electrical equipment, or any accessories or component parts supplied to the order of the Purchaser differing from those comprised in the standard specifications supplied with our motor cycles, motor cycle combinations or sidecars. As regards all such tyres, saddles, chains, lighting and electrical equipment, accessories and component parts, no guarantee, condition or warranty of any kind statutory or otherwise is given or is to be implied, and we are to be under no liability whatsoever in respect thereof.

CONDITIONS OF GUARANTEE

If a defective part or accessory should be found in our motor cycles, motor cycle combinations or sidecars, or in any part or accessory supplied by way of exchange as before provided, it must be sent to us CARRIAGE PAID, and accompanied by an intimation from the owner that he desires to have it repaired or exchanged free of charge under our guarantee and he must also furnish us at the same time with the frame number of the machine, the date of purchase or the date when the alleged defective part or accessory was exchanged as the case may be.

Failing compliance with the above, such articles will lie here at THE RISK OF THE OWNER, and this guarantee and any implied guarantee, warranty or condition shall not be enforceable.

REPAIRS

Any motor cycle, motor cycle combination or sidecar sent to us to be plated, enamelled or repaired will be repaired upon the following conditions, *i.e.*, we guarantee that all precautions which are usual and reasonable have been taken by us to secure excellence of materials and workmanship, such guarantee to extend and be in force for three months only from the time such work shall have been executed, and this guarantee is in lieu and in exclusion of all conditions and warranties statutory or otherwise and all liabilities whatsoever and the damages recoverable are limited to the cost of any further work which may be necessary to amend and make good the work found to be defective.

NOTICE

We do not appoint agents for the sale on our behalf of our motor cycles or other goods, but we assign to motor cycle Dealers areas in which we supply to such Dealers exclusively for re-sale in such areas. No such Dealer is authorised to transact any business, give any warranty, make any representation or incur any liability on our behalf. All goods are offered for sale subject to the price ruling at time of delivery. We reserve the right to modify or deviate from the published specification.

Supplement to 1950 Triumph Spare Parts Catalogue


REAR SPRING WHEEL GROUP MARK II

Commencing Frame No. 7439

REF. No.	PART No.	DESCRIPTIC	N	-	3T	5T	T100	6T
I.	W.925	Wheel complete		 	_	I	1	1
2	W.923	Wheel complete		 	1		-	1
3	W.928	Wheel, less internals		 	L	.1	1	
4	W.643	Rim		 	1	1 -	1	1
5	W.644	Spoke		 	40	40	40	40
6	S79-2	Nipples, spoke		 	40	40	40	40
7	W.905	Hub, shell assembly		 	1	I	1	1
8	W.903	Drum, sprocket and brake		 	1	1	i	6

INDEX TO ILLUSTRATION ON PAGE 97

Illust. No.	Part No.	Page	Ref.	Illust. No.	Part No.	Page	Ref.
1	W.879	98	38	29			
2	W.909	98	6	30	W.898	98	39
3	W.744	98	7	. 31	W.895	98	22
4	W.901	98	35	32	W.836	98	. 26
5	W.897	98	4	33	W.837	98	25
6	W.904	98	5	34	W.634	98	31
7	W.886 *	98	14	35	W.639	98	30
8	W.885	98	13	36	W.642	98	2
9	W.638	98	17	37	W.631	99 ;	5
10	W.906/7	98	12	38	W.129	99	. 6
11	W.664A	98	29	39	W.135	99	7
12	W.658A	98	28	40	W.912	99	4
13	W.905	96	7	41	W.911	99	3
14	F.879	98	3	42	W.123	99	H
15	E.2312	98	9	43	W.74A	99	9
16	W.890	98	27	44	W.915	99	8
17	W.766	98	24	45	W.920	99	1
18	W.908	98	23		W.921	99	2
19	S.1-40	98	21	46	W.784	99	14
20	GS.299	98	37	47	W.855	99	12
21	E.1562	98	18		W.626	99	13
22	W.903	96	8	48	W.630	99	15
23	H.687	98	36	49	W.641	98	1
24	W.635	98	34	50	W.640	98	8
25	W.633	98	33	51	S.1-52	99	10
26	W.798	98	32	52	W.866	98	15
27	W.900	98	41		W.867	98	16
28	W.799	98	40				

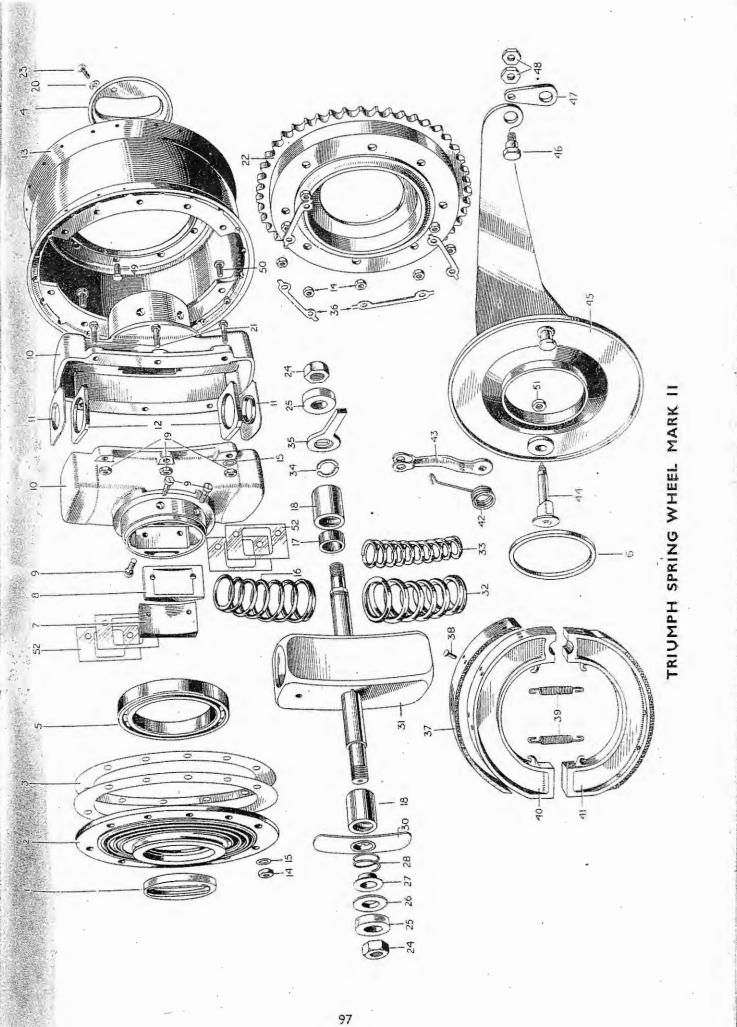

REF. 1	No.	PART No.	DESCRIPTION	3T	5T	T100	6T
	I	W641	Bolt, brake drum	8	8	8	8
	2	W642	Lockplate, brake drum bolt	4	4	4	4
	3	F879	Nut, brake drum bolt	8	.8	8	8
	4	W897	Bearing, wheel	2	2	2	2
	5	W904	Spacer ring, N.S. bearing	1	I	1	1
	6	W909	End plate, hub shell	I	1	1	1
	7	W744	Shim, end plate	9	9	9	9
	8	W640	Bolt, end plate to hub shell	10	10	10	10
	9	E2312	Washer, end plate to hub shell boit	10	10	10	10
	10	F879	Nut, end plate to hub shell bolt	10	10	10	10
	11	W931	Plunger guide box assembly	1	1	1	1.
	12	W906/7	Box, plunger guide	1	1	1	1
	13	W885	Pad, front slipper (Convex)	2	2	2	2
	14	W886	Pad, rear slipper (Concave)	2	2	2	2
	15	W866	Shim, slipper pad .002" thick	-	As req		
1	16	W867	Shim, slipper pad .003" thick		As req		
1	17	W638	Screw, slipper pad	8	8	8	8
I	18	E1562	Bolt, plunger guide box (Top Rear)	2	2	2	2
			(Bottom Front)				-
1	19	W932	Bolt, plunger guide box	4	4	4	4
2	20	E2312	Washer, plunger guide box bolt	6	6	6	6
2	21	S1-40	Nut, plunger guide box bolt	6	6	6	6
2	22	W895	Axle and guide assembly	1	1	1	1
2	23	W908	Roller, slipper	2	2	2	2
2	24	W766	Sleeve, slipper roller distance, N.S	1	1	1	1
2	25	W837	Spring, inner main	1	i.	1	1
, 2	26	W836	Spring, outer main	I	1	1	1
2	27	W890	Spring, rebound	t	ĩ	1	1
2	28	W658a	Buffer, plunger	2	2	2	2
2	29	W664a	Locator plate, spring	2	2	2	2
3	80	W639	Lever, axle shaft anchorage	1	I	1	1
3	1	W634	Circlip, axle shaft split	2	2	2	2
3	2	W798	Collar, axle shaft distance, O.S	1	1	ī	1
3	3	W633	Collar, axle shaft outer	2	2	2	2
3	4	W635	Nut, axle shaft	2	2	2	2
3	5	W901	Cover, dust excluder, N.S	1	1	ī	1
3	6	H687	Screw, dust excluder, N.S. cover	2	. 2	2	2
3	7	GS299	Washer, dust excluder cover	2	2	2	2
3	8	W849	Cover, dust excluder, O.S	1	í	1	ĩ
	9	W898	Plate, dust excluder	2	2	2	2
4		W799	Spring, dust excluder plate	2	2	2	2
4		W900	Sleeve, dust excluder plate centre	2	2	2	2

REF. No.	PART No.	DESCRIPTION		3T	5T	T100	6T
		SPRING WHEEL BRAKE					
	W920	Plate, brake anchor	•••	1			
2	W921	Plate, brake anchor	••	-	1	I	1
3	W911	Shoe, c/w lining, trailing brake	••	I	١	1	I
4	W912	Shoe c/w lining, leading brake	••	1	I.	I	1
5	W631	Lining, brake shoe		2	2	2	2
6	W129	Rivet, brake shoe lining	•••	16	16	16.	16
7	W135	Spring, brake shoe return		2	2	2	2
8	W915	Cam, brake operating	••	1	1	l	1
9	W74a	Lever, brake operating cam	•••	I	1	1 I	1
10	SI-52	Nut, brake operating cam	••	I.	1	I	1
11	W123	Spring, brake operating cam return	••	1	1	1	.1
12	W855	Link, brake anchorage		I	-		—
13	W626	Link, brake anchorage	•••		1	.1	1
14	W784	Bolt, brake anchorage bolt	•••	-1	I	ł	1
15	W630	Nut, brake anchorage bolt	• •	2	2	2	2
16	W743	Nut, brake pedal spindle"	.,	1	1	ł	1
17	3/32″ × 1″	and the state of the same	••	4	I	l	1
18	F1015c		••	1			
19	F1015d	Rod, brake operating	••		1	1	L.
20	D106	Bolt, tyre security	•••	l	ł	1	1
		TWIN SEAT GROU	JF	>			
21	F3153	Twinseat complete with all attachments .		-	1	I	1
22	F3122	Bracket, twinseat centre			I	1	1
23	F879	Nut, twinseat centre bracket	•••		2	2	2
24	E1612	Washer, twinseat centre bracket	••		2	2	2
- 25	F1760	Bolt, centre bracket to seat lug			2	2	2
26	W76	Nut, centre bracket to seat lug			2	2	2
27	S25-2	Washer, centre bracket to seat lug	- •		2	2	2
28	E2593	Bolt, nose bracket	••	-	1	.1	1
29	SI-51	Nut, nose bracket			1	1	<u>ا</u> -
30	E2287	Washer, nose bracket	••		1	1	1
31	DS58	Bolt, rear bracket to mudguard			2	2	2
	SI-51	Nut, rear bracket to mudguard	•••		2	2	2
5/					4		4
32 33	S25-3	Washer, rear bracket to mudguard (plain	1)		4	4	7

「「「「「「「「」」」」」」

現在にないためなが正

いたのないないないないで、「ないない」

99

に行

British Only MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. WWW.BRITISHONLY.COM GARDEN CITY, MI 48135 USA INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS 45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES! CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE



VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS



British Only MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST

GARDEN CITY, MI 48135 USA PHONE: 800-278-6659

FAX: 734-422-9253

Year:	Make:	Model:

Engine # Frame #

WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

Total

Amount Enclosed

Michigan Residents Add 6% Sales Tax

Quantity	Part #	Description	Each	Amount
Date/	/ c	ustomer # Salesperson		
Card Number		Expires Su	btotal	
Name				
Address			surance	
City/State/Zip		Sh	ipping	

_____ Fax _

Phone _ Email _

Signature

	FOLD		
Name	-	-	
Address			USE FIRST CLASS
City			LETTER
State Zip		L	PUSTAGE

British Only

MOTORCYCLES AND PARTS INC. 32451 PARKLANE ST GARDEN CITY, MI 48135 USA

FOLD