

# MASTER PARTS LIST 1966 - 1967 - 1968

for models

650SS: Atlas: N15CS: P11: P11A

G15CS: G15CSR: G15 Mark II

Published by
NORTON VILLIERS LIMITED,
Norton Matchiess Division,
44 Plumstead Road, Woolwich, London, S.E.18.
Telephone: 01-854 1223 : Telex: 22617
Cables: Nortonmatch London Telex.

## INDEX

								Page								Page
Alternator				•••	•••	***	•••	32	Kickstart	***		***		***	***	14
Air cable-A	mal Mo	nobloc	carb	urettor			•••	22								
Air filter-A							***	35	Magneto		•••					8
Air filter-A								36	Main bearings	***	•••				•••	5
,		1							Mudguard—front	•••		•••	•••		•••	19
Battery and I	Seringe			•••	•••		***	33	Mudguard-rear	•••	•••				•••	20
Battery box	-				•••		***	27	11000000	•••	•••	•••	•••	•••	•••	
Bearing-ma			•••	•••	•••			5	Number place—fron							21
Brake anchor			•••	•••				28			•••	***	***	•••	***	21
			•••	• • • •	***	•••	• • •	21	Number place-rear	***	•••	***	•••	***	***	21
Brake and air			•••	•••	•••	•••	•••	22								
		•••	•••	***	•••	•••	• • • •	30	Oil pipes	•••	***	•••	•••			23
Brake operat	ing bar	cs	•••	•••	***	•••	•••	30	Oil pump	•••	•••	•••	***	•••	•••	24
Cable clips							***	36	Oil tank	***	***	***	***	***	***	2-
Carburettor		•••	•••					9								
Centre stand		***	•-•	•••	***	•••	***	16	Petrol tank	9	***	•••	0	•••	***	23
		***	***	***	•••	•••	•••	25	Pillion footrests	9	***		•••	***		25
Chaincase-f		***	•••	***	•••	•••	•••	26	Piscons and rings-s	tandard					4++	4
Chaincase-r		***	•••	•••	•••	•••	• • •	11	Pistons and rings-o							5
Chains	. ***		•••	***	•••	***	•••		Pressure release	***			•••	***		4
Clutch	•••	•••	•••	•••	•••	***	***	13	Prop stand	***		•••	***			16
Clutch cable		•••	***	•••	•••	•••	•••	22		•••		***	***	•••	•••	
Clutch lever		•••	•••	•••	***	***	•••	22 .								
Clutch opera		23	•••	***	•••	***	***	14	Rear lamp	•••	•••	***	•••	•••	***	31
Connecting r	od	***	•••	• • •	•••	***	•••	3	Rear suspension unit		•••	•••	***	***	***	16
Crankcase	•••	•••	• • •	***	•••	. ***	•••	3	Rectifier and Zener		•••	•••	***	***	•••	33
Crankcase bo		•••	•••		•••	•••	•••	7	Revolution counter		***	•••	***	•••	***	35
Crankcase br	eather	•••			•••	•••	***	4	Rockers and covers	***	•••	***	***	•••	***	6
Crankcase sh	ield	•••		•••	•••	***	•••	35								
Crankshaft	•••	•••			•••	•••		3	Seat-twin	***	***			***	***	23
Crashbar-fr	ont		***	•••		***	•••	35	Sidecar fork convers		•••	•••	•••	•••	•••	35
Crashbar-re	ear	***	•••	***			•••	35	Silencers	•••				***	•••	11
Cylinder bar	rel and	head		***			***	4	Speedometer	•••	•••	•••	•••		***	31
Chainguard-	-rear	•••	***		•••	• • •		26	Stator housing	•••				***	***	7
									Sceering damper				***	•••	•••	35
Engine places	and bo	Its	***	• • •	•••	•••	***	7	Stop-light						•••	32
Engine sproc	ket		•••		•••		***	8	Swinging arm		•••					15
Exhaust pipe	•••	•••		•••	•••		•••	11	Switches and electric				•••		•••	34
									2 Mitties and elective	ar some	1163	•••	***	***	•••	51
Footrests	***		***	•••	•••		•••	17								
Frame	•••	***			•••	•••	•••	14	Tappets and push ro	ds	•••	•••	•••	***	***	6
Front forks	***			***		***		18	Throttle cable	***	•••		•••	•••	***	23
									Timing gear	•••	•••	***	***	•••	***	. 5
Gasket sets		•••	***		***	• • • •		. 34	Toolbox and tool tra	y	•••	•••	***	• • •	•••	26
Gearbox bear	rings an	d seals				***		13	Tool kit	***	•••	•••	***	•••	***	34
Gearbox fixin	-							12	Tools	***	•••	•••	***	***	***	34
Gearbox shell			•••					12	Twin seat		•••	•••	•••	***	***	23
Gearbox spro				•••	•••	***		13	Twist grip	***	•••	•••	•••	•••	***	22
Gearchange		***	•••	***		•••		13								
Gears and sha		•••	•••	***				12	Valves, guides and sp	rings	•••				•••	4
		,						_	raires, guides and sp	62		•••		•••		
Handlebar			•••	•••	•••	***	•••	19								
Handbrake ar	nd air le				•••			21	Wheel-front	***	•••	***	•••	•••	•••	27
Headlamp			•••		•••		•••	31	Wheel-rear	•••	•••	•••		•••	***	28
Head steady s								7								
Horn				•••	•••	***		31	Zener diode, rectifie	r	•••		•••	•••	•••	33
	47.				-				,							

MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. GARDEN CITY, MI 48135 USA WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

#### WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

## SPECIALIZING IN VINTAGE MOTORCYLCE PARTS



## THE BIGGEST!

ENGINE REBUILDING PARTS
GASKET - SEALS - BEARINGS
BUSHINGS - PISTONS - RINGS
CLUTCHES - TUNE UP PARTS
SPEED EQUIPMENT

### THE BEST!

STOCK AND CUSTOM PARTS
SEATS - HANDLEBARS - CHAINS
TIRES - TUBES - EXHAUST PIPES
MUFFLERS - GAS TANKS - FENDERS
RESTORATION PARTS

THE ONLY!

Central Wheel Components















JP PISTONS





VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

PARTS SHIPPED WORDLWIDE !!!





Discover'



VISIT OUR EBAY STORE
http://stores.ebay.com/British-Only-Motorcycles-And-Parts

MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. GARDEN CITY, MI 48135 USA WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

#### WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

## SPECIALIZING IN VINTAGE MOTORCYLCE PARTS



## THE BIGGEST!

ENGINE REBUILDING PARTS
GASKET - SEALS - BEARINGS
BUSHINGS - PISTONS - RINGS
CLUTCHES - TUNE UP PARTS
SPEED EQUIPMENT

### THE BEST!

STOCK AND CUSTOM PARTS
SEATS - HANDLEBARS - CHAINS
TIRES - TUBES - EXHAUST PIPES
MUFFLERS - GAS TANKS - FENDERS
RESTORATION PARTS

THE ONLY!

Central Wheel Components















JP PISTONS





VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

PARTS SHIPPED WORDLWIDE !!!





Discover'



VISIT OUR EBAY STORE
http://stores.ebay.com/British-Only-Motorcycles-And-Parts

Part No.		De	script	ian			_	Qt	γ.		Model	s fitted	.co		Bin No.
CRANI	KSHAFT														
23286	Crankshaft assembl	y, less	conne	cting re	ods		•••	1	650\$						B077 +0000-100*******************************
24276	Crankshalt assembl			_	ods	• • • •		1		excebt			• • •	***	Mare-2010 - April 2011
23262 <b>≠</b> 23261	Crankcheek—timin Crankcheek—drīvir		•••	•••	•••		•••	1	ALL	• • • •	•••	***		***	
13315	Flywheel only	11.P 21.0.C	•••	• • • • • • • • • • • • • • • • • • • •	•••	• • •	• • • • • • • • • • • • • • • • • • • •	i	6505			•••	•••	***	
4248	Flywheel only		•••	•••		•••	•••	1		except				•••	# *** - *********
7.2105	Flywheel/crankched		ei	•••	•••	•-•	•••	Ţ	ALL	•••	•		•••	1++	
7.2033	Crankcheek boits	•••	•••	• • •	• • •	• • •	***	4 2	ALL	•••	•••	•••		***	Manual Management of the Control of
r.2086 r.2032	Crankcheek studs  Dowel retaining pla	111	•••		*	***	•••	2	ALL ALL	•			•••	•	
7.2031	Crankcheck—stud		414	• • • •		•••	•••		ALL	•••		•••	•••	•••	
3280	Crankcheek-bolt			•••	•••		•••	2		•••		•••			
<b>4</b> 591	Crankshaft plug	•••	•••	***	***	•••	•••	I	ΑĽĹ	•••	•••	•	•••	•	Albert 1997 - 1997
CONN	ECTING ROD														
25369	Connecting rods, w			***	•••	• • •	•••	2	ALL		***	•••	***	•	Budden - mark the Man
3254	Connecting-rod cap			***		•••	•••	4	ALL	***	•••	•••	•••	***	market and the second
3253 5384	Cap-bolts nuts Con-rod bearing sh	ell (top	hair).	 —stand	ard	•••	•••	2	ALL	***	***	•••		Paic	
3255	Con-rod bearing sh						•••	2	ALL	***		•••		Pair	
109	Con-rad bearing sh	ell (top	half)-	—·010 i	п		***	2	ALL	• • • •	***	•		Pair	
5410	Con-rod bearing sh	ell (top	half)-	—∙020 i	n	•••	•	2	ALL	•••	•••	•••	•••	Pair Pair	
5411 5413	Con-rod bearing sh Con-rod bearing sh	ell (top	hall).	—-040 i	п			2	ALL	9		•	•	Pair	
5165	Con-rod bearing sh	ell (bac	tom i	nalf)(	)10 in.	•••	• • • • • • • • • • • • • • • • • • • •	2	ALL	•••	•••	***	•••	Pair	
166	Can-rad bearing sh	eli (bot	com t	12[[](	)20 ໂກ.		•••	2	ALL	•••	•••	•	•••	Pair	
5167	Con-rod bearing sh	eli (bot	tom h	12 (f)—-·(	)30 ໂກ.	• • • •	•	2	ALL	***	•••	***		Pair	To a second de la colore de la
168	Con-rod bearing sh	eli (bot	tom t	1211)	140 In.		•••	2	ALL	***	•••	•••	***	Pair	
	Crankcase complete	e with t	រិកាតែខ្	cover		•••		1	630\$\$		•••				May a minimal pay room
5376 5377	CCASE  Crankcase complete  Crankcase complete  Crankcase complete	e with t	្រាកាសែ	COYEL		***	···	1 1	Atlas GIS I	 Mark 1		 5C5, N		8691	Mass o a simultane con o
376 377 378	Crankcase complete Crankcase complete Crankcase complete	with the with the	gnimi:	COVER	•••	•••		1 1 1	Atlas GIS I	Mark I SCSR	1, GI:				
5376 5377 5378	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as	e with t e with t e with t semble	ilming timing timing timing d, less	cover cover cover	 	•••		1 1	Atlas G15 I G15 C G15 C	Mark I SCSR SR, PI	1, GI:	5C5, N	 ISCS, 		
5376 5377 5378 5379 5373	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as	e with to with to with to semble semble	ilming timing timing d, less d, less	cover cover cover timing	cover	•••		1 1 1 1	Atlas GIS I GISC 650SS Atlas	Mark I SCSR SR, PI	1, G1:	5C5, N	15C5,	1968	Mark the Control to the Control
5376 5377 5378 5379 5373	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as	e with to with to with to semble semble	ilming timing timing d, less d, less	cover cover cover timing	cover			1 1 1 1	Atlas GISC GISC 65055 Atlas GIS	Mark I SCSR SR, PI	I, GI:	SCS, N	 ISCS,   	1968	Mark the Control to the Control
5376 5377 5378 5379 5373 5374 5375	Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as Crankcase halves as	e with to with to with to semble semble	ilming ilming ilming d, less d, less	cover cover cover timing	cover			1 1 1 1 1	Atlas GIS I GISC 650SS Atlas GIS	Mark I SCSR SR, PI  Mark SCSR,	I, GI:	SCS, N	15C5,	1968	Mark the Control to the Control
5376 5377 5378 5379 5373 5374 5375	Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as Crankcase halves as Timing-gear cover	e with to with to with to semble semble	ilming ilming ilming d, less d, less	cover cover cover timing	cover			1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Atlas GIS I GISC 650SS Atlas GIS GIS ALL GISC	Mark I SCSR SR, PI  Mark SCSR, SR, PI	I, GI:	GISCS	ISCS,    . NI	1968   5CS,	
5376 5377 5378 5379 5373 5374 5375	Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid	e with the with the with the with the semble	ilming timing timing d, less d, less d, less	cover cover cover timing	cover				Atlas GIS I GISC 630SS Atlas GIS ALL GISC 650SS	Mark I SCSR SR, PI  Mark SCSR,	I, GIS	GISCS	ISCS,    . NI	1968   5CS,	
3376 3377 3378 3379 3373 3374 3375 3187 305 011	Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as Crankcase halves as Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid	e with to with to with to semble semble semble.  tellibritists  tellibritists	iming iming d, less d, less d, less	cover cover cover timing timing	cover				Atlas GIS I GISC 650SS Atlas GIS ALL GISC 650SS Atlas	Mark I SCSR SR, PI Mark SCSR, SR, PI	I, GI:	GISCS	. NI	1968  5CS,	
5376 5377 5378 5379 5373 5374 5375 5187 5305 011	Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid	e with to with to with to semble semble semble.  tellibritists  tellibritists	iming iming d, less d, less d, less	cover cover cover timing timing	cover				Atlas G15 I G15C 650SS Atlas G15 ALL G15C 650SS Atlas G15	Mark I SCSR SR, PI  Mark SCSR,  SR, PI	I, GI:	GISCS	. NI	1968   5CS,	
5376 5377 5378 5379 5373 5374 5375 5187 5305 011 5280	Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as Crankcase halves as Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid	e with the with the with the semble s	iming iming d, less d, less d, less	cover cover cover timing timing	cover				Atlas G15 I G15C 650SS Atlas G15 G15C 650SS Atlas G15 G15C 650SS	Mark I SCSR SR, PI  Mark SCSR, PI  Mark SCSR, I	I, GI:	GISCS	. NI	1968  5CS,  5CS,	
5376 5377 5378 5379 5373 5374 5375 6187 5305 01! 1280 6043	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing sid Crankcase (timing sid Crankcase (timing sid	e with to with to with to with to with to semble se	iming iming d, less d, less d, less	cover cover cover ctiming timing	COVER			1	Atlas G15 I G15C 650SS Atlas G15 G15C 650SS Atlas G15 G15 G15 G50SS Atlas	Mark I SCSR SR, PI Mark SCSR, SR, PI Mark SCSR,	1, G15	GISCS	15CS,	1968  5CS,  5CS,	
5376 5377 5378 5379 5373 5374 5375 5387 5305 5011 1280 5043	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing si Crankcase (timing si Crankcase (timing si Crankcase (timing si	e with to with the with the with the with the with the semble semble semble.	iming iming d, less d, less d, less	cover cover cover timing timing timing	COVER			1 1 1	Atlass GIS I GISC 650SS Aclass GIS ALL GISC 650SS Aclass Aclass Aclas Ac	Mark I SCSR SR, PI Mark SCSR, SR, PI Mark SCSR, I	1, G15	GISCS	. NI . NI . NI	1968  5CS,  5CS,	
5376 5377 5378 5379 5373 5374 5375 5387 5305 001! 5280 5043	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing si Crankcase (timing si Crankcase (timing si Crankcase)	e with the with the with the semble s	iming iming d, less d, less d, less	cover cover cover timing timing	cover cover cover			1	Atlas G15 I G15 C 65055 Atlas G15 G15 Atla G15 G5055 Atlas G15 G5055 Atlas G15 G5055 Atlas G15 G5055 Atlas	Mark I SCSR SR, PI Mark SCSR, SR, PI Mark SCSR, Mark SCSR,	1, G15	GISCS	15CS,	1968  5.CS,  5.CS,	
5376 5377 5378 5379 5373 5374 5375 5375 5375 5375 5375 5375	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing si Crankcase (timing si Timing-cover gasket Cylinder-barrel stud Cylinder-barrel stud	e with the with the with the with the semble	iming iming d, less d, less d, less	cover cover cover timing timing timing	COVER			1 1 1 6	Atlas G15 I G15 C 65055 Atlas G15 G15 Atla G15 G5055 Atlas G15 G5055 Atlas G15 G5055 Atlas G15 G5055 Atlas	Mark I SCSR SR, PI Mark SCSR, SR, PI Mark SCSR, I	1, G15	GISCS IIA GISCS IIIA	. NI . NI . NI . NI	1968  5.CS,  5.CS,	
5376 5377 5378 5379 5373 5374 5375 5375 5305 0011 4280 5043 5371 5372 2236 2236 2236 2209 1943	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing si Crankcase (timing si Crankcase (timing si Crankcase)	e with the with the with the with the semble semble semble semble semble in the semble	iming iming d, less d,	cover cover cover timing timing timing	cover cover			1 1 6 6 2 1	Atlas G15 I G15C G50SS Atlas G15 Atla G15C G50SS Atlas G15 G15C G50SS Atlas G15 Atla G50SS Atlas Atla G15C Atla G15C Atlas Atla G15C G50SS Atlas Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas Atla Atlas Atla Atlas Atla Atla Atla Atlas Atla Atla Atla Atla At	Mark I SCSR SR, PI  Mark SCSR, I  Mark SCSR, I  xcept  xcept	1, G15	GISCS IIA GISCS IIIA GISCS IIIA	15CS,	1968      5CS, 	
5376 5377 5378 5379 5373 5373 5374 5375 5011 1280 5043 5071 2236 2018 2251 2209 943 689	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing si	e with the with the with the semble s	ilming giming di less	cover cover timing timing timing	cover cover cover			1 1 6 6 2 1 6	Atlas G15 I G15C Atlas G15 G15C G50SS Atlas G15 G50SS ALL 650SS ALL 650SS ALL 640SS A 640SS ALL 640SS ALL 640SS ALL 640SS ALL 640SS ALL	Mark I SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI	1, G15 11, P11, P 11, P11, P 650SS	GISCS, N  GISCS  GISCS  IIA  GISCS  IIA  GISCS  IIIA  GISCS  IIIA  GISCS  IIIA  GISCS  IIIA  GISCS  IIIA	. NI	5CS,	
5376 5377 5378 5379 5373 5374 5375 5387 5305 501! 5280 5043 5371 2229 9943 6889 6980	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing sid	e with the with the with the with the semble	ilming diliming dilim	cover cover cover ctiming timing timing	cover cover cover			1 1 6 6 2 1	Atlas G15 I G15C G50SS Atlas G15 Atla G15C G50SS Atlas G15 G15C G50SS Atlas G15 Atla G50SS Atlas Atla G15C Atla G15C Atlas Atla G15C G50SS Atlas Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas G15 Atlas Atla Atlas Atla Atlas Atla Atla Atla Atlas Atla Atla Atla Atla At	Mark I SCSR SR, PI  Mark SCSR, I  Mark SCSR, I  xcept  xcept	1, G13 11, P11, P 1	GISCS	SCS,   NI   NI   NI   NI   NI   NI   NI   N	1968  5CS,  5CS, 	
5376 5377 5378 5379 5373 5374 5375 5187 5305 011 2180 5043 5371 2236 2018 5251 2209 1943 689 6980 6621A	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing si	e with the with the with the with the semble	ilming diliming dilim	cover cover timing timing timing	cover cover cover			1 1 6 6 2 1 6 6	Atlas G15 I G15C G50SS Atlas G15 G15C 650SS Atla 650SS ALL 650SS ALL 650SS ALL ALL ALL ALL ALL ALL	Mark I SCSR, SR, PI Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I	1, G15 11, P11, P 11, P11, P 650SS	GISCS IIA GISCS IIIA         	. NI	5CS,	
5376 5377 5378 5379 5373 5374 5375 5375 5375 5376 5372 2236 2236 2209 1943 1689 2036	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing si Cylinder-barrel stud Cy	e with the with the with the with the semble semble semble semble semble ide) ide) ide) ide) ide) ide) ide	ilming distining dist	cover cover cover timing timing timing	 cover cover			1 1 6 6 2 1 6 6 2 1 6 6 2 1	Atlas G G G G G G G G G G G G G G G G G G G	Mark I SCSR SR, PI  Mark SCSR, I  Mark SCSR, I  xcept  xcept	1, G13	GISCS IIA  GISCS IIIA  	SCS,   SCS,   SCS   SC	1968  5CS,  5CS, 	
5376 5377 5378 5379 5373 5374 5375 5375 5305 5001 4280 5043 5043 5371 4280 5043 6980 6980 6980 6980 6980 6689 6980 6689 6980 6689 621A 6689 62036 20036	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (drive sid Crankcase (timing si Cr	e with the with the with the with the semble	ilming distining dist	cover cover timing timing timing timing	cover cover cover			1 1 1 6 6 2 1 6 6 12 2 1 1	Atlas G G G G G G G G G G G G G G G G G G G	Mark I SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI	1, G15 11, P11, P 11, P11, P 650SS	GISCS, N GISCS IIA GISCS	N	1968  5CS,  5CS, 	
5376 5377 5378 5379 5373 5374 5375 5375 5375 5375 5375 5371 4280 5043 5371 2236 2018 4251 2209 943 6980 6980 6689 6980 6621A 6689 6980 621A 6899 6980	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing sid	e with the with the with the semble s	ilming distining dist	cover cover cover timing timing timing	cover cover cover			1 1 6 6 2 1 6 6 2 1 6 6 2 1	Atlas G G G G G G G G G G G G G G G G G G G	Mark I SCSR, SR, PI Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, PI	1, G13 11, P11, P 11, P11, P 650SS	GISCS, N  GISCS  IIA  GISCS  IIIA  IIIA	15C5, 21	1968     	
5376 5377 53778 53778 53779 5373 5374 5375 5375 5375 5371 2371 2209 1943 2018 6899 2036 6899 2037 8023 8079	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as Crankcase halves as: Timing-gear cover Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing sid Crankcase (timing sid Crankcase (timing sid Crankcase) Crankcase (timing side Cylinder-barrel stud Cyl	e with the with the with the with the semble	ilming distining dist	cover cover timing timing timing timing	cover cover cover			1 1 1 6 6 2 1 6 6 2 2 1 1 1	Atlas G G G G G G G G G G G G G G G G G G G	Mark I SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI	1, G15 11, P11, P 11, P11, P 650SS	GISCS IIA	N	1968	
5376 5377 5378 5377 5378 5373 5373 5373 5375 501! 4280 5043 5043 5043 5043 6377 2236 22109 4980 6980 6980 6621 A 6689 2037 8023 8023 945 949	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing sid	e with the with the with the semble s	ilming diliming dilim	cover cover cover timing timing timing	cover cover cover			1 1 1 1 6 6 2 1 6 6 2 2 1 1 1 1 1 1 1 1	Atlas 1 G G G G G G G G G G G G G G G G G G G	Mark I SCSR, SR, PI Mark SCSR, PI Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, PI	1, G13 11, P11, P 11, P11, P 650SS	GISCS IIA	15Cs,	1968 5,CS, 5,CS,	
5376 5377 5378 5377 5377 5377 5377 5377 5377	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (drive sid Crankcase (timing si Cylinder-barrel stud Cy	e with the with the with the with the semble	ilming diming di	cover cover cover ciming ciming ciming ciming	 cover cover			1 1 1 1 6 6 2 1 6 6 2 2 1 1 1 1 1 1 1 1	Atlas III G50SS Atlas G50SS Atlas G50SS Atlas G50SS ALL ALL ALL ALL ALL ALL ALL ALL ALL A	Mark I SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI	1, G15 11, P11, P 11, P11, P 650SS	GISCS, N  GISCS  IIA  GISCS  IIIA  IIIA  IIIA  IIIA  IIIA  IIII  IIII  IIII  IIII  IIII  IIII  IIII	No.   No.	5CS,	
5376 5377 5377 5377 5379 5374 5375 5187 5305 5101! 4280 5043 5371 2236 4280 5237 4280 5043 5371 2236 4251 4280 6960 162! A 4689 4689 4689 4689 4689 4689 4689 4696 162! A 4689 4689 4689 4689 4689 4689 4689 4689 4696 4689 4	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing side Cylinder-barrel stud Cylinder	e with the with the with the with the semble	iming distining dist	cover	cover cover cover			1 1 1 1 6 6 2 1 6 6 2 2 1 1 1 1 1 1 1 1	Atlas II G50SS Atlas G50SS Atlas G50SS Atlas G50SS ALL G50SS ALL G50SS CALL G50SS CALL ALL ALL ALL ALL ALL ALL ALL ALL ALL	Mark I SCSR, SR, PI Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, I Mark SCSR, PI	1, G13 11, P11, P 11, P11, P 650SS	GISCS IIA	15C5,	1968 5.CS, 5.CS,	
5376 5377 5377 5377 5377 5374 5374 5375 5187 5305 1011 4280 5043 5371 2236 2018 4251 2209 8943 4689 6980 0621A 6689 0621A 6896 0621A 8079 1948 1948 1948 1948 1948 1948 1948 1948 1948	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as Crankcase halves as Crankcase halves as: Timing-gear cover Timing-gear cover Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing sid Cylinder-barrel stud Cylinder-barrel st	e with the with the with the with the semble	iming diliming dilimi	cover cover cover ctiming timing timing	cover cover cover			1 1 1 1 6 6 2 1 6 6 2 2 1 1 1 1 1 1 1 1	Atlas III G50SS Atlas G50SS Atlas G50SS Atlas G50SS ALL ALL ALL ALL ALL ALL ALL ALL ALL A	Mark I SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI Mark SCSR, SR, PI	1, G15 11, P11, P 11, P11, P 650SS	GISCS, N  GISCS  IIA  GISCS  IIIA  IIIA  IIIA  IIIA  IIIA  IIII  IIII  IIII  IIII  IIII  IIII  IIII	No.   No.	5CS,	
5376 5376 5377 5377 5377 5377 5377 5375 5187 5375 5187 5305 5019 4280 5043 5371 4280 5043 5371 22236 4280 4280 5043 4689	Crankcase complete Crankcase complete Crankcase complete Crankcase complete Crankcase halves as: Crankcase halves as: Crankcase halves as: Timing-gear cover Crankcase (drive sid Crankcase (drive sid Crankcase (timing side Cylinder-barrel stud Cylinder	e with the with the with the with the semble	iming distining dist	cover	cover cover cover			1 1 1 1 6 6 2 1 6 6 2 2 1 1 1 1 1 1 1 1	Actizs 1 G50SS Actizs	Mark I SCSR, SR, PI Mark SCSR, PI Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, III Mark SCSR, PI	1, G13 11, P11, P 11, P11, P 650SS	GISCS IIA	15C5,	1968	

Part No.	Descrij	ption				Qty		Models	fitted	to		Bin No.	£ s. d.
CRANI	KCASE BREATHER												
9629	Rubber breather pipe-26 in		***	***	•••	1	ALL except	65055	***	***	***		
4300	Breather-pipe elbow			•••		1	ALL except		***	•••	•••	panie 44141 14110 14110 - 1	
3786	Elbow washer		***	• • •	***	1	ALL except		***	***	***	-	
4303	Elbow nut		• • •		•••	1	ALL except	62022	***	• • •	•••	-	
4313	Crankcase-breather pipe-assen	noed	•••	***	•••	1	65055		•••	•••	•••		
2240	Breather-flange gasket				***	ŀ	65055	• • •	***	***	•••		
.2213	Breather-flange screw			***	***	1	65055	***	***	***	***		
9629	Rubber breather pipe-201 in		•••	•••	•••	1	65055	•••	***	•••	***		
RESSU	JRE RELEASE												
.2059A	Pressure-release body assemble	y	•••	444		1	ALL	***	•••	***	•••	#11.100.100.00.00.00.00	
.2054	Release-body piston		***		***	1	ALL	***	***	•••	***		
2061	Release-body piscon spring		***	***	•••	A D	ALL	***	***	***	•••		
5404	Packing shim		•••	***	***	AK	ALL	***	***	***	***		
.2060	Release-body nut		***	***	***	i	ALL	•••	***	***	•••		
.2058	Release-union washer Release-union nut washer		•••	***	•••	i	ALL	•••	•••	•••	***		
			•••	•••		ı		•••	•••	•••	•••		
YLIN	DER BARREL AND H	EAD					•						
5327 5323	Cylinder barrel Cylinder barrel		•••	• • •	•••	1	ALL except	22023	•••	***	•••		
5358	Cylinder barrel Cylinder head, with valve guid	des	• • •	***	•••	1		62023	•••	***	•••		
5359	Cylinder head, with valve guid		•••		•••	i	ALL except		•••	•••	•••		
5324	Cylinder-head gasket		•••	***	•••	i	65055			***			
5318	Cylinder-head gasket		***	***		1	ALL except			***	***		
2016	Cylinder-barrel stud nut- 1 in			***	•••	7		•••	***	***	***		
2016	Cylinder-barrel stud nut-1 in		***	•••		1	ALL except			***			
1250	Cylinder-barrel stud nuts		***		***	6	ALL except		***	***			
2210	Cylinder-barrel stud nuts-					2	ALL	***			***		
11000	Cylinder-barrel stepped-stud					2	ALL			•••			
1252	Cylinder-barrel stud washers	***				6	ALL except	65055	***		***		
.2093	Cylinder-base gasket			***	***	1	65055	•••		***			
1249	Cylinder-base gasket		•••	***		1	ALL except	65055	***	•••	***		
.2161	Head-to-barrel studs-1. in.	•••	***		•••	2	ALL	***	•••	***	***	-	
3756	Head-to-barrel studs		• • •	***	***	3	65055		***	***			
4389	Head-to-barrel studs		***		***	3	ALL except		•••	•••	•••		
.2034	Head-stud nuts		***	***	***	2	65055	15000	***	•••	***		
1260	Head-stud nuts		***	***	***	2	ALL except	03333	***	•••	***	-	
.2017	Head-stud nuts-1 in		• • •	***	•••	2	ALL	•••	***	***	•••		
0637 .	Head-stud nut		***	***	***	1		***	***	•••	•••		
10011 1250	Cylinder-head stud washers Head-stud nut (rear)	***	•••	•••	•••	2	ALL	45055	•••	•••	•••		
2096			***	***	***	4	650SS	62023	•••	•••	•••		
1253	Cylinder-head bolts—long Cylinder-head bolts—long		•••	•••	•••	4	ALL except	22023	•••		•••		
313	Cylinder-head bolt—short		•••	***	•••	i	ALL	00000	•••		•••		
213	Cylinder-head bolt washers		***	•••	•••	5		***	•••		•••		
213	Cylinder-head bolt washer		***	***		1	ALL except			•••	•••		
5456	Cylinder-head bolt washers		***	***	•••	4	ALL except		***	1	***		
ALVE	S, GUIDES AND SPRI	INGS											
499	Inlet valve (after engine No. 1				•••	2	65055		•••	•••	***	-	
221	Inlet valves			•••	•••	2		•••			***		
1330	Inlet valves			•••	***	2		65055	•••	•••	•••		
2204	Exhaust valves			•••		2	ALL	•••	***				
2011	Valve guides		•••	•••	***	4	ALL		***	•••	•••		
392	Heat-resisting washers			***	• • •	4	ALL	***	***	***	***		
2073	Valve-spring cups		***	***	***	4	ALL	***	***	***	***		
839	Valve-spring (inner)	• •••	***	***	•••	4	ALL	***	***	•••	***		
838	Valve-spring (outer)			•••	***	4	ALL	***	***	***	***	-	
186	Valve-spring collars		•••	***		4	ALL		***	•••	***	-	Datas
187	Valve cotters		•••	***	Pairs	4	ALL	***	***	***	***		Pairs
501 500	Inlet valve (after engine No. 1 Exhaust valve (after engine No.		•••	•••	•••	2	ALL	•••	***	•••	•••	######################################	
	NS AND RINGS (STA												
						1	65055						
387	Piston complete (left hand)		•••	•••	•••	-		45055	•••	***	***		
389	Piston complete (left hand)	• •••	***	• • •	***	-	ALL except 650SS		***	***	***		
	Pirton complete fright hand		***	***	***	•	~~~~~		***	4 * 4			
388 390	Piston complete (right hand) Piston complete (right hand)	***	***	***		1	ALL except			•••			

Part No.	Description				Qty	. Madeis	fitted	to		Bin No.
PISTO	NS AND RINGS (STANDARI	)—	continue	ed						
24284	Piston rings (top)—chrome	•••	•••		2	ALL except 650SS			• • •	
23273	Piston rings—plain	• • •	•••		2	22023		•••		-
2+285	Piston rings—plain		•••	• • •	2	ALL except 650SS	•••	•••		
185321	Piscon rings-oil control	***	• • •	***	2	65055	• • •		•••	#
- 25382	Piscon rings—oil control	•••	•••	•••		ALL except 650SS	•	• • •	***	
23275	Gudgeon pins	• • •	***	•••	2		***	•••	•••	
24353	Gudgeon pins	•••	***	•		ALL except 65055	•••	• • • • • • • • • • • • • • • • • • • •	•••	**************************************
23276	Gudgeon-pin circlips	•	•••	•-•	٠	ALL 111 911	•••	•••	•••	\$1.73 dire pri 100 100 100 diges 1000
PISTO	NS AND RINGS (OYERSIZE)					4544				
25414	Piston complete (left hand) - : 010 in.	•••		•••	I	65055	***	•••	***	
25415	Piston complete (left hand) - + 010 in.	• • •	•••	***	] !	ALL except 65055	•		•	
25417	Piscon complete (left hand) - + 020 in. Piscon complete (left hand) - + 020 in.	•.,	•••	•••	i	ALL except 650SS	•••	***	•••	
25418 25420	Piston complete (lest hand) - ÷ 030 in.	•••	•••	•••	i	65055	•••	***	***	
25421	Piscon complete (left hand) -+ 030 in.	•••	***	•••	1	ALL except 650SS	•••			
25423	Piston complete (left hand)	***	•••	4	ł	650\$5 22066	•-•	•••		
25424	Piston complete (left hand)—+ 040 in.	•••	***	• • • •	1	ALL except 650SS	***	•••		parent de l'apital Maria de press
25425	Piston complete (right hand)—+ 'Olu in.	• • • • •	***	•	1	65055	***	•••	***	
25427	Piston complete (right hand)—÷ 010 in.		•••	***	1	ALL except 65055	***	•-•	•••	
25429	Piston complete (right hand) 020 in.	• • • •	•••	• • •	1	65055	•••	***	•••	A
25430	Piston complete (right hand) - 020 in.	•••	•••	• • • •	ł	ALL except 65055	***	•	***	
25432	Piston complete (right hand) - 030 in.	***		•••		65055 ALL except 65055	•••		•••	
25433	Piscon complete (right hand) - + 030 in. Piscon complete (right hand) - + 040 in.	• • • • •	•••	•••	i	65055	•			
. 25435 25436	Piston complete (right hand)-+ 040 in.	•••	•••	•••	i	ALL except 65055	•••	•••	•••	
25153	Piscon ring (top)—chrome + 010 in.	•••	•••	•••	2	63088 22066	•••			
25246	Piscon ring (top)—chrome + 010 in.	•••			2	ALL except 650SS	•••		•••	
25154	Piston ring (top)chrome + 020 in.	• • •			2	65055	***	• • •	•••	
252÷7	Piston ring (top)—throme + 020 in.	***	• • •	***	2	ALL except 650SS	***	***	•••	•
25155	Piscon ring (top)—chrome + 030 in.	•	***	•••	2	650SS ALL except 650SS	***	•••	•••	-
25248	Pisson ring (top)—chrome + 030 in.	•••	•••	•••	2	650S5	•	•••		A
25156	Piston ring (top)—chrome + 040 in. Piston ring (top)—chrome + 040 in.	•••	•••	•••	ź	ALL except 650SS	•••	•••	•••	
25249 25157	Piston ring—plain + 010 in.	***		***	2	22023	•••		***	
25250	Piscon ring-plain + 010 in	• • •	•••	• • •	2	ALL except 650SS	• • •		***	
25158	Piston ring—plain + 020 in	•••			2	65055	•••	•••		
25251	Piscon ring—plain + 020 in	•••	•	•••	2	ALL except 650SS	•••	•••	•••	<u> </u>
25159	Piscon ring—plain ÷ 030 in	•••	•••	•••	2	65055 ALL except 65055	***		•••	
25252	Piston ring—plain + 030 in	•••	•••	•••	ź		•••		•••	•
25160	Piston ring—plain + 040 in	• • • •	•••	•••		ALL except 650SS	•••	•••	•••	W
25253 25438	Piston ring—plain + 040 in Piston ring—oil-control + 010 in	•••	•••			22023			• • • •	
25439	Piston ring—oil-control ÷ 010 tn	•	***	• • •	2	ALL except 650SS	•••		٠	
25+1	Piston ring—ail-control ÷ 020 in		***	•••	2	65055	***	• • • •	***	
25442	Piston ring—oil-control + 020 in		. •••	***		ALL except 650SS		***	•••	-
25444	Piston ring—oil-control + 030 in	•••	•••	***	7	65025 22026	•••	***	***	
25445	Piston ring—oil-control ÷ 030 in	•••	•••	***	2	ALL except 650SS 6SOSS	•…		•	
25447	Piscon ring—oil-control + 040 in	•••	•••	•••		ALL except 65055	•	•		weeners and an arrangement for the first
25448	Piston ring—oil-control ÷ 040 in	•	•••	•••	-		•			
MAIN	BEARINGS									
17822	Ball bearing (timing side)	• • • •	***	•••		ALL	•••	•••		***************************************
T-2008	Sealing washer (timing-side bearing)	***	•••	***		ALL	***	***	•••	*********************
17824	Roller bearing (drive side)	• • • •	***		1	ALL	•••	***	•••	
T.2187	Oil seal (drive-side bearing)	***	•••	•••	٠	ALL	•••	***	***	#4 100741 m == 'y #= p; m view == 4 /
TIMIN	G GEAR				_					
T.2035	Half-time pinion		•••	•••	Į	ALL	***	•••	•••	
000572	Pinion key	•••	***	***	ļ	ALL		•••	•••	<b></b>
T.2007	Pinion backing place	•••	•••	***	1	ALL	***	•••	•••	d
22729	Camshaft	···	•••	•••	İ	ALL	***	•••		
T.2078	Camshaft-breather plate (stationary)	•	•••	•••	ŀ	ALL	•	***	•••	Processor 11-72 at 11-12
24301	Breather plate (rotary)		•••	•••	i	ALL	•••	•••	•••	
T.2108	Breather spring Camshaft sprocket		***		í	ALL	***	•••	***	
20829 000572	Camshaft-sprocket key				1	ALL			***	
17211	Sprocket and rev. counter drive nut	•••	•••	•••	1	ALL	• • •	•••	•••	
17805	Camshalt chain (38 link-endless)	•••	•••	•••	1	ALL	•••	***	•••	
T.2217	Chain-tensioner slipper	•••	•••	•••	1	ALL	***	***	•••	
T.2218	Chain-tensioner plate (thick)	•••		***	,	ALL	•••		•••	

Part No.		Descript	ion				Qu	у.		Model	s fitted	to		Bin No.
TIMIN	G GEAR—continu	ed												
T.2218A	Chain-tensioner place	e (chin)	•••	•••	***	***	1	ALL		***	***	•••	***	
T.247	Chain-tensioner stud	s	•••	***	***	***	2	ALL	•••	•••	400	***	***	
E.3231	Chain-tensioner stud Chain-tensioner stud	nucs	an dies	1 in 1	***	•••	2	ALL	•••	***	***	***	***	
18202 50008	Intermediate gear wi	th sprocke	211 0120	- 2 111.7		***	ī	ALL		***	***			Terretain and annual trans
T.2026	Intermediate-gear bu	sh			•••	***	1	ALL		•••	***		•••	
T.2080	Intermediate-gear wa		• • • •	• • • •			1	ALL				***		-
T.2021	Intermediate-gear sp	indle	•••	•••	***	***	1	ALL	•••	•••	***	***	•••	
17823	Intermediace-spindle		•••	•••	•••	•••	2	ALL	•••	***	•••	***	***	
22771	Tappets (left hand)		•••	•••	•••	***	_	VEL		•••	•••	•••	•••	
TAPPE	TS AND PUSH	RODS												
22772	Tappets (right hand)		***	***	***	***	2	ALL	•••	***	•••	***	•••	
T.2142	Tappet locating plate			***	•••	•••	2	ALL	•••	•••	•••	•••	•••	
T.2143	Inlet push rod compl	ere—long	•••	•••	•••	•••	2	ALL		***	•••		•••	
5650-82EX	Exhause push rod comp	mplete—sh					2	ALL		***		•••	•••	
25515	Injec push rod compl	ete (after e	ingine l	No. 125	371)		2	ALL	***	***	***	***	***	-
25516	Exhaust push rod con	mplece (afce	er engin	ne No.	125871)		2	ALL	•••	***	•••	***	•••	
23352	Inlec push-rod less er	ndslong	***	•••		•••	2	ALL	***	•••	***	•••	•••	
23354 T.2064	Exhaust push-rod les Push-rod ends (top)				•••	***	4	ALL	9.	***	***			
T.2182	Push-rod ends (botto				•••		4			***	•••		***	
25495	Inlet push-rod less e	nds (long-	-after e	ingine !	No. 125	871)	2	ALL	•••	***	***	***	•••	
25497	Exhaust push-rod l	ess ends (	short-	-after	engine	No.	-	ATI						
•	125871)		•••	•••	***	***	2	ALL	***	***	•••	•••	•••	-
ROCKE	RS, COVERS, e	tc.												
25332	Rocker-inlet (right h		•••	***		***	1	ALL	***	***	***	•••	***	***
25330	Rocker-inlet (left har		•••	•••	***		i	ALL	***	•••	***	•••	***	
25336 25334	Rocker-exhaust (righ Rocker-exhaust (left		***	•••			i	ALL		***				
T.2063	Rocker ball ends		•••		***		4	ALL		•••				
T.2074	Rocker adjusters				***		4	ALL	•••	•••	•••	***	***	
T.232	Rocker-adjuster nuts		***	•••	***	***	4	ALL	•••	***		•••	***	-
25350 18102	Rocker shafts Rocker-shaft thrust y	washers	•••	•••	• • • •		4	ALL		***			•••	
18103	Rocker-shaft spring y				•••		4	ALL		•••		•••	•••	
T.2083	Rocker-shaft joint wa		***	***	•••		4	ALL	***	***.	***	***	***	
T.2238	Rocker-shaft locking		***	***		•••	4	ALL	•••	***	***	***	***	
T.2239	Rocker-shaft retainin Rocker-shaft plate jo		•••	•••	***	•••	4	ALL	•••		***	•••	•••	
T.2240 T.2256	Retaining-plate set p		***		***	***	8	ALL	***				•••	
T.2162	Rear-cap domed nut		***	•••	•••		1	ALL						
T.2082	Domed-nut washer	*** ***.	•••	***		***	!	ALL		***	***	•••	***	
18094	Rear-rocker cap		***	***	•••	•••	1	ALL	***	•••	***	***	•••	
T.2084	Rear-cap sealing wash		***	•••	***	•••	1	ALL		•••	***	•••	•••	
18033 000579	Rear-cap stud Rear-cap dowel		•••	•••			i	ALL	***	***	•••	•••	***	
T.2085	Front-cap nuts						4	ALL		***	***	***	***	
18093				***	***	•••	2	ALL	***	•••	***		•••	
T.2088	Front-cap sealing was		•••	•••	***		2	ALL	•••	•••	•••	***	***	
T.2252 25328	Front-cap studs Rocker-box oil-feed p	 pipe	•••		***		1	ALL	•••	•••			•••	
018155	Rocker-box oil-feed		•••	***		***	1	ALL		***	***	•••	•••	
18101	Rocker feed-pipe ban		•••	***	•••	•••	3	ALL	***	•••	***	•••	•••	
T.1084	Banjo-bolt fibre wash	ers	•••	•••	•••	***	6	ALL	•••	•••	***	***	***	
OIL PL						•	,					•		
25396	Oil pump complete		***	•••	***	•••	1	ALL	•••	•••	•••	•••	•••	***********
15511A	Oil-pump spindle nut		•••	•••	•••	•••	1	ALL		***		***	***	
24733 17697	Worm gear wheel (or Gear-wheel key	u bomb)		•••	•••		1	ALL		•••		***		
15515	Pump feed bush			***	•••		1	ALL	•••	***		•••	***	
T.272	Feed-bush sealing was	her	***	•••		•••	1	ALL	•••	•••	***	***	•••	
24732	Driving worm on mai	inshaft and			•••	•••	2	ALL	•••	***	•	•••	•••	
E.4440 E.3231	Pump-to-crankcase st Pump-stud nuts		***	•••		•••	2	ALL	•••	•••	•••	•••	•••	
E.4590	Oil-stop grub screw		•••	•••			ī	ALL	•••			•••	***	
		***												

Part No.		De	scriptio	п				Q	ty.	Mode	ils fitted t	0	Bin N	ο.
STATO	or Housing													
20835 25116	Stator housing Housing screws					•••	•		ALL except				Apr. 1 10 10 10 10 10 10 10 10 10 10 10 10 1	
HEAD	STEADY STA	Y												
23868	Head sceady place	•••	•••	•••				- 1			•		** ***	
18032 000010	Place stud (in head	•	• • •		• • • •	***	•	-			•••			
E.3224	Stud washer Stud nut		***	•••		• • • • • • • • • • • • • • • • • • • •	•••				•••			
E.3798	Steady place-to-fra				•	•••	•••				•••	• • • •		
11796 18202	Bolt washers Bolt washers	•••	•••	• • • •		•••	•••	2			•••		** ************************************	
E.3223	Bolt nuts	•••	•••			***		-			•••			
032284	Head steady-stay as	ssembled	i	•••	• • •	•••	•••	ł	G15 Mark G15CSR	11,	G15C5.	. NI3C	S.	
030424	Head steady-stay b	ol:		•••	•••	• • • •	•••	ı	GIS Mark GISCSR,					
010000	Head steady-stay b	olt wash		•	•••	•••	•••	I	GIS Mark GISCSR,	11,	G15CS,			
033091	Engine-sceady-scay	•••	Q	• • • •		•••	•••	1		•••	•••			
026873	Scay-to-frame bolc		•••	•••	•••	•••	***			•••	• • •		• • • • • • • • • • • • • • • • • • • •	
000011	Stay-to-frame bolt	washer	•••	•••	•	•••	•••	ı	PH, PHA	•	•••		** *******	
CRAN	KCASE BOLTS													
13870	Crankcase bolt-sh	art	•	• • •				1	ALL	• • •	•••		4	
E.5456	Crankcase-bolt was		• • •	•••	• • •	•••	•••	- !		•••	•••			
E.3223 T.2013	Crankcase-bolt nut Crankcase stud (to		•••		***	•••	•••	1	ALL	• • •	•••			
010000	Crankcase-stud was					***		- i	ALL	***			• • • • • • • • • • • • • • • • • • • •	
E.3224A	Crankcase-stud nut			***	***	***	•••		ALL	•••	***			
19077 T.2221	Crankcase-stud (to Crankcase-stud was		•••	•••	•••	•	•••	ŀ	ALL ALL	•	•••			
E.3229	Crankcase-stud nut		•••			***		- i	ALL		•••			
E.3214	Crankcase stud	•••		•••	•••	• • • •		1	65055, Atlas		***			
E.3231	Stud nuts		•••	•••	•…	•••	•••	2	. 65055, Atlas	•••	•			
	NE PLATES AN		LTS	-										
15621	Engine places (front Engine-place cover		•••	•••	***	•	•••	2	65055, Atlas 65055, Atlas		***		* *******	
20999 T.2012	Crankcase/engine-p		i (too	and ce	ntre fr	ront)	•	i	65055, Atlas		***			
014119	Stud washers		***.	***	•••	•••		2			•••			
E.3224A	Stud nuts	,	:				•••	2			•••			
22694 014119	Crankcase/engine-p Stud washers			2500 (	battor	n)	•••	2	65055, Atlas 65055, Atlas		•••	•••		
E.3224	Stud nots				• • • •	•••	•••	2	650SS, Atlas					
T.2012	Crankcase/engine-p				•••	•••	•••	!	650SS, Atlas		•••			****
014119	Stud washers Stud nuts	•••	•••	***	• • •		•••	2	65055, Atias 65055, Atias		***			
E.3224A T.2021	Stud nuts Crankcase/engine-p	iate stud	i (cent	re rear	-)			î	65055, Atlas		•••			
014119	Stud washers				٠	***	***	2	65055, Atlas	•••	•••			
E.3224	Stud nuts		/h-++		٠	•••	•••	2			•••			
E.4261 E.3223	Crankcase/engine-p Bolt nut	iate poli		om rea	•••	•••	***	ì	65055, Atlas 65055, Atlas		***			
000371	Engine plate/frame				•••	•••	•••	i	650SS, Atlas			•••		
014117	Bolt washers	•••	•••	•••	•••	***	•••	4	6505S, Acias		***			
000004 16317	Bolt nuts Engine/plate frame	holtz /fr		 d =eac)	***	•••	•••	2	65055, Atlas 65055, Atlas					
014119	Boit washers	***		•	***	•••	•••	12	650SS, Atlas			··· •·		
E.3224	Bolt nuts	***	•••			***		6	65055, Atlas			•••		
20700	Engine place (rear le			***	•••	•••	•••	1	650SS, Atlas			• • • • • • • • • • • • • • • • • • • •		
50229 19100	Engine plate (rear r		۵)	***	•••	•••	•••	1	65055, Atlas 65055, Atlas			··· ··		
030216	Front engine plate a					• • • •	•••	İ	ALL GIS Mo	deis		•••		
030219	Front engine plate a	ssemble	d (righ			•••	•••	1	ALL GIS Mo					
000303	Crankcase/engine pl			•	•••	•••	•••	4	ALL GIS Mo					
014119 000003	Stud washers Stud nuts			•••	•••	***	•••	4	ALL GIS Mo			•••		
010823	Front engine-place-t			•••	•••		•••	Ť	ALL GIS Mo	dels		•••		
000003	Stud nuts		***	• • •	•••	•••	***	2	ALL GIS Mo			•••		
014119 000 <b>27</b> 7	Stud washers Front engine-plate-t		stud		•••	•••	•••	2	ALL GIS Mo ALL GIS Mo					
000004	Stud nuts	_	•••		•••	•••		2	ALL GIS Mo					

Qty.	Models f
54.	Triodeis !

#### ENGINE PLATES AND BOLTS—continued ALL GIS Models Front engine-plate spacers ... 030221 2 Rear engine place (left hand) ALL GIS Models 032240 ... ... ... ... 033046 Rear engine place (right hand) ALL G15 Models ... ... ... \*\*\* ... ... Rear engine-place studs (top) Plain washers for 000304 stud 000304 ALL G15 Models ... ... ... ... ... ... ALL GIS Models 014119 ... ... ... ... ... ... Spring washers for 000304 stud ALL GIS Models 014117 ... ALL GIS Models 000003 Nucs for 000304 scud ... ... Rear engine-plate stud (bottom) 000288 ALL GIS Models ... ... ... \*\*\* 110000 Plain washers for 000288 stud ALL GIS Models ... ... \*\*\* ... ... ... ... Nuts for 000298 stud ... ALL GIS Models 000004 ... ... ... ... ... ... \*\*\* \*\*\*\*\*\*\* Engine-place cover ... Engine places (front) ... ALL GIS Models 030238 ... ... ... ... ... ... PII, PIIA 033089 ... ... ... ... PII, PIIA Front engine-to-frame stud ... 033183 Front engine-place-to-frame-stud washers PII, PIIA 000010 ... ... Front engine-plate-to-frame-stud nuts ... PII, PIIA 000003 ... ... ... ----... Front engine-plate-to-engine stud ... . Front engine-plate-to-engine stud washer PII, PIIA 000303 ... \*\*\* ... ... ... ... 014119 PII, PIIA ... ... ... ... ... ... Front engine-plate-to-engine-stud nuts ... PII, PIIA 000003 ... PII, PIIA 033194 Front engine-plate-lug-scraper ... ... Front-engine-plate-lug-spacer (timing side) Engine plate (rear left side) ... Engine plate (rear right side) ... 033195 PII, PIIA 033114 PII, PIIA ... ... ... ... ... PII, PIIA 033115 \*\*\* .... .. ... ... ... ... \*\*\* ... Rear engine-place stud (top) .... Rear engine-place top-stud washers PII, PIIA 000304 ... ... ... ... ... PII, PIIA 014119 ... ... ... ... ... ---PII, PIIA 000003 Rear engine-place top-stud nuts ... ... .......... ... PII. PIIA 033137 Rear engine-place top-stud spacer ... ... Rear engine-place stud (centre) ... 000304 PII, PIIA ... ... Rear engine-plate centre-stud washers Rear engine-plate centre-stud nuts PII, PIIA 014119 ... ---... ... ... ... ... PII, PIIA 000003 \*\*\* minur 4 --- No. . ... ... ... \*\*\* ... ... Rear engine-place centre-stud spacer 033137 PII. PIIA ... ... ... ... ... ... \*\*\* \*\*\* \*\*\* \*\*\* \*\*\* PII. PIIA Rear engine-place stud (bottom) ... 014736 ... ... ---... \*\*\* . . . . . . Rear engine-place bottom-stud washers PII, PIIA 014117 PII, PIIA 000004 Rear engine-place bottom-stud nuts ... Rear engine-place bottom-stud spacer 025054 PII, PIIA ... ... ... ... 000304 Rear engine-place centre stud GIS ... ... ... \*\*\* ..... ... ... ... Crankcase/engine stud 650SS, Atlas, 67 000277 ... ... ... ... ... ... \*\*\* ....... .. .. Crankcase/engine stud washer. 650SS, Atlas 68 014117 ... ... ... ---650SS, Atlas 67-68 Crankcase/engine stud nut ... 000004 ENGINE SPROCKET Sprocket—17 teeth (alternative) Sprocket—18 teeth (alternative) R ALL T.2180A T.2180B ALL R ... ... ... ... Sprocket-19 teeth (alternative) R ALL T.21'80C ... ... ... ... Sprocket—20 teeth (alternative) ... Sprocket—21 teeth (standard fitting) R ALL T.2180D ... ... ... 65055, Atlas, GISCS, NISCS, T.2180E ... ... AIIS ... ... GIS. Mark II. GISCSR Sprocket-22 teeth (standard fitting) T.2180F ... ... R T.2180G Sprocket-23 teeth (alternative) ... ALL E.3682 Engine-sprocket key ... R ALL MAGNETO 42453B Magneto (Lucas K2F) ... ... Sprocket with auto advance 47508D ... ... 458865 Pick-up with brush and spring (right hand) ... ... Pick-up with brush and spring (left hand) ... 458866 ... ... 451260 Brush and spring for pick-up 410500 H.T. cable nuts ... ... ... ... 459269 Contact-breaker cover ... ... ... ... 492854 Contact breaker ... ... \*\*\* Brush and spring (earthing) with holder The majority of 1967 models are 455191 ... ... Contact set ... ... Auto-advance spring set ••• ficted with Lucas coil-capacity ig-54440888 ... ... nition systems. See parts list on 498157 ... ... ... page 00 Magneto joint washer T.2191 T.2245 Magneto fixing studs ... ... ... ... 11796 Magneto fixing-stud washers ... ... ... E.3231 Fixing-stud nuts ... Magneto fixing bolt ... Fibre washer for bolt Fixing-stud nuts ... ... ... ... 25105 ... \*\*\* ... ... ... 01076 ... ... ... Shakeproof washer for bolt ... 015306 ... ... ... ... E.3229 Bolt nut H.T. lead clip ... 14490 18257 Magneto chain 8

Models fitted to

#### CARBURETTOR

Part No.

23974	Inlet port sleeves	***	•••	***				2	650SS, 66	-67	•••		•••	
23358	Carburector spacer	rs—chia	444	•••			• • • •	2	ALL	***			•••	
23872	Carburettor spacer				***			2						
								2						
030561	Carburector spacer			• • •	4									
23973	Balance unions		•••	•••	• • •	***	•••		ALL					1 1 March 1 March 18
11775	Balance-union wash	ners	***	•••	• • •	***	•••	2	ALL	•••	***	• • • •	•••	
235E0	Balance pipe hose !	5 <u>4</u> in.	•••	• • •		***	***	í	ALL	***	•••	•••	***	
23395	Carburector fixing	screw	•••	• • •		• • •		1	65055, Ac	las 196	á	•••		# 110M frat: T 10Mprosmort
030343	Carburettor fixing		•••	1		•••	•••	1	ALL	***				
11796	Carburettor screw					•••		i	ALL	***		•••		
				•••	•••									
23563	Carburettor fixing		• • •	•••		• • •	•••	2	650\$\$, Ac					
21999	Carburettor fixing	studs	•••	• • •	•••		•••	3	ALL		•••			
E.3231	Carburector fixing-	-גנעל הט	2.5	•••	***		• - •	3	ALL		•••	***	***	b
11796	Carburettor-stud v	vashers		•••				3	ALL	•••	•••	***	***	A
000951	Figat-chamber-to-c							ı	All exce					
041014	Carburettor flange							ż						
	Caradrettor nange	0 1111	8 2  -  -	Alata ba		•••		î						
25199	Carburetter compl	scs issz	C10152	(reit hi	ine)	10:224	•••	1	65055					
23405	Carburettor compl	ete less	czpisz	(left h	109) (3)	19, 236)	***	ı	Atlas 1966					
25407	Carburettor compl	ete/jess	cables	(left h:	and) (38	39/241)	•••	ı	GIS Mark	. 11-19	66	***	***	
32279	Carburettor compl	ece less	cables	(left h)	)nd) (38	39/237)		1	G13C\$. N	ISCS.	1966	***		
032277	Carburettor compl						•••	1	GISCSR I	966		•		
033077	Carburettor compl	are lece	cables	Clafe by	ad) (19	30.81	• • •	i	PH. PHA					
	Carpurettor combi	GCG 1672	C70167	(ieic iii	1110) (E.	,20,0)	•••	- ;						
25200	Carburettor compl					1/00/2		1	65055, 196					
23406	Carburector compl							-	Atlas 1966				***	
25408	Carburettor compl	ete les	s cables	(right	: hand)	(689/2	41)	1	GIS Mark	11, 19	766	***		
032280	Carburettor compl	ete less	s cables	(right	( hand)	(699/2	37)	1	GISCS, N	15CS.	1966		•••	
032278	Carburettar compl	ALA LAS	cables	(righ:	: bandî	1689/2	42ĺ	1	GISCSR.					
	Carburettor compl	are less	cables	(cich)	hand)	(8 /930	175	i	PII, PIIA					
033078	Cirporettor compi	Sec 1622	(10.67	(1.211	0701			- :						
033071	Carburettor compl	ecs (leic	(בחבח.	Y LUZI I	730	***	•••	I	65055 (wi					
033073	Carburettor compl	ece (left	(band)	Amal I	7930/	•••	***	- 1	65055 (wi					
033077	Carburettor compl	ete (left	(בהבת:	Amai l	930/8	•••	•••	ı	USA, At	25. G	15. M	ark li	, P!!,	
		•							PHA, C	HSCS,	NI5C:	. Hom	e A::25	
033075	Carburettor comple	ara Hale	handl	Amal I	9:0:6		•••	1	GISCSR,					
033073	Cirbarector compi	ere freir	manej	Villal A	-,,,,,	***	***	•						
				b 4					Filter)					
033072	Carburettor compl	ece (rig	րք իյու	5) Am;	II L930	f •••	•••	1						
033074	Carburettor compli	ece (rigi	nt hand	) Amal	L930:						Filter)			
									65055 (wi	in wit	, ,			
033078	Carburettor comple							I	65055 (wi USA, Atla	s, G15	Mark	11, P11	, PHA	
033078	Carburettor compli							I	USA, Átla	s, G15	, Mark	11, P11	, PHA	
033078	Carburettor compli							I	USA, Atla GISCS,	s, GIS NISC	, Mark S, Hon	11, P11 1e Acla:	, PHA (with	
	·	ete (rigi	ht hand	) Amal	L930/7	ī			USA, Átla GISCS, Air Cle	s, GIS NISC iner)	, Mark S, Hon	II, PII ie Acla:	, PHA (with	
033078	Carburettor comple	ete (rigi	ht hand	) Amal	L930/7	ī			USA, Atla GISCS, Air Cle GISCSR,	s, GIS NISC iner) Home	, Mark S, Hon Atlas	II, PII ie Acla: (witho	, PIIA (with us Air	
033076	Carburettor comple	ece (rigi ece (rigi	ht hand ht hand	) Amal	L930/7	5		ī	USA, Atla GISCS, Air Cle GISCSR, Filter)	s, G1S NISC Iner) Home	, Mark S, Hon Atlas	II, PII ie Acla: (wicho	, PITA (with us Air	
	Carburettor comple	ete (rigi ete (rigi anly (lef	ht hand ht hand t hand)	) Amal ) Amal	L930/7	,		I	USA, Atla GISCS, Air Cle GISCSR, Filter) ALL	s, G1S NISC iner) Home	, Mark S, Hon Atlas	II, PII ie Aclas (witho	, PITA (with us Air	
033076	Carburettor comple	ete (rigi ete (rigi anly (lef	ht hand ht hand t hand)	) Amal ) Amal	L930/7	5		ī	USA, Atla GISCS, Air Cle GISCSR, Filter)	s, G1S NISC Iner) Home	, Mark S, Hon Atlas	II, PII ie Aclas (witho	, PITA i (with us Air	
033076 930/002 930/001	Carburettor body of Carbur	ece (rigi ece (rigi anly (lef anly (rig	ht hand ht hand t hand) ht hand	) Amal ) Amal  f)	L930/7 L930/3	,		I	USA, Atla GISCS, Air Cle GISCSR, Filter) ALL	s, G1S NISC Iner) Home	, Mark S, Hon Atlas	II, PII ne Aclas (witho	, PITA i (with us Air	
033076 930/002 930/001 376-003	Carburettor complete Carburettor body of Carburettor body only (left band	ete (rigi ete (rigi anly (lef anly (rig	he hand he hand e hand) he hand	) Amal ) Amal  i)	L930/7	···	•••	I	USA, Atla GISCS, Air Cles GISCSR, Filter) ALL 650SS	s, G1S NISC Iner) Home	, Mark S, Hon Atlas	II, PII ne Aclas (witho	, PIIA i (with us Air	
033076 930/002 930/001 376-003 389-002	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (	ete (rigi ete (rigi only (lef only (rig d)	he hand he hand e hand) he hand	) Amal ) Amal  f)	L930/7	···	•••	1	USA, Atla G15CS, Air Cle G15CSR, Filter) ALL 650SS ALL excep	s, G1S NISC Iner) Home	, Mark S, Hom Atlas	(witho	, PIIA i (with us Air	
033076 930/002 930/001 376-003 389-002 1930-002	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (	ete (rigi ete (rigi anly (lef anly (rig d) d)	he hand t hand t hand) he hand	) Amal ) Amal  f) 	L930/1	···		I	USA, Atla GISCS, Air Cle. GISCSR, Filter) ALL 650SS ALL excep PII, PIIA	s, GIS NISC Iner) Home	Mark S, Hom Atlas PIIA, 1967-6	(witho	, PIIA i (with us Air 	
033076 930/002 930/001 376-003 389-002 L930-002 376-164	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (left hand Body only (right hand Body onl	ete (rigi ete (rigi anly (lef anly (rig d) d) nd)	he hand the hand the hand the hand	) Amal	L930/3			1	USA, Atla GISCS, Air Cle GISCSR, Filter) ALL 650SS ALL excep PII, PIIA 650SS	s, GIS NISC aner) Home	Atlas PIIA,	(witho	, PIIA i (with us Air	
033076 930/002 930/001 376-003 389-002 1930-002	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (	ete (rigi ete (rigi anly (lef anly (rig d) d) nd)	he hand t hand t hand) he hand	) Amal ) Amal  f) 	L930/1	···			USA, Acta GISCS, Air Cle: GISCSR, Filter) ALL ASSSS ALL excep PII, PIIA 650SS ALL excep	s, GIS NISC Inter) Home  et PII, Atlas	Atlas PIIA,	(without 65055 88 65055	, PITA (with us Air 	
033076 930/002 930/001 376-003 389-002 L930-002 376-164	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (left hand Body only (right hand Body onl	ete (riginal) ete (riginal) ete (riginal) ete ete ete ete ete ete ete ete ete et	he hand the hand the hand the hand	) Amal	L930/3			1	USA, Acta GISCS, Air Cle: GISCSR, Filter) ALL 650SS ALL excep PII, PIIA ALL excep PII, PIIA	s, G15 NISC Iner) Home	Mark S, Hon Atlas P11A, 1967-6	65055 68055	, PITA s (with us Air 	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (left hand Body only (right hand body onl	ete (rigi ete (rigi anly (lef anly (rig d) d) nd) nd) nd)	he hand he hand c hand) he hand	) Amal	L930/3				USA, Acta GISCS, Air Cle: GISCSR, Filter) ALL ASSSS ALL excep PII, PIIA 650SS ALL excep	s, G15 NISC Iner) Home	Mark S, Hon Atlas P11A, 1967-6	65055 68055	, PITA s (with us Air 	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand Body on	ete (rigi ete (rigi only (lef only (rig d) d) d) nd) nd) nd)	he hand he hand c hand) he hand 	) Amal	L930/3			1 1 1 1 1 1 2 2	USA, Acta GISCS, Air Cle: GISCSR, Filter) ALL 650SS ALL excep PII, PIIA 650SS ALL excep PII, PIIA ALL excep	s, G15 NISC Iner) Home  sc P11, Atlas 67-68	Mark S, Hon Atlas P11A, 1967-6 P11A, I, Atlas	65055 65055 67-68	, PITA s (with us Air us Air iii iii iii Atlas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-078	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand Body on	ete (rigi ete (rigi only (lef only (rig d) d) nd) nd) nd)	he hand he hand c hand) he hand 	) Amal	L930/3			1 1 1 1 1 1 2 2	USA, Atla GISCS, Air Cle: GISCSR, Filcer) ALL 650SS ALL excep PII, PIIA 650SS ALL excep PII, PIIA ALL excep ALL excep	s, G15 NISC aner) Home  Atlas pt PII, 67-68 tt PII, pt PII,	Mark S, Hom Atlas PIIA, 1967-6 PIIA, , Atlas PIIA, , PIIA	65055 67-68	, PITA ( (with us Air   Atlas Atlas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-078 376-079	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand Body on	ete (rigi ete (rigi anly (lef anly (rig d) d) nd) nd) nd)	ht hand ht hand t hand t hand ht hane	) Amal	L930/3		***	1 1 1 1 1 2 2 6 .	USA, Atla GISCS, Air Cle: GISCSR., Filter) ALL 650SS ALL excep PII, PIIA 650SS ALL excep PII, PIIA ALL excep ALL excep ALL excep ALL excep ALL excep	s, G15 NISC aner) Home  Atlas c PII, 67-68 c PII, pt PII,	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA,	650SS 67-68 67-68 67-68 67-68	, PITA ( (with us Air  Air Atlas Atlas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-073 376-079 376-079	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand hand hand hand hand hand hand hand	ete (rigi ete (rigi only (lef only (rig d) d) d) d) d) nd) nd) rs	ht hand ht hand t hand ht hand ht hand	) Amal	L930/1		***	1 1111112261	USA, Atla GISCS, Air Cle: GISCSR., Filter) ALL 650SS ALL excep PII, PIIA ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep	s, G15 N15C Inner) Home  se P11, 67-68 se P11, se P11, por P11, por P11,	Atlas Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA,	65055 65055 67-68 67-68 67-68	, PIIA ( (with	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-073 376-079 376-083 376-094	Carburettor completed and carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body only (right has Body only (right has Body only (right has Float-chamber cover Side-cover washers Side-cover washers Float only Float-spindle bush	ete (rigi ete (rigi only (lef only (rig d) d) d) d) d) d) d) d) d)	ht hand ht hand t hand t hand) ht hand	) Amal	L930/3	55		1 1 1 1 1 2 2 6 .	USA, Acta GISCS, Air Cle: GISCSR, Filter) ALL 650SS ALL excep PII, PIIA ALL excep ALL excep	s, G15 N15C Inner) Home  , Aclas ce P11, , 67-68 ce P11, por P11, por P11, por P11, por P11,	Atlas Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA, PIIA, PIIA	65055 65055 67-68 67-68 67-68 67-68	, PITA (with use Air use Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-073 376-079 376-079	Carburettor complete Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand Body on	ete (rigi	ht hand ht hand t hand ht hand ht hand	) Amal	L930/1		***	1 11111111226111	USA, Acta GISCS, Air Cle: GISCSR, Filter) ALL 650SS ALL excep PII, PIIA ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep	s, G15 NISC Inner) Home PII, Actias PIII, 67-68 PIII, PIII PIII PIII PIII PIII PIII PI	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA, PIIA,	65055 65055 67-68 67-68 67-68 67-68 67-68 67-68	, PITA (with us Air us Air  Ailas Ailas Atlas Atlas Atlas Atlas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-073 376-079 376-083 376-094	Carburettor completed and carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body only (right has Body only (right has Body only (right has Float-chamber cover Side-cover washers Side-cover washers Float only Float-spindle bush	ete (rigi	ht hand ht hand t hand t hand) ht hand	) Amal	L930/3			1 11111122611111	USA, Ada GISCS, Air Cle GISCSR, Filcer) ALL 650SS ALL excep PII, PIIA 650SS ALL excep ALL excep	s, G15 NISC Inner) Home PII, Actias PIII, 67-68 PIII, PIII PIII PIII PIII PIII PIII PI	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA, PIIA,	65055 65055 67-68 67-68 67-68 67-68 67-68 67-68	, PITA (with us Air us Air  Ailas Ailas Atlas Atlas Atlas Atlas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-078 376-079 376-083 376-094 376-089 376-088	Carburettor completed and carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand Bo	ete (rigi ete (rigi only (lef only (rig d) d) nd) nd) nd) nd)	ht hand ht hand t hand t hand ht hand	) Amal	L930/3			1 11111111226111	USA, Acta GISCS, Air Cle: GISCSR, Filter) ALL 650SS ALL excep PII, PIIA ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep ALL excep	s, G15 NISC Inner) Home PII, Actias PIII, 67-68 PIII, PIII PIII PIII PIII PIII PIII PI	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA, PIIA, PIIA,	650SS 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	, PITA (with us Air us Air  Ailas Ailas Atlas Atlas Atlas Atlas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-079 376-079 376-089 376-089 376-088 376-088	Carburettor complication of the complete of th	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			1 1111111226111112	USA, Ada GISCS, Air Cle GISCSR, Filcer) ALL 650SS ALL excep PII, PIIA 650SS ALL excep ALL excep	s, GIS NISC Inter) Home PII, Atlas (67-68 (7-68) (7	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA	65055 65055 67-68 67-68 67-68 67-68	, PITA (with use Air  Air  Air  Air  Air  Air  Air  Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-078 376-079 376-083 376-094 376-089 376-088	Carburettor completed and carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand Bo	ete (rigi	ht hand ht hand t hand t hand ht hand	) Amal	L930/3			1 1111111226111112	USA, Acta GISCS, Air Cle: GISCSR., Filter) ALL 650SS ALL excep PII, PIIA ALL excep	s, GIS NISC NISC NISC Home Atlas REPII, ACT PIII REPII	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA, PIIA	650SS 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	, PITA (with use Air  Asias Asias Asias Asias Asias Asias Asias Asias Asias	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-078 376-079 376-088 376-088 376-065 389-065	Carburettor complete Carburettor body of Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body only (right has Body only (right has Body only (right has Float-chamber cover washers Side-cover washers Side-cover washers Float only Float-spindle bush Float needle Float-needle seating Mixing-chamber cap Mixing-chamber cap	ete (rigi	ht hand ht hand t hand t hand ht hand	) Amal	L930/3			1 1111111226111122	USA, Atla GISCS, Air Cle: GISCSR, Filter) ALL 650SS ALL excep PII, PIIA ALL excep ALL excep	See PII.  Control PII.	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA	650SS 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with us Air us Air Airas Atlas Atlas Atlas Atlas Atlas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-078 376-078 376-089 376-088 376-085 389-065	Carburettor completed and carburettor body of Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body only (right has Body only (right has Float-chamber cover Side-cover washers Side-cover screws Float only Float-spindle bush Float-needle seating Mixing-chamber cap Mixing-chamber cap Springs for ring	ete (rigi ete (rigi only (lef only (rig d) d) d) ond) rs orings crings	ht hand ht hand t hand t hand ht hand	) Amal	L930/3	55		1 111111122 2	USA, Atla GISCS, Air Cle GISCSR, Fitcer) ALL ALL excep PII, PIIA 650SS ALL excep	s, GIS NISC iner) Home	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA PIIA PIIA, PIIA,	65055 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with us Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 476-164 689-028 R930-001 376-079 376-079 376-083 376-089 376-088 376-065 389-065 4-235 29-201	Carburettor completed and carburettor body of Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand Eloat-cover screws Side-cover screws Side-cover screws Float only Float-spindle bush Float needle Float-needle seating Mixing-chamber cap Mixing-chamber cap Springs for ring Springs for ring Springs for ring Springs for ring	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			1 111111122 22	USA, Atla GISCS, Air Cle: GISCSR, Filcer) ALL ALL exce; PII, PIIA 650SS ALL exce;	s, GIS NISC Larer) Home	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA, PIIA,	65055 67-68 67-68 67-68	PITA (with us Air  Air  Air  Air  Air  Air  Air  Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-073 376-079 376-083 376-094 376-089 376-089 376-088 376-065 389-065	Carburettor complication of the complete of th	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			111111111111111111111111111111111111111	USA, Atla GISCS, Air Cle: GISCSR, Fitcer) ALL ALL exceppi, PilA 650SS ALL exceppi, PilA 650SS ALL excepALL e	s, GIS NISC Larer) Home	Mark S, Hon Atlas PIIA, 1967-6 PIIA, PIIA, PIIA, PIIA, PIIA, PIIA,	65055 65055 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with us Air Ailas Atlas	
033076 930/002 930/001 376-003 389-002 1930-002 476-164 689-028 R930-001 376-079 376-079 376-083 376-089 376-088 376-065 389-065 4-235 29-201	Carburettor completed and carburettor body of Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right hand Eloat-cover screws Side-cover screws Side-cover screws Float only Float-spindle bush Float needle Float-needle seating Mixing-chamber cap Mixing-chamber cap Springs for ring Springs for ring Springs for ring Springs for ring	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			1 1111111122 2222	USA, Ada GISCS, Air Clei GISCSR. Filter) ALL 650SS ALL excep PII, PIIA ALL excep	See PII., Acias PII., Con PIII. Con	PIIA, PIIA,	650SS 67-68	PITA (with use Air and Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-073 376-079 376-083 376-094 376-089 376-089 376-088 376-065 389-065	Carburettor complication of the complete of th	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			1 1111111122 2222	USA, Atla GISCS, Air Cle: GISCSR, Fitcer) ALL ALL exceppi, PilA 650SS ALL exceppi, PilA 650SS ALL excepALL e	See PII., Acias PII., Con PIII. Con	PIIA, PIIA,	650SS 67-68	PITA (with use Air and Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-073 376-079 376-089 376-089 376-089 376-089 376-089 376-085 389-065	Carburettor complication of the complex of the comp	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			1 1111111122 2222	USA, Ada GISCS, Air Clei GISCSR. Filter) ALL 650SS ALL excep PII, PIIA ALL excep	See PII., Acias PII., Con PIII. Con	PIIA, PIIA,	650SS 67-68	PITA (with use Air and Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-083 376-094 376-088 376-065 389-065 4-235 29-201 4-241 376-064 389-064	Carburettor completed and carburettor body of Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body on	ete (rigi ete (rigi ete (rigi only (lef only (rig d) d) nd) nd) nd) rs orings orings orings	ht hand ht hand t hand t hand ht hand	) Amal	L930/3	55		1 1 1 1 1 1 1 2 2 2 2 2 2 2 2 2 2 2 2 2	USA, Atla GISCS, Air Cle GISCSR, Fitcer) ALL ALL excep PII, PIIA 650SS ALL excep	s, GIS NISC Inter) Home	PIIA, PIIA,	650SS 67-68	PITA (with use Air and Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 629-028 R930-001 376-077 376-078 376-088 376-089 376-088 376-065 389-065 4-235 29-201 4-241 376-064 389-064 4-035	Carburettor completed and comp	ete (rigi ete (rigi ete (rigi only (lef only (rig d) d) d) orings orings orings crings	ht hand ht hand c hand) ht hanc	) Amal	L930/3			1 1111111111111111111111111111111111111	USA, Atla GISCS, Air Cle: GISCSR, Filter) ALL ALL 650SS ALL excep PII, PIIA 650SS ALL excep	s, GIS NISC uner) Home Atlas t PIII, Atlas t PIII, T PIII t PIII, t PIII, t PIII, t PIII, t PIII, t PIII, t PIII, t PIII, t PIII,	PIIA, PIIA,	65055 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with us Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-073 376-079 376-083 376-094 376-088 376-065 389-065 4-235 29-201 4-241 376-064 339-064 4-035 376-062	Carburettor complication of the carburettor body of Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right ha Body only fright ha Float-chamber cover Side-cover washers Side-cover screws Float only Float-spindle bush Float-needle seating Mixing-chamber cap Mixing-chamber cap Mixing-chamber cap Springs for ring Springs for ring Screws for spring Mixing-chamber cap Mixing-chamber cap Mixing-chamber cap Mixing-chamber cap Control-cable adjust Air valves	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			T	USA, Atla GISCS, Air Cle: GISCSR, Fiter) ALL 650SS ALL excep PII, PIIA 650SS ALL excep	s, GIS NISC Laner) Home  Acta PIII,  Acta PIII,  Acta PIII,  CPIII,  CPIIII,  CPIII,  CPII	Mark S, Hon Atlas PIIA, Atlas PIIA,	65055 65055 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with use Air Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas Aulas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 629-028 R930-001 376-077 376-078 376-088 376-089 376-088 376-065 389-065 4-235 29-201 4-241 376-064 389-064 4-035	Carburettor completed and comp	ete (rigi ete (rigi ete (rigi only (lef only (rig d) d) d) orings orings orings crings	ht hand ht hand c hand) ht hanc	) Amal	L930/3			T	USA, Ada GISCS, Air Cle: GISCSR. Fiter) ALL ALL excep PI, PIIA ALL excep	See PILL CONTROL OF PILL CONTR	PIIA, PIIA,	650SS 67-68	PITA (with use Air Aulas	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-073 376-079 376-089 376-089 376-088 376-065 389-065 4-235 29-201 4-241 376-064 389-064	Carburettor completed adjust Air valves and carburettor body of Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body only (right has Body only (right has Body only (right has Body only (right has Float-chamber coverside-cover washers Side-cover washers Side-cover washers Side-cover screws Float only Float-spindle bush Float needle seating Mixing-chamber cap Mixing-chamber cap Mixing-chamber cap Springs for ring Springs for ring Screws for spring Mixing-chamber cap Mixing-chamber ca	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			1 111111122 22222 422	USA, Ada GISCS, Air Cle: GISCSR. Filter) ALL ALL excep ALL excep PII, PIIA ALL excep	See PIL, Adas PI	PIIA, PIIA,	650SS 67-68	PITA (with use Air Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas 67-68  67-68	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-083 376-089 376-089 376-088 376-085 389-065 4-235 29-201 4-241 376-064 389-064 4-035 376-062 389-062 6-047	Carburettor completed adjust Air valves and your carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body	ete (rigi	ht hand ht hand c hand) ht hanc	) Amal	L930/3			1 11111111122 22222 422 2	USA, Atla GISCS, Air Cle: GISCSR, Filcer) ALL ALL exce; PII, PIIA 650SS ALL exce;	s, GIS NISC Larry Home Actas PIII, Ac	Mark S, Hon Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas April A, Pil	65055 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with us Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-083 376-089 376-089 376-088 376-085 389-065 4-235 29-201 4-241 376-064 389-064 4-035 376-062 389-062 6-047	Carburettor completed adjust Air valves and carburettor body of Carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body only (right has Body only (right has Body only (right has Body only (right has Float-chamber coverside-cover washers Side-cover washers Side-cover washers Side-cover screws Float only Float-spindle bush Float needle seating Mixing-chamber cap Mixing-chamber cap Mixing-chamber cap Springs for ring Springs for ring Screws for spring Mixing-chamber cap Mixing-chamber ca	ete (rigi	ht hand ht hand c hand) ht hand	) Amal	L930/3			1 11111111122 22222 422 2	USA, Ada GISCS, Air Cle: GISCSR. Filter) ALL ALL excep ALL excep PII, PIIA ALL excep	s, GIS NISC Larry Home Actas PIII, Ac	Mark S, Hon Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas April A, Pil	65055 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with us Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-077 376-083 376-089 376-089 376-088 376-085 389-065 4-235 29-201 4-241 376-064 389-064 4-035 376-062 389-062 6-047	Carburettor completed adjust Air valves and your carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body	ete (rigi	ht hand ht hand t hand ht hand ht hand	) Amal	L930/3			1 11111111122 22222 422 2	USA, Atla GISCS, Air Cle: GISCSR, Filcer) ALL ALL exce; PII, PIIA 650SS ALL exce;	s, GIS NISC Larry Home Actas PIII, Ac	Mark S, Hon Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas April A, Pil	65055 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with us Air Air Air Air Air Air Air Air Air Air	
033076 930/002 930/001 376-003 389-002 1930-002 376-164 689-028 R930-001 376-073 376-079 376-089 376-089 376-089 376-088 376-089 376-089 376-065 389-065 4-235 29-201 4-241 376-064 389-064 4-035 376-062 389-062 6-047 29-057	Carburettor completed adjust Air valves and your carburettor body of Carburettor body of Body only (left hand Body only (left hand Body only (right has Body	ete (rigilete (r	ht hand ht hand c hand) ht hanc	) Amal	L930/3			F IIII 226-11-22 2222 422 22	USA, Atla GISCS, Air Cle: GISCSR, Fiteer) ALL ALL excep PII, PIIA 650SS ALL excep	s, GIS NISC Larer Home Atlas Atl	Mark S, Hon Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas Atlas April A, Pil	65055 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68 67-68	PITA (with 100 Air Air Air Air Air Air Air Air Air Air	

#### CARBURETTOR — continued

389-060 389-060 389-060									
389-060	Throttle valves-size	3 flefe	hand)		***			1	1966 Atlas, G15 Mark II
	Throttle valves-size				***	•••		1	GISCS, NISCS
									mit man
	Throttle valves—size				• • •	***		1	GISCSR
689-060	Throccle valves—size	3 (right	ic hand	1)		***		1	ALL except PII, PIIA, 650SS, 67-68
									Acias
4-046	Air valve-springs							2	ALL except PII, PIIA, 67-68 Acias
376-132	Throttle-valve spring				•••	• • •	•••	2	65055
				•••		•••		2	ALL except PII, PIIA, 650SS, 67-68
389-092	Throttle-valve spring	2	•••	•••	***	•••	• • •	1	ALL except P11, P11M, 03033, 07-00
44.0		,							Atlas
376-068	Throttle-stop screws		***	***	***	***		2	ALL except PII, PIIA, 67-68 Atlas
376-069	Throttle-stop screw	springs		***				2	ALL except PII, PIIA, 67-68 Atlas
332-017	Piloc air-adjusting sc			***	***	•••		2	ALL except PII, PIIA, 67-68 Aclas
4-148	Adjusting-screw spri			***	***			2	ALL except PII, PIIA, 67-68 Aclas
376-063	Taper needle jets		•••	***		***	***	2	650SS
389-063	Taper needle jets	***	***	***	***	***		2	ALL except P11, P11A, 650SS, 67-68
									Atlas
4-230	Jet-needle clips							2	ALL except PII, PIIA, 67-68 Atlas
376-072	Needle jess-size 10			•••				2	ALL except PII, PIIA, 67-68 Aclas
376-100	Main jets-size 270						***	2	65055
								2	
376-100	Main jets—size 350		•••	***	•••	***	***		Aclas 1966
376-100	Main jets—size 420	*** .			***	***		2	GI5 Mark II
376-100	Main jets-size 350		)		***	***	• • •	2	GISGS, NISCS
376-100	Main jets-size 360	• • •				***		2	GISCSR
376-073	Main-let holders	***			•••			2	ALL except PII, PIIA, 67-68 Atlas
376-074		•••						2	ALL except PII, PIIA, 67-68 Atlas
	Jet-holder washers	***	•••	•••	***	•••	***		
376-075	Main-jec covers	• • •	•••		•••	•••	•••	2	ALL except PII, PIIA, 67-68 Atlas
376-076	Pilot jets size 25	***	***	***		***		2	65055
376-076	Pilot jets size 20				***			2	ALL except PII, PIIA, 67-68 Atlas.
									65055
376-095	Pilot-jet cover nuts			***	***	•••		7	ALL except PII, PIIA, 67-68 Atlas
									ALL except PII, PIIA, 67-58 Atlas
116-162	let cover-nut washe		***	• 5 -	***		***		ALL except FII, FIIA, 67-30 Acids
376-057	Choke or jet block-			***		,		2	65055
389-056	Choke or jet block-	-1 in.			***			2	ALL except PII, PIIA, 65055, 67-68
									Atlas
389-056	Choke or jet block (	left har	dl	***	***	***		1	1966 Atlas
689-056	Choke or jet block (							1	1966 Aclas
376-067	Jet block washers							2	ALL except PII, PIIA, 67-68 Atlas
				***	***	•••		-	
376-070	Jet-block locating pe		•••	•••	•••		•••	2	
376-097	Petrol-feed banjo (le	ic hand	)	***	***	***		1	ALL except P11, P11A, 650SS, 67-68
									Atlas
244-1730	Petrol-feed banjo (le	fe hand			***			1	
	Perrol-feed banin (ri			•••			•••	1	65055
376-141	Petrol-feed banjo (ri	ght han	d)		•••	•••		I	650SS
376-141 376-091	Banjo bolt (left hand	ghe han	d)			•••	•••	1	ALL except PII, PIIA, 67-68 AtlasALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140	Banjo bolt (left hand Banjo bolt (right han	ght han ) nd)	d) 					1	ALL except PII, PIIA, 67-68 Aclas ALL except PII, PIIA, 67-68 Aclas ALL except PII, PIIA, 67-68 Aclas ALL except PII, PIIA, 67-68 Aclas
376-141 376-091 376-140 376-092	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers	ght han ) nd)	d) 			•••	•••	1 1 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140	Banjo bolt (left hand Banjo bolt (right han	ght han ) nd)	d) 					1 1 2 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w	ght han ) nd) ashers	d) 					1 2 2 2 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze	ght han ) nd) ashers	d) 					1 1 2 2 2 1	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body	ght han ) nd) ashers	d)  					1 1 2 2 2 1 1	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body	ght han ) id) ashers	d)					1 1 2 2 2 1 1 1	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring	ght han ) id)  ashers	d)  					1 1	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067 376-066	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast	ght han ) id) ashers ic)	  					2 1 1 1 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring	ght han ) id) ashers ic)	d)  					2 1 1 1 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast	ght han ) id) ashers ic)	  					2 1 1 1 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 650SS, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast	ght han ) id) ashers ic) ic)	  					1 1 2 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 650SS, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067 376-066 389-066	Banjo bolt (left hand Banjo bolt (right han Banjo bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Float-chamber bodie	ght han ) id) ashers ic) ic)	d)					2 1 1 2 2 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067 376-066 389-066	Banjo bolt (left hand Banjo bolt (right han Banjo bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Float-chamber bodie Throttle valves—size	ght han ) ashers ic) ic) ss a 3 in.	d)					2 1 1 2 2 2 2 2	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 6505S, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/060	Banjo bolt (left hand Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast	ght han ) ashers ic) ic) ss a 3 in.	d)					211122	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas BLL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/062 928/064	Banjo bolt (left hand Banjo bolt (right hand Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast	ght han ) id) ashers ic) ic) ss a 3 in ss	d)					211122 2222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067 376-066 389-066 622/050 928/060 928/062 928/064 622/061	Banjo bolt (left hand Banjo bolt (right han Banjo bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Intake venturi (plast Float-chamber bodie Throttle valves—size Air valves Mixing-chamber top Throttle-valve spring	ght han ) id) ashers ic) ic) ss a 3 in ss	d)					211122 2222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/062 928/064	Banjo bolt (left hand Banjo bolt (right hand Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast	ght han ) id) ashers ic) ic) ss a 3 in ss	d)					211122 2222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/060 928/060 928/061 622/061 622/065	Banjo bolt (left hand Banjo bolt (right han Banjo bolt washers Banjo-bolt seating w Filter gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Intake venturi (plast Float-chamber bodie Throttle valves—size Air valves Mixing-chamber top Throttle-valve spring	ght han ) nd) ashers ic) ic) s 2 3 in zs	d)					211122 2222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067 376-066 389-066 622/050 928/060 928/062 928/064 622/061 622/065 622/067	Banjo bolt (left hand Banjo bolt (right han Banjo bolt (right han Banjo-bolt washers Banjo-bolt seating will fill be body Tickler gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Intottle valves Mixing-chamber top Throttle-valve springs Throttle-needle clipt	ght han ) ind) ashers ic) ic) ic) s s s s gs	d)					211122 2222222	650SS
376-141 376-091 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/062 928/064 622/061 622/065 622/067 928/063	Banjo bolt (left hand Banjo bolt (right han Banjo bolt (right han Banjo bolt washers Banjo-bolt seating will filter gauze	ght han ) nd) ashers ic) ic) ic) is 2 3 in s s	d)					211122 22222222	650SS
376-141 376-091 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/062 928/064 622/065 622/065 622/065 622/066 622/066 622/066 622/066 622/066 622/066 622/066 622/066	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo-bolt washers Banjo-bolt seating we Filter gauze Tickler gauze Tickler plunger Tickler spring Intake venturi (plast Intake venturi (pla	ght han ) ashers ic) ic) ic) ss 2 3 in ss gs	d)					211122 2222222222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-067 376-066 389-066 622/050 928/062 928/062 928/064 622/061 622/065 622/066 622/066 622/066 622/066 622/067	Banjo bolt (left hand Banjo bolt (right han Banjo bolt washers Banjo-bolt washers Banjo-bolt seating will fill be bolt washers will be bolt seating will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers	ght han ) ashers ic) ic) ic) ss s 3 in. ss ss ss	d)					211122 22222222222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/060 928/061 622/065 622/067 928/063 622/066 622/066 622/069 622/069 622/069	Banjo bolt (left hand Banjo bolt (right han Banjo bolt (right han Banjo bolt washers Banjo-bolt seating will fill be bolt washers Banjo-bolt seating will be bolt be bolt bolt bolt bolt bolt bolt bolt bolt	ght han ) ind) ashers ic) ic) ic) s s s s s	d)					211122 22222222222	650SS
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067 376-066 389-066 622/050 928/062 928/064 622/061 622/065 622/065 622/066 622/066 622/066 622/066 622/066 622/066 622/068 622/068	Banjo bolt (left hand Banjo bolt (right han Banjo bolt washers Banjo-bolt washers Banjo-bolt seating will fill be bolt washers will be bolt seating will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers	ght han ) ind) ashers ic) ic) ic) s s s s s	d)					211122 22222222222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/060 928/061 622/065 622/067 928/063 622/066 622/066 622/069 622/069 622/069	Banjo bolt (left hand Banjo bolt (right han Banjo bolt (right han Banjo bolt washers Banjo-bolt seating will fill be bolt washers Banjo-bolt seating will be bolt be bolt bolt bolt bolt bolt bolt bolt bolt	ght han ) id) ashers ic) ic) ic) s s s s s s s s s s	d)					211122 22222222222	650SS
376-141 376-091 376-092 14-175 376-093 343-011 376-086 376-086 376-066 389-066 622/050 928/062 928/062 928/064 622/065 622/065 622/0668 622/068 622/068 622/068 622/068 622/068 622/068 622/067 622/071 622/071 622/073 622/076	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo-bolt washers Banjo-bolt seating w Filter gauze Tickler gauze Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Throttle valves—sizt Air valves Mixing-chamber top Throttle-valve springs Air-valve springs Air-valve springs Throttle-needle clips Throttle needles Float spindles Float spindles Float spindles Float-chamber washe Pilot air-adjuster scr	ght han ) ashers ic) ic) ic) ss s s gs s srs ews	d)					211122 222222222222	650SS
376-141 376-091 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/062 928/064 622/065 622/065 622/066 622/066 622/066 622/066 622/066 622/067 622/076 622/076 622/076 622/077	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo-bolt washers Banjo-bolt seating will be bolt with the bolt washers and bolt washers will be bolt washers with the bolt washers will be bolt washers with the bolt washers will be bolt washers will be bolt washers will be bolt washers will be bolt washers washer	ght han ) d) ashers ic) ic) ic) ss gs ss gs ss gs ss	d)					2-1-22 222222222222222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-067 376-066 389-066 622/050 928/060 928/062 928/061 622/065 622/065 622/066 622/066 622/066 622/067 622/077 622/078	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo bolt washers Banjo-bolt seating will be bolt with the bolt washer sure intake place of the bolt washer bolt and the bolt washer bolt and the bolt washer bolt wa	ght han ) id) ic) ic) ic) ss	d)					2-1-22 22222222222222222	ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas ALL except PII, PIIA, 67-68 Atlas
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 389-066 622/050 928/060 928/062 928/065 622/065 622/065 622/065 622/067 622/071 622/073 622/078 622/078 622/079	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo bolt washers Banjo-bolt seating will fill be bolt washers and bolt seating will be	ght han ) id) ic) ic) ic) ss	d)					2-1-22 2222222222222222	650SS
376-141 376-091 376-140 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/060 928/060 928/060 928/065 622/061 622/065 622/067 928/063 622/071 622/073 622/077 622/077 622/079 622/079 622/079 622/079 622/080	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo bolt washers Banjo-bolt seating will fill the bolt washers Banjo-bolt seating will the bolt washers Banjo-bolt seating will take plunger Tickler spring Intake venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Ventu	ght han ) ashers ic) ic) ic) ss s ss	d)					2-1-22 22222222222222222	650SS
376-141 376-091 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/062 928/062 928/064 622/065 622/065 622/066 622/066 622/066 622/067 622/076 622/077 622/077 622/077 622/077 622/079	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo-bolt washers Banjo-bolt seating we filter gauze Tickler gauze Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Throttle valves—size Air valves Mixing-chamber top Throttle-valve springs Throttle-needles Clipt Throttle needles Float sprindles Float-chamber washe Pilot air-adjuster ser Throttle stops Banjo bolts Needle jets—size 10 Jet holders Main jets—with air 1	ght han ) ashers ic) ic) ic) ss ss gs initial	d)					211122 222222222222222222	650SS
376-141 376-091 376-092 14-175 376-093 343-011 376-086 376-086 389-066 622/050 928/060 928/062 928/061 622/065 622/065 622/066 622/066 622/067 622/071 622/073 622/076 622/077 622/078 622/078 622/078 622/078 622/078 622/078 622/078 622/078 622/070 622/080 376/100 124/026	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo bolt washers Banjo-bolt seating will fill the bolt washers Banjo-bolt seating will the bolt washers Banjo-bolt seating will take plunger Tickler spring Intake venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Venturi (plast Intake Ventu	ght han ) ashers ic) ic) ic) ss ss gs initial	d)					211122 222222222222222222	650SS
376-141 376-091 376-092 14-175 376-093 343-011 376-086 376-066 389-066 622/050 928/062 928/062 928/064 622/065 622/065 622/066 622/066 622/066 622/067 622/076 622/077 622/077 622/077 622/077 622/079	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo-bolt washers Banjo-bolt seating we filter gauze Tickler gauze Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Intake venturi (plast Intake venturi (plast Throttle valves—size Air valves Mixing-chamber top Throttle-valve springs Throttle-needles Clipt Throttle needles Float sprindles Float-chamber washe Pilot air-adjuster ser Throttle stops Banjo bolts Needle jets—size 10 Jet holders Main jets—with air 1	ght han ) ashers ic) ic) ic) ss ss gs initial	d)					211122 222222222222222222	650SS
376-141 376-091 376-092 14-175 376-093 343-011 376-086 376-086 389-066 622/050 928/060 928/062 928/061 622/065 622/065 622/066 622/066 622/067 622/071 622/073 622/076 622/077 622/078 622/078 622/078 622/078 622/078 622/078 622/078 622/078 622/070 622/080 376/100 124/026	Banjo bolt (left hand Banjo bolt (right hand Banjo bolt (right hand Banjo-bolt washers Banjo-bolt seating we filter gauze Tickler gauze Tickler body Tickler plunger Tickler spring Intake venturi (plast Intake venturi (plast Intake venturi (plast Throttle valves—size Air valves Mixing-chamber top Throttle-valve springs Throttle-needles float springes Throttle needles Float spindles Float spindles Float spindles Float chamber washer pilot air-adjuster scr Throttle stops Banjo bolts Needle jets—size 10 Jet holders Main jets—with air 1 Pilot jets—size 25 c	ght han ) ashers ic) ic) ic) ss ss gs initial	d)					211122 222222222222222222	650SS

Part No.	Des	cription				Qt	ty. Models fitted to Bin No. E
CARBU	JRETTOR — continued						
622,085	Float-chamber and mixing-	chamber co	op screws		•••	4	
033281	Carburettor Bange "O" rin			• • •	•••	2	2 PII, PIIA, 67-68 Actas
375 097	Banjo unions	•••	• • • •	•••	•••	- 2	2 Pil, PilA, 67-68 Adas
612:091	"O" rings	•••	•••	***	• • •	4	FII, PIIA, 67-68 Atlas
918,055	Air funnels Cable adjuster lock nuts	•••	•	•••	•••	4	2 PII, PIIA, 67-68 Aclas
5,077	Capis adjustes fock unes	• • • • • • • • • • • • • • • • • • • •	•••		•	-	H PH, PHA, 07-03 ACI33
EXHA	UST PIPE						
21432	Exhuast-pipe-bare (left) lar	-	•••	•••	•••	ļ	65055, Aclas
030263	Exhausc-pipe-bare (lefc)	•••	•••	•••	•••	1	GIS Mark II, GISCS, NISCS, 1968 GISCSR
031583	Exhaust-pipe-bare (left)					1	
033116	Exhaust-pipe-bare (left)		• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •	•••	i	
23+33	Exhaust-pipe-bare (right) la			• • • • • • • • • • • • • • • • • • • •		i	65055, Atlas
030266	Exhaust-pipe-bare (right)	***			•••	Ĺ	G15 Mark H, G15CS, N15CS, 1963
							GISCSR
031565	Exhaust-pipe-bare (right)		•••	• • •		Ī	G15CSR 1966-67
033118	Exhaust-pipe-bare (right)	177.	•••		• • •	- 1	
24020	Exhaust-pipe (left hand) sm	all bore	•••	***	***	!	1 65055, Atlas
24021	Exhaust-pipe (right hand) s	mali bore	***	***		- !	
034025	Exhaust-pipe (left hand)	◊	•••	•	***	1	PIIA
034026	Exhaust-pipe (right hand)	***	***		• • • •	1	
03-0-4	Exhaust-pipe clip	11-60	***	•-•	•••	2	
032246	Exhaust-pipe stays (right ar	-	•••	•••	***	2	2 GI5 Mark II, GISCSR
18092	Exhaust-pipe lock rings		•••	4	•••	2	A 1 1
T.2166	Exhaust-pipe lock-ring was		•••	•••	•••	2	
QQQ367 QQQ192	Exhaust-pipe bolts Exhaust-pipe bolt washers		•••	•••	•••	2	
000004	Exhaust-pipe bolt nuts			•••	•••	2	
033277	Tail pipes assembled		•••	•••	***	2	•
SILEN	CERS						
23768	Silencer (left hand)		•••	• • • •		Ī	65055, Atlas, G15C5, N15C5
23757	Silencer (right hand)	•••	•••	•	•••		65055. Atlas, GISCS, NISCS
029727	Silencer (left hand)		•••	•••	•••	j	
029725	Silencer (right hand)	•••	• • • •	***	• • •	1	011
033151	Silencers only		•••	•••	•••	1	DITA
034027 034028	Silencer (left hand) Silencer (right hand)		•••	***	•••	i	
034041	Silencer stays		•••			ż	
000363	Bolt for silencer stay			•••		2	
022083	Nut for silencer stay bolt		•••	,	• • • •	4	
E.3154	Silencer clamping bolts	***	•••	• • •	•••	2	
000349	Silencer clamping bolts		•••	•••	• • •	2	GIS Mark II, GISCSR
16255	Silencer clips		***	•••	•••	2	
025059	Silencer clips		• • • •	***	•••	2	
E.3231	Silencer clamping-bolt nuts		•••	•••	•••	2	
024558	Silencer clamping-bolt wash		•••	• • •	•	4	
000012	Silencer clamping-bolt wash		•••	•••	***	2	
25170	Silencer stays (right and lef	•	•••	•••	• - •	2 4	ACOCC A.L. CLCCC BUTCO
E.3135	Silencer-stay bolts	•••	•••	•	•••	2	ALANA I M ALAMAN DIA
025239	Silencer-stay bolts	•••	***	•••	•••	4	
18202 000011	Silencer-stay bolt washers Plain washers for clip bolt		•••	•••	•••	2	
000004	Clip-bolt nuts			***	•••	2	
000192	Silencer-stay-bolt spring wa		• • • • • • • • • • • • • • • • • • • •		•••	2	
000004	Silencer stay-bolt nuts	•••	•••	•••		2	GIS Mark II, GISCSR
025239	Silencer/frame-bracket bolt		•••	***		- 1	G15CSR 1966
000192	Spring washer for bolt	•••	***	• • •	•••	1	GISCSR 1966
000004	Bolt nut		•••	•••	•••	Ĭ	GISCSR 1966
22475	Silencer bolts	•••	• • •	•••	***		
18202	Silencer-bolc washers	•••	•••	***	***	2	n. i
000363	Silencer-stay bolts	•••	***	***	***	8	
000011 031589	Silencer stay-bolt spacers Silencer stay-bolt spacers		•••	•••	•••	2	
	•	***	•••			_	
CHAIN						_	
17835	Front-chain-76 link, 1 in. X		•••	•••	***	l	
022370	Front-chain-68 link, 1 in. x	-305 in.	•••	•••	•••	I	
022677	B 1-1. 6711 b 51						GISCSR, PII, PIIA
022874	Rear chain-97 link, & in. X		•••	***	***	İ	ALL except GI5 CSR GI5CSR
017376	Rear chain—98 link, 3 in. X	£ 1111	• • •	***	•••	•	
					1 1		

s. d.

Part No.		De	script	ion				Qt	γ.		Mode	els fitted to	0		Bin No.
CHAIN	IS—continued												,		
033156	Rear chain-100 lin	k, 1 in.	X	180 in.	•••			1	PII,	PIIA	•••		***	***	
18257	Contact-breaker chi					•••		1	ALL	•••	•••	•••	***	***	-
17806	Camshafe chain	•••	•••	•••	• • •	•••	***	1	ALL	***	***	***	•••	***	*** **** ********************
GEARB	OX FIXING P	ART	S.												
033152	Fixing bolt (top)			•••		***		1	P11,	PIIA			•••		
14367	Fixing bolt (top)	***	• • •	***	***	***		1		S, Atlas					
030234	Fixing bolt (top)	***	***	***	***	***	***	I	-	Mark 5CSR	11,	GISCS,		1202,	
15170	Fixing-bolt nut (top	)						1		S, Aclas					
000002	Fixing-bolt nut (top	)	***	•••		• • •	***	1		Mark			, N	15CS,	
000177	Fixing bolt washers	(100)						2		SCSR, Mark			N	ISCS	
000177	Tixing boil Hashers	(105)	***	•••	***	***	•••	^		5CSR	***			***	-
000009	Fixing-bolt washers		•••	•••	***				PII.		***		•••		***************************************
030250	Fixing-bolt spacer (	(40:	•••	***	***	•••	***	1	GIS	SCSR,	PII,	GISCS,			
16410	Pivot stud (bottom)		***	•••				1		S, Atlas					
024276	Pivot stud (bottom)		•••	•••		***		1	G15	Mark				15CS,	
077157	D: / ///							,		SCSR PIIA	•••		•••	•••	
000008	Pivot stud (bottom) Pivot-stud washers	***	•••		***	•••	•••	2		S, Atias	***	•••	•••	•••	-
000009	Pivot-stud washers	•••	•••	O	•••	• • • •		2	P11,	PIIA	***	***	***	•••	
041265	Pivoc-scud nuts	***	***	***	•••	• • •	•••			S, Atlas		ciscs		1505	
000002	Pivot-stud nuts	***	***	•••	•••	• • •	•••	1		Mark 5CSR.					
030250	Pivot-stud spacer	•••				•••	***	1	PII,	PIIA	***		•••	***	
16997	Gearbox adjuster as			***	***	***		ļ		S, Atlas		C15CC	***	1500	***************************************
023259	Gearbox adjuster be	olc .	***	•••	***	***	***	1	GIS	SCSR,	PII.	GISCS,			
E.3231	Adjuster nus				•••	***	***	2		S, Atlas			•••		
000004	Adjuster nut	***				•••	***	1				GISCS,	N	ISCS,	
022504	Adiuseas seaschard								GIS	SCSR,	PII,	GISCS,		ISCS	
022307	Adjuster crosshead	***	***	•••	•••	•••	•••	1		SCSR,					
000402	Crosshead balc		***		***	***		1				GISCS,			
010000	Crosshead-bolt wash							1		SCSR,		GISCS.			·
	Crossilesd-poil wasi	iei	•••	***	•••	***	***	•		SCSR.					
GEARB	OX SHELL														
040097	Shell with two bush	es and	studs		***	***	•••	1	Atlas	, 65055					
640413	Shell with two bush	es and	studs		***	***	***	1	G15	Mark	H,	GISCS,		1SC5,	
028534	Kickstart case (inner	-1						1		SCSR,			•••		
028535	Kickstart case (oute	*				•••		i	ALL				•••	***	
040030	Inner-case gasket		•••		•••			1	ALL		•••	•••	•••	•••	***************
040055 040138	Outer-cover gasket	•••	•••		***	•••	•••	1	ALL	***	***	•••	***	•••€	
000200	Drain plug Drain plug washer	•••	***	•••	***	•••	•••	i	ALL	•••	***	***	•••		
040137	Oil-level plug				•••	•••	•••	1	ALL			•••	***		
000203	Oil-level plug washe		***	***	***	•••	***	1	ALL	***	***	***	***	***	-
040058 040057	Inspection cover gas	ket	•••	•••	•••	***	***	i	ALL	•••	•••	•••	•••	•••	
000450	Inspection-cover scr		***	•••			•••	2	ALL	•••			•••	•••	****************
000577	Kickstart-case dowe		***	***	***	***	***	2	ALL	***	•••	***	•••	•••	
040064 000271	Kickstart-case studs Kickstart-case studs			•••	•••	•••		2 5	ALL		•••	•••	•••	•••	
000004	Kickstart-case stud r							7	ALL		***	***	•••	***	-
000577	Kickstart-cover dow		•••	•••	***	•••	***	2	ALL	•••	•••	•••	•••	•••	***************************************
000482	Kickstart-cover scre	ws :	***	•••	•••	•••	***	5	ALL	***	***	•••	•••	***	
GEARS	AND SHAFTS														
10001		***	***	•••	***			1	ALL	•••		•••	•••	•••	
240025	Gearbox layshaft		***	***	•••	***	•••	1	ALL	***	•••	•••	•••	***	***************************************
040422 040026	Main gear with bush Mainshaft first gear	es	***		***	• • • • • • • • • • • • • • • • • • • •	•••	1	ALL	•••		•••	•••	***	
040418	Mainshaft second gea							1	ALL	•••		•••		***	-
140012	Mainshaft third gear	***	•••	***	•••	***	•••	1	ALL	•••	•••	***	•••	***	
040115	Layshaft first gear Layshaft second gear	•••	•••	***	•••	•••	•••	1	ALL	•••	***	•••	•••	***	
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Januare account Bear			***	***		•••								,

Part No.		De	scriptia	n				Qty	·.		Model	s fitted	l (o		Bin No.	£ s.
GEARS	AND SHAFT	S—con	itinued	ı												
040420	Layshaft third gea	٠		•	•••	***		1	ALL			***	•••			
040284	Layshaft top gear		***	•••	•••		***	i	ALL		•	***	***	•••		
040062	Main driving-gear		•••	***	• • • •	• • • •		2	ALL		• • •		•	•••		
040054	Mainshafe second		• • •	•••	•••	*-*	•••	Ţ	ALL	•••	•	•••		•••		
040047 040046	Layshaft third gear Layshaft first gear		• • • • • • • • • • • • • • • • • • • •	•••	•••		•	] j	ALL	•••		•	• • • • • • • • • • • • • • • • • • • •	***		
	OX BEARING			ALS				1	ALL							
040098 040099	Main-gear ball bea Mainshaic ball bear		ickstar	c cise	•	•••	• • • • • • • • • • • • • • • • • • • •	i	ALL	•••	•••	***	***	•		
040100	Layshaft ball beari	ng in she	eii	• • •	• • • •	,	•••	1	ALL	• • • •	***		***	•••	*	
040055	Camplate/quadran	t bushes	in she		•••	• • •	• • •	2	ALL	***	•••		***			
040132	Main-gear bearing			221	•••	***	•••	1	ALL	•••	***	***	•••	•••		
040129 040473	Quadrant and cam Kickstart-spindle 1				•••	•••	•••	i	ALL		•	•••	•••	***		
040061	Footchange-spindle	e bush ir	kicks	ara cas		•••		Ì	ALL	•••	***	.***				
040472	Kickstart-spindle l	bush in c	OVEL	• • •	•••	•••	***	I	ALL	•••	***	•••	• • • •	•••		
040063	Footchange-spindle				•••	***	•••	j 1	ALL	•••	•••	***	•••	•	Δ.	
040079	Ratchet-spindle 'C Footchange spindle		 wlanes	?o.	rioss	•••	•••	2	ALL	•••		•••	• • • • • • • • • • • • • • • • • • • •	•••		
040006 040005	Kickstart 'O' ring	pa					• • • •	î	ALL			•••	•••	• • • • • • • • • • • • • • • • • • • •		
040036	Camplate-plunger	bush	•••	•••	•••	•••	***	1	ALL	•••	***	•	*	• • • •		
GEARB	OX SPROCK	ET														
040480	Gearbox sprocket	(final dr	ive)—I	9 teet	n ≩in.	火素的	n	j	6505	S, Atl	as, G150	CSR, P	II. PLI	Α		
040451	Gearbox sprocket	(final dr	ive}—l	7 teech	ı 🛔 in.	以景化	7	1	G15		II, G150			•••		
040131	Gearbox-sprocket						•••	1	ALL	***	•••	•	•	•••	* ******	
040070 040075	Gearbox-sprocket Gearbox-sprocket						•••	i	ALL	•••	•	***	***	•••		
000450	Gearbox-sprocket	lock-wa	sher sc	rew		•••	•••	i	ALL	***	•••	•••		•••		
GEAR	CHANGE															
040018	Cam-place only	•••	••• .	• • •		•••		1	ALL	•••	• • •		•			
040578	Cam-place only	•••	•••		•••	•••	***	Ī			966-67	•				
040015	Spindle only	• • •	***	•••	•••	•••	•••	1	ALL	***	•••	***	•	•••		
040109	Quadrant assembly Washer for cam-pl	y	 auadea	nr soin	dle	•••	•••	2	ALL	•••	•••	•	•••			
040174 040136	Screws for cam-pla	ice and q	uadran	t spine	lle		•••	2	ALL	•••		•••	•••	***		
040022	Selector forks	•••		• • •	***	• • •	•	2	ALL		***	***	•••	•••	****	
040035	Selector-fork shaft		•••	***	***	•	•••	1	ALL	***	•	•	•••	•••		
040111 040078	Ratchet-gear assem Knuckle-pin roller		•••	•••	•••	•••	•••	i	ALL	***	•••	***	•••	•		
040038	Gear-change pawl		•••	,	•••		***	i	ALL	•••	***	***	***	•••		
040110	Pawl-carrier assem	bly	•••	• • • •		***	•••	1	ALL	•••	•••	•	***			
040002	Pawl carrier only	•••	• • •	•••	• • •	• • •	•••	I	ALL	•••	***	***	•••	•••		
040067 040024	Pawl-carrier pin	•••	•••	•••	474	•••	•••	1	ALL	•••	•••	•••	•••	•••	***************************************	
040049	Footchange pawl Circlip for pawl	•	• · · ·	•••	• • • •		•••	į	ALL	***		•••	•••	•••		
040066	Ratchet spindle	•••	***	***	•••		•••	l	ALL	•••	•••	•••	•••	• • •		
040479	Gear-change retur		***	•••	•••	• • •	***	!	ALL	***	•••	***		***		
040135	Recurn-spring wash		•••	***	• • •	•	***	1	ALL	•		•••	•••	•••		
040052- 041400	Gear-change stop p		•••	***	***		•••	ż	ALL		***	•••				. •
014117	Stop-plate screw sp	pring wa	_		• • •		•••	2	ALL	***	•••	***		• • •	-	
041311	Footchange pedal	•••		***	•••	***	•••	1	ALL	co lo	4	****	•••			
040632	Footchange pedal		• • •	***	•••	•••	***	+	GISC ALL			***	***	***	with the second expension of the second	
040086 040105	Footchange-pedal r			•••	• • •	***	• • • •	i	ALL	•••	•••	•••	•••	***		
045062	Footchange pedal b			•	•••	***	•••	Ī	ALL	•••	•••	•••	***		******************	
200000	Footchange-pedal b		•••	•••	• • •	•••	•••	!	ALL	•••	•••	***	***	***		
040051	Gear indicator	***	***	•••	•••	•••	•••	1	ALL ALL	***	•	***	***	***		
040137 000012	Gear-indicator scre Indicator-screw wa				•••	•••	• • • •	į	ALL	•••	•••	•••	***	•••		
040034	Cam-place plunger	***	•••		•••		•••	í	ALL	•••	•••	•••	414	***		
040442	Cam-plate plunger	spring	***	***	•••	•••	•••	I	ALL	•••	•		•	•••	79-14 - 17-94 - 49-177 - 41	
CLUTC	Н															
040478	Clutch complete		• • •	•••	•••	•••	•••		ALL	<i>:</i>	***	•••	•••	•••	<b>49:300</b> ***********************************	
040366	Clutch centre	•••	•••	•••	***	•••	•••		ALL	***	•••	••••	•••	•••		
040584	Clutch back plate	•••	•••	•••	•••	•••	•••	ı	ALL		•••	***	•••	***		
							12									

Part No.	Descrip	tion				Q	γ.	Mode	ls fitted	to		Bin No.
CLUT	CH—continued											
040351	Race plate		•••	•••	-	1	ALL					
040367	Roller cage		***	•••		i	ALL			•••	***	
000075	Clutch rollers		•••	•••					•••	•••	***	\$4. 141900.cepandribe order 1.4
040359	Clutch sprocket			•••			ALL		•••		***	**************************************
043443	Shock-absorber centre			***			ALL		•••		***	** ***********************************
043445	Shock-absorber centre cover p		•••		•••	i	ALL		***		***	
025552	Cover-place screws	***				3	ALL		***			Martin and the particular of t
040386	Centre rubbers-large		•••	***		-	ALL					
040387	Centre rubbers-small					-	ALL		•••	***	•••	
043191	Plain-steel clutch places				•••	-	ALL		•••	***		-
043192	Double-sided friction plates	***				-	PII, PII		***	•••		
043193	Clutch friction plate-single sid	ded		***		1	ALL					
043362	Pressure place-bare	***		•••		1	ALL		***	***		-
043441	Clutch spring studs	***		***		3	ALL					-
043442	Clutch friction plates-double	sided				5	ALL exc	ept PIII	Alle	***	***	
040358	Clutch springs	***		***			ALL		***	***	***	
040388	Clutch-spring cups			***			ALL		***			-
040389	Clutch-spring-adjustment nuts		***	***			ALL		•••	***	***	
040356	Clutch stud-to-centre nuts		***		***	3	ALL			***	•••	-
040360	Adjuster pressure place		***	• • •		1	ALL		***		***	**************
040376	Adjuster lock nut	***		***		1	ALL					-
040373	Clutch retaining nut	***		***			ALL		***		***	-
040374	Clutch nut lock washer	***		•••	• • •	1	ALL		***		•••	-
CLUT	CH OPERATING PART	o 5										
040607	Charles	_				-1	ALL					
040029		•••	•••	***	***	i			***	***	***	
040059	Operating lever	***	•••	***	•••					•••	•••	-
040003	Operating-lever body Operating body locking ring	***	***	•••		i			•	•••	•••	
040031		***	•••		•••	- 3			***	•••	•••	***************************************
040060	6	•••		•••	•••				•••	•••	•••	
040065	5 'II I			***	•••				•••		***	
000457	Roller screw	•••	•••	•••		i	ALL		***		***	
011846	Roller screw nut	•••	•••	•••	•••	1	ALL	• • • • •	***		***	
		•	•••	•••	•••		7,22		•••	***	***	grant Paper Mark Street, or springer of
KICKS	and the second s											
040477	Kickstart axle with bush	***	***	***		1	ALL		***	***		
040032	Kickstart axle bush	***	***	***	***	1	ALL	***	•••	***	***	
040017	Axle pawi	***	***	***	•••		ALL	***	***	***	***	
040033	Pawl pin	***	***		***	1	ALL	***	***	***	***	
040044	Pawl spring	***		***	***	1	ALL	***	***	***	•••	
040069	Pawl plunger	***	***	***	***	1	ALL	•••	•••	***	***	
040042	Axle stop	***	•••	***	•••	1	ALL	***	•••		***	
040071	Axle cam		***	***	***		ALL		***	***	•••	4
040041	Axle-cam rivet	•••	***	***		1	ALL	***	***	***	•••	green and a second
040474	Axle-stop rivet	•••	•••	***		1	ALL	***	***		***	
040023	Mainshaft nut-kickstart end	***	•••	***	***	i	ALL	A	•••	***	***	*****
040636	Kickstart-crankcase assembly		***	***	•••	1	PII, PII		***	***	***	-
040637	Kickstart crank (folding)	- ***	•••	•••	***	1	PII, PII.		•••	•••	***	-
040101	Kickstart crank with integral pi		•••	•••	***	1	650		nii A	***	***	•
040434	Kickstart-crank assembly—foldi		•••	•••	•••	1	ALL exce		-	•••	•••	-
040429	Kickstart-crank only-folding ty		***	•••	•••	1	ALL exce			1000	DIL	-
033218	Kickstart pedal rubber	***	***	•••	•••	1	ALL exc	•		-	PII,	
040421	Folding amply pin podal pin				,		PIIA	(5055	***	***	***	-
040431	Folding crank-pin pedal pin	***	•••	***	•••		ALL exce			•••	***	
040432	Pedal-pin domed nut	•••	•••	***	***	1	ALL exce	•	***	***	•••	
040433	Pedal-pin spring washer	***	***	•••	•••	1	ALL		•••	•••	***	
010000	Pedal-pin plain washer	***	***	•••	•••	1	ALL		***	***	•••	
040102	Crank-to-axie clamping bolt	***	***	•••	***	1	ALL		•••			
040475	Kickstart-crank return spring	***	***	•••	***	1	ALL	•••	•••	•••	•••	•
FRAME												
034014	Frame	***	***	***	***	1	PIIA	***		•••	***	
033125	Frame	***	•••	***		1	PII 1967	•••				
000304	Rear engine-lug studs (top)	***	•••			2	PII, PIIA					
014119	Rear engine-lug top-stud washer					4	PII, PIIA		***	•••		
000003	Rear engine-lug top stud nuts		•••			4	PII, PIIA		•••	***	•••	
33157	Rear engine-lug stud spacers		•••			2	PII, PIIA		***	•••		-
33154	Engine-to-frame stud (bottom)			***		ī	PII, PIIA		***	***	***	
31589	Front engine-stud spacer	•••	•••	***		1	PII, PIIA		•••	•••	•••	
110000	Engine-to-frame bottom-stud wa		•••		•••		PII, PIIA		•••	***	•••	
							-					

Part No.	Descri	pajon	<u>.</u>			Qty.	Models	fitted t	ە 		Bin No.	£ s.
FRAME	—continued											
000004	Engine-to-frame bottom-stud	uncs	•••		•	2 PII, PIIA		•••	•	•••	* ·V···	
012620	Handlebar-lug race		***	•••	***	I PH, PHA	•••	**-	•••	•••		
000206	Frame heading top and botton		***	• • •	•••	2 PII. PIIA I PII. PIIA	•••	•	•••	•••		
000S05 000072	Fork-crown race Sceering-head balls		• • • • • • • • • • • • • • • • • • • •	***	set .		***	***	•	•••		252
25301	Frame only		•••	•••	•••	1 65055, Ad	ıs, 1966-	67		***		
18940	Transfer-regiscered design	• • • • • • • • • • • • • • • • • • • •	***	•••		1 650SS, Atl		•••	•••			
25302	Gusset-plate cover		***	•••		L 650SS, Atl		***	•••	***		
12342	Gusset-place bolt (upper)		***	***		1 65055, Ad		•••	***	***		
000012	Gusset-plate bolt washers		*	•••	•••	2 650SS, Aci		•••	•••	• • •		
25502 000806	Frame			***	•••	1 650SS, Ad 1 PH, PHA		•••	•••	•••		
000303	Rear engine lug stud Rear engine lug stud nut		•	•••	•••	I PII, PUA	•••	***	• • • • • • • • • • • • • • • • • • • •	•		
E.3229	Gusset-place bolt nut			•••		1 650SS, Atl		***	***	•••		
21099	Distance tube (top rear)		• · •			I 65055, Ad	25	•••				
21134	Distance-tube stud		• • •	***	•••	1 65055, Atl			***	• • •		
010550	Distance-tube stud washers			•••	•••	4 65055, Ad		•••	•••	•••		
E.3224	Distance-tube stud nuts	٠. ···	***	•••	***	2 65055, Acl	35	11.4	•••	•••		
030097	Frame ball races (top and boss	::m)	***	• • •	***	2 ALL excep 1 ALL excep	PII, P	114	•••	•		
03C09S 0CC021	Crown ball races (top and bot Sceering-head balls		•••	***	***	36 ALL exces			•••	***		se:
17429	Sceering-head balls Ball-race washers			***	•••	2 ALL excep			•••			
15628	Bearing dust cover			•••	•••	I ALL exces			•••			
030211	Front frame only					I ALL exces	£ 65055.	Aclas.		AHS		
000306	Rear engine-lug stud (top)			•••	***	I GIS Mark			•••	•••		
22610	Rear engine-lug stud (top)		•••	• • •	•••	I GISCS, N			200		4.4-2-100-00-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-	
000306	Rear engine-jug stud (boccom)		•••	•••	•••	1 ALL excep				FHA		
014119	Rear engine-lug-stud washers	•••		•••	•••	3 ALL excep 4 GIS Mark			•••	***		
000003	Rear engine-lug stud nuts Rear engine-lug stud nuts		•	•••		2 G15CS, N		5C58	•••	***	March - 100 - 10 5 1 7 1400	
E.3224	Rear engine-lug stud nuts			***	,	2 GISCS, N			•••			
026161	Rail junction-lug stud			***		I ALL exces	£ 650\$5,	Atlas.	FII.		4-11 to 1947 min	
000010	Rail junction-stud washers		•••		***	2 All excep						
000003	Rail junction-stud nuts		• • •	***	•••	2 ALL exces	65055,	Atlas.	PII.	FHA		
023250	Seat-lug stud		47-	• • • •	•••	I GIS Mark		***	•	•••		
026262	Sear-lug stud	• • • • • • • • • • • • • • • • • • • •	• • •	***	•••	I GISCS, N			•••	•••		
016873	Seat-lug stud washers			•••	•••	2 GIS Mark 2 GISCS, N		15CSB	•••	• • • •		
000176	Seat-lug stud washers		•••	•••	•••	2 ALL exces			PII	PULA		
030315	Rear frame loop			•••	•••	I GIS Mark					Pari 1 -1671 1.41 11114	
0103.1						G15CS8		***				
031603	Rear frame loop			•••	***	I GISCSR I	966-67	***				
032266	Frame-loop stud (bottom)		•	***	***	1 ALL excep					4-H-104	
029833	Frame-loop stud spacer	• • • • • • • • • • • • • • • • • • • •	•••	***		I ALL exces				PHA		
000009	Frame-loop stud washer		•••	•••	***	I GIS Mark 2 GISCSR			C2	• • •		
000009	Frame-loop stud washers Frame-loop stud nut			•••	•••	I GIS Mark	H 6150	< N15	C53	•		
000002 000002	Frame-loop stud nut Frame-loop stud nuts	• • • • • • • • • • • • • • • • • • • •	•••	•••	•••	2 GISCSR	., 0150					
000002	Transcripop stad field		•••	***	•••	2 0,702	, ,	•••	***	•··	<b>2</b> 112.11	
SWING	ING ARM											
22586	Swinging arm only		•	•••	•••	1 650SS, Atl	25	***	•••			
20083	Silent bloc bearing			•••	•••	1 65055, Atl		•••	•-•	• • • •		
18578	Bearing spacer tube		***	•••	•••	1 65055, Atl		***	•••	•••		
15894	Swinging-arm rod		•••	•••	•••	1 65055, Atl		***	•••	***		
800000	Swinging-arm rod washers		•	•••	•••	2 650SS, Atl		***	***	•••		
15356	Swinging-arm rod nuts		•••	•••		2 65055, Atl 2 65055, Atl		•••	***	***		
19264 E.3229	Rear-wheel adjusters Rear-wheel adjuster nuts		•••	***	***	2 650SS, Atl			•••	***		
030001	Swinging arm only			• • • •	***	1 ALL exces						
010096	Bearing end cap (left hand)				•••	I ALL excep						
010095	Bearing end cap (right hand)		• • •	•••	•••	I ALL excep						
000485	Oil-screw plug		***	***	•••	1 ALL excep						
000203	Fibre washer for oil-plug scre-		•••	•••	•••	I All excep						
010098	Paper gasket for bearing-end			*** .	***	1 ALL excep					* 1	
010094 012472	Bearing spoke Bearing-spoke nipple			***	***	ALL excep						
010093	Felc washers for bearing end of		•••	•••	***	2 All excep						
010116	Bearing tube	•	***		***	I ALL excep						
022879	Bearing-tube cotter pin		•••	•••	• • •	I ALL exces	e 650SS,	Atlas.	PII.	PIIA		
014117	Shakeproof-washer for cotter		• • • •	• • •	•••	1 ALL exces						
000004	Cotter-pin nut		• • •	• • •	•••	I ALL excep						
014746	Sleeve assemblies-bushed		•	•••	•	2 ALL except 2 650SS, Atl		Atlas.		riiA		
19264	Rear-wheel adjusters	• •••	•••	•••	. ***	~ 03033, AII	a	•	•••	•••		

Part No.		Des	cription					Qty	γ.	Models	fitted	to		Bin No.	,
SWIN	IGING ARM—con	tinued	ł												
030510	Rear-wheel adjusters	2	***		•••	***	•••	2	GIS Mark	li	***	***		-	
030500	Rear-wheel adjusters		***	• • •		***	•••	2	GISCS, NI		15CSR	***	***	-	
029245	Rear-wheel adjuster		•••	***	•••	***	***	. 2	ALL excep	t PII	***		***	Brand 1 1 10 10 10 4	
033053	Swinging arm		***	***	***	***	•••	1	PII	•••	***	***	***	****************	
032183	Swinging-arm bearin		•••	•••	•••	•••	•••	4	PII, PIIA	***	•••		•••		
000176	Spindle washers	<b>C</b>	•••		•••		•••	2	PII, PIIA	•••	•••	***	•••		
000292	-Spindle nuts					***	•••	2	PII, PIIA	•••	•••	•••	***		
032196	Bearing-spindle tube			•••	***		•••	1	PII, PIIA		•••				
032097	Rear-chain adjusters				•••			2	PII, PIIA	***	•••				
014734	Rear-chain adjuster i	nuts			•••	***	• • •	2	PII, PIIA	***	***		•••		
034031	Swinging arm	•••	•••	•••	***	•••	***	1	PIIA	•••	***	•••	***		
REAR	SUSPENSION L	רואנ	ΓS												
24036	Rear-suspension unit	2.2	***		***		***	2	65055, Acla	2			***		
043312	Rear-suspension-unit					***		2	65055, Atla			***	• • •	********	
023372	Rear-suspension-unit			CZL	•••	***	***	2	65055, Acla		•••		***	April 1 0 00 0000 00 0 10	
000010	Rear-suspension-unit			***	•••	•••	***	2	65055, Atla		***	•••	• • • •		
E.3224	Top-bolt washers Top-bolt nuts		***	***	• • • •	***	•••	2	65055, Atla 65055, Atla		•••	•••	•		
22655	Rear-suspension-unit		m holt			***	•••	2	650SS, Atla		•••	• • • •			
11796	Bottom-bolt washers					•••	•••	4	65055, Acla		***		•••		
E.3223	Bottom-bolt nuts		O		•••	***	•••	2	650SS, Acla		***	•••	• • • •		
029612	Rear-suspension unit	cs .	•••	***	•••			2	GIS Mark	I	***			-	
030248	Rear-suspension unit		•••	***	***	***	***	2	GISCS, NI	SCS, PI	I, PII.	Α	•••		
031578	Rear-suspension unit		***	***	***	***	***	2	GISCSR	***	***		***	-	
029786 029787	Rear-suspension-unit				•••	***	•••	2	GIS Mark		•••	***			
018648	Rear-suspension-unit				***	***	•••	2	GIS Mark	1	•••	•••	***	***** *******	
016359	Rear-suspension-unit			•••	•••		•••	2	GISCS, NI		•••	•••			
029627	Rear-suspension-unit				***	•••	•••	2	GISCSR		***	•••			
025248	Rear-suspension-unit			•••	•••	***	•••	2	PII, PIIA		•••	•••			
010000	Top-bolt washers	***	***	***	***	***	***	2	GIS Mark		CS, G		, PII,		
23298	Top-bolt washers							4	GISCSR	***	***	•••	•••		
016712	Top-bolt sleeve nuts	***	•••	•••	•••	***	***	2	GIS Mark		•••	***	***		
000003	Top-bolt nuts		•••					2	GISCS, NI						
029627	Rear-suspension-unit			s	•••		•••	2	ALL except						
010000	Bottom-bolt washers	5	•••	•••				4	GIS Mark	I	•••				
010000	Bottom-bolt washers		***	•••	***		•••	2	GISCS, NI			***			
22636 000003	Bottom-bolt washers Bottom-bolt nuts		***	•••	***	•••	•••	2	GISCS, NI						
000003	Bottom-Boit Ruts	•••	•••	***	•••	•••	***	7	ALL excep	. 03033,	ACIAS	***	•••	-	
	RE STAND							o.							
17175	Stand assembled	• • •	•••	***	•••	***	•••	1	65055	***	***	•	***		
23882 16763	Stand assembled Centre-stand bolts	•••	***	***	***	•••	***	1	Atlas 650SS, Atla	***	•••	0	***		
16764	Centre-stand bolt nu		•••	***	•••	•••	•••	2	65055, Atla	2	***	***	•••		
24074	Return spring for sta		***	•••	•••	***	•••	ī	650SS, Atla		•••	•••	***		
24078	Stand spring clip		***	***		•••		1	650SS, Atla		•••	•••		-	
17591	· Stand rubber stop	***	•••				***	1	650SS, Atla			•••		-	
E.5278	Stand rubber stop pi	n	***			***	•••	1	650SS, Atla			***		-	
24151	Spring-anchor stud		***	***	***	***		1	650SS, Atla		•••	***	***	***************************************	
000011	Anchor-stud washer		•••	•••	***	•••	•••	1	650SS, Atla		***	•••	•••	***************************************	
E.5456 E.3223	Anchor-stud washer Anchor-stud nut		•••	***	•••	***	•••	1	65055, Atla		•••	• • • •	•••		
029490	Stand assembled	•••	•••		•••	•••	•••	i	650SS, Atla GIS Mark I		•••	•••	•••		
032253	Stand assembled		•••		•••			i	GISCS, NI		•••	•••	***		
031606	Stand assembled		*** .		•••	•••	•••	İ	GISCSR		•••		•••		
014629	Centre-stand rod				***		•••	1	ALL except				PILA		
000009	Centre-stand-rod wa	shers		•••			***	2	ALL except					-	
000002	Centre-stand rod nut		,	•••	***	•••	•••		ALL except					-	
014626	Centre-stand bushes		•••	•••	***	***	•••	2	ALL except					MINIMUM 113 1114 7011	
014630	Centre-stand spacer		•••	•••	***	•••	•••	i	ALL except					-	
029488	Stand return spring Stand stop spring pla		•••	•••	•••	•••	•••	1	ALL except	65055	Atlac	PII	AIIA		
012565		•••			•••	•••		2	ALL except					P	
000039	Scop-spring-bolt was				•••	•••			ALL except						
PROP	STAND														
18750	Prop-stand leg	***	•••	•••	•••		***	1	65055	***	***		•••		
034048	Prop-stand leg	***	•••		•••	***	***	1	Atlas, Pl1,		***				
25175		***		•••		•••	•••	1							

Part No.		Descriptio	n				Qt	γ.	Mede	is fitted	to		Bin No.
PROP	STAND—continued											-	
034070	Prop-stand leg		•	• • • •	•••		ı	1968 Ad	ıs. PIIA	•			
033278	Fulcrum pin	•••	•••		•	•••	1	1968 Ad			•••	•••	
033279	Fulcrum pin circlip	•••	***	•••	•••	• • • • • • • • • • • • • • • • • • • •	!	1968 Ad		***	***	•••	
033158	Boit	***	• • •	•••	•••	***	1	PIIA 650\$5, A		Pila	***	•••	
25176 25179	Prop-stand leg back lug Lug and spring stud	***	***	•••	***	***	i	650SS. A			•	***	
11824	Stud nut	***		•••	•••	•••	Ī	65055. A			• • • •		
033158	Prop stand clip-lug bolt	***	• • •	***	•••	***	- !	P11, P11.		***	• • • •	•	
16374	Lug stud	***	•••	•••	•••	•••	į	650SS. A		•••	•••	***	***************************************
E.3224 16174	Lug-stud nut	***	•••	•••	•	***	ŀ	65055, A 1966-67		elac Pi		•••	
16176	Fulcrum pin Prop-stand return spring	•••	•••	•••	•••	• • • • • • • • • • • • • • • • • • • •	i	65055, A				•••	
014719	Prop-stand leg		•••	•••		•••	!	ALL exc	ep: 650S	S, Atlas			
014713	Prop-stand leg pivot bol		•••	•	•••	***	I	ALL exc					
014139	Pivot-belt nut	•••	•••	•••	***	•••	1	ALL exc					
000014	Prop-stand leg return sp	rine	***	• • • • • • • • • • • • • • • • • • • •	***	•••	i	ALL exc					
011201	Trop-state reg retern sp	5	•••	• • • •	***	•••	•			-,	, ,		
FOOT	RESTS	O.											
191101	Footrest hanger assemble		3 a d\			•••	1	650SS, A	elas	•••			
18149A 18772	Footrest hanger assemble				•••	•••		65055, A	_	***	• • • •	• • • • • • • • • • • • • • • • • • • •	
14366	Footrest rod	***	•••	• • • •		• • •	1	65055, A		• • • •	•	•••	****
15641	Footrest-rod spacer	•••	• • •		***	• • •	Ī	6505S, A		•	• • •	***	
E.5377	Footrest-rod washer	***	• • •	•••	•	***	- [	650\$5, A		• • • •	•••	***	
E.3220 E.3238	Footrest-rod nut-domed Footrest-rod nut-plain	•••	•••	•••	•••	•••	1	65055, A		•••	***	•••	
18268	Serrated end on engine ;						i	650SS, A		***		***	
20936	Footrest tube assembled		***	•	•••	• • • •	1	650SS. A	tlas	***	***	•••	
042055	Footrest-tube felt washe.		•••	•••	• • •	•••	I	63055, A			cn		
018601	Footrest arm (left and rig	ghe hand	•••	•••	•••	***	2	GIS Mar GIS Mar				1963	
		***	•••	•••	•••	***		G13C3	R	•••	•••		
000009	Footrest-rad washers	•••	***	•	•••	•••	2	G15C5	R	GISC	• • • • • • • • • • • • • • • • • • • •	13CS, 15CS,	
000002	Footrest-rod nuts	•••	•••	•	•	•	2	GISCS			۰		
030236	Outer spacer (left hand)		•••	•••	•••	•••	ŀ	GIS Mar			• • •		
010911	Outer spacer (right hand	-	•••	•••	***	•	1	GIS Mar GIS Mar	k II, G 13 V II G I	CSK CSR 1	968 0	:1505	
030237 030474	Engine-plates spacer Footrest hanger assemble	ed (left h	and)	• • • •	•••	•••	i	G15C5. N			,,,,,		
030475	Footrest hanger assemble				•••	***	i	G15CS, N		•••	•	•••	
029859	Footrest folding arms		'	***			2	GISCS, N			•••	•••	
011599	Footrest-arm bolts	***	•••	***	***	• • •	2	GISCS, N			***	•••	
000073 030235	Footrest-arm bolt nuts Footrest outer spacers		•••	•••	•••	•••	2	G15CS, N		117		•••	
030233	Footrest yokes (left and		d)		•••	•••	ź	GISCSR			***	•••	
18254	Footrest folding arms	•		•••	• • •		2	G15C5R		• • •		***	-
16248	Footrest arm bolts	• • •	•••	•••	• • • •	***	2	GISCSR		•••	***	***	
16250	Footrest-arm bolt washer		***	•••	•••	•••	2	G15CSR G15CSR		***	***	***	
18202 16247	Footrest-arm bolt washer Footrest-arm bolt nuts	· · · · · · ·	•••	•••	•	•••	2	GISCSR		•••	•	•••	
017015	Footrest rod	***		•	•••		ī	G15CSR		***	•••	•••	
010000	Footrest-yoke washers		•••	•••	•		2	GISCSR		•••		•••	
000003	Footrest-yoke nuts	•••	•••	***	***	•••	2	GISCSR			1500	011	
19983	Footrest rubbers	•••	•••	***	.***	•••	2	ALL exc	ept G12	3C3, 14	15C5,	P11,	
033092	Footrest assembled (left		•••	•••	•	***	I	P11, P114		***	•••	***	
033096 033098	Footrest assembled (right Footrest-support spacer (		١	•••	•••	•	1	PII, PIIA		•••	***	***	
000010	Footrest-support washer	ieic irano	,			•••	i	PII, PIIA		***	***	•••	***************************************
000003	Footrest-support nut	•••	•••		•••		i	PII, PIIA		***	•••		-
032206	Footrest-mounting studs		•••	•••	•••	•••	2	PII, PLIA		***	***	•	
016213	Footrest-mounting-study		•••	•••	• • •	***	4	PII, PIIA		***	•••	•••	
032305 03191 <b>3</b>	Footrest-mounting-stud n Footrest-support bolt (rig			•••	• • • •	***	i	PII, PIIA		•••	***	•••	
000010	Footrest support-bolt wa		•••	•••	•••	•••	i	PII, PIIA		•••	•••	•••	
029859	Footrest arms (folding)			•••	•••	•••	2	PII, PILA	•	•••	•••	•••	
011599	Footrest-arm bolts	•••	•-•	•••		•••	2	Pil, PilA		***	•••	•••	pairs examine certain or
000073 03309 <b>7</b>	Footrest-arm bolt nuts Footrest-support stud (rig	ht hand)	•••	•••	•••	• • • • • • • • • • • • • • • • • • • •	í	PII, PIIA PII, PIIA		•••	•••	•••	
000010	Footrest-support stud wa		***		•••	•••	i	PII, PIIA	***	•••	***	•••	
00S1E0	Footrest-support stud nu			•••	***	•••	ļ	P11, P11A		***	*	***	
033211	Footrest stud spacer	***			***	• • •	1	PII, PIIA	• •••			***	

#### FRONT FORKS

031642	Forks complete			***	•••		***	1	650SS, Aclas
030555	Forks complete	•••		***			•••	i	GIS Mark II
032321	Forks complete							1	GISCS, NISCS
031644	Forks complete							1 -	GI5CSR
030031	Fork slider (left hand	1)	***	•••	•••			1	ALL except PII, PIIA
030030	Fork slider (right has	nd)			***	•••		1	ALL except PII, PIIA
000485	Slider drain plugs				***	•••		2	ALL
000203	Drain-plug fibre was	hers						2	ALL
16664	Slider pinch stud		***		***	• • •		1	ALL except PII, PIIA
E.3231	Slider pinch-stud nut		***	•••	• • •			1	ALL except PII, PIIA
20253	Damper tubes	•••	•••		•••			2	650SS, Atlas
030037	Damper tubes				***	• • •		2	ALL except 650SS, Aclas, PII, PIIA
12801	Damper rods		***	***	***		***	2	ALL except PII, PIIA
E.3224A	Damper-rod lock nu		***	***	***	*** .		2	ALL except PII, PIIA
14275	Damper-tube anchor		***	***	***	•••		2	ALL except PII, PIIA
T.1009	Damper-tube anchor				• • •	•••	***	2	ALL except PII, PIIA
T.814	Damper-tube anchor		ashers	***	•••	***		2	ALL except PII, PIIA
14119	Damper-valve stop p		***	•••	***	•••	•••	2	ALL except PII, PIIA
[4] [8B	Damper valves	***	•••	***	•••	***	•••	2	ALL except PII, PIIA
030584	Damper-valve seat	***	•••	*** .	***	•••	***	2	ALL except PII, PIIA
€.3231	Damper-valve sea 7n		***	***	•••	•••	•••	2	ALL except PII, PIIA
14605	Damper-tube caps	•••	***	***	***	•••	•••	2	ALL except PII, PIIA
18482 030036	Main inner tubes	•••	•••	***	***	***	***	2	650SS, Atlas
0.000	Main inner tubes	h la.		•••	***	***		2	ALL except 650SS, Atlas, PII, PIIA
16998 T.320	Fork-inner-tube top		•••	• • •	•••	***	•••	2	ALL except PII, PIIA
	Inner-tube top-bolt	washers	i	•••	***	•••	•••	2	ALL except PII, PIIA
T.1048	Main-tube bushes	•••	***		***	***	•••	2	ALL except PII, PIIA
14298	Main-tube bush circl	ps	•••	***	***	•••	•••	2	ALL except PII, PIIA
T.1055 17713	Fork-end bushes	•••	•••	***	***	•••	***	2	ALL except PII, PIIA
T.1049	Oil seals	***	•••	***	***	•••	•••	2	ALL except PII, PIIA
and the same of th	Oil-seal washers	***	***	***	***	***	•••	2	ALL except PII, PIIA
030454	Slider extensions	***	***	***	***	•••	***	2	650SS, Aclas
18313	Slider extensions	•••	•••	• • •	***		***	2	ALL except 650SS, Atlas, PII, PIIA
25003	Main springs	 hh	•••	***	***	***	•••	2	ALL except PII, PIIA
19307	Fork spring locating Bottom cover tubes			***	•••	***	***	2	ALL except PII, PIIA
030531	Bottom cover tubes		***	• • •	•••	•••	•••	2	650SS, Aclas
T.831	Bottom cover tubes		•••	***	***	•••	•••	2	ALL except 650SS, Atlas, PII, PIIA
T.702	Cover-tube washer s			***	***	•••	•••	6	ALL except PII, PIIA
030041				***	***	•••	•••	2	ALL except PII, PIIA
026725	Crown and head ster		***	•••	• • •		***	1	PII, PIIA
.010715	Head stem circlip		•••	***	***	***	•••	í	
016947	H/Bar clip allen scre		•••	•••	•••	***	***	3	PII, PIIA
012620	H/bar lug ball race				•••	•••		1	DIL DILA
030026	Crown-and-column a					•••	•••	i	ALL except GISCS, NISCS, PII,
			,	•••	•••	•••	•••	•	PIIA
030499	Crown-and-column a	ssembl	Y		***			ı	GISCS, NISCS
16164	Fork-crown pinch sti					•••		2	ALL except PII, PIIA
16187	Pinch-stud nuts							2	ALL except PII, PIIA
15628	Top-bearing cover				***			ī	ALL except PII, PIIA
15630	Steering-column bot							1	ALL except PII, PIIA
031544	Top cover tube (left			***		•••	•••	1	ALL except PII, PIIA
031545	Top cover tube (righ			***		•••		1	ALL except PII, PIIA
T.597	Top cover-tube rubb							2	ALL except PII, PIIA
030027	Head clip					•••		1	ALL except PII, PIIA
15627	Column-tube washer		•••					1	ALL except PII, PIIA
19490 .	Column-tube top nu							1	ALL except PII, PIIA
19021A .	Handlebar clip	• • •	•••					1	ALL except PII, PIIA
19437	Handlebar-clip screw	S	•••			***		4	ALL except PII, PIIA
030098	Fork-stem race			•••				1	ALL except PII, PIIA
020463	Front-fork gaiters	***	•••		•••		***	2	GISCS, NISCS, GISCSR, PII, PIIA
042775	Front-fork gaiter clip	5			***		***	4	GISCS, NISCS, GISCSR, PII, PIIA
030175	Steering lock with to	va keys		•••	***		***	1	ALL except GISCS, NISCS, PII,
									PIIA
033193	Fork assembly	***	• • •	•••	***	***		1	PII, PIIA
026322	Crown-and-stem asse	mbly	•••					1	PII
026529	Fork stops (pinch bo	(2)	•••	***	***	***		2	PII, PIIA
000003	Fork-stop nuts		•••	•••				2	PII, PIIA
. 000193	Fork-stop washers	***		•••	***	***		1	PII, PIIA
033262	Handlebar lug		•••	***	***	***	•••	1	PII, PIIA
000051	Grease nipple (handle			•••	•••	***		1	PII, PIIA
021741	Fork-crown stem adj		iut	***	***	***	•••	1	PII, PIIA
021811	Fork-crown stem loc	K nut	•••	• • •	•••	***	•••	1	PII, PIIA
022823	Fork inner tubes	***	•••	•••	***	***	***	2	PII, PIIA

art No.	Descripti	ion				Q	ÿ.	Mode	ls fitted	to		Bia No.
RON	T FORKS—continued											
16148	Inner-tube rubber sleeves				•	6	PII, PIIA			•••	•••	
111495	Fork inner-tube bottom bushes	• • •	***	•••	•••	2	PII, PIIA	•••	***	***	•••	
121651	Bostom-bush circlip	***	•••	•••	•••	4	PII, PIIA	•••	•••	•••	***	M 41
127047 114355	Inner-tube top bolts Inner-tube top-bolt sealing rings	• • • •	• • •	•••	•••	2	PII, PIIA PII, PIIA	•••	***	•••	•••	
22216	Inner-tube top-bolt grommets	• • • • • • • • • • • • • • • • • • • •	• • • •	•••	•••	2	PII, PIIA	***	***	***	***	
22794	Slider with cap, study and nuts	• • • • • • • • • • • • • • • • • • • •	•••	•••	•••	2	PII, PIIA	•••	•••	•••	•••	
22799	Fork-slider caps	•••		•••	•••	2	PII, PIIA	•••	***	***	***	
10713	Fork slider-cap studs	• • •			***	4	PII, PIIA	•••	•••	•••		
00011	Fork slider cap-stud washers	• • •	•••		•••	4	PII, PIIA	***	•••		•••	
00004	Fork slider cap-stud nuts	•••	***	• • •	•••	4	PII, PIIA	***	•••	***	***	
25051	Fork-slider extensions	• • •	•	•••	•••	2	PII, PIIA	***	***	•••	***	
22700 22599	Fork inner tube plastic bushes  Fork inner-tube oil seal	•••	***	•••	•••	2	PII, PIIA PII, PIIA	***	*	•••	•••	•
22359	Main springs—for road use		***	•••	•••	2	PIL PILA	•••	•	•••	**-	
15752	Main-springs—cross-country use		•••	• • • •	•••	2	PII, PIIA	•	•••	•••	•••	
21785	Leather washers (top)	•••	· · ·	. •	•••	ź	PII. PIIA	•••	***	•••	***	
21785	Leather washers (bottom)	•••		•••	•••	2	PII, PIIA		•••	***	•••	
31546	(Cover tube (top left)	•••	***			Ī	PH. PHA	***	•••		•••	
31543	Cover tube (top right)	• • • •	• • •		• • • •	1	PII, PIIA	•••	***	•••	•••	
21742	Top cover-tube spigot rings	•••	***	• • •	***	2	PH, PHA	***	•••	•••	***	
21912	Top cover-tube housings	•••	4**	• • • •	***	2	PII, PIIA	***	***	•••	•••	
2SO46	Cover tubes (bottom)—silver		•••	***	***	2	PU, PHA	***	***	***	•••	
21910	Bottom cover-tube rubber seats	•••	**-	•••	•••	2	PIL PILA	•••	***	•	•••	
20485	Slider drain screws	•••	•••	•••	***	2	PII, PIIA		***	•	***	
00203 22890	Drain-screw washers	• • • •	• • • •		•••	2	PIL PILA	•••			•	
22079	Fork damper-tubes for road use	•••	*	• •••	•••	2	PII, PIIA PII, PIIA	***	***	• • •	•••	
22021	Buffer-spring collars—for road u		***	•••	•••	2	PII, PIIA	***	•••	•••	•	
28048	Fork-damper tubes—cross count			***		ź	PIL PILA	•••	• • • • • • • • • • • • • • • • • • • •		• • • • • • • • • • • • • • • • • • • •	
0697	Damper-tube-to-slider bolts	***		•••		2	PII, PIIA	•••	•••	***		
0706	Damper-tube-boit fibre washers					2	PII, PIIA	•••	•••	•••		
17357	Fork-damper rods		•••	***	***	2	PII, PIIA	•••	•••			
00004	Damper-rod nuts (top end)	•••		•••		2	PII, PIIA	• • •	***		***	
16072	Damper plunger sleeves		***	•••		2	PII. PIIA		***	•••		
16339	Damper-rod sleeve clips		***	***	***	2	PII. PIIA	***	•••	•••	•	
16304 10721	Damper valves	***	***	• • • •	•••	2	PII, PIIA PII, PIIA	***	•••	•••	• • • •	
10719	Damper-valve stop pins Damper-valve seats	• • • •	•••	•••	***	2	PII. PIIA	•••	•	***	•••	
00005	Damper yalve-seat nuts	•••		•••	•••	2	PII, PIIA	***	•••		•••	
20463	Fork-extension gaiters	•••	***	•••	•••	2	PIL PLIA	•••	••••	•••	***	
42775	Fork-gaiter clips—top	•••			•••	2	PII, PIIA	•••	***	•••	***	
33217	Fork-gaiter clips-bottom	• • •	• • • •	•••	•••	2	PII, PLIA	***	•••		•••	
22213	Damper rod adaptor			•••	•••	2	PII. PLIA		***		•••	
IAND	LEBAR .											
30408	Handlebar, bare	,				1	65055, Acia	. /U.a	1			
2460	Handlebar, bare	***	•••	***	•••	i	Aclas (U.S.)		ne)	•••	•••	
31664	Handlebar, bare	• • • • • • • • • • • • • • • • • • • •	•••	•••	•••	i	G15 Mark I			***	•••	
31651	Handlebar, bare	•••		•••	٠	1	G15C5, N1		11, PII/	١		#11 #1 Pri Mi Cr. 17
1604	Handlebar, bare	•••			• • • •	1	G15CSR	•••	•	•••		
21978	Handlebar, half clip	•••	•••	•••	•••	1	PII, PIIA	•••	***	***		L 491 A \$100,000 - 11170
16947	Handlebar half-clip screws	•••	•••	•••	***	3	PII, PIIA	•••	***		•••	-19
RONT	MUDGUARD				-							
1985D	Front mudguard assembled					1	650SS, Aclas					
30060	Front mudguard assembled	•••		***	***	i	GIS Mark I		***	***	•	
1667	Front mudguard assembled		•••	***	•••	į	GISCS, NI			•••	•••	
1591	Front mudguard assembled	•••	•••	4	***	i	GISCSR	•••	•••	***	• • • • • • • • • • • • • • • • • • • •	
984	Mudguard bridge		•••			1	650SS, Atlas		***	•••	• • • •	
0062	Mudguard bridge-stays	•••	•••	•••	•••	2	G15 Mark I			•	•••	
0479	Mudguard bridge-stay screws		•••	•••	•••	8	GIS Mark I		•••	•••	•••	
0012	Mudguard bridge-stay screw was		***	•••	•••	8	GIS Mark I		•••	***	•••	**** ** * **
886	Mudguard bridge-stay screw nuts		•••	•••	***	8	GIS Mark I		•••	***		
342 0012	Mudguard bridge/mudguard bolt:			***	• • • •	2	65055, Atlas		•	•••	•••	4 - 1991-
UU 1 Z	Mudguard bridge/mudguard bolt Mudguard bridge/mudguard bolt			•••	•••	4	65055, Atlas 65055, Atlas		***	***	•	* 1757 A.T. 1 351- 1890 1
	* 100Eania printelinantantia port		•••	•••	• • •	2	650SS, Aclas		•••	***	•••	
796	Mudgiard bridge/moderard hale					-		** :	***			
796 3229	Mudguard bridge/mudguard bolt Mudguard bridge/slider studs					4		PIL P	All		_	
796 3229 1085	Mudguard bridge/slider studs	• • •	•••	•••	***	4	ALL except			***	•••	
796 3229 1085		hers	•••	•••	•••			PII, P	MALL		•••	

...

...

...

...

...

...

...

...

...

...

...

\*\*\*

...

...

...

...

...

...

GISCS, NISCS, GISCSR

GISCS, NISCS, GISCSR

GISCS, NISCS, GISCSR GISCS, NISCS, GISCSR GISCS, NISCS, GISCSR

GISCS, NISCS, GISCSR

GISCS, NISCS, GISCSR GISCS, NISCS, GISCSR

. . .

. . .

---

. . ..

...

...

...

...

...

...

...

024236

031597

014577

000012

000177

000005

031590

000004

- --:

Mudguard bottom-fixing bracket

Bottom-bracket bolt ... ... Bottom-bracket bolt washer

Bottom-bracket bolt washer

Bottom-bracket bolt nut ... Mudguard-support spacer ...

Mudguard-support nut ...

2	D	insiaa				00	y. Alcdels fitted to Ein No.
Part No.	Descri					Qty	y Piedels fitted to En 140.
REAR	MUDGUARD—continues	đ.					
000370	Mudguard-support bolc					1	GISCS, NISCS, GISCSR
029814	Mudguard clamp					1	GISCS, NISCS, GISCSR
029549	Mudguard-clamp packing				•••	2	GISCS, NISCS, GISCSR
000343	Mudguard-clamp bolts			•••	***	2	GISCS, NISCS, GISCSR
000012	Mudguard clamp-bolt washer:	\$.		•••	•••	. 4	GISCS, NISCS, GISCSR
000005	Nudguard clamp-bolt nuts Nudguard-support tube			• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •	1	GISCS, NISCS, 1968 GISCSR
032256 031586	Mudguard-support tube			• • • • • • • • • • • • • • • • • • • •	•••	i	GISCSR 1967
0125éS	Support-bridge bracket bolts			• • • •	•••	2	G15C5, N15C5, G15C5R
000039	Support-bridge bracket bolt	washed		• • •		2	GISCS, NISCS, GISCSR
000190	Support-bridge bracket-bolt	spring	washers		***	2	GISCS, NISCS, GISCSR
000050	Support-bridge bracket-bolt	. גאשה		***	•••	2	GISCS, NISCS, GISCSR
033138	Rear mudguard only polished	•	•••	***		- !	PH, PHA
034075	Accessory cover	••		***	•••	1	PIIA
034019	Mudguard stay		••	***	•••	- 1	PIIA
034039	Mudguard polished			•••	***	2	PIIA
034072 000012	Grommet			•••	•••	ī	PII. PIIA
014357	Screw			···	•••	i	PII
14481	Mudguard fixing Coles		·· ·· (	,	•••	4	PII, PIIA
000012	Mudguard fixing bolt washers			•••	***	8	PII, PIIA
018160	Mudguard fixing-bolt nuts					4	PII, PIIA
011094	Mudguard fixing-bolt gromme			•••	•••	4	PII, PIIA
033127	Rear-mudguard stay				•	1	PII an
032213	Mudguard-stay sleeves			***	•-•	2	PII, PIIA
0003+2				•••	•••	2	PII, PIIA
000012	Mudguard scay-boic washers			***	•••	2	PII, PIIA
033150	Accessory cover complete			• • •	•••	1	PII
033257 000191	Accessory cover/cail fixing bo			•••		ż	
				***		-	.,,
FRON'	T NUMBER PLATE						
011835	Front number plate	•		,	***	I	GISCSR, 650SS, Atlas
031605	Front number plate			• • •	***	-	G15CSR
18755	Number-place beading		•••	•••	•••	2	650SS, Atlas
011836	Number-place stanchions			•••	•••	2	65055, G15C5R, Atlas
000012 000005	Number-plate stud washers Number-plate stud nuts			•••	***	2	650SS, G15CSR, Atlas
000861	Number place-to-stud fixing					2	
REAR	NUMBER PLATE						
029431	Rear number plate				• • • •	ı	6505S, GISCSR, Atlas
029427	Rear number place			• •••	•••	I	ALL except 650SS, GISCSR, PII.
							PHA
000342	Number-place bolt			***	***		ALL except PII, PIIA
000172	Number-place bolt washer			•••	•••	1	ALL except PII, PIIA
13192 014577	Number-plate bolt spacer Number-plate bracket bolts				•••	ż	ALL except PII, PIIA
000172	Number-plate bracket-bolt w			•••	,	2	ALL except PII, PIIA
209760	Rear number place only-bar					1	P11
034007 -	Rear number plate fairing				***	1	PIIA
034009	Rear number plate bracket			***	•••	ī	PIIA
000070	Rear number place bracket bo	oit .	••		***	2	PliA
034011	Side reflector rear			•••	•••	2	PIIA
034012	Side reflector spire fastener			•••	• • • •	4	PIIA
034013	Side reflector front		***	•••	•••	2	PliA
034010	Side reflector front bracket		•• •••		•••	2	PII
000070 000012	Number-plate bolts Number-plate bolt washers			•••	•••	4	PII
000005	Number-place bolt nuts			•••	, ,	2	PII
011094	Number-place bolt grammet				•••	ī	PII
033264	Number-plate bracket			•••	***	ł	PII
000012	Number-place bracket-bolt w			***	•••	2 1	PII
018160	Number-plate bracket nut			•••	•••	1	P11
HAND	BRAKE AND AIR LE	YER					
026320	Front-brake and air-lever asse	mly .				1	ALL except G15 Mark II
026238	Front-brake and air-lever asse		***	• • • •	•	ļ	G15 Mark II
022715	Front-brake lever only			•••	***	ļ	GIS Mark II
18-535	Front-brake lever only			•••	***	i	GIS Mark II
18-312	Front-brake lever body				•••	1	ALL except GIS, Mark II
					- 1		

Port No.		Des	criptio	п				Qty		Model	fitted	to		Bin No.
HAND	BRAKE AIR LE	VEF	R—cor	ntinue	d									
18-816	Front-brake lever bod	10	•••				***	1	GIS Mark	ll			4	
18-087			•••		•••		***	i	ALL					
18-053					***	•••			ALL		***	•••		M (m)
12-556	Air lever only		•••	***	•••	***	***	1	ALL	***	•••	•••	***	
12-594	Air-lever body		***	• • •	•••	•••	•••		ALL	***	•	•••		
12-607	Air-lever central body Air-lever cap		***	•••	•••	•••	***	1	ALL	•••	•••	•••		*
12-033	Air-lever spring wash		***		•••		•••		ALL	•••	•••	•••		
11-013	Body clamping screw.		•••						ALL					***************************************
11-014	Body clamping screw			•••	•••	•••	•••		ALL		•••	***	•••	
023707	Brake-lever trunnion.		•••		***	•••	. ***	1	ALL	***	•••	•••	•••	Twee San a part &
CLUTC	H LEVER													
026258	Clutch lever assembly		***	•••	***	***		1	ALL excep		tark II	***		4 11 1 100 1 World
026232	Clutch lever assembly		***		***			1	GIS Mark			***		h 1 ** * * * **
022714	Lever only		***	•••	***	• • • •	•••	1	ALL excep			***		
18-528 18-814			•••	•••	•••	*** .	***	1	GIS Mark		•••	•••		
18-037								i	ALL		***			
18-053				•••				l	ALL	***				
12-595	Lever-body clamp .		***	***	***	•••	***	1	ALL	?		***		
11-014	Body-clamp screws .		***		***	***		2	ALL		•••	•••	***	Mr. Ave. 74 27 Garres 8
023707	Clutch-lever trunnion		***	•••	•••	•••	***	1	ALL	•••	•••	***	***	
TWIST	GRIP													
106658	Twist grip assembled		•••	•••				1	ALL		•••	•••		
16-060	Body (cop half)		•••		•••		• • • •	1	ALL	***	•••	•••		
16-061	Body (bottom half) .		***	***	***	***	***	-	ALL	•••	***	•••		* ** ** ***
16-091	Rotor only		***	***	***	***	•••		ALL	***	***	***		
11-013	Clamping screw—long		•••		•••	***	•••	1	ALL	•••	•••	•••		
16-008				•••			***	i	ALL		•••	•••		
16-009	Friction-spring screw						***	1	ALL					
16-010			• • •	• • •		***		1	ALL					
16-070	Plastic rotor, grip		***	***			***		ALL	• • •	•••	•••	•••	de 110 c (41)
023740 026476	Dummy grip Slotted abutment		***	•••	***	***	•••	1	ALL	•••	***	***		W - 31 1194 4 (1986) 4
		•••	•••	***	***	•••	***	'	ALL	•••	•••	•••	***	P+ 21 411 Me service
BRAKE	CABLE													
031615	Front-brake cable asse	emble	d		•••			1	GISCSR	•••		***		
032287	Front brake cable asse			•••	•••	***	***	1	PII, PIIA	***	•••			
24987	Fron: brake cable asse			***	***	***	***	1	65055, 196		•••	•••	•••	******
25220 025583	Fron: brake cable asse Cable adjuster			•••	•••	• • •	•••	i	GIS Mark	II, G150		•••		
025584	Cable adjuster lock no		•••	***	•••	***	•••	i	ALL	•••	•••	•••	•••	-
042856						***	•••	i	PII		***	•••	•••	
011373	Cable adjuster lock no	10		• • •			***		PII	***	•••	***		+
042764	Plastic brake-cable sle	eve-	-12 <u>#</u> in		•••	•••	•••	1	PII	•••	•••	***	•••	*
CLUTC	H CABLE													
25035	Clutch cable assemble	d		***		***		1	650SS, Atla	s			***	
25036	Clutch cable assemble	d		***		•••	•••	1	G15 Mark					
026250	Clutch cable assemble			***	***		***		GISCSR	*** .	•••			
023753	Clutch cable assemble		•••	•••	***	***	•••		PII, PIIA	***	***	•••		
042856	Cable adjuster lock nu		•••	•••	•••	•••	•••	1	PII, PIIA	•••	•••	***		*
	2200		•••	•••	•••	•••	•••	,	rii, ma	***	***	***	•••	Marie 1 4 7 1 100
AIR CA														
25033	Air cables assembled-				***	***	***	2	65055		D11	***	***	
031613	Air cables assembled—				•••	•••	•••	2	ALL excep			***	***	
031614	Air cable assembled— Air cable assembled—				•••	•••		1	65055, G15 Atlas, G15		G150	5 NI	SCS.	
031012	THE COME ESSENIATED	nandi	2041 6		•••	•••	••••		PII	1 121 K 1		·2' 141	303,	
033216	Air cable assembled-	handl	lebar e	bn		•••	•••	1	PIIA	•••		•••		
033143	Air cable assembled-					•••		2	1968 65055		***		•••	
033144	Air cable assembled-				•••	***			ALL 1968 e					****
033144 018956	Air cable complete—c Midway adjuster .				***	***	•••		PII, PIIA	•••	***		•••	P.41 1
019824	Junction box for contr			***	•••	***	***	i	ALL	•••	•••	•••	•••	
					•••							•	***	

Part No.	Description			Qty	y. Models fitted to Bin No.
THRO	TTLE CABLE				
028238	Throttle cables assembled—carburettor end	•••	•••	2	ALL except PII, PIIA
031614	Throttle cable assembled—handlebar end	•••		1	65055, G15C5R
031612	Throccle cable assembled—handlebar end	***	• • • •	1	
031612	Throttle cable assembled—handlebar end	***	• • •	1	
033145 018956	Throttle cables assembled—carburettor end Midway adjuster	• • • • • • • • • • • • • • • • • • • •	•••	2	
OIL PI	, .				
029845	Oil feed-pipe assembly—tank end	•••	•••	1	ALL except 650SS, Atlas, PII, PIIA
032047	Junction block and oil pipes	•••	***	1	65055, Atlas
032046	Junction block and oil pipes		•••	ļ	ALL except 65055, Atlas, PII, PIIA
032044	Junction-block gasket		•••	ļ	ALL
030 <del>11</del> 8 000950	Oil feed and return pipe hose—12 in.		•••	2	650SS, Atlas
023376	Oil feed and return pipe hose ferrules		•••	4	ALL except 6505S, Atlas
000950	Oil feed hoses—111 in	***	***	2	ALL except 650SS, Actas, PII, FIIA
000950	Oil return pipe—11 in	•••	•••	1	ALL except 65055, Atlas, PII, PIIA
000950	Feed-pipe hose—12½ in	•••		1	PII, PIIA
000950	Recurn-pipe h 3se-11 in	•••	•••	į	PII, PIIA O
000951	Plastic sleeve for oil-pipe hose—5 in		***	!	ALL except 650SS, Atlas
25349	Oil return-pipe adaptor Oil return-pipe adaptor washers		•	2	
13796 18101	Oil return-pipe adaptor washers Oil pipe banjo bolts		•••	3	
T.1094	Oil pipe banjo bolt washers			6	
033165	Junction block and oil pipes assembled		•••	I	PII, PIIA
000951	Plastic sleeve for oil-pipes—5 in		•••	ı	PII, PIIA
033213	Oil pipe clips	• • •	•••	2	PII, PIIA
TWIN	SEAT				
23926	Twin seat only	•••		1	650SS, Atlas
029449	Twin seat only	• • •		1	GIS Mark II
032271	Twin seat only	•	•••	Ī	
031528	Twin seat only	•••	• • • •	1	GISCSR 1967
026536	Twin seat fixing nuts		•••	1	GISCS, NISCS, GISCSR, PITA GISCS, NISCS, GISCSR, PITA
000176 21851	Twin seat fixing-nut washer Twin seat rubber bushes	•••	•••	2	65055, Atlas :
21852	Twin sear rubber buctons			2	650SS, Atlas
23265	Twin seat 'DZUS' fastener			I	650\$5, Atlas
23264	'DZUS'-fastener grommet	•••	• • • •	I	65055, Atlas
23153	Rubber 'DZUS'-fastener washers	• • • •	•	3	
023251	Twin seat fixing screws		•	2	CIF M. J. II
000192	Twin sear fixing-screw washers		• • • •	2	#17 by 1 1)
00000 <del>4</del> 032!34	Twin seat fixing-screw nuts Seat-only—single	•••	•••	î	
21851	Rubber bushes for seas	•••	• • • • • • • • • • • • • • • • • • • •	2	
034021	Twin seat only		•••	}	
000012	Twin seat fixing washers	•••	***		PHA
000005	Twin seat fixing nuts	•••	•••	2	PHA
PETRO	L TANK				
13066	Petrol tank, bare—Candy Apple Red	•••		1	P11
22630A	Petrol tank, bare—Silver	•		I	65055
22630A	Petrol tank, bare-Candy Apple Red	•••		į	Atlas
22630A	Petrol tank, bare—Flamboyant Green	• • • •	• • •	!	Atlas GIS Mark II
031508 033004	Petrol tank, bare—Red and Chrome Petrol tank, bare—Candy Apple Red	•••	•••	i	GISCS, NISCS, PIIA, 1968 GISCSR
031508	Petrol tank, bare—Candy Apple Red and Ch	rome	•••	i	G15CSR 1967
24298	"Atlas" transfer	*1*	***	Ī	Atlas
25101	"Crossed Flags" transfer	***	***	Į	Atlas
009195	"Reserve" transfer		•••	İ	GISCS, NISCS, PII, PIIA
034058	Green ball transfer Norton	***	•••	ļ	650SS, Atlas, NIS
034059	Green ball transfer Matchiess	•	•••	1	GIS, PII, PIIA
031553 10033001	Tank-motif screws	•••	·	4	PII, PIIA
17735	Tank filler cap		•••	ì	PII, PIIA
23305	Petrol tap-main and reserve	•••	•	ì	65055, Atlas
E.5264	Tap washer	•••	•••	Ī	65055, Atlas
033155	Main tap with tube in filter	•••	***	1	GISCS, NISCS, PII, PIIA
031746	Reserve tap without tube in filter	***	***	ï	GISCS, NISCS, PII, PIIA
200183	Tap washers	***	•••	2	ALL except 65055, Atlas
19402	Petrol feed-pipe-rubber (left hand)— $3\frac{1}{2}$ in.	***	•••	1	650SS, Atlas, GI5 Mark II, GI5CSR
			2.2		

PETRO	L TANK-	– conti	nued										
19402	Petrol feed-p	ipe-rub	ber (ri	ghe ha	nd)-	61 in.			1	65055, Aclas, G	15 Mark	II, GISCS	R
19402	Petrol feed-p	ipes-rub	ber (1	eft har	id)	in.	***	***	2	GISCS, NISCS			
19402	Rubber pipe	for "T"	piece	23 ic	1			***	1				
19402 19402	Petrol feed-p						***	***	1	GISCS, NISCS,			** *
22017	Rubber pipe Petrol-pipe n					• • • •	•••	•••	-	PII, PIIA			••
000513	Petrol-pipe u						***	•••	-		•••		**
22714	Styling strip		**	***		•••			1				
22713	Styling strip	(right h			• • •	•••	• • • •	***		650SS, Aclas			
22755	Scyling-scrip			•••	•••	***	***	•••		6505S, Atlas			** ************************************
048499	Tank motifs Motif rubbers			•••	•••	***	•••	***	2	GIS Mark II, G GIS Mark II, G	5C5, G1	SCSR .	
031553	Motif screws			•••	•••	•••	•••	***	4				
031030	, total serens	•••	•••	•••	•••	•••	•••	•••	•	PIIA			
25217	Tank motils		***	•••	•••		•••	***	2	NISCS			
25197	Motif rubber				• • •	***	***	•••					
000873	Motif screws			•••	***	•••	***	***		NISCS	•••		• •
22722 22721	Rubber grip Rubber grip			•••	•••	•••	•••	•••	1	65055, Aclas			
042889	Rubber grip			•••	•••	•••	***	٠	i				
021844	Petrol pipe "	T" piec	e	•••			***		_	GISCS, PIIA			
013325	Petro tank fi	iller cap							i	650SS, Aclas, G	15 Mark	11, G15C	5,
0.12000										1968			
042890	Rubber grip			•••	•••	•••	•••	•••	1	GIS Mark II, GI ALL 1967 excep			
024201	Petrol-tank fi "Reserve" pe			•••	•••	***	***	•••	i	GISCS, NISCS,			
048529	Main and "re	serve"	petrol		•••	***		***		GIS Mark II, GI		4	
000183	Petrol-tap wa	sher .			***	•••	***		1				
021367	Petrol-tap ad:	aptors			***			• • •		GISCS, NISCS			
000183	Petrol-tap ad	aptor w	ashers	***	***	***	***	***	2			*	
22265	Petrol feed pi	ipe	:-	•••		•••	***	***	1	65055, Atlas 196			
000908	Petrol feed he	1					***		1	GISCS, NISCS,			* # # * * * * * * * * * * * * * * * * *
000908	Petrol feed he						***		-	GISCS, NISCS			
021844	Petrol-pipe "						***	***		GISCS, NISCS,			
000575	Drain plug			•••	•••			***		GIS Mark II, GI			
000183	Drain-plug wa					•••	•••		1	GIS Mark II, GI			
16237 027138	Frame-mount Tank-support			•••	•••	***	•••	***	1	ALL except 650:			•
026359	Tank-support				***	•••	***	•••		ALL except 650			
22764	Rear-fixing ru						***	•••	1	650SS, Atlas			• • • • • • • • • • • • • • • • • • • •
027137	Rear-fixing ru			•••		***			1	ALL except 650	S, Aclas		
22081	Tank bolt			•••	•••	•••	***	***	1	65055, Atlas			
24979				444	•••	•••	•••		1				
22082 E.6743	Tank-bolt rub			•••	•••	•••	•••	•••	2	65055, Atlas			
014999	Tank rubber							***		65055, Atlas			
E.6742	Tank-bolt cup			• • •		•••	•••			650SS, Atlas	•••		
027161	Tank bolts .			•••	•••	• • •	***	•••		ALL except 650			
021174	Tank-bolt rub			•••	•••	***	•••	•••		ALL except 6505			
014996	Tank-bolt buff				•••	***	***	•••		ALL except 6505 ALL except 6505			
000177	Tank-bolt was			•••	***	•••	***	•••		ALL except 6505			
016845	Tank-bolt nut			•••		***			2	ALL except 6505			
032229	Tank support.	-rubber	(thin)		•••	***		•••	1	GIS Mark II, GI	5CS, G15	CSR, PILA	
COLOUR	MUST BE QL	JOTED	WHE	N OR	DERI	YG PE	TROL	TANK	:5				
OIL TA	NK												
034123	Oil tank			***				***	1	PIIA			
033148	Oil tank only,			***			***	***	1	PII		***	
24304	Oil tank only,								1	65055, Atlas	•••		
032054	Oil tank only,				***	***	•••	***	1	GIS Mark II, GI	SCSR, GI	5CS	
032054	Oil tank only,	bare-	Candy			***	•••	•••	1	NISCS	***	•••	-
21467 029593	"Top level" to			•••	•••	•••	***		1	650SS, Atlas G15 Mark II	***	*** ***	-
029593	Tank cover—C			led					i	GISCS, NISCS,			W-1 00114001-1-0001-1-001-1-0
023277	"Top level" tr			•••					1	GIS Mark II, GIS			
030352	"Top level" tr			•••	***	***	***	•••	1	GISCS, NISCS			***************************************
023279	"Low level" to			• • •	•••	***	•••	***	1	GIS Mark II, GIS	CSK	•••	-
030353 022632	"Low level" to			•••	***	•••		***	2	GISCS, NISCS ALL except 650S	S. Arias	PIL PLIA	
000012	Cover-screw Y			•••	•••	•••		•••		ALL except 650S			
000203	Cover-screw fi	ibre was	shers	•••	•••		•••		2	ALL except 6505			
030461	"Oil recomme	ndation	" tran:	sfer	•••			***	1	ALL			-

	NT CHAINCASE—continued						
						,	2 All survey (5055 Asles BH BHA
031541	Inner-chaincase fixing screws Spacer behind chaincase	•••	***	***	•••	١	3 ALL except 650SS, Atlas, PII, PIIA
20937	Chaincase-support stud	•••	•••	•••	***	-	I ALL except 650SS, Atlas I 650SS, Atlas
032241	Chaincase-support-stud		•••			i	
110000	Chaincase support-stud washers				•••	2	2 ALL except PII, PIIA
E.3223	Chaincase support-stud nut				•••	1	1 650SS, Atlas
000214	Chaincase support-stud nut	***	***	•••	***	- !	ALL except 650SS, Atlas, PII, PIIA
16247	Chaincase support-stud nut	•••	•••	•	•••	1	1 650SS, Atlas
019882 25223	Chaincase support-stud nut Outer chaincase only—black	•••	•••	•••	•••	1	1 ALL except 650SS, Atlas, P11, P11A
25225	Outer chaincase only-chrome	•••	***		•••	i	1 Atlas
025021	Outer chaincase only-polished		•••	•••		1	I ALL except 650SS, Atlas, PII, PIIA
14837	Inspection cover	•••	***	***		1	1 65055, Aclas
042040	Inspection covers	***	***		***	2	
24320	Inspection-cover gasket		•••	•••	•••	1	1 6505S, Atlas
042025 25341	Inspection-cover gaskets	***	***	•••	***	1	2 ALL except 650SS, Atlas
13185	Clutch adjustment rubber plug Chaincase halves joint washer	•••	•••		•••	1	1 650SS, Atlas
025037	Chaincase halves joint washer					i	I ALL except 650SS, Atlas
000484	Chaincase halves joint screws		***	***		14	
13765	Drain plug		***		•••	1	I ALL
000200	Crain-plug washer		***	***	•••	I	The same of the sa
E.6055	Chaincase accachment nut	***	•••	•••	***	1	1 650SS, Atlas
E.6056	Chaincase accachment-nut washer	•••	•••	• • •	•••	!	1 650SS, Atlas
24322 17731	Sealing chaincase washer "Oil bath" transfer	•••	***	***		1	1 650SS, Atlas
033270	Spacer for inside chaincase halves		•••			i	I PII, PIIA
000010	Washer behind chaincase		•••	•••		i	
033120	Chaincase centre stud		***	***	***	1	I PII, PIIA
010000	Centre-stud washer			***		1	1 PII, PIIA
031800	Centre-stud nut		•••	***	***	1	
033135	Outer chaincase only	***	***	***	***	1	I PII, PIIA
REAR	CHAINGUARD ,						
21832	Chainguard assembled (see) black	·L				1	17 45055
21832A	Chainguard assembled (top)—blace Chainguard assembled (top)—chr		***	•••			1 Atlas
029469	Chainguard assembled (cop)—blac			***			I GIS Mark II, GISCS, NISCS
029469	Chainguard assembled (top)-chr	ome				1	I GI5CSR
034033	Chainguard-black			• • •	•••	1	I PIIA
000070	Chainguard front bolt		•••			1	The state of the s
000012	Chainguard front bolt washer	•••	***	***	•••	2	
000005	Chainguard rear bolt nut	•••	***	***	***	. 1	
220228 000371	Chainguard fixing bolt (front) Chainguard fixing bolt (front)	***	***	***			I PIIA
22022A					***	1	I 650SS, Atlas
	Chainquard fixing holt (rear)	•••	***		***	1	I 650SS, Atlas ALL except 650SS, Atlas, PII, PIIA
000374	Chainguard fixing bolt (rear)			•••	•••	1	650SS, Atlas   .
000374 T.2221	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear)		•••			1 1 2	1 650SS, Atlas
	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers		•••	•••	•••	1 1 2 2	1 650SS, Atlas
T.2221 000011 19435	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer		•••	 o		1 1 2 2 1	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   ALL except 650SS, Atlas, PII, PIIA   ALL except 650SS, Atlas, PII, PIIA   Constant   ALL except 650SS, Atlas, PII, PIIA   ALL except 650SS, Atlas, PII, PIIA   Constant   650SS, Atlas
T.2221 000011	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers		 	 o		112211	1 650SS, Atlas
T.2221 000011 19435 23574	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer			o 		1 2 2 1 1	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   ALL except 650SS, Atlas, PII, PIIA   ALL except 650SS, Atlas, PII, PIIA   Constant   ALL except 650SS, Atlas, PII, PIIA   ALL except 650SS, Atlas, PII, PIIA   Constant   650SS, Atlas
T.2221 000011 19435 23574 REAR	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut CHAINCASE (OPTIONA		966-19	67		1 1 2 2 1 1	650SS, Atlas   1
T.2221 000011 19435 23574	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut CHAINCASE (OPTIONA Chaincase (upper half)			o 		1 1 2 2 1 1	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   1 650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   2 650SS, Atlas   2 ALL except 650SS, Atlas   650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut CHAINCASE (OPTIONA Chaincase (upper half) Chaincase (lower half)		966-19	67		1 1 2 2 1 1	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   1 650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   2 650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K 19735K	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut CHAINCASE (OPTIONA Chaincase (upper half)	L) I	966-19	67		1 1 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers	L) I	966-19	67		1 1 1 1 2	650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard front-bolt masher Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Chaincase fixing-bolt washers	L) I	966-19	67		1 1 1 1 1	650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435 23574	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut	L) I	966-19	67		1 1 1 1 2	650SS, Atlas   1
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435 23574 030009	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half)	L) I	966-19	67		1 1 1 1 2	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   1 650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   2 650SS, Atlas   ALL except 650SS, Atlas   2 ALL except 650SS, Atlas   650SS, Atla
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435 23574 030009 030012	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half) Rear chaincase (lower half)	L) I	966-19	67		1 1 1 1 2	650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K 19735K 22022A T.2221 19435 23574 030009 030012 024449	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt mashers Chaincase fixing-bolt washers	L) I	966-19	67		1111221111	650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435 23574 030009 030012	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half) Rear chaincase (lower half)	L) I	966-19	67		1 1 1 1 2	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   1 650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   2 650SS, Atlas   ALL except 650SS, Atlas   6
T.2221 000011 19435 23574 REAR 19734K 19735K 22022A T.2221 19435 23574 030009 030012 024449 014522	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half) Rear chaincase (lower half) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (rear)	L) I	966-19	67		1 1 1 2 2 1 1 1 1 1	650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K 19735K 22022A T.2221 19435 23574 030009 030012 024449 014522 000012 042378	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase (lower half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (lower half) Rear chaincase (lower half) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Inspection rubber plug	L) I	966-19	67		1 1 1 2 2 1 1 1 1 1	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   1 650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   2 650SS, Atlas   ALL except 650SS, Atlas   6
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435 23574 030009 030012 024449 014522 000012 042378	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half) Rear chaincase (lower half) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Inspection rubber plug  BOX AND TOOL TRAY	L) I	966-19	67		1 1 1 2 2 1 1 1 1 2 1	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   1
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435 23574 030009 030012 024449 014522 000012 042378 TOOL	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase (lower half) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half) Rear chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing bolt (rear) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Inspection rubber plug  BOX AND TOOL TRAY	L) I	966-19	67		11122111121	650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   1 650SS, Atlas   ALL except 650SS, Atlas, PII, PIIA   2 650SS, Atlas   ALL except 650SS, Atlas   650SS
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435 23574 030009 030012 024449 014522 000012 042378 TOOL	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half) Rear chaincase (front) Chaincase fixing-bolt fixing Chaincase fixing-bolt fixing Rear chaincase fixing-bolt washers Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Inspection rubber plug  BOX AND TOOL TRAY Tool tray assembled Tool-tray bolts	L) 1	966-19	67		11122111121	650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K 19735K 22022A T.2221 19435 23574 030009 030012 024449 014522 000012 042378 TOOL	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard-bolt washers Chainguard front-bolt washer Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half) Chaincase fixing-bolt nut Rear chaincase (lower half) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Inspection rubber plug  BOX AND TOOL TRAY  Tool tray assembled Tool-tray bolts Tool-tray bolts Tool-tray bolt plain washers	L)	966-19	67		111122111121	650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas
T.2221 000011 19435 23574 REAR 19734K 19735K 22022B 22022A T.2221 19435 23574 030009 030012 024449 014522 000012 042378 TOOL	Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard fixing bolt (rear) Chainguard-bolt washers Chainguard front-bolt washer Chainguard rear-bolt nut  CHAINCASE (OPTIONA  Chaincase (upper half) Chaincase fixing bolt (front) Chaincase fixing bolt (front) Chaincase fixing bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt washers Chaincase fixing-bolt nut Rear chaincase (upper half) Rear chaincase (front) Chaincase fixing-bolt fixing Chaincase fixing-bolt fixing Rear chaincase fixing-bolt washers Chaincase fixing bolt (front) Chaincase fixing bolt (rear) Chaincase fixing-bolt washers Inspection rubber plug  BOX AND TOOL TRAY Tool tray assembled Tool-tray bolts	L) 1	966-19	67		11122111121	650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas     ALL except 650SS, Atlas, PII, PIIA     650SS, Atlas     650S

£ 5. d.

...

...

...

Part No.	De	scrip	tion			(	Qty	1.	Models fitte	ed to		Bin No.	£ s.
FRON	T WHEEL—continued									,			
E.6888	Bearing locking ring		***	•••			1	All excen	c PII, PIIA		•••		
E.6885	Bearing felt washers	•••					2		c PII, PIIA	***			
E.6889	Retaining ring	•••	***				1		c PII, PIIA		***		
19719	Oil-retaining washer	• • • •	***	***	***	***	1	ALL excep	c PII, PIIA	***	***		
18551	Dust cover		•••	•••	***	•••	1	ALL excep		***	•••		
19646	Bearing spacer assembled	•••	***	•••	***	***	!		PII. PIIA	•••	***		
030055	Front-wheel spindle	***	***	***	***	•••	1	ALL excep	t PII, PIIA	•••	•••		
E.4768 50257	Wheel spindle nut	***	***	•••	***	***	1	ALL excep	PII, PIIA	•••	***		
E.5944A	Front-wheel cover place Brake place packing washe	- ***	•••	•••	***	•••	ì		PII, PIIA	•••			
50249	Brake-shoe cam		•••	•••	***		i		PII, PIIA	***	•••	**********	
18502	Brake shoes with lining		***	•••			2		PII, PIIA	•••	•••	*******	
16782	Brake shoe lining only		•••			pair	1	ALL excep		***			pair
E.5061	Brake-shoe lining rivets	•••				sec 1	6	ALL excep	PII, PIIA	***			sec
E.5832	Brake-shoe return springs	***	***	***		***	2	ALL excep		***	•••		
14454	Pivot-retaining plate	***	***	***	***	***	1	ALL excep	CPII, PIIA	***	***	-	
14506	Retaining-place tab washer		***	***	***	***	1	ALL excep	PII, PIIA	***	***	### 10 mile 10 10 100	
20052	Retaining-place bolts Expanding lever	•••	•••	***	***		2	ALL excep	PII, PIIA	***	•••		
E.3255	Lever clevis pin	•••	•••	•••	•••	•••	i	ALL excep			•••		
17735	Clevis pin split pin		***				i	ALL excep			***		
E.5455	Expander-lever washer		***	•••	•••	***	1	ALL excep	c PII, PIIA	***			
E.3224	Expander-lever nut					***	1		c PII, PIIA	***			
033297	Wheel complete with brai	(e		• • •		***	1	PII, PIIA		***	***		
033298	Wheel only	***	***	***	***	***	1	PII, PIIA	***	***	***		
024248	Rim-only—WM2-19	•••	***	***	•••	•••	1	PII, PIIA	•••	***	***		
021152	Spakes	***	•••	•••	***		10	PII, PIIA	•••	***	•••		
021154	Spoke nipples	***	• • •	***	***		10	PII, PIIA	***	***	•••		
029261	Hub shell with liner Hub spindle	•••	•••	•••	•••	***	1	PII, PIIA	•••	***	•••		
029264	Spindle bearings	•••	***	***		•••	ż	PII. PIIA			•••		
029271	Hub disc		***	***		•••	ī	PII, PIIA	***	***	•••		
	. Tube between bearings	•••					1	PII, PIIA					
029269	Bearing recainer	***			•••	•••	1	PII, PIIA	***	***			
029270	Felt seal	***			***	•••	1	PII, PIIA	***	***	***	************	
029237	Oil, seal	***	***	***	***	***	i	PII, PIIA		•••	***		
029268 029238	Oil-seal collar	***	•••	•••	•••	***	1	PII, PIIA	•••	***	•••	*****	
029263	Bearing-retaining lock ring Oil seal		***	•••	***	***	1	PII, PIIA		•••	•••		
029262	Oil-seal collar	•••		•••	***	•••	i	PII. PIIA					
100000	Hub-spindle nut			***	***	***	i	PII, PIIA	***	•••	•••		
000008	Hub-spindle washer (outer		***			***	1	PII, PIIA		***			
25465	Brake shoe with lining						2	ALL except	PII, PIIA	***	***		
029246	Hub-spindle nut (inner)	•••				•••	1	PII, PIIA		•••	***		
029221	Cover-place spacer (outer)		•••	***	***	•••	i	PII, PIIA	***	***	***		
029258	Cover place assembled	•••	•••	•••	***	•••	1	PII, PIIA	***	***	***	******	
029260	Grease nipple Brake shoe pivot pin	•••	***	•••	•••	***	1	PII, PIIA	***	***	•••		
000011	Pivot-pin washer	•••					i	PII, PIIA			•••		
000004	Pivot-pin nut	•••					i	PII, PIIA		•••			
029247	Brake shoes with linings		***	•••		pair	ĺ	PII. PIIA				p:	air .
029248	Brake-shoes linings	•••		***	***	pair	1	PII, PIIA		***	***		
000113	Brake-shoe lining rivets		***	•••	***	set le		PII, PIIA	***	•••	•••		set
029226	Brake-shoe springs	***	. ***	•••	***		2	PII, PIIA		***	***		
013291	Adjusting thrust pins	***	***	•••	***		2	PII, PIIA	•••	***	•••		
029489	Brake-shoe expander Expander lever	• • •	***	•••	***	•••	;	PII, PIIA		•••	•••		
000009	Expander-lever washer	•••		•••	•••		i	PII. PIIA	*** ***	•••	•••		
024546	Expander-lever nut						i	PII, PIIA		***			
000736	Clevis pin for lever	•••	•••	•••	***		i	PII, PIIA	***	•••			
000014	Split pin for clevis pin			***	•••		1	PII, PIIA		•••	•••		
029222	Expander washer	***	***	•••		***	1	PII, PIIA	*** . ***	***		mit	
DDAVE	ANCHOR												
	ANCHOR						,	DII DIIA					
014807	Cover-place anchor arm	***	•••	•••	•••	•••	1	PII, PIIA	•••	***.	***		
014119	Anchor-arm bolt Anchor-arm bolt washer	•••	•••	• • •	•••		i	PII, PIIA			***		
019629	Brake-cable yoke end		•••	***	***		i	PII, PIIA					
	WHEEL			.,,									
		-1						(FOCT					
25351 25352	Wheel complete with spro Wheel complete with spro						i	650SS Atlas		•••	•••		
	spilo			- part		20			•••	•••			

ď.

Part No.		D	escripti	ien —				Q	γ.	Mode	ls fitted	to		6in No.	ź
REAR \	WHEEL — conti	nued													
032322	Wheel complete w	ich spr	ackes	and bra	ke par	-:s				irk II	•••				
032323	Wheel complete w	ith spr	ocket	aug pur	ke bri	-:: 27	• • • •			NISCS	•••	• • • •	***		
032324	Wheel complete w	ith spr					•••	I	GISCS:		•••	•••	•••		
	Wheel bare less fit		***	• • •	•••	•••	•	1		GISCSR	•	*	•••		
25296 25298	Wheel bare less fic Wheel bare less fic		•••	• • • • • • • • • • • • • • • • • • • •		•••	•••	1		315 Mark NISCS	***	•	***		
18350	Rim only—YVM2-1	9	•••	***		•••		i		GISCSR	•••	•••	***		
23319	Rim only—YYN3-1		•••	***	***	***		i		EIS Mark		•••			
030432	Rim only-WM3-15		•••	•••	•••		•••	i		N15C5	•••				
20053	Spakes-long head	•••	•••		• • •			20	65055,	G15C5R	• • •	•••	***		
23331	Spokes-long head	•••	•••	•••	•	•••	•••			15 Mark		•••			
30433	Spokes—long head	. *	• • •	•••	•••	•••		20		NISCS	• • •	• • •	•••		
12001	Spokes—short head		• • •	***	•••	***	•••			GISCSR	•••	•••	•••		
23332	Spokes-short head		• • •	•••	• • •	•••	• • •			Hark I		•••	***		
)30434 )21693	Spokes-short hear		•••	•••	•••	•••	•••			NISCS Adas, GIS	Mack	11 G	15033		
21694	Spoke nipples Sooke nipples	•••	• • • •	•	•••	•••	•••			NISCS	11217	n, o			
9689	Rear hub shell only		• • • •	• • • •		•••	•••	ĭ		cept PII,	PHĀ	• •••			
30052	Sprocket and brake			•	• • • •		•••	i		cepc PII.			•		
8233	Sleeve nut for brak				:			3		cept PII.		•	***		
140100	Bearing (right side)		***	•••		•	• • • • • • • • • • • • • • • • • • • •	1		cept PII,		***	***		
7721	Bearing (left side)	•••	•	•••		•	•••	1		cept PII.			•		
8234	Bearing spacer	•••		•••	•••	•••	• • • •	1	ALL ex	cepc PII,	AIIA		•		
8232	Bearing locking rin	š		• • •	***	***		ı	ALL ex	cept Pli,	PHA	•••	•••		
.6889	Bearing washer		•••		•-•		•••	- 1		capt PII.		•••			
.6855	Feit washers	•••	• • •	•••	***	***	***	2		cept PII.		***	•••		
9714	Retaining ring	•••	***	•••	•	•••	•••			cept PII,		•••	•••		
8231	Inner sieeve	•	,	•••	•	• · · •	• • • •	1		cept PII,		***	•		
.4760	Brake drum retaini	_		•••	•	• • • •	•••	ł	ALL ex	cept PII,	PHA	•••	***		
9348	Hub diaphragm	***	•••	• • • •	• • •		•••	6		cept PII, cept PII, :		***	***		
5100 8731 -	Hammer-drive scre		•••	* * *	•••		• • • •	7		cept PII,			•••		
9265	Disphragm gromme Rear-wheel spindle		•••			•••	•••	ĩ		Aclas	1117	•••	•		
4882	Rear-wheel spindle		•••		• • • •		•••	i		cept 650S	i. Aclas				
9266	Wheel-spindle wasi		•••	•••	•••	***	***	2		Azlas	•••	***		1841 87.4	
30023	Wheel-spindle wast			•••		•••		- 1		cept 650SS			PHA		
9267	Wheel-spindle nut	•••		•••	•••	•••		- 1		cept PII,			•		
8235	Wheel-spindle spac	er		•••				- 1		Aclas	•••	•	•		
81006	Wheel-spindle spac	er	•••		•	• • • •		- 1		cept 650SS		, P11,	Alla		
5453	Brake cover place	•••	• • •	***	• • • •		***	- !		cept PII.			•••		
9847	Torque pivot pin	•••	• • •	•••	• • •	***	•••	- 1		cepc PII, I		***	•		
9848	Torque pivot-pin n		***	•••	***	•	***	- 1		cept PII, I		***	***	4	
0011	Brake-expander can			• • •	•	•••	•••	1		cept PII, I		•••	***	- · · ·	
9584	Brake shoes with li	•	•••	***	• • •	***		2		cept PII, I		•			na i
6547 .5061	Brake-shoe lining		• • • •	•••	•••	•••	pair	13		cept Pil, i cept Pil, i		•••	• • • •		
.5832	Brake-shoe lining ri Brake-shoe return :		•••	•	•••	•••	256	17		ept PII, I		•	•		2=1
3436	Brake-expander lev		•••	•	•••	•••	•••	ī	ALLex	cept PII. I	AII	•••	***		
.5455	Expander-lever was		• • • • • • • • • • • • • • • • • • • •					i		est PII, I		•••		·	
.3224	Expander-lever nuc		***			•••	•••	Ì		ept Pli, I		***	•••		
4454	Pivot-pin retaining		• • • •			•••		1		ept P11, 1		•••			
	Retaining-place tab	washe:	•••	***	• • •	• • • •		Ţ		ept PII, I		•			
2342	Retaining-place bolt			***		•		.5	ALL exc	ept PII, I	All	•••			
9268	Brake-place spacer-	⊸inner		• • •	***	***	***	ſ	65055, A		***				
30017	Brake-place spacer-	-outer	·	***		•••	***	Ţ		ept 650SS		, P!I.	PHA		
.5276	Brake-plate washer			•-•	•••	• • •	•••	AR		ept PII, I	MA		•		
33197	Rear wheel complete			125	***	•••	***	!	P11, P11		***	•••	****		
33198	Rear wheel only	42 10	***	***	***	•••	•-•	1	P[1, P]		•••	•••	•••		
12051	Rear rim only-Y/N		• • • •	•	•	•••	***	40	PII, PII		***	•••	***	** *** **	
30366	Spokes	•••		•••	•••	• • •		40	PII, PII		***	•••		*********	
21694 33052	Spoke nipples Hub shell only	•••	•••	***	• • •	• • • • • • • • • • • • • • • • • • • •	•	1	PII, PII		:	***	***		
4868	Hub bearings	•••		•••		•••	•••	ż	PII, PII		***		•••		
1586	Hub-bearing spacer		•	***	•••	•••		ī	PII. PII		•••		•••		
2436	Oil-seal packing was		•••	***	•••			i	PII, PII		•••	•••	***	- 1 mm -	
12730	Oil-seal retaining ris			•••	•••	• • • • • • • • • • • • • • • • • • • •	•••	1	PII, PII		***				
21585	Oil-seal retaining ris				•••	•••	***	1	P11, P11		*	•••	•••		
14387	Oil-seal		***	•••	• • • •	•••	•••	ı	PII. PII	Α	•	•••	***		
18094	Oil-seal cups	•••	•••	***	•••	• • •	•••	2	PII. PII		•••	•••	•••	***	
10740	Oil-seal circlips	•••	•••		•••	• • • •	***	1	PII, PII		***	•••	•••		
	Oil seal spacers	• • •	***	•••	•••	***		2	PII, PII		***	•••	•••		
21583	Bearing adjuster		•••	•••	•••	***	•••	į	PM, PH		***		•••		
	Bearing adjuster lock	_	***	***	•••	•	•••	ļ	PII, PII		•	***	***		
	Rear-hub spindle	• • •		***	•••	• • • •		1	PII, PII.	A	***	***	***		

s. ć.

REAR \ 033083 014869 033090 021582 021550 028070 028073 029242 025225 025247 025426 016213 023281 033081 0000051 012891 0013620 010440 000113 012892 013291 0033171 000174 000004 033031 028071 028071 033059 019625	Hub-spindle s Hub-spindle s Hub-spindle-n Hub disc Grommet Speedometer; Speedometer	pacer  int space  gearbo gearbo gearbo brake procke	x space x wash x locat x nut t bolts ngs t bolt i t bolt interes asse	washe	  				1111111525	PII, PII PII, PII PII, PII PII, PII PII, PII, PII, PII, PII, PII, PII, PII, PII, PII,	A A A A A A A A A A A A A A A A A A A				Marie 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
014869 033090 021582 021550 028070 021454 028073 029242 025225 025227 25466 016213 023281 033081 0000051 012891 013620 010440 000113 0012892 013291 033171 000074 000004 000004 000004 000004 000004 000005 013291 033059 019625	Hub-spindle n Hub-spindle-n Hub disc Grommet Speedometer, Speedometer, Speedometer, Speedometer, Sprocket and Brake drum,'s Brake drum,'s Brake drum,'s Brake drum,'s Brake drum,'s Rear brake ca Rear-brake sh Rear brake-sh Rear brake-sh Brake-shoe ea Brake-shoe ea Brake-shoe ea Brake-shoe ea Expander-leve	gearbo gearbo gearbo gearbo gearbo procke pr	x space x wash on the linings	er er cing be washe nuts embly	    				2	PII, PII, PII, PII, PII, PII, PII, PII,	A A A A A A A A A A A A A A A A A A A				Maria 1	
033090 021582 021550 021550 028070 021454 028073 029242 025225 025247 25466 016213 023281 033081 0000051 012891 013620 010440 000113 012892 013291 033171 000074 000004 0000174 000004 0030031 0030059 019625	Hub-spindle-n Hub disc Grommet Speedometer; Speedometer; Speedometer; Speedometer; Speedometer; Sprocket and Brake drum; Brake drum; Brake drum; Brake drum; Brake drum; Brake shoe w Brake-shoe ca Rear-brake sh Rear brake-sh Brake-shoe re Brake-shoe e Brake-shoe e Expander-leve	gearboogearboogearboobrake procket procket	x space x wash x locat x nut drum t bolts t bolt t lt t bolt t bolt bolt t bolt bolt bolt t bolt bolt bolt bolt bolt bolt bolt bolt	er er cing be washe nuts embly	    				2	PII. PII. PII. PII. PII. PII. PII. PII.	A A A A A A A A A A A A A A A A A A A				Maria 1	
021582 021550 021550 021654 028073 029242 025225 025247 25466 016213 023281 033081 000051 012891 013620 010440 000113 012892 013291 033171 000074 000004 033031 0028071 033059 019625	Hub disc Grommet Speedometer; Speedometer; Speedometer; Speedometer; Sprocket and Brake drum; Brake drum; Brake drum; Brake drum; Brake drum; Brake shoe w Brake-shoe ca Rear-brake sh Rear brake-sh Rear brake-sh Brake-sh Brake-sh Brake-sh Brake-sh Brake-sh Brake-sh Brake-sh Brake-sh Brake-sh Brake-sh Brake-sh	gearbo gearbo gearbo gearbo brake procke ich linin procke procke procke ver pla  m oes wii oes linin oe linin curn sp	x space x wash x locat x nut drum t bolts t bolt t bolt tte asse	er er cing be washe nucs embly	 ush  rs				2	PII, PII, PII, PII, PII, PII, PII, PII,	A				Market	
021550 028070 028070 021454 028073 029242 025225 025247 25466 016213 033081 000051 012891 013620 010440 000113 012892 013291 033171 000074 000004 033031 0028071 033059 019625	Grommet Speedometer; Speedometer; Speedometer; Speedometer; Sprocket and Brake drum;s	gearbo gearbo gearbo gearbo brake ich linie procke procke procke ver pla  m oe linie oe linie turn sp	x space x wash x locat x nut drum t bolts t bolt t bolt tte asse	er ner ting be ting be washe nuts embly	ush				2	PII, PII, PII, PII, PII, PII, PII, PII,	A A A A A A Ppt PII				Market	
028070 021454 028073 029242 025225 0252247 25466 016213 023281 0033081 000051 012891 013620 010440 001049 012892 013291 033171 000174 000004 000004 0033031 0033059 019625	Speedometer, Speedometer, Speedometer, Speedometer, Speedometer, Speedometer, Speedometer, Speedometer, Speedometer, Speedometer, Speake drum, Sprake drum, Sprake drum, Sprake drum, Speake shoe ca Rear-brake sh Rear brake-shoe ea Brake-shoe ea Brake-shoe ea Expander-leve	gearbo gearbo gearbo gearbo brake procke ich linie procke procke procke ver pla  oes wii oe linie oe linie curn sp	x space x wash x locat x nut drum t bolts t bolt t bolt tte asse	er ner ting be  washe nuts embly	 ush  				2	PII, PII, PII, PII, PII, PII, PII, PII, PII, PII,	A A A A A				Market	
021454 028073 029242 025225 025225 025247 25466 016213 023281 033081 0000051 012891 013620 010440 0000113 0012892 013291 033171 0000174 000004 000004 000005 0130059 019625	Speedometer, Speedometer, Speedometer, Sprocket and Brake drum,'s Brake drum,'s Brake drum,'s Brake drum,'s Rear brake shoe ca Rear-brake sh Rear brake-shoe ea Brake-shoe ea Brake-shoe ea Expander-leve	gearbo gearbo gearbo gearbo brake procke ith linin procke procke procke ver pla m oes wii oe linin oe linin turn sp	x wash x locat x nut drum t bolts ngs t bolt t bolt tte asse	washe nucs embly	rs				2	PII, PII, PII, PII, PII, PII, PII, PII,	A A A A ept PII			•••	March Committee of the committee of the	
028073 029242 025245 025247 25466 016213 023281 033081 0000051 012891 013620 010440 000113 010490 010490 000174 0000174 000004 0000174 000004 000004 000005 013005 019625	Speedometer, Speedometer, Speedometer, Sprocket and Brake drum,'s Brake drum,'s Brake drum,'s Rear brake co Grease nippe Brake-shoe ca Rear-brake sh Rear brake-shoe ex Brake-shoe ex Expander-leve	gearbo gearbo brake o procke ich linin procke procke procke ver pla  m oes win oe linin curn sp	x locat x nut drum t bolts ngs t bolt t bolt tte asse	washe nucs embly	rs				2	PII, PII. PII, PII. PII, PII.	A A A ept PII			•••		
029242 025225 025227 225426 016213 023281 033081 000051 012891 013620 010440 000113 012892 013291 033171 000074 000004 000004 0030059 019625	Speedometer, Sprocket and Brake drum,'s Brake shoe w Brake drum,'s Rear brake co Grease nipple Brake-shoe ca Rear-brake sh Rear brake-shoe ra Brake-shoe a Brake-shoe ex Expander-leve	gearbo brake procke ich linin procke procke procke ver pla m oes wii oe linin curn sp	x nut drum t bolts ngs t bolt n t bolt n t bolt n the asse	washe nuts embly	  				2	PII, PII, PII, PII, PII, PII,	A A A ept PII			•••		
025225 025247 25466 016213 023281 033081 000051 012891 013620 010440 000113 012892 013291 033171 000074 000004 033031 028071 033059 019625	Sprocket and Brake drum/s Brake shoe w Brake drum/s Rear brake co Grease nipple Brake-shoe ca Rear-brake sh Rear brake-sh Brake-shoe re Brake-shoe ex Expander-leve	brake of procke procke procke over pland oes wire oe linit turn special procket of the procket o	drum t boits ngs t boit t t boit t tte asse	washe nuts embly	rs				2	PII, PII.	A A ept PII		•••	•••		
025247 25466 016213 023281 033081 000051 012891 013620 010440 010440 0102892 013291 033171 000174 000004 000004 0033031 028071 033059 019625	Brake drum/s Brake shoe w Brake drum/s Brake drum/s Brake drum/s Rear brake co Grease nipple Brake-shoe ca Rear-brake sh Rear brake-sh Brake-shoe re Brake-shoe ex Expander-leve	procke ith linin procke procke ver pla m oes wis oe linin turn sp	t bolts ngs t bolt i t bolt i tte asse	washe nuts embly	rs				2	PII, PII.	A		•••	•••		
016213 023281 023281 003081 000051 012891 013620 010440 000113 012892 013291 033171 000174 000004 000004 0000033059 013059	Brake shoe w Brake drum/s Brake drum/s Rear brake of Grease nipple Brake-shoe ca Rear-brake sh Rear brake-sh Brake-shoe ad Brake-shoe ex Expander-leve	ith lining procket procket procket plant of the procket plant of the procket p	t bolt of bolt of bolt of bolt of the asse	washe nuts embly	rs				2		ept PII		86	•••		
023281 033081 0000051 012891 013620 010440 000113 012892 013291 033171 0000174 000004 033031 033059 019625	Brake drum/s Rear brake co Grease nippe Brake-shoe ca Rear-brake sh Rear brake-sh Rear brake-sh Brake-shoe re Brake-shoe ed Expander-leve	m oes wir oe linin turn sp	t bolt in ite asse	muts embly 		•••			5				***	***		
033081 000051 012891 013620 010440 000113 012892 013291 033171 000174 000004 033031 028071 033059 019625	Rear brake co Grease nipple Brake-shoe ca Rear-brake sh Rear brake-sh Brake-shoe re Brake-shoe ex Expander-leve	m oes wis oe linin oe linin turn sp	th linin	embly 		•••	•••			P11, P11.	A					
000051 012891 013620 010440 0000113 012892 013291 033171 000174 000004 033031 028071 033059	Grease nipple Brake-shoe ca Rear-brake sh Rear brake-sh Brake-shoe re Brake-shoe ad Brake-shoe ex Expander-leve	m oes wit oe linit oe linit turn sp	ch linin	 igs		•••			5	PII, PII.			***		-	
012891 013620 010440 0000113 012892 013291 0333171 0000174 000004 0033031 028071 033059	Brake-shoe ca Rear-brake sh Rear brake-sh Rear brake-shoe re Brake-shoe re Brake-shoe ex Expander-leve	m oes wit oe linit oe linit turn sp	ch linin	egs	•••			***	Ī	PII, PII,		• • • • • • • • • • • • • • • • • • • •	***	***	-	•
013620 010440 000113 012892 013291 033171 0000174 000004 033031 028071 033059	Rear-brake sh Rear brake-sh Rear brake-sh Brake-shoe re Brake-shoe ad Brake-shoe ex Expander-leve	oes wis	ngs	•			***	***	Ī	PII, PII.		• • • • • • • • • • • • • • • • • • • •	•••	***		
010440 000113 012892 013291 033171 0000174 000004 033031 028071 033059	Rear brake-sh Rear brake-sh Brake-shoe re Brake-shoe ad Brake-shoe ex Expander-leve	oe linii oe linii turn sp	ngs	•			***	***	1	Pil, Pil.			***	***		٠.
000113 012892 013291 033171 000174 000004 033031 028071 033059 019625	Rear brake-sh Brake-shoe re Brake-shoe ad Brake-shoe ex Expander-leve	oe linir			• • •	***	•••	pair	!	PII, PII,			•••	•••	k3	
012892 013291 033171 000174 000004 033031 028071 033059 019625	Brake-shoe re Brake-shoe ex Expander-leve	curn sp	IS LIVE		• • •		•••	pair	1 4	PII, PII,			***	***	-	
013291 033171 000174 000004 033031 028071 033059 019625	Brake-sibe ad Brake-shoe ex Expander-leve				•••	***	•••	sec	2	PII, PII,				•••	-	sec
033171 000174 000004 033031 028071 033059 019625	Brake-shoe ex Expander-leve				***	•••	***	***	2	PIL PIL				•••		
000174 000004 033031 028071 033059 019625	Expander-leve				***	***			i	PII, PII						
000004 033031 028071 033059 019625				•••	***			***	i	PII, PII						
028071 033059 019625					***	***	•••	•••	1	PII, PII.					Mark a product a con-	
033059 019625	Cover-place s				•••	•••		•••	1	PII. PII.					man	
019625	Cover-place s	pacer (	outer)		***		•••	•••	1	P11, P11.	Α					
	Torque strap		***	***				•••	1	P11, P11.			***		-	
מומסחר	Torque-strap		•••	***	***	•••	•••	•••	2	PII, PII,			***		-	
	Torque-strap				• • •	***		***	2	PII, PII.		***	***			
016845	Torque-scrap	bolt nu	271	***	***	***	***	•••	2	PII, PII	A	• • • • • • • • • • • • • • • • • • • •	***	•••		
19995 19929 19978	Rear-brake pe Pedal return s	dal				•••	•••	***	1	650SS, A	tlas				** *** *** ***************************	
19996	Grease and re Brake-pedal sp				***	•••	***	***	1	650SS, A			•••	***		
000008	Pedal-spindle				•••		•••	***	1	65055, A 65055, A			•••	•••	W 11 A 1 100 AND 1 100	
041265	Pedal-spindle				***		•••		i	6505S, A					\$ 40 \$ 4 \$ 1 . AM A SERVICE . CO. 42	
19997	Pedal-spindle				•••				i	650SS, A			•••	•••		
19976	Pedal stop		• • •			***			1	650SS. A				•••		
15819A	Brake rod			***	***	***			1	650SS, A	clas	•••			me on the first sendings	
033023	Brake-rod yok				•••		***	•••	I	65055, A	tlas	•••	•••	•••		
E.3255	Yoke-end clev	is pin			•••	***		•••	1	650SS, A		•••	***	***		
17735	Clevis-pin spli		•••	***	***	***	• • •	•••	!	65055, A		-			-	
029559	Rear-brake pe	dal	•••	***	***	***	***	***	1	GIS Ma			s, N	3C2,		
21700	Pedal return s	pring	***		***				1		irk II		s, N	SCS,	W-1000 100 100 1 100	
000051	Grezse nipple			•••	***				1	GISCS ALL ex			Arias	P11.	Maria Maria de Constante	
			•••	***	***	***			•	GISCS	R 1968	. PIIA		***		
021699	Brake-pedal sp	indle	•••	•••	***	***	•••	***	1	GIS Ma			N150	CS,		
22609	Pedal bolt								1	GISCS GIS Mark		SCS NI	SCS			
22314	Pedal scop		•••	•••	•••		•••	•••	1	G15 Mari						
22297	Brake rod	•••					•••		1	GIS Ma						
		***	•••	***		•••	•••	•••	•	GISCS		***			disposed in the disposed of the contract of th	
23299	Brake-rod yok	e end	***		***	***	•••	•••	1	GIS Mark			SCS	•••		
000736	Yoke-end clev	is pin					***		i	GIS Mark	II, GI	5CS, NI.	5C5			
000014	Clevis-pin spli	t pin	•••	• • •		***		***	1	GIS Mark	11, GI	5CS, NI.	SCS			
B929	Cam-lever roll		•••	•••	***	***			ı	ALL exce			***	***	0 ( + + - 1 tr N- N- P1/80)	
22743	Brake-rod adju		iut	***	•••	***	***	•••	1	ALL exce			•••	***	9	
31573	Rear-brake pe		•••	***	***	***	***	***	1	GISCSR			***	•••	ar - aplaneratedas re	
29896	Pedal return s		•••	• • •	•••	•••	***	***	į	GISCSR		,	•••	***	4 tor	
129893 129902		***	***	***	•••	•••	***	***	1	GISCSR			***	•••		
129395	Brake rod Brake pedal slo		nivor	***	•••		***	***	1	GISCSR GISCSR		,	•••	***		
000009	Pedal-spindle		PIVOL		***	***	***	•••	1	GISCSR			•••	•••		
00002	Pedal-spindle				***	***		•••	i	GI5CSR			***	***		
33162	Rear-brake per							***	1	PII, PIIA					1 / /90/00/20 2 4	
23269	Brake-pedal bo	ıίς							ı	PII, PIIA				***		
	Brake-pedal pi	vot or	siceve		•••	•••	• • •		1	PII, PIIA		•••		•••	disc to a temporal ring	
01000	Brake-pedal bo	olt was	ners	•••	****			***	2	PII. PIIA		***	•••	***		

Part No.		Des	cripties	1				Qty	<i>/</i> .	Models	fitted	to		êin Na.	۷ s. d.
BRAKE	OPERATING I	PART	-Sc	ontinu	ied										
023291	Brake-pedal-bolt nut		•••	•••	•••	•••	•••	f	PH, PHA	•••	•••	***		4	
022297	Brake rod				•••	•••		1	PII, PIIA	•••	•••	• • • •	•••	4	
000005	Brake rod adjusting		•••	•••	•••	•••	•••	2	PII, PIIA	***	•	• • •	•••		
017227	Brake-rod adjusting	clip	•••	•••	•••		•••	1	PII, PIIA PII, PIIA	•	•••	***	•••		
023299 000736	Brake-rod yoke Brake-rod clevis pin	•••	• • • •	• • • •	• • • •	• • • • • • • • • • • • • • • • • • • •	•••	i	PII, PIIA	•	•••	•••	•••		
000014	Split pin	•••	• • • • • • • • • • • • • • • • • • • •	• • • •	***	•••	•••	İ	PH, PHA	•••	•••	•	•••		
SPEEDO	OMETER													•	
030258	Speedometer head-	-m.p.ħ.	only				•••	J	ALL	***	•••	•••	• • •		
030259	Speedometer head-			***		• • • •	***	!	ALL			•••	***		
22888	Speedometer-drive	gearbox	۲	•••	•••	***	•••	I 1	ALL excep				•••	**** ****** .	
13270	Speedometer-gearbo			•••	•••	• • •	•••	ţ	ALL excep		IIA	•••	•••		
02S073 029242	Locating bush Nut	***	•••	•	• · ·	•-•	•••	i	PII, PIIA	•••	•••	***			
025070	Speedometer/gearbo			•••	• • • •		***	i	PII, PIIA	***	•••		•••		
021454	Spacer washer	***	• • •	•••		•••	•••	1	PII, PIIA		•••	•••	•		
25087	Speedometer-d/live of	cable co	amplet	ę	• • •	• • •	• • • •	1	65055, Atla			•••	•••		
030344	Speedometer-drive of	cable co	anples	e	4		•••	Ī	ALL excep			• • •	•••	to the second contraction of	
000012	Speedometer-head s	pacing		rs	• • •	***	•••	2	GISCS, NI			•	***		
030435	Speedometer light le	eid	186	F270 2	671		•••	1	ALL excep			•	• • • •	Br. d. debt.	
02 <del>111</del> 8	Speedometer/gearbo				67)	• • • •	•••	1	PII, PIIA	***	***	***	•		
000190 L643	Gearbox drive screy Bulb 12 yolt 2.2 wat		8 44 7311	E ( 3	• • • •	***	•••	î	ALL P.Ta		***	•••			
		• • • •	•••	•••	•	••	***	, .	,		•••				
HEADL		1						,	All sugge	15-	<b>5</b> 0				
59666A	Headlamp complete			•••		***	•••	1	ALL excep GISCSR	GISC	214	•	*	+	
59579A 033166	Headlamp complete Headlamp with harn	1627 HT	icas 540	 วรัว775	)}	•••	•••	i	PII, PIIA		***	•••	•		
033012	Headlamp with harn				,	•••	•••	i	ALL excep	t PIJ. F		4			
554248	Headlamp rim		•••	***	• • • •	***		j.	ALL	***					
516798	Reflector and glass I		îc	•••				Ţ	ALL	•••	•••	***	•••		
144921	Rim fixing screw	• • •	•••	•••	•••	•••	•••	ì	ALL	***	• • • •	•	***		
534296	Rim fixing place	•••	•••	•••	•••	***	• • •	1	ALL	•••	•••	•••	• • •		
554710	Piloc-bulb holder	•••	•	• • • •	• • •	***	•••	1	ALL ALL	***	•••	•••	***		
031540 031555	Headlamp-bolt wash Headlamp spacers		•••		•••	•••	•••	ź	ALL	•••	•••	•••	•••		
112201	Headlamp bolcs	•		• • • • • • • • • • • • • • • • • • • •	•••	4		2	ALL	•••	***		•••		
38189	Warning-light assem							1	ALL 1968	•					
54952937	Cable harness		• • •			•••	***	į	PII, PIIA		***				
54939967	Cable harness		•••		•••	•••	• • • •	į			, Atlas,	, P11, E	HA		
54939968	Cable harness	•••	• • •	•••		• • • •	• • • •	I	65055, Atla		•••	•	*		
RV336	Bulb 12 voit 50/40 w		•••	* 1 *	• • •	•••	***	-	ALL P.Ta: ALL P.Ta:			•••	•••		
989 36296	Ammeter	•••	•••	•••	• • • •	•••	•••	i	ALL	***	•••	•••	•••		
REAR L	ΔΜΡ														
030071	Lamp complete (Luc	. 564 <b>)</b>		•	***	111		1	650SS, Atla	s. G150	CSR			ap our pa acquired char	
24840	Lamp complete (Luc			•		***	•••	i	ALL except			R, Act			
54576001	Lens-red (model 56		•••	•••	• • •		•••	3	650\$\$, G i 5	<b>CSR</b>	***	•••	•••		
54572932	Lens-red (model 67	79)	•••	***			•••	I	ALL excep		, G15C	SR	•••		
575219	Lens nuts (model 56		• • •		•••	•••	•••	2	65055, G15		-::		***		
572289 -	Lens screws (model		50.45	• • •	•••	•	***	2	ALL excep		, G15C	214	***	-	
575208	Lens-seating gasket			•••	***	•••	•••	1	65055, G15 ALL excep		GISC	S R	***		
54571677 575207	Lens-seating gasket ( Buibholder grammer			•••	•••	•••	•	i	6505S, G15		, 0150		•••		
5457 <del>4</del> 348	Bulbholder with refl				•••	•••	•••	i	ALL excep			SR.	• • • • • • • • • • • • • • • • • • • •		•
575209	Bulbholder (model 5		•••		•••	***		ŀ	650SS, G1S		•••	***	•••		
573825	Cable entry gromme		lei 564)	)	• • •			ı	65055, G15	CSR	•		•••	as a substitution of	
380	Bulb 12 yolt, 21/6 w	att		•••	***	•••	***	1	ALL ·	***	•••	•			
19429	Grommet	•	*	***	***		***	1	65055, Atla G15 Mark !			· · ·	•••	** ***	
011094	Grommet	•••	•••	•••	• • • •	•••	•••	٠	G12 LITEK	1, 6156	-2, 141.		***	· · · · · · · · · · · · · · · · · · ·	
HORN															
030045	Electric horn	•••	•••	***	•••	•••	•••	1	ALL 65055, Atla		•••	•••	***		
2338 <del>9</del> E.3221	Horn fixing screws Fixing-screw nuts	•••		•••	•••	•••	•••	2	65055, Atla		***	•	***		
23410	Fixing-screw washers		•••	•••	•••	•••	•••	2	65055, Atla		•••				
000342	Fixing bolts	***		•••			•••	2	ALL except	65055,	Atlas	•••		H	
000012	Fixing-bolt washers	•••	•••	•••	***	•••	•••	2	ALL except			•••	•••		
000005	Fixing-bolt nuts	•••	•••	•••	•••	•••	***	2	ALL except			•-•	•••		
030044	Horn-bracket	***	•••	•••	•••	• • •	***	ı	ALL except	, בבטבם	Wilzs	•••	•••		

Part No.		De	scription	1				Qty	. Mo	dels fitted	to		Bin No.	£	٤.
STOP	LIGHT														
31621	Stop-light switch			***	•••	•••		1	ALL						
33042	Light-switch bracket		•••			•••		1	65055, Atlas			•••			
22807	Light-switch bracket		***		***			1	650SS, Atlas		***		-		
000010	Switch bracket-bolt				•••			2	650SS, Atlas			***			
.3224A	Light-switch bracket			***		***	•••	ī	65055, Atlas				************		
00450	Light-switch screws						***	2	G15 Mark II, G	ISCS. NI					
00451	Light-switch screws							2	650SS. Aclas.						
00039	Light-switch screw			•••				4	ALL						
08000	Light-switch screw r		***	***		•••	,	2	650SS, Atlas, G	ISCSR. PI	I. PI				
14340	Light-switch bracket			•••	•••	•••		ī	G15CSR 1967			***	***************************************		
33173	Brake-switch cable			•••				i	PII, PIIA		•••				•
0245		•••		***				i	ALL except PI		***				
21595	Stop-light/brake-ped			•••	•••			1	ALL except 650	SS. Atlas.	PII.				-
29245	Stop-light/brake-ped			***				i	ALL except 650						
33019	Stop-light/brake ped				***			i	GISCS, GISCS						
22013	acob-light/prake bed	121 001		***	***	***	•••	•	PIIA			, ,,,,,			
80	Bulb 12 volt, 21/6 w	325	•••	•••	•••			1	ALL P.Tax 8d.			•••	-		
LTER	NATOR														
LIEK	NATOR .														
29632	Alternator (rotor an	d state	or)		• • • •		•••	1	ALL	•••	•••	•••	-		
7204A	Stator only	•••						ŧ	ALL		•••	***	**************		
4213901	Rotor only							1	ALL		***	•••			
1065	Alternator grommet		***		***		***	-	ALL except 650		***	***			
1595	Alternator grommet		***				• • •	1	65055, Atlas		***	•••			
433	Stator studs				***		***	3	65055, Atlas		***	***	-		
11579	Stator-stud washers		***		***		•••	3	65055, Atlas 19	57	•••				
3403	Stator-stud nuts		• • •		***		***	3	65055, Aclas		***	***			
738	Rotor spacer				•••			1	650SS, Atlas		***	***	-		
948	Rotor key				•••			1	ALL		***	***			
147	Rotor washer							1	65055, Aclas	•••	***	***			
692	Rotor nut		•••		• • •			1	650SS, Atlas		***	•••	-		
1826	Stator studs						***	3	ALL except 650	SS, Atlas	•••	•••			
00012	Stator-stud washers		• • • •		***		•••	3	ALL except 63		19	66-67,			
								-	ALL 1968		211	• • • •			
1843	Stator-stud nuts		***	***		***	•••	3	ALL except 650			•••			
30251	Rotor spacer	***	***	•••	***	***	***	1	ALL except 650		***	•••	***************************************		
4948	Rotor washer	***	***	***	***	•••	***		ALL except 650		•••	***			
1947	Rotor nut	***	***	•••	***	***	***	1	ALL except 650	35, Atlas	•••	***			
1834	Contact-breaker plat			•••	•••	***	•••	1	PII, 1967	DILA	•••	•••			
33045	Contact-breaker con				***	***	•••	1	ALL except Pil		•••	***			
34049	Contact-breaker hou		nd bear	ing cly	A pash	•••	***	1	ALL		•••	***			
14051	Contact-breaker shall		***	•••	***	***	***		ALL		***	***			
13069	Contact-breaker hou					***	***	1	ALL		***	•••	-		
7429	Contact-breaker cov	er gro	mmet	***	***	***		ı	ALL	•••	***	***			
33016				***	***	***	***	1	ALL			•••	-		
33044	Ignition switch (lock	with .	2 keys)		•••		***	1	GISCS, NISCS,		4	•••			
3058	Ignition switch brack	cet	***	• • •	• • •	***	•••	1	ALL except PII	, PITA	***	•••			
0174	Ignition switch brack					***	•••		65055, Atlas	•••	***	•••			
3066	Contact-breaker hou	sing c	w bush		•••	•••	•••	1	ALL		•••	•••			
415803	Contact set			•••				1	ALL except PII		•••	•••	-		
5377	Condensers		***	***		•••		2	ALL except PII		•••	•••			
418910	Auto-advance unit	***			•••	***		1	ALL except PII	Α	•••	***			
415642	Auto-advance unit sp	rings			•••			2	ALL	***	•••	***	-		
3015	Coils complete with	clips	***		***	***	***	2	ALL	***	***	***	p-mi-sa p-ma (10 11 f-4		
0479	Coil fixing bolts		***	***		***		3	65055, Atlas		•••	***			
0070	Coil fixing bolts	***	•••	***	***	***	***	3	ALL except 650		•••	***			
0012	Coil fixing bolt wash	ers	***	***	•••	***	***	3	ALL except PII		•••	***			
0005	Coil fixing bolt nuts	***			•••	***	•••	3	ALL except 650		***	•••	-		
229	Coil fixing bolt nuts		***		•••	***	•••	3	650SS, Atlas	***		***			
100	Coil rubbers	***			•••	***		2	ALL	•••			-		
800	Coil bracket		***		***			1	ALL except 650				-		
1009	Coil strap		***	***	***	***		1	ALL except 650	55, Atlas,	PII,	PIIA			
1319	Contact-breaker cam			•••				1	ALL 1967-68	•••	•••	***			
221	Contact-breaker cam		washer	•••				1	ALL	***	***	***	-		
306	Contact-breaker cam			(fan dis	-		•••	1	ALL 1967-68	•••	•••	***	******************		
983	Contact-breaker fixin							2	ALL 1967-68	***		•••			
984	Contact-breaker fixin						•••	2	ALL 1967-68	•••	•••	***	-		
1067	Contact-breaker shaft		***	•••			•••	1	ALL 1967-68	***	***	•••	-		
080	Contact-breaker shaft	-		•••		•••	•••	1	ALL 1967-68	***	•••				
3007	Contact-breaker shaft					***	***	1	ALL 1967-68	•••		***			
3068	Contact-breaker shaft	beari	ng			***			ALL 1967-68	•••					-
	c ! ! !	11	w buch						ALL PIIA	***	•••		and the second		
066	Contact-breaker hous	HUL CI	M OUZU							***			Mar. 1981 11 11 11 11 11		

the state of the state of the state of the state of

Angeles in a second of the sec

. . ....

Part No.		De	scriptio	n				Q	γ.	Mode	els ficced	to		Bin No.
ALTER	NATOR — conti	nued												
033056	Contact-breaker co	ver gas	ket				•	ŀ	ALL PIL	٠ ۶			•••	
19429	Contact-breaker co	ver gro	mmet	•••				-	ALL PIL	٠	• • •			
030084	Contact-breaker co		- ,		•••	•••	• • •	ļ	ALL		•••	***	•	
031921 25105	H.T. leads (5493490		a	•••	•••		•	2		٠	•••	***	•••	, , 4,
010706	Contact-breaker ho				•••	•••	• • • •	i	PIL	•	•••	•	•••	
015306	Contact-breaker ho	using-b	oit was	ther (f				1	PII		***	***	•••	
E.3229	Contact-breaker ho	using-b	olc nuc	· `	•••	•	• • • •	1	PII				•••	
T.2245	Contact-breaker ho				•••	***		2	641	•••	***	•••	• • • •	* · · · · · · · · · · · · · · · · · · ·
11796 E.3231	Contact-breaker ho				•••	•••	•	2		***	***	***	***	and the real of the said
T.2191	Contact-breaker ho				•••		***	î	PII	***	•••	•	•••	*
031075	Capacitor (Lucas 54			***	***			- }	P11	•••	***	•••	•••	
0310\$0	Capacitor spring	•	•••	***		• • •		- !	PIT, PITA			• • • •	***	
030479	Capacitor bolt	•••	•	• • •	•••	•••	***	}	ALL exce			•••	•••	
E.3229 T.2221	Capacitor bolt nut	n hale	···	•••	• • •	• • • •	•••	ļ	ALL 1968		PHA	•••	•••	
033045	Contact-breaker pla			•••	•••		•	i	ALL 1968		PIL PI	[A		
033257	Capacitor-spring bo		***	•••	•••		,,,	i	PII			•••	•••	
000012	Capacitor-saring bo			•••	•••	• • •		ე 2		٠		•••		
000005	Capacitor-spring bo		•••	•••	• • •		***	ŀ	P11. P11/		•••	•••	•••	
034086	Contact-breaker cor			• • • •	•	***	•••	- [	PHA	•••	***	***	•••	#11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
54419097 54419827	Contact-breaker pla		***	•••	•••	•	•••	1	PHA	***	***	•••	•••	
54419340	Auto-advance unit				•••	•••	•••	i	PLIA	•••	•••	•••	•••	
54420129	Condenser				•••	•••		2			***	•••	•	
54418528	Coyer			•••	2		•••	i	PHA	•	•••	•	•••	
033107	Rectifier bracket	•••	•••	***	***	•••	•••	1	PIIA	•	***	•••	•••	
06-0573	Condenser pack	•••	•••	• • •	•••	•••	•••	I	PHA	•••	•••	•••	***	
54190387	Fuse holder USE FOR ABOYE N					•••	•••	'	PII. PII.	٠	***	•••	•••	
030047	RY AND FITTI  Batteries with lids (		ქხაღძ	rγ)			***	2	ALL exce		•••		•••	
030351	Link for batteries		•••	•••	•••	***	***	- [	ALL exce		***	***	•••	
040137 000012	Battery to earth bol Earth bolt washer		***		•••	• • •	•	í	ALL exce		•••	•••	•	
033049	Bactery (Lucas PUZ:					• • • •	•••	j	P11, P11A		•••	•••		******
033184	Baccery strap		•••	•••	•••		•••	1	PII, PIIA			•••	•••	
028044	Battery-strap pins		•••		•••	•••	•••	2	P11, P11A	•	•••	***	•••	
026359	Battery cushioning p			•••	•••	•••	•••	1	P!! P!! P!!A		***	•••	•••	
19101	Battery cushioning p	17021		•••	•••	***	***	î	65055, At		***	•••	***	M 144 1771-1971-1
030056	Battery strap	•••	•••	•••		•••	***	i	G15 1968	*** .	•••	•••		
040454	Baccery pad	***	• • •	•••		•••	•••	1	G15 1968	•••	•	•••	•••	
RECTIF	IER AND ZEN	ER D	IODI	Ē										
029604	Rectifier with nut			•••				1	ALL			•••		ir de com remin to de
015306	Rectifier washer	•••	•••	•	• • •		•	!	ALL	•••	***	•••		
033057	Rectifier nut	***	****	• • •	***	•••	***	- [	ALL	***	***	<b>`</b>	•••	
030051	Zener diode Heat-sink plates		***	•••	•••	•••	***	2	ALL	•-•	***	•••	•••	*** **** ** ****** ** * * *
030043	Heat-sink place space	 er		•••				î	ALL	•••	***	•••		
000362	Zener diode bolt	•	•••					i	65055, At		•••	•••	•••	
000367	Zener diode bolt		•••	•••	•••	•••	•••	1	ALL exce		, Atlas	***	•••	
014515	Zener diode spacer			•••	• • •	•••	***	1	ALL exce		, Atlas	•••	***	w
014779	Zener diode bolt wa		•••	•••	• • •	•••	***	1	650SS, At	as	•••	***	•••	A service a Bigitte speak
015306	Zener diode nut was Zener diode bolt wa		***	•••	•••	***	•••	ŀ	ALL exces	× 65055	Artas	•••		
000001	Zener diode bolt nu		•••	•••	•••	•••	***	į	-650SS, At		, 216143	•••		
033057	Zener diode fixing n		***	•••	•••		•••	l	ALL		***	•••		
026656	Zener diode bracket			•••	• • • •	•••	•••	1	65055, Ac		***	•••	•••	** *** ***
014119	Zener diode bracket	washe		•••	•••	***	•••	]	65055, Ac	as	•	•••	•••	
033015	Coils only	•••	•••	•••	***	•••	•••	3	PII, PIIA PII, PIIA	•••	•	•••	•••	
000070 000012	Coil fixing bolts Coil fixing-bolt wash	ers	•••	•••	•••	• • • •	• • • •	8	PII, PIIA	***	***	•••	• • •	
	Coil fixing-bolt nuts		•••	•••	•••	•••	•••	4	PII, PIIA	•••	***	•	•••	
033100	Coil rubbers	•••	•••	•••	•••	•••	•••	2	PII, PIIA	•••	***	•••		n n
	Cail fixing bolt	•••	•••	•••	•••	•••	•••	3	6505S, Atl		•••	•••	•••	
	Coil fixing bolt nuts		•••	•••	•••	•••	•••	3	65055, Atl		CSR		•••	
2006 0	Coil bracket	***	***	•••	***	***	***	ı	313, 313	ادان ,د۔	_3K	•••	•••	

Part No.	Des	cription				Q	ty.	Mode	ls ficce	i to		Bin No.
SWIT	CHES AND ELECTRI	CAL S	JNDI	RIES								
022548	Horn and dipping switch			***	***	1	ALL		• • • •			-
380459	Rubber packing for switch				***	1			***	***		Mar comment becomes a
021299	Switch screws	***	***	***	***	2				***		#**** ************ *****
76204D	Magneto cut-out switch			***	***	1	ALL exc			***		F retree do libertay and tree
369218	Horn cable	***		***	***	R				***	***	******************
369218	Cut-out switch cable				•••	R				***	•••	-
033024	H.T. cable for spark plug, w H.T. cable for spark plug, w				•••	R				•••	•••	afference i desegrifacionamento s
000541	H.T. cable terminal			***	•••	R				***	•••	Maranana companies o
032057	Spark plug (Champion N4)					R				***	•••	******************************
033016	In the term of the term	*** ***				1			963			
033044	Ignition-switch lock with 2					E	PII, PII	A, ALL I	955	***		
033174	Ignition-switch bracket		***	***	***	1	PII		***	***	***	-
030170	Lighting switch (Lucas 5403			***	***	-	PII, ALL		•••	***	***	# 201 1 To 9 or 160 101 M
033167	Cut-out button lead (Lucas			***	***	2	PII		•••	***	***	
031921	H.T. Cables for spark plug, Cut-out button contact			***	•••	1	D			***		-
034080	Button cover		***	***	•••	i	PII, PII.		***	***	•••	-
034079	Button cover clips			***		2			***	···	•••	** ** *** ***********
34289	Lighting switch		***			1	ALL exc			G.	•••	
	-											
TOOL						,	All and	011	1017 A	11 10/0		
017253	Tool bag	•••	•••	• • •	***	1	ALL exce				• • •	
021625	Screwdriver Spanner— in in.	•••	***	***	***	2	ALL exce	•	707. ^	LL 1730	•••	
017032	Sidecutting pliers		•••	***	•••	ī	ALL exce			LL 1968	•••	
LTU-07	Tyre levers		***			2				***		
017007	Tyre levers					2	ALL excs					
017252	Sparking-plug spanner	***	•••		***	1	ALL	***	***	***		
SBU2-76	Box spanner - in. X 1 in.		•••	***	***	1	ALL	***	***	***	•••	distribution 0 0 00
030459	Tommy bar- in. diamete	٠	•••	***	•••	1	ALL			***	***	-
SBU2-20	Rocker-adjusting spanner	•••	•••	***	•••	L	ALL exce			***	•••	
017053	Spanner in. >. 3 in.	•••	***	***	•••	1	ALL		***	***	•••	* > *** **** ** * * * * * * *
58UI-183 023284	Box spanner-wheel nut Spanner-shock absorber un		***		•••	i	ALL		•••	•••	•••	
024365	Contact-breaker screwdrive			•••	•••	i	ALL		•••	***	•••	\$1135 * 1 1445 * 14
SBU1-74			•••	•••		1	ALL exce			•••		. 7/ 40 -00
SBU1-02						1	ALL exce			***		
017257		***	•••	•••	•••	1	ALL exce			***	•••	
017254	Spanner-clutch adjustment			***			ALL exce			•••	***	
TBU-01	Tommy bar 7 in. diamete		•••	•••	***	1	ALL exce			•••	•••	-
019869 25299	Allen key Tool kit complete less inflate		***		***	1	650SS, As		•••	***	•••	
25308	Tool kit complete less inflate		•••	•••	***	i	ALL exce		Arias			
034154	Tool kit complete less inflate			•••		1	PII, PIIA					grant and purchases 12 - ma
GASKE	T SETS											
25360	Gasket set complete		•••	•••		R	65055	•••	•••	***		
25361	- 1					R	Atlas	***		***		
25362	e 1				***	R	ALL exce		Atlas,	PII	***	et : 104 -0:0000 0:000 00 op
033200	Gasket set complete			***	***	1	PII, PIIA			***		******* **** * * * * * * * * * * * * * *
T.2236			***	•••	***	i	PII, PIIA		***	•••	***	*****************
048023			***	•••	***	1	PII, PIIA	. ***	•••	***	***	\$1.50 - 1.40 - 150
T.2187		•••	***	***	***		PII, PIIA	•••	•••	***	•••	
16949 20621A		***	***	•••	1	2	PII, PIIA	***	***	•••	***	
T.272	Timing-cover screw washers Oil-pump sealing washer.			•••		ī	PII, PIIA		***	•••		# 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
033056	Contact-breaker cover gaske			•••		i	PII, PIIA	***	•••	***		
T.2191	Contact-breaker housing-flan		***		***	1	PII, PIIA	***		•••		
021329	Oil-tank filler-cap gasket .			•••	***	1	PII, PIIA	***	***		•••	-
025037	Outer-portion front-chaincas	e gasket			• • •	1	PII, PIIA	•••	•••	***	***	
042025	Chaincase inspection-cap gast		•••	***		2	PII, PIIA	***	***	***	***	#1 : Mart 45011 1 50 6
T.1084	Rocker-feed-pipe banjo wash	crs	• • •	***		6	PII, PIIA	•••	***	***	•••	
25363	Decarbonising set		***	***	,	R R	ALL excep	22023	•••	***	•••	
25364 033199			•••	•••	1	ì	PII, PIIA		•••		•••	\$ 40 Mineral 2 very 21 B
25318	Cylinder-head gasket		***	***	•••	1	PII. PIIA	•••	•••		•••	
24249	C 1 1 1 1		•••	•••	***	1	PII, PIIA	•••	***	•••	***	*******
T.2084	Rocker-cover gasket		***			1	PII. PIIA	•••	•••			
T.2088	Rocker-cover gaskets					2	PII, PIIA	***	*** .	•••	•••	-
T.2083	Rocker-shaft joint washers		•••	•••		4	PII, PIIA	***	•••	***		
T.2240	Rocker-shaft plate joint wash		***	***		4	PII, PIIA	•••	***	***		
T.2166	Exhaust pipe nut washers		***	***		2	PII, PIIA	***	***	***	•••	

Part No.		Descriptio	n				Q١	y	Models fitted t	<i>a</i>	_	Ein No.
FRON	T CRASHBAR											
033295	Crashbar set comple	ce	•••	•••	•••	•	1	ALL excep	PII, PIIA	***	***	pa =
REAR	CRA5HBAR											
033296	Crashbar see complete	te	•			•	ì	ALL except	PII, PIIA	•••	•	
STEER	ING DAMPER											
022060	Steering-damper set		•••	• • • •	•••	•	1	PII, PIIA		•••		
030331	Sceering-damper sec		•••	• • •	***	•••	1	A 1 1	PII, PIIA	•••	•••	
017260 010808	Adjusting knob Steering-damper slee	Ye	•••	• • • •	***	*	i	PII. PIIA	*** ***	•••	***	
000073	Damper-sleeve lock r			***	• • •	•••	1	PII, PIIA	***	•••	•••	
015137	Anchor sleeve		•••	•••	• • •		ļ	PII, PIIA			•••	
030323			••-	•	•••	•••	J I	ALL except ALL PIIA		•••	***	40.0
000195	Damper-knob spring Damper-knob ratcher		• • • •		•••	••••	1	ALL PITA	***		•••	Commence of the second
019559	Anchor place	***	•••		•••	***	i		PII, PIIA		•••	* ***
017008	Anchor place	• • • • • • • • • • • • • • • • • • • •	•••	***	•••	•••	1	PII, PIIA		•	•••	
014577	Anchor-place bolc	• • • • • • • • • • • • • • • • • • • •	•	• • •	•••	•…	1	ALLPIIA	0	•••	•••	
000012	Anchor-place bolt wa		•••	• • • •	•••	•••	3	ALL PITA	•	•••	•	
000191	Anchor-place bolt spr Friction discs		***	•••	•••	•••	2	ALL PITA	•••	•••	•••	
030325	Draw stud			•••		•••	Ī	ALL except		•••	•••	B4 was barred + 11
010507	Draw stud		•	•-•	•••	•••	1	PII, PIIA			•••	
030327		•••	• • •		•••	***	ļ	ALL		•••	•••	
000342	Friction place bolt	•-•	•		•••	•	1	ALL except	PII, PIIA	•	***	
019780 030333	Spacer for bolt Fork stem top nut	• • • • • • • • • • • • • • • • • • • •	• • • •	***	*	•••	i	ALL except			•	
SIDEC	AR FORK CON	VERSION	!					·				
								15055 1.1	C1C N. 1 "			
030340	Crown assembly with		•	•••	•••	•••	1		s, GIS Mark II	***	•••	
030402			•••	•••	• • •	• • • •	2		s, GIS Mark II s, GIS Mark II			
15906A 24036	Front fork main sprin Rear suspension units		•••	···	• • • •	• • • • • • • • • • • • • • • • • • • •	2	650SS, Atla			•••	
029612	Rear suspension unic			***	•••		2	G15 Mark I		•	•••	
029787	Rear suspension sprin	ngs anly	• • •	• • •	***	•••	2		s, G15 Mark II	•	•••	
T.2180C	Engine-sprocket-19		***	•••	***	•••	ļ	65055, Ada		•	•••	*** **** ****
T.2180D 030331	Engine-sprocket—20 Steering damper set		***	•••	,	•••	1	G 15 Mark 1 65055, Ada	s, GIS Mark II	•••	•••	
18265	Front chain—75 link				•••	•••	i	65055, Acla		***	•••	
017299	Front chain-67 link				•••	•••	1	G15 Mark I		•	•••	
CRAN	KCASE SHIELD											
033086	Crankcase shield						ı	PII, PIIA				
026491			•••	•••	•••	•••		PII, PIIA	*** ***	•••	• • • •	
042265			•••			•••	2	PII. PIIA		•••		v
110000	Shield-bolk washers			•••	***			PII, PIIA	•	•••		
000004	Shield-bolt nuts	***	•••	•••	•••	•••	2	PII, PIIA	***	•••	•••	
REVOL	UTION COUN	TER										
030391	Revolution-counter h	lead only		• • • •	•••	•••	i	ALL	***	***	•••	
030392	Revolution-counter c	abie	•••			***		ALL		***		·
030358	Revolution-counter h				***	•••			GISCSR, PII,			
030358	Revolution-counter h Revolution-counter h				•••		ļ	GISCSR PII, PIIA	***	***	•••	
033063 031552		pracxet-						ALL except		•••	•••	
24563	Revolution-counter g							ALL		•••		
030435	Revolution-counter li	ght lead	•••		•••			ALL				
23453	Blanking cover-revolu	ition counter	r geart	ox ape				ALL except		***		
23649 012873	Blanking-cover sealing Blanking cover screw:				***	•••		ALL except				
23446		• • • • • • • • • • • • • • • • • • • •	•••		•••			ALL		•••	•••	***************************************
AIR FI												
		shlor eachier	erroel				1	65055				
030337 23559	Air filter (Amal Mono Air-filter grommets				***	•••	2	650SS, Atla	s, G15CS, N1	5C5, G	15	
	61 61							Mark II	***	***	***	
23552	Mounting plate	•••	•••	•••	***				ES, NISCS, GI			
22034	Mounting-place bolts	***	***	•••	•••	•••	1	02033	*** ***	***	***	
						75						

Part No.	Descrip	tion				Qty	۸. ۸	Models fice	ed to		Bin No.	£ s.	ď.
AIR FI	LTER—continued												
-021579	Mounting-plate bolt washers					2	65055						
23555	Mounting-plate sleeves	•••		•••	•••		650SS, Atlas,				-		
25403	Air filter (Amal Monobloc carb	urettor)			•••	1	Mark II Atlas, GISCS	, NISCS	G15 M	ark II	Property 11 11 11 11 11 11 11 11 11 11 11 11 11		
							1966						
25404	Mounting place	•••	***	•••	•••	1	Atlas, GISCS	, NISCS	G15 M	ark II			
24571	Mounting-plate sleeve					1	1966 Atlas, G15C5	NISCS	GIS M	ark II			
		1				·	1966			***	£ 1107424477447744 00 104497		
033188	Air-filter element		***	***	***	1	PII, PIIA	***	•••				
033258	Perforated plate	•••		•••	***	1			•••		-		
033187	Filter element body half (inner)			***		1	PII, PIIA	***	•••				
033186	Filter element body half (outer	)				ŧ	PII, PIIA		•••		to -ta- ten transpare		
033189	Filter element body stud	***	***	***		1	PII, PIIA		•••				
000012	Filter-stud washers	•••		•••		2	PII, PIIA		•••				
. 000005	Filter-stud nuts	•••				2	PII, PIIA		•••				
033027	Filter-mounting sleeves	•••	***	•••		2	PII, PIIA			•••			
AIR FI	LTER (FOR 930 CARBU	RETTO	OR)				,						
033030	Air filter	•••		***		1	650SS, Atlas.	GISCS.	NISCS.	G15			
							Mark II				-		
033026	Air filter mounting place	•••	•••	***	•••	1							0
033027	Air filter mounting place sleeve	s	•••			2	Mark II 650SS, Aclas,	GISCS	NISCS	GIS			
	, , , , , , , , , , , , , , , , , , , ,	• •••	•••	•••	•••	_	Mark II						
CABLE	CLIPS										•		
011907	Rubber cable clips—short	***		***		3			***	***			
026380	Rubber cable clips—medium	***		•••		6	PII, PIIA			***			
026991	Rubber cable clips-long					2	DII DIIA			***			

MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. GARDEN CITY, MI 48135 USA WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

#### WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

## SPECIALIZING IN VINTAGE MOTORCYLCE PARTS



## THE BIGGEST!

ENGINE REBUILDING PARTS
GASKET - SEALS - BEARINGS
BUSHINGS - PISTONS - RINGS
CLUTCHES - TUNE UP PARTS
SPEED EQUIPMENT

### THE BEST!

STOCK AND CUSTOM PARTS
SEATS - HANDLEBARS - CHAINS
TIRES - TUBES - EXHAUST PIPES
MUFFLERS - GAS TANKS - FENDERS
RESTORATION PARTS

THE ONLY!

Central Wheel Components















JP PISTONS





VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

PARTS SHIPPED WORDLWIDE !!!





Discover'



VISIT OUR EBAY STORE
http://stores.ebay.com/British-Only-Motorcycles-And-Parts

MOTORCYLES AND PARTS INC.

32451 PARKLANE ST. GARDEN CITY, MI 48135 USA WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

RETAIL: 1-800-278-6659

WHOLESALE: 1-800-852-9253

FAX: 1-734-422-9253

#### WORLDS LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

## SPECIALIZING IN VINTAGE MOTORCYLCE PARTS



## THE BIGGEST!

ENGINE REBUILDING PARTS
GASKET - SEALS - BEARINGS
BUSHINGS - PISTONS - RINGS
CLUTCHES - TUNE UP PARTS
SPEED EQUIPMENT

### THE BEST!

STOCK AND CUSTOM PARTS
SEATS - HANDLEBARS - CHAINS
TIRES - TUBES - EXHAUST PIPES
MUFFLERS - GAS TANKS - FENDERS
RESTORATION PARTS

THE ONLY!

Central Wheel Components















JP PISTONS





VELOCETTE • ANDOVER NORTON • TEC • HAYNES • P&P SEATING • WASSELL • MORGO ALPHA BEARINGS • M.A.C. PRODUCTS • JOE HUNT MAGNETOS • J.J. CABLES • BUCHANAN'S L.A. SLEEVE • MEGACYCLE CAMS • T.J. WASSELL LIMITED • SUDCO INTERNATIONAL ACE CLASSICS LONDON • CLASSIC GASKETS • BRITISH WIRING • PBM ENGINEERING TRI-COR ENGLAND • LEAK PROOF SEALS • MCA (ASTON) LIMITED • GARDNER - WESTCOTT

WE ACCEPT VISA - MASTERCARD - DISCOVER - AMERICAN EXPRESS

PARTS SHIPPED WORDLWIDE !!!





Discover'



VISIT OUR EBAY STORE
http://stores.ebay.com/British-Only-Motorcycles-And-Parts

#### MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST GARDEN CITY, MI 48135 USA PHONE: 800-278-6659 FAX: 734-422-9253

Year:	Make:	Model:
Engine #		
Frame #		

# WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

Quantity	Part #	Description	Each	Amount
		ustomer # Salesperson	total	
Card Number		Expires	lotai	
		Insu	ırance	
		Shin	pping	
		T-1-		
		Fax Michic	gan Residents	
		Amou		
Signature		Enclose	sea	

	FOLD	
Name		
Address		USE FIRST CLASS
City		LETTER POSTAGE
State 7in		FOSTAGE



**FOLD** 

#### MOTORCYCLES AND PARTS INC.

32451 PARKLANE ST GARDEN CITY, MI 48135 USA PHONE: 800-278-6659 FAX: 734-422-9253

Year:	Make:	Model:
Engine #		
Frame #		

# WWW.BRITISHONLY.COM INFO@BRITISHONLY.COM

Quantity	Part #	Description	Each	Amount
		ustomer # Salesperson	total	
Card Number		Expires	lotai	
Name	ırance			
Address	pping			
City/State/Zip/	l l			
Phone/_	gan Residents			
Email	% Sales Tax			
Signature		Enclose	sea	

	FOLD	
Name		
Address		USE FIRST CLASS
City		LETTER POSTAGE
State 7in		FOSTAGE



**FOLD**