


Illustrated SPARES LIST

20-10391C

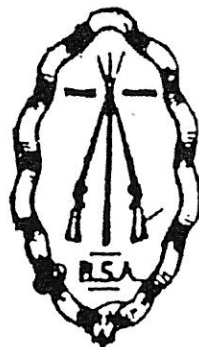

1940 MODELS



B.S.A. Motor Cycles

Bofors 1

British Only

MOTORCYCLES AND PARTS INC.

32451 PARK LANE
GARDEN CITY, MI 48135 USA

PHONE ORDER HOURS:
MONDAY THRU FRIDAY 10-6 EST

Fax or email 24 hours a day!

RETAIL: 734-421-0303
WHOLESALE: 734-525-1980
FAX: 734-422-9253
EMAIL: info@britishonly.com
WEBSITE: www.britishonly.com

THE BIGGEST!

ENGINE REBUILDING PARTS
GASKETS-SEALS-BEARINGS
BUSHINGS-PISTONS-RINGS
CLUTCHES-TUNE UP PARTS
SPEED EQUIPMENT

THE BEST!

STOCK AND CUSTOM PARTS
SEATS-HANDLEBARS-CHAINS
TIRES-TUBES-EXHAUST PIPES
MUFFLERS-GAS TANKS-FENDERS
RESTORATION PARTS

THE ONLY!

WORLD'S LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS
45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!
CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

V.I.P. Buyers Club

10% OR MORE OFF 17,000 PARTS



British Only E-Store

Bookstore
New Products
Scratch & Dent
Blue Light Specials

50,000+ PARTS
LISTED ONLINE
7,000+ PARTS
VIEWABLE ONLINE

**CALL FOR OUR FREE
200 PAGE CATALOG!**

OVERSEAS CUSTOMERS PLEASE SEND \$10.00 FOR AIR POST

1-800-BRT-ONLY

OR

1-800-278-6659

Visit our ever expanding website!

www.britishonly.com

50,000+ PARTS LISTED ONLINE

7,000+ PARTS VIEWABLE ONLINE


SPECIALIZING IN

Triumph

Norton

BSA

 PARTS
SHIPPED
WORLDWIDE!



CYLINDER BASE SHIMS FOR 1940 MOTOR CYCLES.

Model.	Part Number.	No.	Model	Engine	Frame
C10	29-2117	C10	250 c.c. S.V.	WC10-101 upwards	WC10-101 upwards
C11	29-2264	C11	250 c.c. O.H.V.	WC11-101	WC10-101
C12	29-2590	C12	350 c.c. S.V.	WC12-101	WC10-101
B29 Silver Sports	66-86	B29 Silver Sports	350 c.c. O.H.V.	WB29-101	WB27-101
M20	66-97	M20	500 c.c. S.V.	WM20-101	WM20-101
M21	66-97	M21	600 c.c. S.V.	WM21-101	WM20-101
M23 Silver Star	66-86	M23 Silver Star	500 c.c. O.H.V.	WM23-101	WM20-101
G14	26-100	G14 Vee Twin	1000 c.c. S.V.	WG14-101	WG14-101

ENGINE AND FRAME MARKINGS for 1940 MOTOR CYCLES.

1940 Motor Cycle Carburettor Settings (Home).

Model	Type	No.	Float Chamber	Jet	Valve	Needle Position
C10	74/024X	25A	262/079	90	4/4	2
C11	74/024X	25A	264/079	80	4/4	3
C12	76/110	39A	264/079	130	6/4	3
B29	76/014	45A	264/500	160	6/4	3
M20	76/014	45A	264/069	170	6/4	2
M21	76/024	51A	264/069	160	6/4	2
M23	89/014	58A	264/078	200	29/3	3
G14	76/001	39A	264/078	150	6/3	1
1940 Motor Cycle Carburettor Settings (Export)						
C10	274/024NR	25A	262/079	90	4/4	2
C11	274/024NR	25A	264/079	80	4/4	3
C12	276/110R	39A	264/079	130	6/4	3
B29	276/014R	45A	264/500	160	6/4	3
M20	276/014R	45A	264/069	170	6/4	2
M21	276/024R	51A	264/069	160	6/4	2
M23	289/014R	58A	264/078	200	29/3	3
G14	276/001R	39A	264/078	150	6/3	1

Gear Ratios for 1940 B.S.A. Motor Cycles.

Model	STANDARD SPROCKETS		SUITABLE SPROCKETS		GEAR RATIOS				
	Solo	Sidescar	Comp. No.	No. of Teeth	4th	3rd	2nd	1st	
C10	16	—	15-1568	16	—	6.6	9.8	14.5	
C11	16	—	15-1567	17	—	6.2	9.2	13.6	
C12	17	—	15-1568	16	6.0	7.8	11.5	16.9	
B29	17	—	15-1567	17	5.6	7.3	11.1	15.9	
			15-1566	18	5.3	6.9	10.5	15.0	
			15-1565	19	5.0	6.5	10.0	14.2	
M20	19	17	15-1568	16	6.3	8.2	12.9	18.7	
			15-1567	17	5.9	7.7	12.2	17.6	
M21	21	17	15-1566	18	5.6	7.3	11.5	16.7	
			15-1565	19	5.3	7.0	10.9	15.8	
M23	21	18	15-1564	20	5.0	6.6	10.3	14.9	
			15-1560	21	4.8	6.3	9.9	14.3	
			15-1561	22	4.6	5.9	9.4	13.6	
G14	23	22	15-1564	20	5.3	6.9	10.9	15.8	
			15-1560	21	5.0	6.6	10.4	15.0	
			15-1561	22	4.8	6.3	9.9	14.3	
			15-1562	23	4.6	6.0	9.5	13.7	

For details of B.S.A. Sidescar Chassis Components, see
1939 Motor Cycle Replacement Parts List.

ENGINE.

DESCRIPTION.	C10. C12.	C11.	B29.	M20. M21.	M23.	G14.
Cylinder Barrel ..	—	29-2255	65-1062	—	66-54	—
Cylinder Barrel, with liner, valve guides and studs (C12, M20, M21 only).	29-2566	—	—	66-68	—	—
Cylinder Barrel, with valve guides (C10 only).	29-2544	—	—	—	—	—
Do. (front) ..	—	—	—	—	26-72	—
Do. (rear) ..	—	—	—	—	26-75	—
Cylinder Head, with valve guides and studs.	—	29-2256	65-1068	—	66-283	—
Cylinder Head (C10, M20 and G14 only).	29-2547	—	—	66-64	—	26-70(2)
Do. (C12 and M21 only) ..	65-180	—	—	66-96	66-287	—
Do. (two ports), with valve guides and studs.	—	—	65-1094	—	—	—
Cylinder Head Washer (C10 only)	65-93	—	—	—	—	—
Do. (C12 only) ..	65-168	—	—	—	—	—
Cylinder Head Washer ..	—	29-2258	—	66-90	—	24-469(2)
Cylinder Head Timing Bolt ..	24-8328	—	—	24-8328	—	—
Do. Plug Bolt ..	—	—	—	—	24-8788	—
Do. Plug Bolt Washer ..	—	—	—	—	M841	—
Cylinder Base Paper Washer (C10 only).	29-2111	—	—	—	—	—
Cylinder Base Paper Washer ..	—	29-2282	66-92	66-93	66-92	M850(2)
Do. (C12 only) ..	29-2589	—	—	—	—	—
Cylinder Head Bolt ..	—	—	—	—	—	24-381/1
Do. (long) (C12 only) ..	27-5156/1	—	—	—	—	(16)
Do. (long) (C10, M20, M21 only).	27-5156/1	—	—	36-11/1	—	(5)

Engine—continued.

DESCRIPTION.	C10. C12.	C11.	B29.	M20. M21.	M23.	G14.
Do. (short) do.	27-6260/1	—	—	35-1086/1	—	—
Do. Washer ..	F21/1(8)	—	—	EB76A/1	—	—
Cylinder Head Stud ..	—	29-2259/1	—	—	—	—
Do. (short) ..	—	3-1381/1	—	—	—	—
Do. Nut ..	—	E19/1(5)	—	—	—	—
Do. Nut ..	—	EA80/1(2)	—	—	—	—
Do. Washer (lin.) ..	—	36-899(5)	—	—	—	—
Do. Washer (lin.) ..	—	36-382(2)	—	—	—	—
Cylinder Head Securing Bolt ..	—	—	66-115/1	—	66-115/1	—
Cylinder Head Cover Inlet ..	—	—	(4)	—	(4)	—
Do. Exhaust ..	—	—	65-1071	—	—	—
Do. Screw ..	—	—	65-1070	—	—	—
Do. Washer ..	—	—	27-4238/1	—	—	—
Spark Plug ..	—	—	(14)	—	—	—
Do. Washer ..	66-100	66-100	65-1072(2)	—	66-100	33-113(2)
Do. Washer ..	66-102	66-102	66-101	66-100	66-102	EA32(2)
Do. Waterproof Terminal ..	31-505	31-505	66-102	31-505	31-505	31-505(2)
Compression Tap ..	—	—	31-505	—	—	26-1235(2)
Do. Washer ..	—	—	—	—	—	EA32(2)
Carburettor Attachment Stud ..	24-5205/1	24-5205/1	24-5205/1	24-5205/1	24-5205/1	—
Do. Nut ..	(2)	(2)	(2)	(2)	(2)	—
Do. Nut ..	EA80/1(2)	EA80/1(2)	EA80/1(2)	EA80/1(2)	EA80/1(2)	—

NOTE.—Figures in brackets denote number per set, e.g. (2), 2 per set. When no figures in brackets are shown one part constitutes a set.

COMPONENT NUMBERS FOR OVERSIZE PISTONS AND PISTON RINGS.

MODEL	PISTON COMPLETE		PISTON ONLY		PISTON RING		PISTON SCRAPER RING	
	Standard	Imm. OS	Standard	Imm. OS	Standard	Imm. OS	Standard	Imm. OS
C10	29-2561	29-2562	65-405	65-383	29-2620	29-2621	65-730	65-732
C11	29-2568	29-2569	29-2274	29-2311	29-2620	29-2621	65-730	65-732
C12	29-2574	29-2575	65-703	65-704	65-740	65-741	65-735	65-737
B29	65-758	65-759	65-703	65-704	65-744	65-745	65-735	65-737
M20	66-1190	66-1191	66-1024	66-1025	66-1090	66-1091	66-1100	66-1102
M21	66-1198	66-1199	66-1039	66-1040	66-1090	66-1091	66-1100	66-1102
M23	66-1207	66-1208	66-1045	66-1046	66-1090	66-1091	66-1100	66-1102
G14	33-207	33-208	33-211	33-212	33-181	33-182	33-184	33-186
	(2)	(2)	(2)	(2)	(4)	(4)	(2)	(2)

For the same reason that you buy
a B.S.A. Motor Cycle—to get
the greatest value—always buy

GENUINE

B.S.A.


SPARES

Bofors 3


Buy GENUINE B.S.A. SPARES

Engine—continued

DESCRIPTION.	C10. C12.	C11.	B29.	M20. M21.	M23.	G14.
Carburettor Attachment Stud	—	—	15-5155/1	—	—	—
Plain Washer.	—	—	(2)	—	—	—
Do. Spring Washer ..	24-8784(2)	24-8784(2)	24-8784(2)	24-8784(2)	24-8784(2)	—
Do. Flange Joint Washer	66-127	66-127	66-127	66-127	66-127	—
Cylinder Induction Pipe (twin), with collar, sleeve and nuts.	—	—	—	—	—	26-1268/1
Do. (twin) ..	—	—	—	—	—	26-1268/1
Do. Sleeve (twin) ..	—	—	—	—	—	M618/1
Do. Nut (twin) (front) ..	—	—	—	—	—	M617/1
Do. Collar (twin) (front) ..	—	—	—	—	—	M618/1
Do. Nut (twin) (rear) ..	—	—	—	—	—	M619/1
Do. Collar (twin) (rear) ..	—	—	—	—	—	M620/1
Do. (twin), with collar, sleeve and nuts.	—	—	—	—	—	26-1264/1
Do. Collar (twin) (front)	—	—	—	—	—	26-1262/1
Do. Collar (twin) (rear)	—	—	—	—	—	26-1263/1
Cylinder Valve Guide (inlet) ..	29-2109	65-37	65-1074	66-140	66-143	24-100(2)
Do. (exhaust) ..	29-2110	65-37	65-1076	66-189	66-142	24-400(2)
Cylinder Inlet Valve (C10 only)	29-2120	—	—	—	—	—
Cylinder Exhaust Valve (C10 only).	29-2121	—	—	—	—	—
Cylinder Inlet Valve (C12 only).	29-2591	—	—	—	—	—
Cylinder Exhaust Valve (C12 only).	29-2592	—	—	—	—	—
Cylinder Inlet Valve ..	—	65-208	65-1111	66-235	66-218	15-1199(2)
Cylinder Exhaust Valve ..	—	65-208	65-1110	66-236	66-211	15-1206(2)
Valve Stem Cap (inlet)	—	—	65-209	—	—	—
Do. (exhaust) ..	—	—	31-103	—	—	—
Valve Spring Pad ..	—	—	65-1112(2)	—	—	R15(4)
Valve Spring (outer) ..	31-106(2)	31-106(2)	65-1115(2)	31-106(2)	66-277(2)	—
Do. (inner) ..	—	31-108(2)	65-1116(2)	—	24-495(2)	—
Cylinder Exhaust Valve Spring Seat.	—	—	—	—	66-273	—
Cylinder Valve Spring Cup ..	—	15-1215(2)	—	—	—	24-395/6
Valve Retaining Split Collar (inlet).	—	—	29-410(2)	—	—	(4)
Do. (exhaust) ..	—	—	15-1525(2)	—	—	—
Do. (two parts) ..	29-410	29-410	—	66-222	15-1525	—
Valve Spring Collar ..	(2)	(2)	—	—	(2)	—
Valve Spring Cotter ..	66-221(2)	31-111(2)	65-1113(2)	66-221(2)	66-274(2)	A179B(4)
Valve Spring Cover ..	—	—	—	66-242	—	EA67A(4)

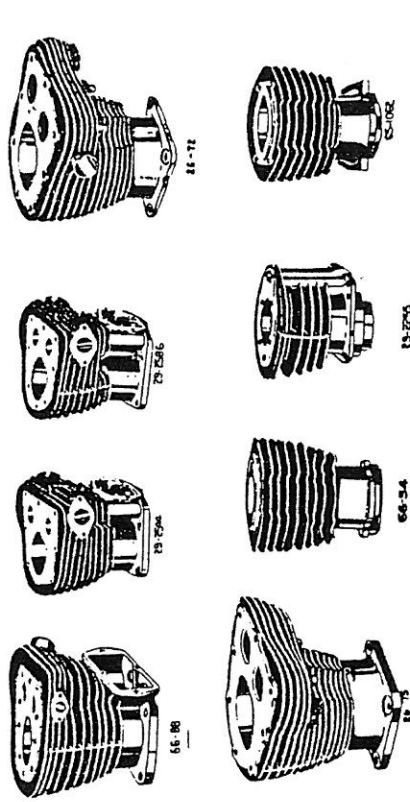

ENGINE.

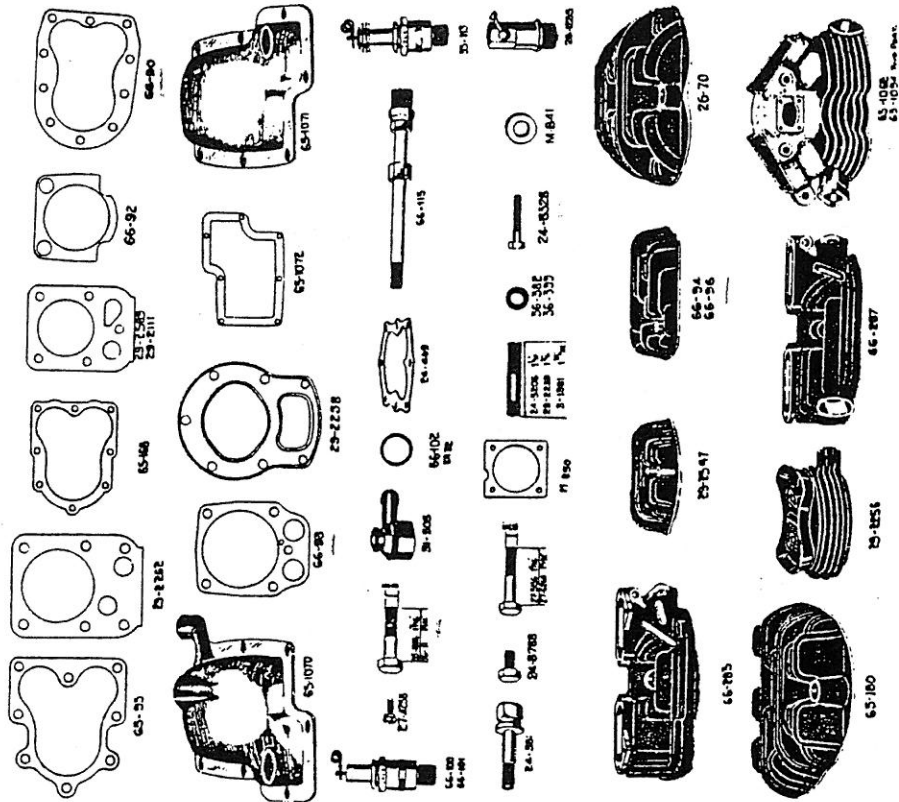


Bofors 4

[illegible]

Bofors 5

Engine—continued.

Rocker Adjuster Screw	..	—	29-2271(2)	—	—	—	—	—	—
Do. Nut ..	..	—	24-563(2)	—	—	—	—	65-375	—
Exhaust Lifter Adjusting Screw	..	—	—	—	—	—	—	M253/1	—
Exhaust Lifter Adjusting Screw Nut.	..	—	—	—	—	—	—	65-353	—
Exhaust Lifter Adjustment Screw Tab, Washer.	..	—	—	—	—	—	—	66-1435	66-400
Exhaust Lifter ..	..	—	—	—	—	—	—	66-1434	65-387
Do. Bush ..	..	—	—	—	—	—	—	M552A	M552A
Do. Fibre Washer ..	..	—	—	—	—	—	—	65-1138	—
Do. Spindle ..	..	—	—	—	—	—	—	65-402	—
Do. Spindle Washer ..	..	—	—	—	—	—	—	35-701	—
Do. Split Pin ..	..	—	—	—	—	—	—	65-403	65-403
Do. Spring ..	..	—	—	—	—	—	—	65-401	65-401
Do. Felt Washer ..	..	—	—	—	—	—	—	K234A	—
Do. Washer ..	..	—	—	—	—	—	—	66-1431/1	66-1431/1
Do. Lever ..	..	—	—	—	—	—	—	EB102/1	EB102/1
Do. Lever Nut ..	..	—	—	—	—	—	—	27-1165/1	27-1165/1
Do. Cable Holder ..	..	—	—	—	—	—	—	EB102/1	EB102/1
Do. Cable Holder Nut ..	..	—	—	—	—	—	—	—	—
Exhaust Valve Lifter Lever (twin) (front).	..	—	—	—	—	—	—	—	26-081
Do. (twin) (rear) ..	..	—	—	—	—	—	—	—	26-086
Do. Toggle Rod ..	..	—	—	—	—	—	—	M522	M522
Do. Toggle Rod Socket ..	..	—	—	—	—	—	—	M584	M584
Do. Spring ..	..	—	—	—	—	—	—	M554	M554
Do. Tube ..	..	—	—	—	—	—	—	M528/1	M528/1
Do. Tube Washer ..	..	—	—	—	—	—	—	M529/1	M529/1
Do. Ball Sleeve ..	..	—	—	—	—	—	—	M526	M526
Do. Ball Sleeve Locknut	..	—	—	—	—	—	—	M527	M527
Piston, complete with gudgeon pin and rings.	..	—	29-2568	65-758	—	—	—	66-1207	33-207(2)
Do. (C10 and M20 only)	..	—	—	—	—	—	—	66-1180	—
Do. (C12 and M21 only)	..	—	—	—	—	—	—	66-1198	—
Piston only ..	..	—	29-2274	65-703	—	—	—	66-1045	33-211(2)
Do. (C10 and M20 only)	..	—	—	—	—	—	—	66-1024	—
Do. (C12 and M21 only)	..	—	—	—	—	—	—	66-1039	—
Piston Ring ..	..	—	29-2620(2)	65-744(2)	—	—	—	66-1090(2)	33-181(4)
Do. (C10 only) ..	..	—	—	—	—	—	—	—	—
Do. (C12 only) ..	..	—	—	—	—	—	—	—	—
Piston Scraper Ring ..	..	—	65-730	65-735	—	—	—	66-1100	33-184(2)
Do. (C10 only) ..	..	—	—	—	—	—	—	—	—
Do. (C12 only) ..	..	—	—	—	—	—	—	—	—
Gudgeon Pin (C10 only) ..	..	—	—	—	—	—	—	—	—
Do. (C12 only) ..	..	—	—	—	—	—	—	—	—
Gudgeon Pin ..	..	—	65-437	65-440	—	—	—	66-953	33-215(2)
Do. Retaining Ring ..	..	—	—	—	—	—	—	66-954(2)	66-954(2)
Do. do. (C10 and C11 only)	..	—	65-438(2)	66-954(2)	—	—	—	—	—
Do. do. (C12 only) ..	..	—	66-954(2)	—	—	—	—	—	—
Crankcase (gear side), complete with fixed fittings.	..	—	29-2289	66-1616	—	—	—	66-1616	26-470
Do. (C10 only) ..	..	—	—	—	—	—	—	—	—
Do. (C12 only) ..	..	—	—	—	—	—	—	—	—
Crankcase (drive side), complete with fixed fittings.	..	—	29-2230	66-1618	—	—	—	66-1603	26-432
Do. (C10 only) ..	..	—	—	—	—	—	—	—	—
Do. (C12 only) ..	..	—	—	—	—	—	—	—	—
Crankcase Plug Screw ..	..	—	—	—	—	—	—	—	—
Crankcase Drain Plug ..	..	—	—	—	—	—	—	—	—
Crankcase Drain Plug ..	..	—	28-243/1	28-243/1	—	—	—	28-243/1	28-243/1
Do. Washer ..	..	—	M814A	M814A	—	—	—	M814A	M814A
Crankcase (drive side) Plug ..	..	—	—	—	—	—	—	—	—
Do. Washer ..	..	—	—	—	—	—	—	—	—
Engine Shaft Bush ..	..	—	65-7052	65-2052	—	—	—	—	—
Crankcase Ball Bearing (drive side).	..	—	24-732	24-732	—	—	—	—	—

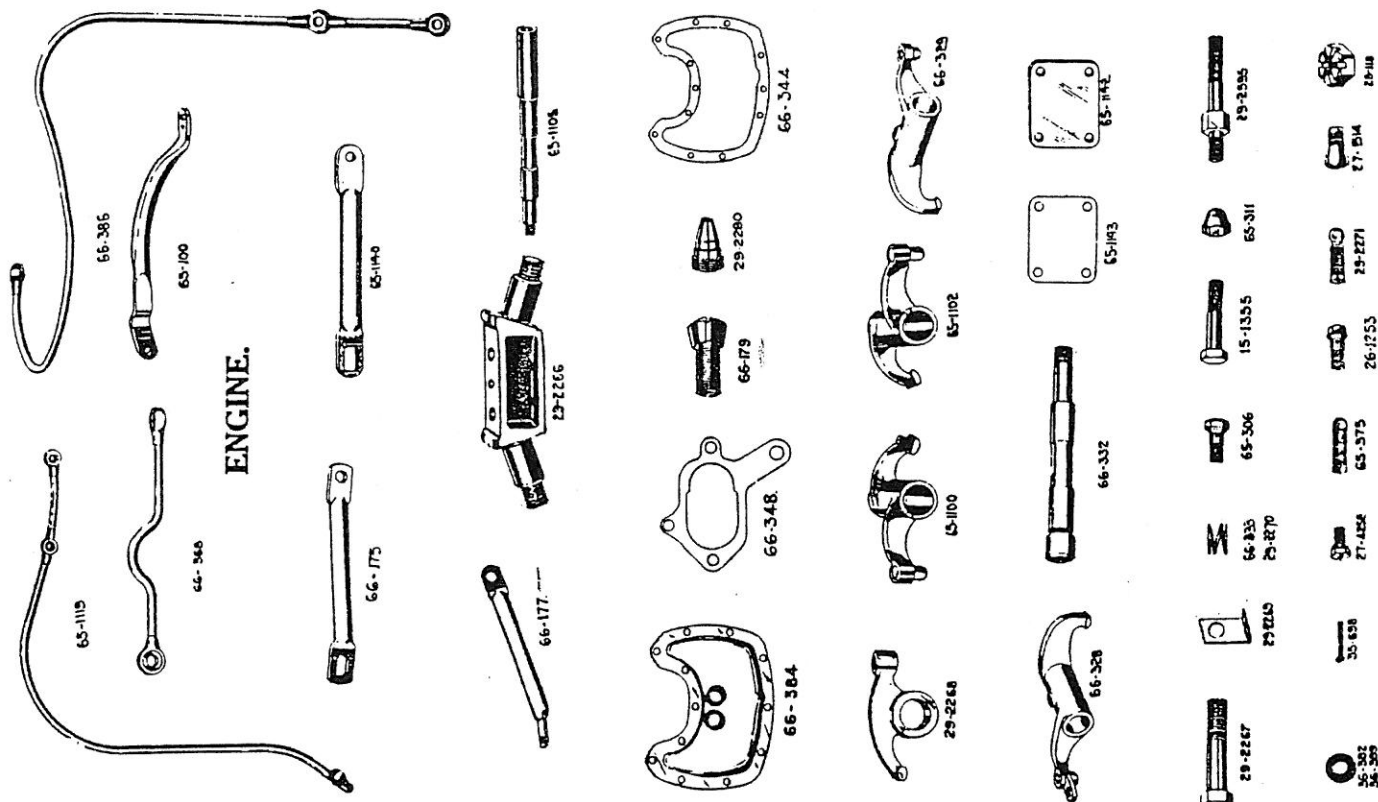


Oil Retaining Screw	65-2188/3	65-2186/3	65-2188-3	65-2186-3
Do. Fibre Washer	66-1683	66-1683	66-1683	66-1683
Oil Valve Spring Ball	$\frac{3}{8}$ " diam.	$\frac{3}{8}$ " diam.	$\frac{3}{8}$ " diam.	1" diam.
Timing Cover Oil Fed Sleeve.	—	—	—	—
Do. End	—	—	—	—
Do. Spring	—	—	—	—
Do. Retaining Washer	—	—	—	—
Crankcase Connecting Bolt	—	15-1355/1	15-1355-1	15-1355/1
		(3)	(3)	(3)
				24-8328/1
				(8)



Do.	Nut	..	..
Do.	Washer	..	..
Do.	Nut for 4 in. bolts)		
Do.	Nut (for 4 in. bolts)		

Engine—continued.						
Crankcase Connecting Stud ..						M569A-1 (3)
Do. Nut	—	—	—	—	—	M570A-1 (6)
Do. Washer	—	—	—	—	—	K234A, 3)
Do. Nut for 4-in. bolts ..	—	—	—	—	—	EB113-1 (3)
Do. Nut (for 4-in. bolts) ..	—	—	—	—	EA80/1(5) EA80V(46)	

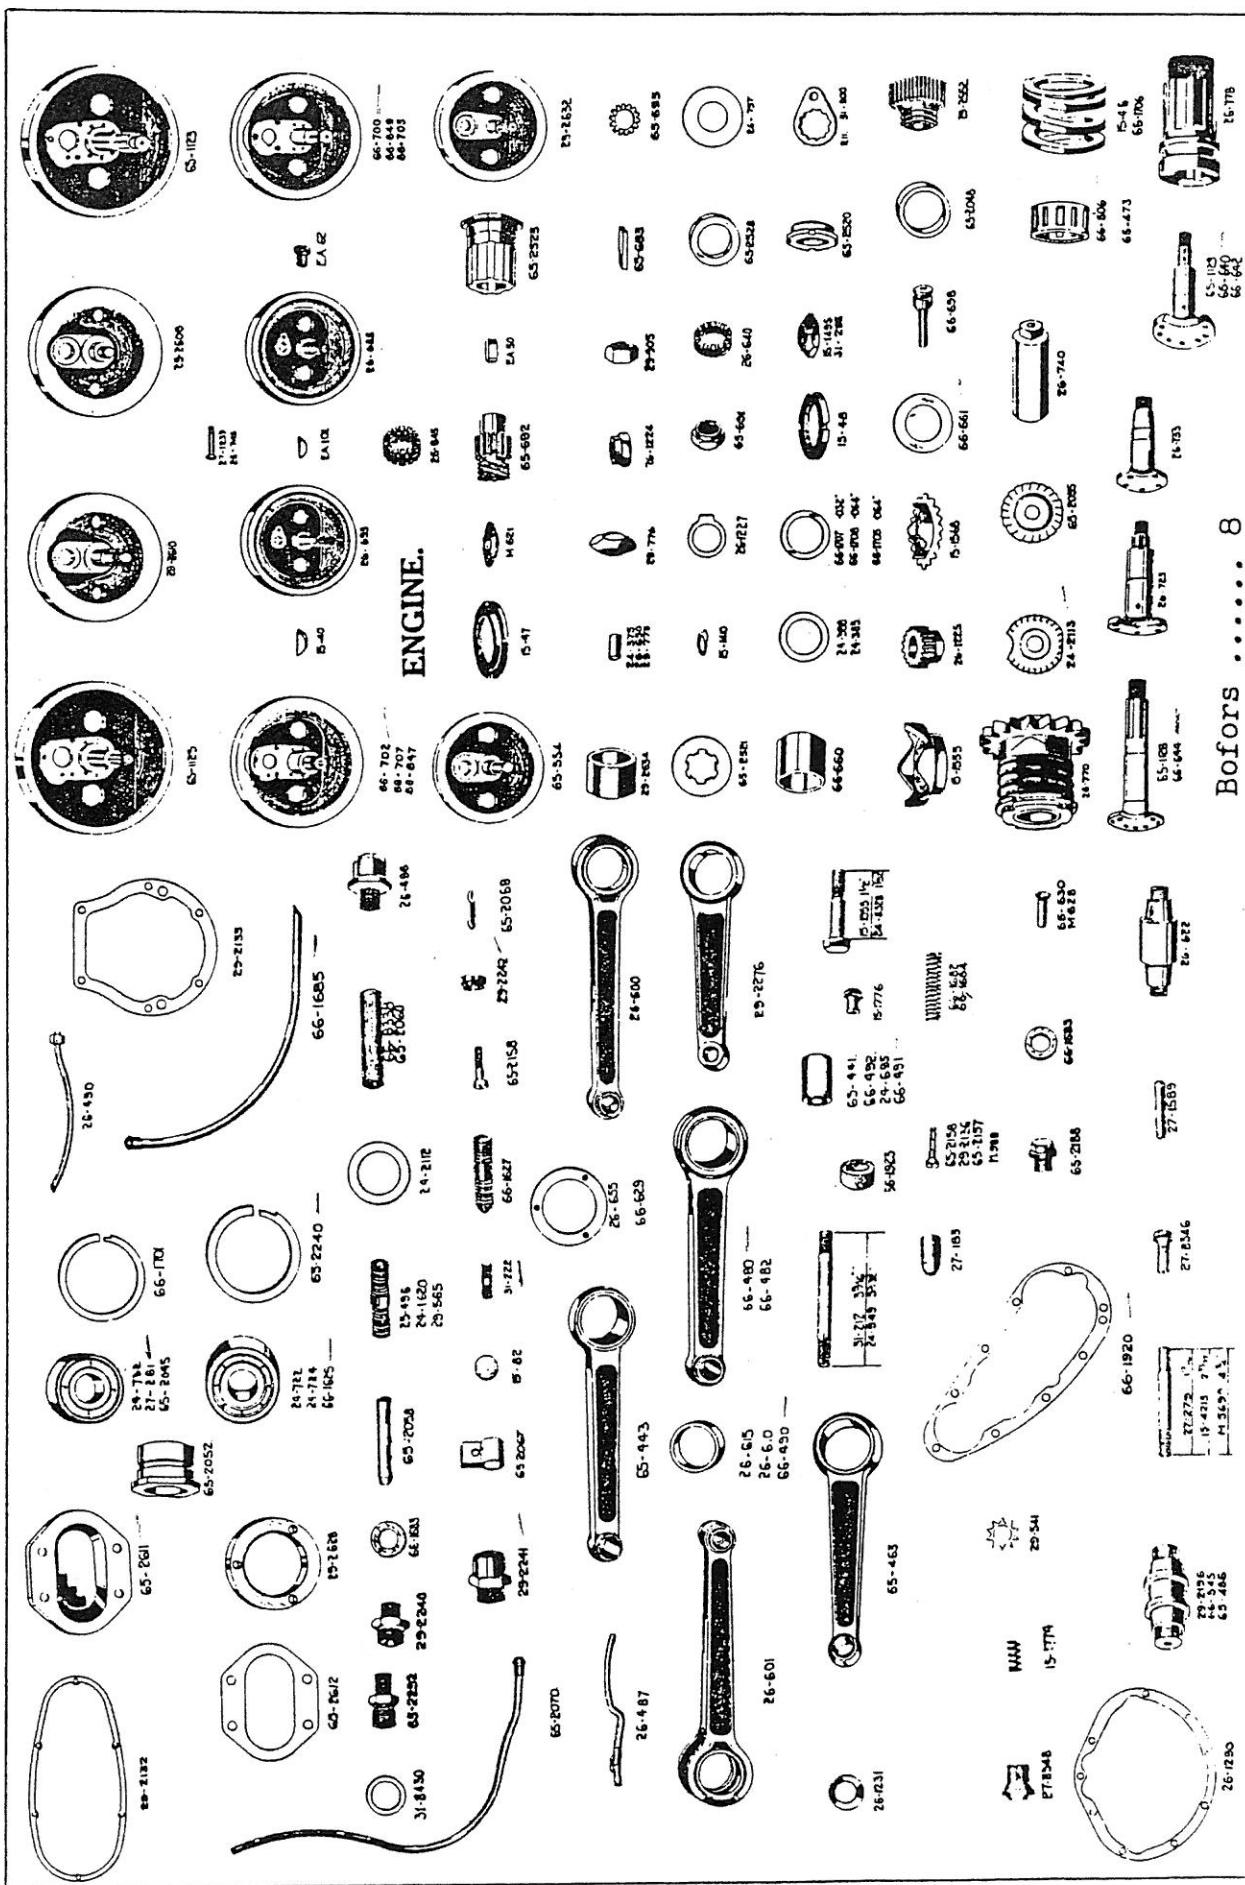

Engine—continued.

DESCRIPTION.	C12.	C11.	B29.	M21.	M23.	G14.
Cush Drive Bearing Alignment Washer (.064in.)	66-1705	66-1705	66-1708	66-1708	66-1708	—
Do. do. (.032in.)	24-389	24-389	66-1707	66-1707	66-1707	—
Cush Drive Sleeve	15-1555	15-1555	15-1555	15-1555	15-1555	15-1555
Do. Spring	15-46	15-46	66-1706	15-46	66-1706	15-46
Do. do. (M21 only)	—	—	—	66-1706	—	—
Engine Sprocket (16T.)	15-1568	15-1568	15-1568	15-1568	15-1568	—
Engine Sprocket (17T.)	15-1567	15-1567	15-1567	15-1567	15-1567	—
Do. (18T.)	—	—	—	—	—	—
Do. (19T.)	—	—	—	15-1566	15-1566	—
Do. (20T.)	—	—	—	15-1565	15-1565	—
Do. (21T.)	—	—	—	15-1564	15-1564	15-1564
Do. (22T.)	—	—	—	15-1560	15-1560	15-1560
Do. (23T.)	—	—	—	—	—	15-1562

ENGINE


Bofors 9

Engine—continued.

[illegible]

Oil Pump Driving Worm, complete	26-814
Do. Bush ..	26-815
Oil Pump Window Frame	26-818
Do. Celluloid	26-819
Do. Frame Screw	29-1039(2)
Oil Pump End Plate ..	26-811(2)
Do. Washer	26-816(2)
Oil Pump Plunger Spring	29-1035(2)
Oil Pump End Plate Screw	26-812(6)
Oil Pump Body Beak ..	29-1032(2)
Do. Ball Valve Spring	29-1041(2)
Do. Valve Ball ..	1/4" diam.
Oil Pump Pipe Adaptor	26-828(8)
Do. Nut ..	26-828(8)
Oil Pump Attachment Screw (short)	26-1167/1
Do. (long)	26-1166/1
Pilgrim Pump to Big-end Oil Pipe, complete with nipple and nut.	26-8608/1
Pilgrim Pump Swivel Union ..	27-8348/1
Do. Screw	26-1253/1
Pilgrim Pump Distributor Oil Pipe, with nipple and nut.	26-8606/1
Do. Swivel Union Screw.	26-1253/1

Valve Tappet Head (exhaust)	66-1511	26-1226(2)
Do. (inlet)	66-1511	26-1226(2)
Inlet Tappet Head Adjuster	66-1498	66-1497
Exhaust Tappet Head Adjuster (C10 only).	66-1511	66-1497
Do. (C12 only)	66-1511	66-1497
Tappet Head Adjuster Locknut	15-6524(2)	15-6524(2)
Valve Tappet Locking Sleeve	66-1494(2)	66-1494(2)
Valve Tappet Guide ..	66-1494(2)	66-1494(2)
Valve Tappet Rod ..	66-1936	66-1936
Tappet Recess Cover ..	29-2158/1	29-2158/1
Tappet Cover Washer ..	29-2158/1	29-2158/1
Tappet Recess Cover Screw ..	29-2158/1	29-2158/1
Do. (4)	29-2158/1	29-2158/1
Do. Joint Washer	66-1937	66-1937
Push Rod, complete with ends	65-1084(2)	65-1084(2)
Valve Push Rod ..	65-1341(2)	65-1341(2)
Push Rod End ..	65-885(2)	65-885(2)
Do. (bottom)	66-1343(4)	66-1343(4)
Do. Rivet ..	65-1080	65-1080
Push Rod Cover Tube	66-1379	66-1379
Do. Lower Washer	66-1367	66-1367
Push Rod Cover Tube Gland Packing ..	65-1082	65-1082
Do. Gland Nut ..	24-4227/1	24-4227/1
Do. Stud ..	24-4227/1	24-4227/1
Do. Stud Spring Washer	K197(2)	K197(2)
Do. Stud Nut ..	65-930/3	65-930/3
Inlet Valve Lever (twin) (front)	26-978	26-978
Do. (rear) ..	26-978	26-978
Exhaust Valve Lever (twin) (front)	26-975	26-975
Do. (rear) ..	26-975	26-975
Inlet Valve Lever Spindle	26-977	26-977
Exhaust Valve Lever Spindle	26-970(2)	26-970(2)
Inlet Valve Lever Washer	M822(2)	M822(2)
Do. Bush ..	26-1005(2)	26-1005(2)
Exhaust Valve Lever Bush	M517(2)	M517(2)
Front Cylinder Feed Pipe Adaptor Washer.	M518(2)	M518(2)
Do. Adaptor ..	M552a	M552a
Oil Pump, complete	26-1165/1	26-1165/1
Do. Body ..	65-2619	65-2619
Oil Pump Bottom Plate, complete	65-2596	65-2596
Do. Top Plate ..	65-2625	65-2625
Do. Top Plate Washer ..	65-2598	65-2598
Oil Pump Bolt ..	65-2606	65-2606
Oil Pump Feed Gear (driving)	15-848(2)	15-848(2)
Do. (driven)	65-2601	65-2601
Oil Pump Scavenge Gear	65-2600	65-2600
Do. Fixing Bolt ..	65-2599(2)	65-2599(2)
Do. Spring Washer	65-2604(2)	65-2604(2)
Do. Filter ..	24-978(2)	24-978(2)
Do. Driving Spindle	65-2623	65-2623
Do. Retaining Pin ..	65-2620	65-2620
Oil Pump and Crankcase Joint Washer.	65-2578	65-2578
Do. Pin Washer.	65-2579	65-2579
Oil Pump Spindle Retaining Pin Washer.	65-2618	65-2618
Oil Pump, complete (Pilgrim)	1-4621	1-4621
Oil Pump Body ..	1-4621	1-4621
Oil Pump Plunger (rear)	26-1072	26-1072
Do. (front) ..	26-829	26-829
Do. Spring	26-821	26-821
Oil Pump Plunger Pad	26-820	26-820
Oil Pump Control Spindle	26-822(2)	26-822(2)
Do. Washer	26-823	26-823
Do. Fibre Washer	26-813(2)	26-813(2)
Do. Spring Washer	29-1027(2)	29-1027(2)
Do. Spring Washer	29-1026(2)	29-1026(2)
Do. Spring Washer	26-817(2)	26-817(2)

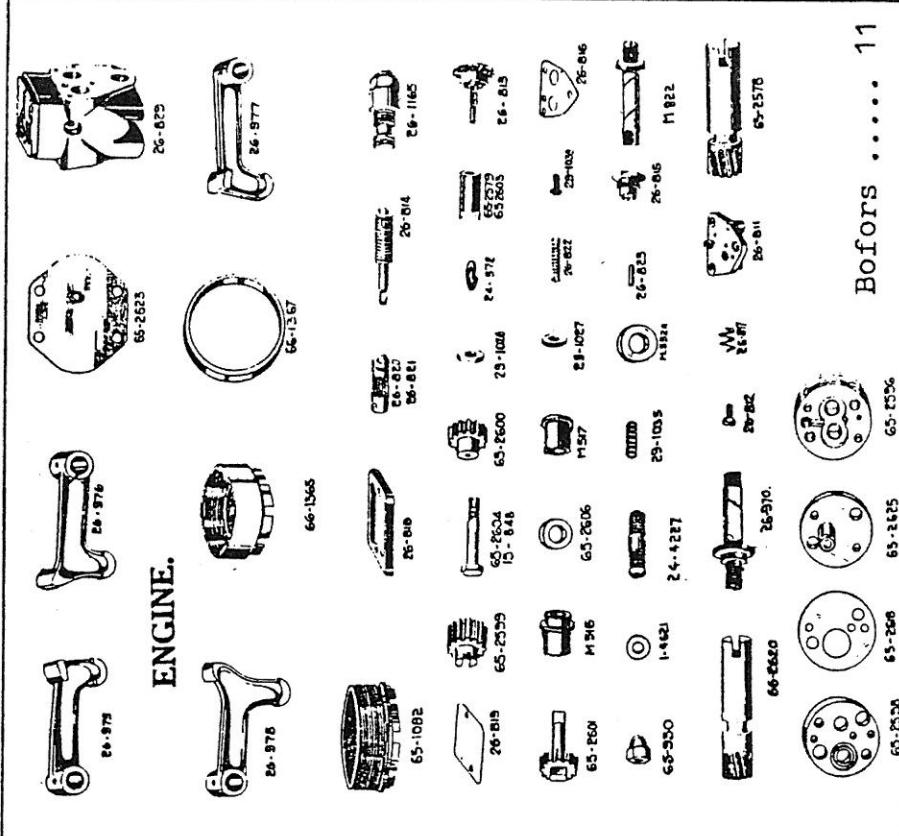

ENGINE.

LOW LEVEL EXHAUST SYSTEM.

SINGLE UPSWEEP EXHAUST SYSTEM.




LH. 65-2870

Bofors 12


Part Name	62-3011	60-3100	15-4107	Pinion Sleeve, with Bush	29-8429	65-3007(2)	15-4100	24-4250
Gearbox Cover (outer), with fixed fittings (hand change).	29-3321	66-3102	31-3023	Pinion Sleeve	29-8429	65-3007(2)	15-4100	24-4250
Do. (foot change)	—	24-4215	24-4215	Pinion Sleeve Bush	—	65-3008	—	—
Gearbox Cover (inner), with fixed fittings (hand change).	29-3258	66-3069(2)	66-3068	Pinion Sleeve Thrust Washer (phosphor bronze).	—	—	—	—
Do. (foot change)	—	15-4211	15-4211	Do. (steel)	—	65-3104	—	—
Cover Joint Washer (hand change).	29-3312	66-3068	66-3068	Pinion Sleeve Oil Retaining Washer	—	29-3858(2)	—	—
Cover (outer) Joint Washer (foot change).	29-3313	66-3069	66-3069	Do. Clutch	—	65-3120	24-4394	24-4394
Cover (inner) Joint Washer (foot change).	—	66-3069	66-3069	Do. (steel)	—	—	—	—
Cover Stud (hand change)	65-3073/1(4)	—	—	Pinion Sleeve Oil Retaining Washer	—	29-3858(2)	—	—
Cover Stud (foot change)	65-3074/1(3)	—	—	Do. Clutch	—	65-3120	24-4394	24-4394
Cover Stud (short, bottom) (foot change).	—	—	—	Mainshaft Pinion (22T.)	29-3288	—	—	—
Cover Stud (long, top) (foot change)	29-3304(5)	—	—	Mainshaft Sliding Pinion (37 f.)	27-4424	—	—	—
Cover Stud Nut (hand change)	65-2153/1(7)	—	—	Mainshaft Pinion (22T.)	27-4429	—	—	—
Do. (foot change)	65-2153/1(9)	—	—	Layshaft Bush	—	65-3116	24-4223	24-4241
Cover Screw (hand change)	65-3063/1(3)	—	—	Layshaft Bush (short)	—	—	—	—
Do. (foot change)	65-3062/1(2)	—	—	Layshaft Bush (long)	—	—	—	—
Cover Screw (long) (foot change)	65-3062/1(2)	—	—	Layshaft 3rd Gear Pinion (21T.)	—	65-3115	—	—
Do. (top) (foot change)	65-2157/1	—	—	Layshaft 2nd Gear Pinion (26T.)	—	65-3114	—	—
Outer Cover Screw (foot change)	—	—	—	Layshaft 1st Gear Pinion (30T.)	27-4146	65-3121	—	—
Do. Spring Washer (foot change)	65-2158/1(3)	—	—	Layshaft Constant Mesh Pinion (18T.)	—	65-3122	—	—
Do. Nut (foot change)	—	—	—	Layshaft Gear (17T. and 20T.)	—	—	—	—
Do. Spring Washer (foot change)	—	—	—	Do. with Bush (25T.)	—	—	24-4221	24-4221
Do. Nut (foot change)	—	—	—	Do. with Bush (25T.)	—	—	66-3209	66-3209
Do. Spring Washer (foot change)	—	—	—	Layshaft Thrust Washer	27-4276	65-3117	66-3215	66-3215
Inner and Outer Cover Bolt (foot change).	65-2152/1(2)	—	—	Layshaft Packing Washer	29-3287	—	—	—
Inner Cover Stud	—	—	—	Layshaft Distance Piece	—	65-3118	—	—
Inner Cover Screw (hex.) (foot change)	21-2896/1(4)	—	—	Layshaft Pinion Sleeve, with Bushes, complete.	27-4145	—	—	—
Inner and Outer Cover Screw Locking Strip (foot change).	—	—	—	Layshaft Sleeve Bush	27-4290(3)	—	—	—
Inner Cover Screw (hand change)	—	—	—	Layshaft Sliding Pinion	27-4436	—	—	—
Do. (foot change)	24-4214/1	—	—	Layshaft Key	27-347	—	—	—
Do. (foot change)	21-2896/1(4)	—	—	Layshaft Nut	M202	—	—	—
Do. Shakeproof Washer (foot change).	29-541(3)	—	—	Layshaft Nut Locking Washer	29-3289	—	66-3211(2)	66-3211
Outer Cover Drain Plug (foot change)	66-3231	—	—	Gear Bush (25T.)	—	—	—	—
Outer Cover Plug	29-3262	—	—	Gear Bush (29T.)	—	—	—	—
Gearbox Dowel	27-1589(2)	—	—	Sprocket (17T.)	29-3432	—	—	—
Oil Filler	—	—	—	Sprocket (18T.)	—	65-3130	24-4290	24-4290
Do. Joint Paper Washer	—	—	—	Sprocket (19T.)	—	29-3836	24-4263	24-4263
Do. Nut	—	—	—	Sprocket Locknut	27-4057	29-3835	24-4226	24-4226
Do. Spring Washer	—	—	—	Sprocket Leather Gland	—	65-3087	—	—
Outer Cover Grease Nipple	—	—	—	Sprocket Spring Ring (small)	—	65-3088	—	—
Gearbox Ball Journal	27-4027	—	—	Kickstarter Crank	15-4067/3	65-3141/3	15-4179/3	15-4179/3
Gearbox Oil Retaining Washer	27-4033	—	—	Do. Cotter Pin	EB56/1	EB56/1	EB56/1	EB56/1
Cover Ball Journal	29-3431	—	—	Do. Cotter Pin Nut	EB57/1	EB57/1	EB57/1	EB57/1
Mainshaft	15-268	—	—	Do. Cotter Pin Washer	EB58/1	EB58/1	EB58/1	EB58/1
Mainshaft Bush	K139	—	—	Do. Pin Rubber	65-3212	65-3212	65-3212	65-3212
Mainshaft Key	65-3823	—	—	Kickstarter Quadrant	29-3290	—	15-4121	24-4257
Mainshaft Nut	65-3822	—	—	Do. with Bush	—	65-3281	—	—
Mainshaft Distance Piece	65-3822	—	—	Do. Oil Seal	—	65-3195	—	—
Mainshaft Thrust Washer	29-3183	—	—	Kickstarter Quadrant Bush	—	65-3116	24-4258	24-4258
Mainshaft Packing Washer (.005)	29-3184	—	—	Do. (Cover)	—	65-3134	—	—
Do. (.010)	29-3184	—	—	Kickstarter Crank Spring	29-3307	65-3135	66-3058	24-4300
Mainshaft Oil Seal Ring	29-3272	—	—	Do. Anchor Pin	24-4214	24-4214	M588	M588
Mainshaft Oil Seal Shim	29-3274	—	—	Do. do. Nut	K457/1	K457/1	EB102/1	27-4401/1
Mainshaft Split Washer	27-4098(2)	—	—	Kickstarter Stop	29-3308	65-3144	—	24-4281
Mainshaft Retaining Ring	27-4099	—	—	Kickstarter Stop Rubber	29-3287	15-331	—	—
Mainshaft 3rd Gear Pinion (26T.)	—	—	—	Kickstarter Quadrant Bush (inner cover).	—	—	—	—
Mainshaft 2nd Gear Pinion (21T.)	—	—	—	Do. (outer cover)	29-3268	—	—	—
Mainshaft 1st Gear and Kickstarter Ratchet.	—	—	—	Kickstarter Return Stop Plate	65-3286(2)	—	—	—
Mainshaft Gear (20T. and 16T.)	—	—	—	Kickstarter Ratchet	27-4112	—	—	—
Mainshaft Gear Wheel with Bush (25T.)	—	—	—	Do. Pinion	27-4106	85-3283	86-3079	86-3079
Pinion Sleeve, with Bushes	—	—	—	Do. Sleeve	15-267	29-3839	66-3080	66-3080
	—	—	—	Do. Sleeve Nut	—	65-3189	66-3081	66-3081
	—	—	—	Do. Sleeve Nut Locking Washer	—	85-3140	24-4282	24-4282
	—	—	—	Do. Sleeve Locknut	—	—	24-4278	24-4278
	—	—	—	Kickstarter Ratchet Spring	27-4447	29-3850	24-4255	24-4255
	—	—	—	Control Shaft	29-3282	65-3156	24-4256	24-4256
	—	—	—	Control Shaft Bush (gearbox)	—	66-3083	66-3083	66-3083
	—	—	—	Do. (cover)	29-3286	65-3157	66-3084	66-3084
	—	—	—		—	—	24-4245	24-4245

Control Shaft and Forks, complete.

DESCRIPTION.	C10. C11. C12.	B29.	M20. M21. M23.	G14.
Gear Control Gate Bolt	EB700/1	EB700/1(2)	EB700/1(2)	1-5068/1(2)
Gear Control Operating Lever Fulcrum Pin.	29-3207	—	—	—
Gear Control Gate Distance Washer	15-7563	—	—	—
Do. Bolt Washer	—	F21/1(2)	F21/1(2)	24-878/2
Do. Setscrew (top)	—	—	—	15-4250/1
Do. Setscrew Washer	—	—	—	M550A/1
Do. Support Nut	—	—	—	24-563/1
Do. Washer	—	—	—	M550A/1

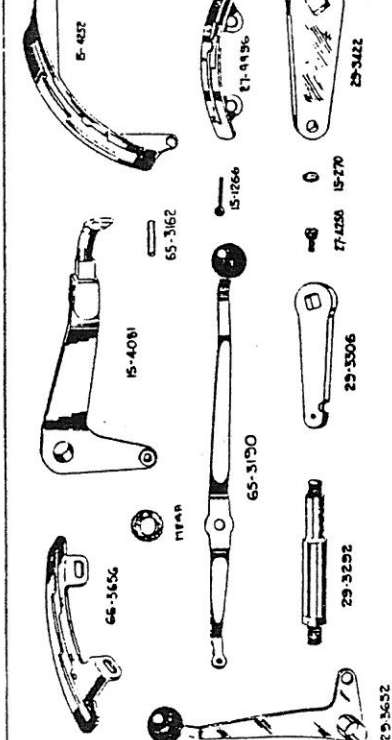

GEARBOX AND CONTROL PARTS.

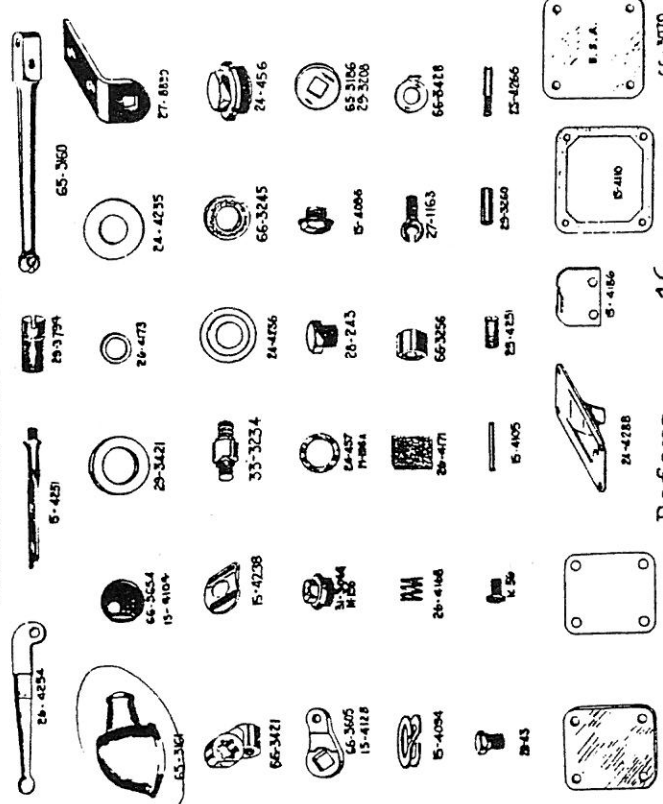


Bofors 16

Control Shaft and Forks, complete.	66-3082	66-3082	66-3155	66-3082	66-3082
Control Quadrant	24-4247	24-4247	65-3187	24-4247	24-4247
Do. Bush	24-4248	24-4248	—	24-4248	24-4248
Do. Spacing Collar (hand gear change).	24-4249	24-4249	—	24-4249	24-4249
Control Quadrant Cork Washer	—	—	65-3138	—	—
Control Plunger Housing (cover) (hand change only).	—	—	65-3146	—	—
Control Plunger	15-4035	15-4035	15-4035	15-4035	15-4035
Control Plunger Cup	24-4251	24-4251	24-4251	24-4251	24-4251
Do. Spring	24-68	24-68	24-68	24-68	24-68
Gear Operating Spindle (hand change only).	29-3418	—	—	—	—
Gear Operating Spindle Distance Washer (hand change only).	29-3421	—	—	—	—
Gear Operating Lever (hand gear change).	29-3422/1	66-3605/1	66-3605/1	66-3605/1	66-3605/1
Gear Operating Lever Nut	EB106/1	EB106/1	EB106/1	EB106/1	EB106/1
Do. Washer (hand gear change)	EB76/1	EB76/1	EB76/1	EB76/1	EB76/1
Inspection Cover	29-3296	66-3070	66-3070	66-3070	66-3070
Oil Bailie	27-4258/1(4)	27-4258/1(4)	27-4258/1(4)	27-4258/1(4)	27-4258/1(4)
Inspection Cover Screw	29-3297	15-4110(2)	15-4110(2)	15-4110(2)	15-4110(2)
Do. Washer	—	31-3066/1	31-3066/1	31-3066/1	31-3066/1
Oil Filler Plug	—	M196A	M196A	M196A	M196A
Do.	—	28-43/1	28-43/1	28-43/1	28-43/1
Drain Plug	28-213/1	—	—	—	—
Oil Level Plug	28-243/1	—	—	—	—
Plug Washer	M814A(2)	M814A	M814A	M814A	M814A
Oil Flinger Washer	—	—	—	—	—
Oil Retaining Washer (small)	29-3794	25-4251	25-4251	25-4251	25-4251
Clutch Control Lever Thrust Pin	M263/1	27-4411/1	27-4411/1	27-4411/1	27-4411/1
Do. Nut	29-3306/1	65-3160/1	65-3160/1	65-3160/1	65-3160/1
Clutch Operating Lever	EB106/1	—	—	—	—
Do. Nut	—	—	—	—	—
Do. Washer	EB76/1	—	—	—	—
Do. Rubber Cover	—	—	—	—	—
Do. Shield	—	—	—	—	—
Clutch Shield Spring	—	—	—	—	—
Do. Washer	66-3245	—	—	—	—
Do. Split Pin	—	—	—	—	—
Do. Grease Retaining Plate	—	—	—	—	—
Do. Felt Strip	—	—	—	—	—
Do. Grease Retaining Plate Screw	27-1163	—	—	—	—
Clutch Cable Stop	EB102	29-3292	29-3292	29-3292	29-3292
Clutch Locknut	66-3256	66-3421	66-3421	66-3421	66-3421
Clutch Operating Spindle	—	15-6524	15-6524	15-6524	15-6524
Do. Distance Piece	—	66-3428	66-3428	66-3428	66-3428
Do. Lug, complete with ball	—	29-3260	29-3260	29-3260	29-3260
Do. Nut Lock Washer	—	—	—	—	—
Clutch Push Rod Bush (mainshaft)	—	—	—	—	—
Clutch Lever Fulcrum Pin	—	—	—	—	—
Do. Fulcrum Pin Nut	—	—	—	—	—
Clutch Rod Gland Washer (felt)	—	—	—	—	—
Gear Control Operating Lever, with fixed fittings.	29-3652/3	65-3162	65-3162	65-3162	65-3162
Do. Bearing Bracket	—	—	—	—	—
Do. Bearing Bracket Bolt	—	—	—	—	—
Do. Knob	15-4104	66-3654	66-3654	66-3654	66-3654
Do. Knob Peg	15-4105	15-4105	15-4105	15-4105	15-4105
Do. Fulcrum Pin	—	—	—	—	—
Do. Fulcrum Pin Washer	29-3208	65-3186	65-3186	65-3186	65-3186
Do. Spring Washer	—	3-1346	3-1346	3-1346	3-1346
Do. Nut	EB201/6	EB201/6	EB201/6	EB201/6	EB201/6
Gear Control Fulcrum Cap Spring Washer.	—	—	—	—	—
Clutch Control Pin Cap	—	—	—	—	—
Gear Control Operating Lever Thrust Washer	—	—	—	—	—
Gear Control Gate	27-4496.3	66-3656/3	66-3656/3	66-3656/3	66-3656/3
Do. Support	—	—	—	—	—

—

Do. (C12 only) ..	65-3920	65-3912	65-3912
Clutch Ballrace Ring ..	65-3912	65-3910(2)	65-3910(2)
Do. Ball Retainer ..	65-3910(2)	65-3911	65-3911
Do. Ballrace Inner Ring ..	65-3911	65-3930	65-3799
Clutch Sleeve ..	65-3913	65-3833	65-3833
Do. Sleeve Collar ..	65-3831(6)	65-3831(6)	65-3840(6)
Do. Spring Cup ..	65-3830(6)	65-3781(6)	65-3781(6)
Do. Spring ..	65-3816	65-3816	65-3816
Do. Sleeve Plate ..	65-3825	65-3825(3)	65-3857(4)
Clutch Driving Plate, with inserts..	(2 off C12)	65-3914	65-3903
Clutch Driving Plate Centre, with studs.	65-3914	65-3916	65-3903
Do. (C12 only) ..	65-3916	M263(12)	M263(12)
Clutch Spring Retaining Stud Nut..	M263(12)	65-3824	65-3824(3)
Clutch Driven Plate ..	65-3824	(2 off C12)	65-3828
Clutch Actuating Cap, with button	65-3828	M138	M138
Clutch Actuating Cap Thrust Button	M138		

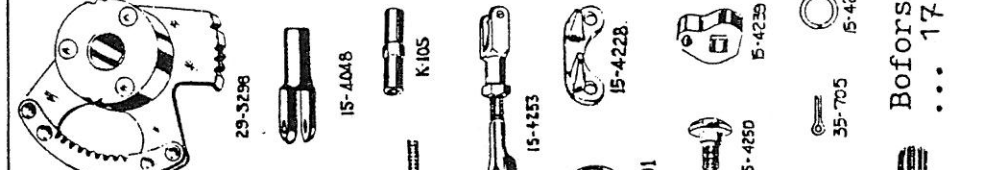

Saddle Pillar Connection Washer
Tank Rear Support ..
Tank Teak Support Stud ..
Do. Washer ..
Do. Nut ..
Do. Split Pin ..
Saddle Front Fixing Bolt ..
Do. (when S721 saddle is fitted)
Do. Nut ..
Saddle Bolt Grease Nipple ..
Front Engine Yoke Plate ..
Do. Cover ..
Rear Engine Yoke Plate ..
Engine and Gearbox Plate (right-hand)
Do. (left-hand) ..
Front Engine Plate and Crankcase
Shield Distance Collar (right-hand)
Front Down Tube, complete
Do Top Bolt (short) ..
Do. do. (long) ..
Do. do. Nut ..
Do. do. Spring Washer

S1-4010	33-4595
S1-4011/1	33-4600
B863/1	33-4599
24-7000/1	33-4015
S100	24-5658/1
15-5808/1	15-5749/1
33-4089/1	24-5859/1(2)
EA80/1	15-716(2)
35-5016	
33-4593(2)	


FRAME AND FITTINGS.				
DESCRIPTION.	G10. C11. C12.	B29.	N20. N21. N23.	G14.
St. complete	29-4191	65-4410	66-4128	—
Member	—	—	—	33-4004
Bigot Bush (top)	—	—	—	33-4014
do. (bottom)	—	—	—	33-4018
do.	66-4149(2)	66-4149(2)	66-4149(2)	25-5673(2)
Cup	3" diam. (40)	3" diam. (40)	3" diam. (40)	1" diam. (36)
Ball	28-2080(2)	28-2080(2)	28-2080(2)	28-2080(2)
Grease Nipple	—	—	—	29-5683

[illegible]

Bofors 19

DESCRIPTION.	C10. C11. C12.	B29.	M21. M22. M23.	G14.
Engine Plate, Chainstay and Seat Tube Bolt.	—	27-5684/6	—	—
Do. Nut	—	EA82/(6)(2)	—	33-4219
Seat Member	—	—	—	24-5658/1
Do. Top Bolt	—	—	—	15-716
Do. do. Spring Washer ..	—	—	—	24-5659/1
Do. do. Nut	—	—	—	—
Seat Lug and Backstay Bolt ..	—	15-5749/6	24-5657/6	—
Do. Washer	—	15-431	27-6043	—
Do. Nut	—	15-541/6	M202/6	—
Engine Plate (front)	29-4075(2)	—	—	—
Do. (rear) (left-hand) ..	29-4179	—	—	—
Do. do. (right-hand) ..	29-4179	—	—	—
Do. do. (left-hand) ..	29-4103/1	—	—	—
Do. Frame Bolt	EB171/1	—	—	—
Do. Nut	29-4103/1	—	—	—
Rear Engine Plate Bolt (seat tube)	15-431/1	—	—	—
Do. Plain Washer	15-716	—	—	—
Do. Spring Washer	EB171/1	—	—	—
Do. Nut	—	—	—	31-4164/1
Seat Tube and Engine Plate Bolt ..	—	—	—	24-5919/1
Do. Nut	—	65-4185/6	—	—
Seat Tube and Gearbox Plate Bolt (top).	—	E19/6	—	—
Do. Nut	—	E28/6	—	—
Do. Washer	—	—	27-5684/6(6)	—
Engine Yoke Plate Frame Stud (short)	—	27-5683/6(5)	27-5683/6	—
Do. (long)	—	EA82/1(14)	EA82/1(14)	—
Engine Yoke Plate Frame Bolt Nut	—	EB76/6(14)	EB76/6(2)	—
Engine Yoke Plate Frame Bolt Washer.	—	—	—	—
Front Engine Plate Middle Bolt ..	—	—	—	M201/1
Do. Nut	—	—	—	EB171/1
Do. Top Bolt	—	—	—	M67n/1
Do. Top Bolt Nut	—	—	—	EA82/1
Rear Engine Plate Bolt	—	—	—	27-5680/1(S)
Do. Nut	—	—	—	EA82/1(S)
Engine Plate Gearbox Stud	—	—	—	—
Do. Washer	—	27-5684/6(2)	—	—
Do. Spring Washer	—	65-4189/6(4)	—	—
Do. Nut	—	K51A(4)	—	—
Engine Yoke Plate Bolt (top) (M20, M21 only).	—	EA82/6(4)	—	—
Crankcase and Engine Plate Bolt ..	29-4100/6(4)	—	66-4098/1	—
Do. Nut	EA80/1(8)	—	—	—
Do. Spring Washer	24-8784(8)	—	—	—
Front Down Tube and Engine Plate Bolt.	—	—	—	M84/1
Do. Bolt Nut	—	—	—	K257/1
Do. Stud (top)	—	27-5683/6	—	—
Do. Stud (bottom)	—	27-5683/6	—	—
Front Down Tube and Chainstay Stud (solo only).	—	—	27-5683/6	—
Do. Stud Nut (solo only) ..	—	—	M202/6(2)	—
Do. Bolt (sidewalk only) ..	—	—	9-1180/6	—
Do. Bolt (when crankcase shield is fitted).	—	—	66-4173/6	—
Do. Bolt Nut (sidewalk only) ..	—	—	15-541/6	—
Do. Connecting Bolt (when foot-rests and legshields are fitted).	—	—	—	33-4185/1
Do. Connecting Bolt	—	—	—	31-4129/1
Do. Connecting Bolt Nut	—	—	—	B906/1
Do. Connecting Bolt Washer ..	—	—	—	B905/6(2)
Rear Brake Pedal Spring Anchor Plate	—	—	—	24-5967
Rear Brake Anchor Pin	—	—	—	93-7044/6
Do. Nut	—	—	—	K 409A/6
Gearbox Connecting Bolt (front)	27-5674/1(2)	—	15-476/1	—
Do. (rear)	—	—	66-4168/1	—

Gearbox Connecting Discs - 300 mm		EAR2/1(2)	EAR2/1(2)	EAR2/1(2)
Do.	Nut ..	..	31-4170/1	31-4170/1
Do.	Washer ..	..	31-4171/1	31-4171/1
Do.	Nut (top) ..	..	33-4606/1	33-4606/1
Do.	Nut (top) (hand change) ..	..	31-4164/1	31-4164/1
Do.	Nut (top) (foot change) ..	..	24-5918/1	24-5918/1
Do.	(bottom) ..	..	31-4175/1	31-4175/1
Do.	Nut (bottom) ..	..	15-5864/1	15-5864/1
Do.	Gearbox Adjusting Screw ..	85-4184/1	27-5710/1	27-5710/1
Do.	Adjusting Screw Nut ..	..	65-4167/1	65-4167/1
Do.	Adjusting Stop ..	..	F21/6	F21/6
Do.	Adjusting Stop Washer ..	..	EA80/6	EA80/6
Do.	Adjusting Stop Nut ..	..	..	..
Do.	Frame and Footplate Bracket Rear Bolt (when No. 84 sidecar chassis is fitted).	..	..	..
Do.	Rear Bolt ..	..	24-5884/6	24-5884/6
Do.	Rear Bolt Distance Sleeve ..	..	31-727R(2)	31-727R(2)
Do.	Rear Bolt Distance Washer ..	..	B805/6(2)	B805/6(2)
Do.	Rear Bolt Nut ..	..	B806/6(2)	B806/6(2)
Do.	Distance Collar (left-hand) ..	..	31-4133	31-4133
Do.	(centre) ..	..	31-4134	31-4134
Do.	..	..	31-4133	31-4133

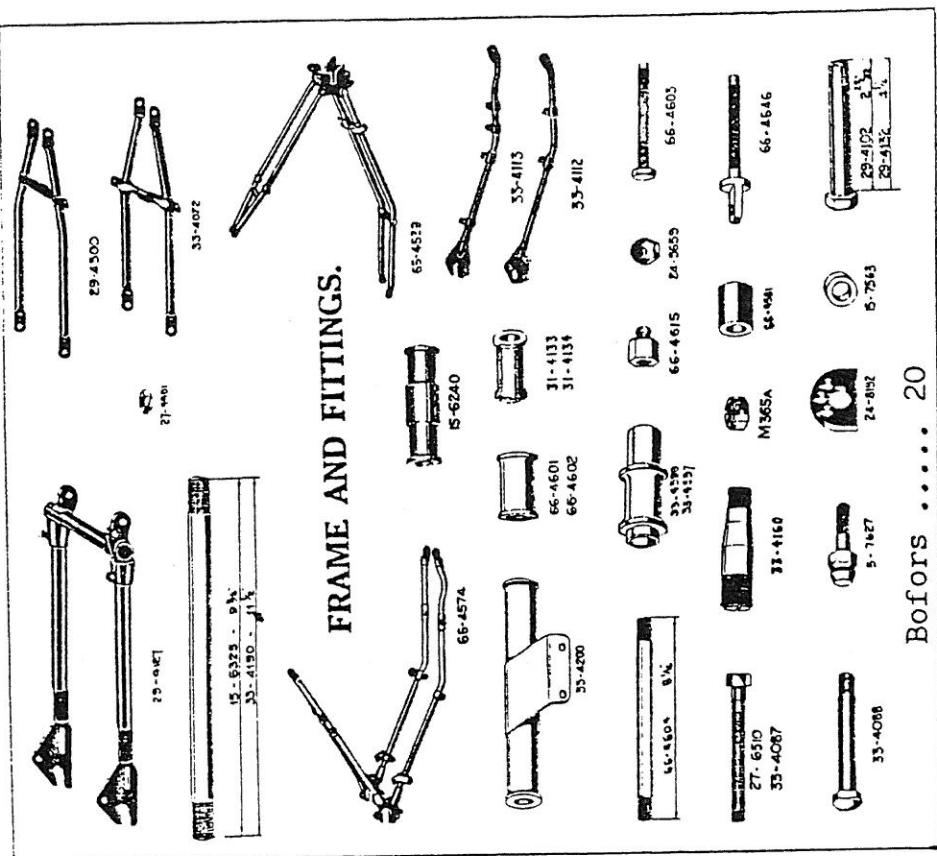


Bofors 20

Frame and Fittings—continued.

[illegible]

REAR STAND.

Rear Stand	..	..	..	85-4787	66-4781	24-6016
Do.	Bolt	..	..	60-4769(6/2)	60-4769(6/2)	24-6035(8/2)
Do.	Bolt Spring Washer	..	..	26-5693(2)	9-1346(2)	15-716(2)
Do.	Bolt Nut	..	..	EB363A/6	24-5860(8/2)	24-6010(6/2)
Do.	Bolt Split Pin	..	..	35-699(2)	35-699(2)	—
Do.	Spring	..	..	66-4767	66-4767	24-6060

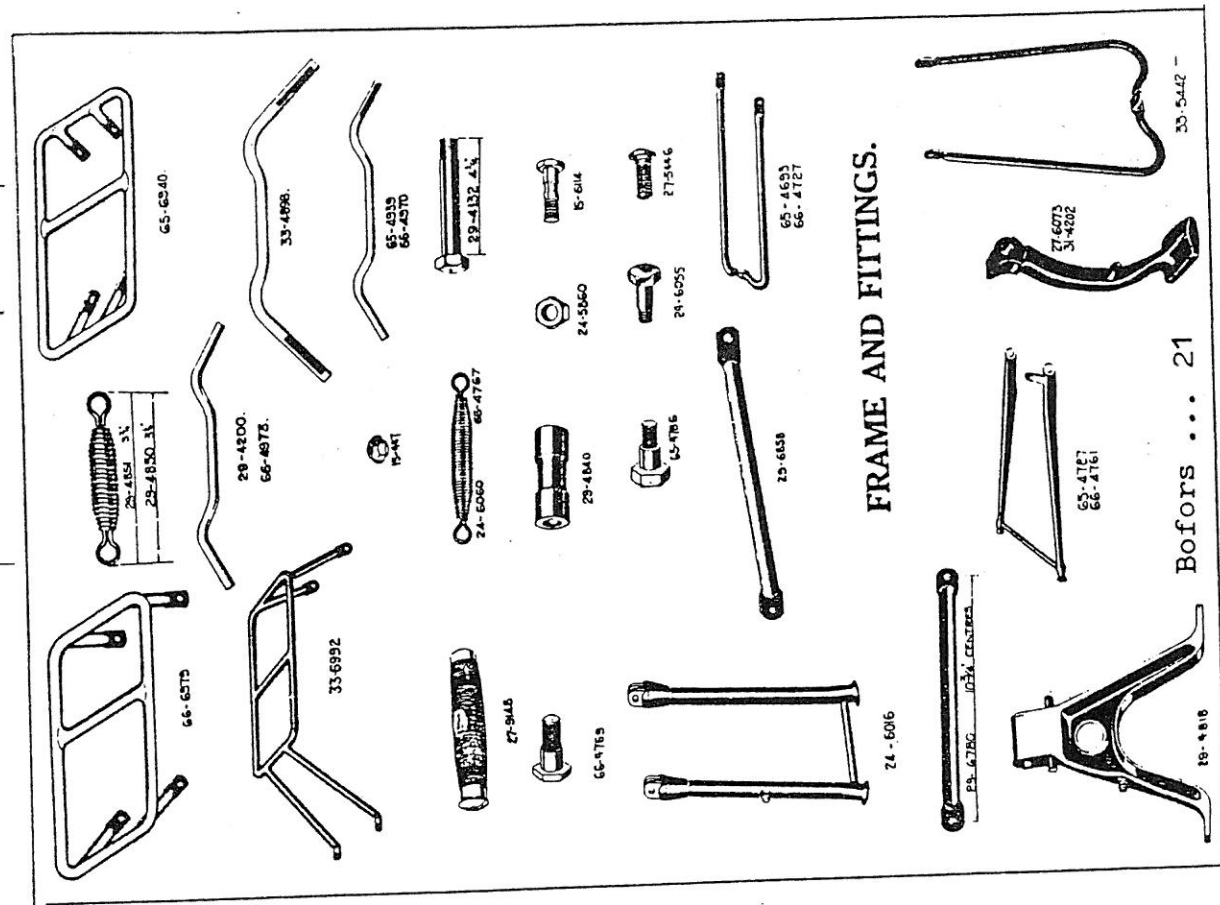

Bofors ... 21

CENTRAL STAND.

Central Stand ..	29-4818	—	—	—	—
Do. Grease Nipple	35-5016	—	—	—	—
Do. Spring	29-4851	—	—	—	—
Do. Engine Plate Distance Piece	29-4840	—	—	—	—
Do. Bolt	29-4182/1	—	—	—	—
Do. Bolt Nut	EB171/1	—	—	—	—

PROP. STAND.

Prop. Stand Leg	—	—	—	—	—
Do. Bolt	—	27-6073	—	—	—
Do. Bolt Nut	—	15-6114/6	—	—	—
Do. Spring	—	24-5860/6	—	—	—

HANDLEBAR.


Handlebar	65-4939/3	66-4970/3	—	—	—
Do. (C10, M23 only)	29-4200/3	66-4973/3	—	—	—
Handlebar Rubber Grip	27-6148(2)	—	—	—	—

CARRIER.

Carrier	29-7010	65-6940	66-6979	33-6992	—
Front Support Stay	29-6780(2)	—	—	—	—
Rear Support Stay	28-6858(2)	—	—	—	—
Carrier and Stay Bolt	K132A/6(4)	—	—	—	—

CARRIER AND STAY BOLT NUT.

Carrier Distance Piece	EB113/6(4)	—	—	—	—
Carrier and Mudguard Bolt	29-7012	—	—	—	—
Do. Washer	EB112/6	—	—	—	—
Do. Nut	B751A/6	—	—	—	—
Carrier and Mudguard Connecting Clip	EB113/6	—	—	—	—
Do. Bolt	—	—	—	—	—
Do. Bolt Nut	—	—	—	—	—
Do. Washer	—	—	—	—	—
Carrier Securing Bolt	—	—	—	—	—
Do. Nut	—	—	—	—	—
Do. Washer	—	—	—	—	—

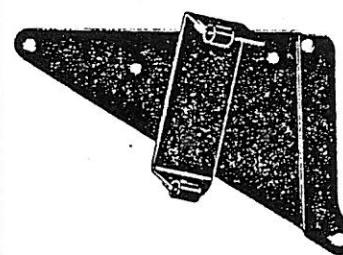


29-4644.




29-7012



15-8992.

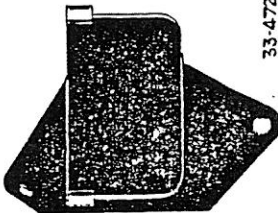

33-4729

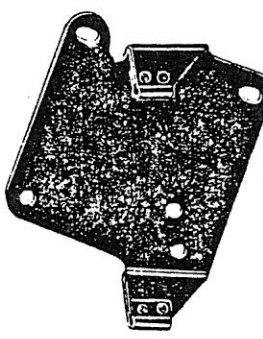

65-4662



S113



24-8927

FRAME AND FITTINGS.

Carrier Rear Connecting Bolt	—	—	—	—	15-8992/6(2)
Do. Nut	—	—	—	—	EA80/6(2)
Do. Washer	—	—	—	—	F21/6(2)

BATTERY CARRIER.





Battery Carrier Plate	29-4644	—	—	—	—
Battery Bracket	—	—	—	—	—
Battery Bracket Bolt (mudguard)	K132A/6	—	—	—	—
Do. do. Nut	EB113/6	—	—	—	—
Battery Bracket Carrier Clip	—	—	—	—	—
Do. do. Bolt	—	—	—	—	—
Do. do. Bolt Nut	—	—	—	—	—
Do. do. Spring Washer	—	—	—	—	—
Do. do. Plate Bottom Spring Whr.	—	—	—	—	—
Do. do. Nut	—	—	—	—	—
Battery Bracket Bolt	—	—	—	—	—
Do. Washer	—	—	—	—	—

FRONT FORK AND FITTINGS.


DESCRIPTION.	C10. C11. C12.	B29.	M20. M21. M23.	G14.
Front Fork (assembled), with links, bolts, steering stem yoke and spring.	65-5220	65-5222	66-5009	33-5095
Front Fork	65-5224	65-5225	66-5010	33-5106
Front Fork Bush	65-5078(2)	65-5078(2)	66-5065(4)	—
Front Fork Cross Piece Bolt (for screwing in holes when speedometer is not fitted).	K123/6(2)	K123/6(2)	K123/6(2)	K123 6(2).
Front Mudguard Securing Bolt	24-7148 6(2)	24-7148 6(2)	—	—
Do. Spring Washer	24-8784(2)	24-8784(2)	—	—
Do. Nut	EA80/6(2)	EA80/6(2)	—	—
Steering Stem Yoke, with stem and crown cup.	—	—	—	33-5010
Do. with stem and bushes	65-5117	65-5202	66-5131	—
Steering Stem Yoke Bush	65-5078(4)	65-5078(4)	66-5065(2)	—
Do. Bottom Crown Cup	—	—	—	25-5106
Steering Head Dust Cap	66-5203	66-5203	66-5203	—
Do. Ballrace Cone (top)	65-5126	65-5126	65-5126	—
Do. do. (bottom)	65-5127	65-5127	65-5127	—
Ball Head Clip Yoke, with clip and bushes.	65-5077	65-5169	—	—
Do. with bushes	—	—	66-5135	—
Ball Head Clip Yoke	—	—	—	33-5042
Do. Stud Nut	—	15-5196(4)	—	—
Do. Clip	—	65-5096(2)	—	—
Do. Clip Screw	65-5081	—	—	—
Do. Bush	65-5085/8(4)	—	—	—
Do. Locknut	65-5078(2)	65-5078(2)	66-5065(2)	—
Handlebar Support Arm, with clip and bolts (left-hand).	65-5086/3	24-5208/3	15-5276	24-5208/3
Do. (right-hand)	—	—	—	31-5048
Handlebar Support Arm Clip	—	—	15-5279	31-5051
Handlebar Support Arm Clip Bolt	—	—	15-5194/3(2)	24-5194/3(2)
Do. Washer	—	—	15-5153/1(4)	15-5153/1(4)
Handlebar Damper Washer (inner)	—	—	15-5155/1(4)	15-5155/1(4)
Handlebar Damper Washer (outer)	—	—	15-5281/3(2)	15-5281/3(2)
Do. Packing Washer	—	—	15-5282(4)	—
Handlebar Damper Nut Locking Whr.	—	—	—	K37A(2)
Handlebar Damper Nut	—	—	15-5284/3(2)	15-5284/3(2)
Ball Head Clip	—	—	15-5285/3(2)	15-5285/3(2)
Ball Head Clip Bolt	65-5084/6	65-5084 6	—	25-5112
Ball Head Clip Bolt Sleeve	65-5083/6	65-5083/6	27-5135/6	27-5135/6

Bofors 22


Fork Top Link (plain holes)	33-5058/9
Do. (threaded holes)	33-5059
Fork Top Link	29-5220(2)
Fork Bottom Link (left-hand)	29-5221
Do. (right-hand)	65-5090
Do. (when sidecar is fitted)	33-5063
Do. do. (right-hand)	33-5062

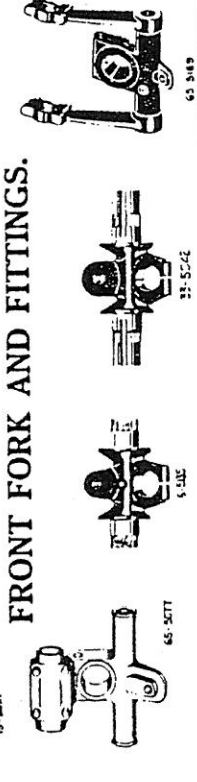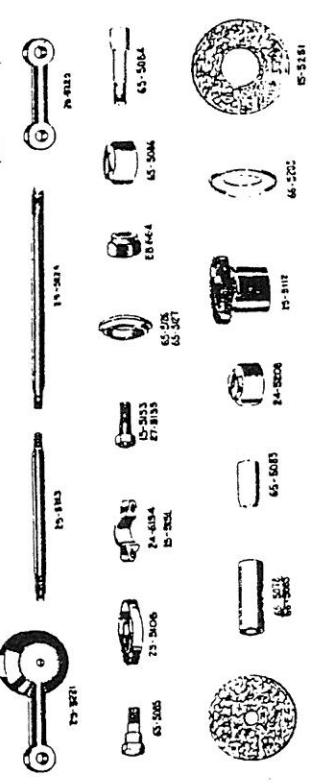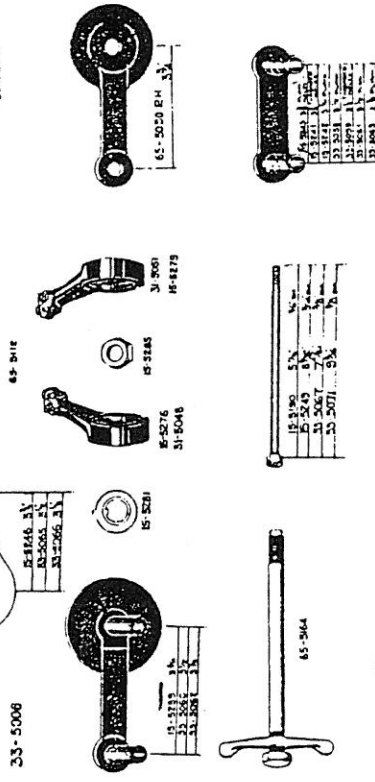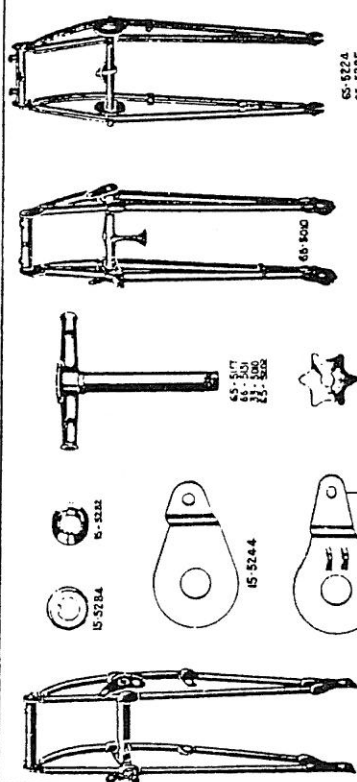




FRONT FORK AND FITTINGS.

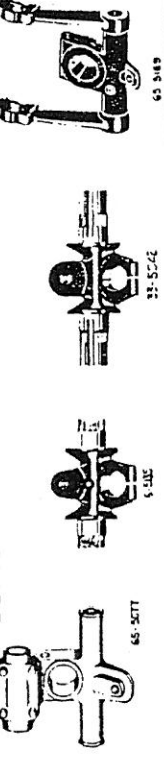

Fork Link Bolt Star Washer	65-5112/3	65-5112/3	33-5065/3
Fork Friction Link	—	—	33-5106/3
Do. (when sidecar is fitted)	—	—	15-5244
Fork Friction Plate Washer	—	—	15-5244
Fork Friction Plate Washer	—	—	K359A
Fork Link Bolt (top)	29-5223(2)	29-5224	33-5067 1/2
Do. (bottom)	29-5224	65-5164/3	33-5071 1
Fork Link Bolt, with wing nut	—	—	—
Fork Steering Stem Bolt	E19(3)	—	33-5069/1
Fork Link Bolt Locking Nut	E19(3)	—	—
Do. Spring Washer	E19(3)	—	—
Fork Link Bolt Nut	E19(3)	—	—
Do. Spring Washer	24-7000(4)	—	—

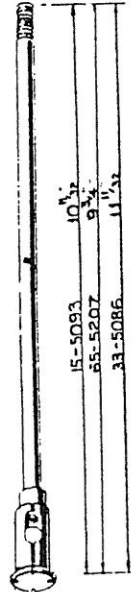

FRONT FORK AND FITTINGS.

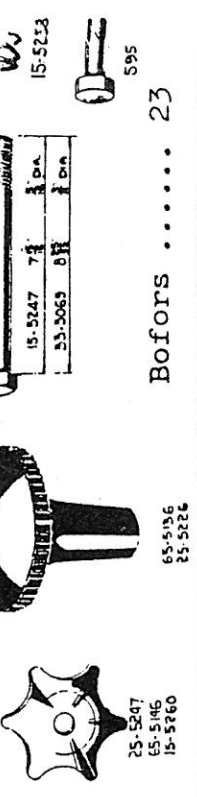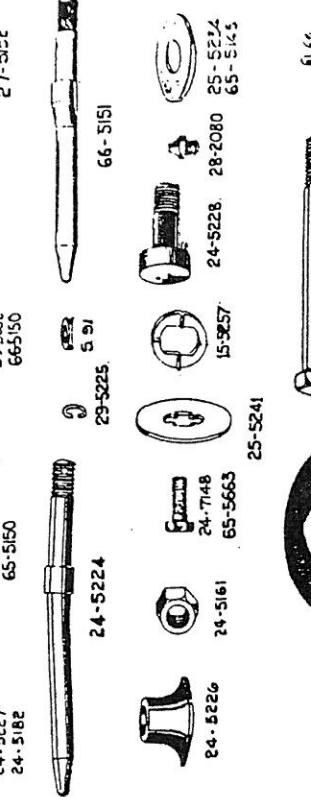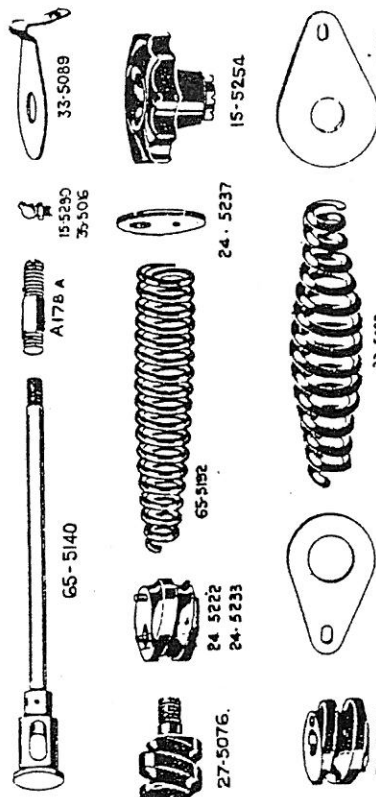

33-5583

33-5582

33-5584

33-5585

33-5586

33-5587

33-5588

33-5589

33-5590

33-5591

33-5592

33-5593

33-5594

33-5595

33-5596

33-5597

33-5598

33-5599

33-5600

33-5601

33-5602

33-5603

33-5604

33-5605

33-5606

33-5607

33-5608

33-5609

33-5610

33-5611

33-5612

33-5613

33-5614

33-5615

33-5616

33-5617

33-5618

33-5619

33-5620

33-5621

33-5622

33-5623

33-5624

33-5625

33-5626

33-5627

33-5628

33-5629

33-5630

33-5631

33-5632

33-5633

33-5634

33-5635

33-5636

33-5637

33-5638

33-5639

33-5640

33-5641

33-5642

33-5643

33-5644

33-5645

33-5646

33-5647

33-5648

33-5649

33-5650

33-5651

33-5652

33-5653

33-5654

33-5655

33-5656

33-5657

33-5658

33-5659

33-5660

33-5661

33-5662

33-5663

33-5664

33-5665

33-5666

33-5667

33-5668

33-5669

33-5670

33-5671

33-5672

33-5673

33-5674

33-5675

33-5676

33-5677

33-5678

33-5679

33-5680

33-5681

33-5682

33-5683

33-5684

33-5685

33-5686

33-5687

33-5688

33-5689

33-5690

33-5691

33-5692

33-5693

33-5694

33-5695

33-5696

33-5697

33-5698

33-5699

33-5700

33-5701

33-5702

33-5703

33-5704

33-5705

33-5706

33-5707

33-5708

33-5709

33-5710

33-5711

33-5712

33-5713

33-5714

33-5715

33-5716

33-5717

33-5718

33-5719

33-5720

33-5721

33-5722

33-5723

33-5724

33-5725

33-5726

33-5727

33-5728

33-5729

33-5730

33-5731

33-5732

33-5733

33-5734

33-5735

33-5736

33-5737

33-5738

33-5739

33-5740

33-5741

33-5742

33-5743

33-5744

33-5745

33-5746

33-5747

33-5748

33-5749

33-5750

33-5751

33-5752

33-5753

33-5754

33-5755

33-5756

33-5757

33-5758

33-5759

33-5760

33-5761

33-5762

33-5763

33-5764

33-5765

33-5766

33-5767

33-5768

33-5769

33-5770

33-5771

33-5772

33-5773

33-5774

33-5775

33-5776

33-5777

33-5778

33-5779

33-5780

33-5781

33-5782

33-5783

33-5784

33-5785

33-5786

33-5787

33-5788

33-5789

33-5790

33-5791

33-5792

33-5793

33-5794

33-5795

33-5796

33-5797

33-5798

33-5799

33-5800

33-5801

33-5802

33-5803

33-5804

33-5805

33-5806

33-5807

33-5808

33-5809

33-5810

33-5811

33-5812

33-5813

33-5814

33-5815

33-5816

33-5817

33-5818

33-5819

33-5820

33-5821

33-5822

33-5823

33-5824

33-5825

33-5826

33-5827

33-5828

33-5829

33-5830

33-5831

33-5832

33-5833

33-5834

33-5835

33-5836

33-5837

33-5838

33-5839

33-5840

33-5841

33-5842

33-5843

33-5844

33-5845

33-5846

33-5847

33-5848

33-5849

33-5850

33-5851

33-5852

33-5853

33-5854

33-5855

33-5856

33-5857

33-5858

33-5859

33-5860

33-5861

33-5862

33-5863

33-5864

33-5865

33-5866

33-5867

33-5868

33-5869

33-5870

33-5871

33-5872

33-5873

33-5874

33-5875

33-5876

33-5877

33-5878

33-5879

33-5880

33-5881

33-5882

33-5883

33-5884

33-5885

33-5886

33-5887

33-5888

33-5889

33-5890

33-5891

33-5892


33-5893

DETACHABLE WHEEL.

DESCRIPTION.	C10. C11. C12.	B29.	G14.
FRONT DETACHABLE WHEEL.			
Front Wheel, with WMS-18 W.O.	—	—	33-5513
rim (less brake and tyre).	—	—	33-5514
Front Wheel Rim (WMS-18)	—	—	15-7097(20)
Front Wheel Spoke (right-hand)	—	—	15-7098(20)
Do. (left-hand) ..	—	—	27-6908(40)
Front Wheel Spoke Nipple ..	—	—	33-5520
Front Hub, with bearings ..	—	—	26-6890(2)
Hub Shell Roller Bearings ..	—	—	15-7046
Hub Bearing Sleeve ..	—	—	15-7047
Do. Thrust Washer ..	—	—	15-7048
Hub Shell Oil Retaining Cap ..	—	—	26-6865(2)
Hub Shell Washer ..	—	—	15-7045(2)
Hub Shell Grease Nipple ..	—	—	35-5016
Hub Shell Felt Washer ..	—	—	15-7049
Hub Bearing Thrust Nut, with peg ..	—	—	26-6855
Do. Locking Washer ..	—	—	26-6861/6
Hub Bearing Locknut ..	—	—	15-7051/6
Hub Dust Cap ..	—	—	24-70651(14)
Hub Dust Cap Screw ..	—	—	24-7068(4)
Do. Spring Washer ..	—	—	



DETACHABLE WHEEL.

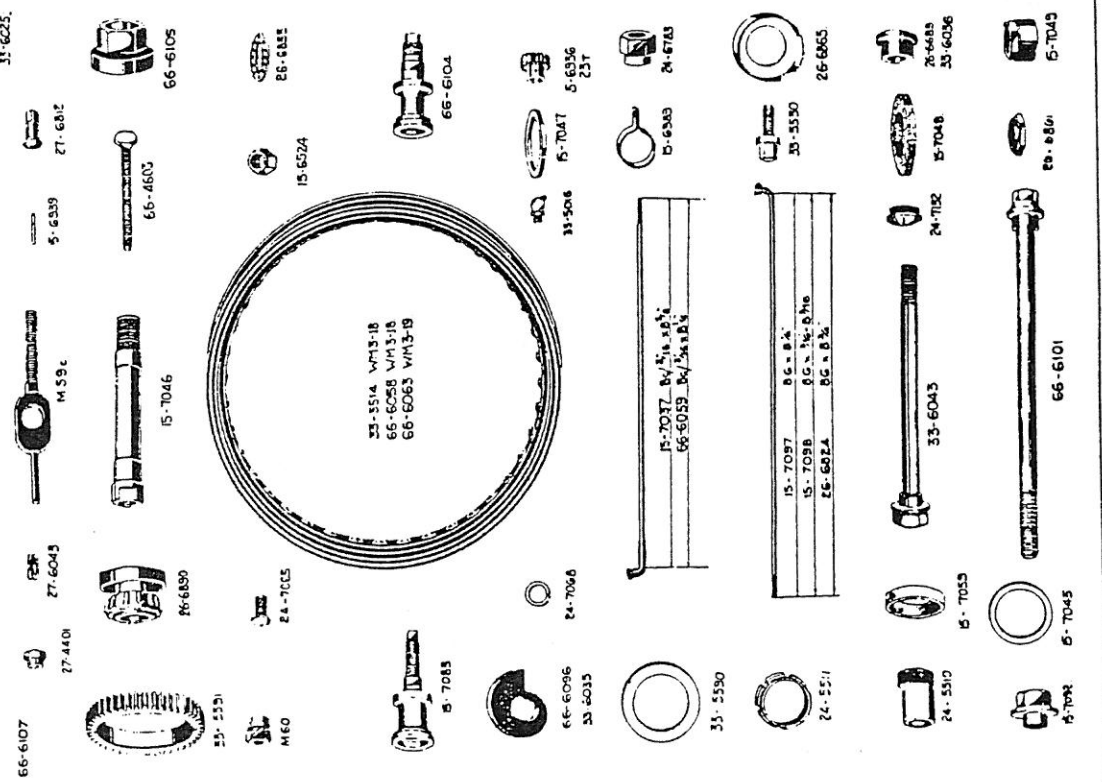


Front Brake Cover Plate .. 33-5542
 Front Brake Cam .. 33-5576
 Brake Cam Bearing Nut .. 24-858
 Brake Cam Bearing Washer .. K235
 Do. Grease Nipple .. 28-2080

Front Brake Fulcrum Pin .. 33-5544
 Fulcrum Pin Serrated Washer .. 33-5545/6
 Fulcrum Pin Nut .. 15-1455/6
 Front Brake Shoe, with lining .. 33-5545/6
 Brake Shoe Lining .. 33-5545/6
 Do. Rivet .. 33-5545/6
 Brake Shoe Spring .. 33-5545/6
 Front Brake Operating Lever .. 33-5545/6
 Do. Nut .. 33-5545/6
 Operating Lever Washer .. 33-5545/6

SPEEDO INTERNAL DRIVE.

Speedo Drive Cover Plug (when speedometer is not fitted) .. 24-7132/1
 Speedometer Driving Wheel .. 33-5591
 Do. Distance Washer .. 33-5594
 Speedometer Driving Pinion (23T) .. 15-6936
 Speedometer Pinion Peg .. 15-6939
 Speedometer Drive Gearbox (left-hand drive) .. 28-5890
 Gearbox Adjusting Sleeve .. 24-5510/1
 Adjusting Sleeve Locknut .. 24-5511/1
 Adjusting Sleeve Clip .. 15-6989
 Adjusting Sleeve Clip Bolt .. 24-225/6
 Do. Bolt Nut .. EB113/6

DETACHABLE WHEEL.

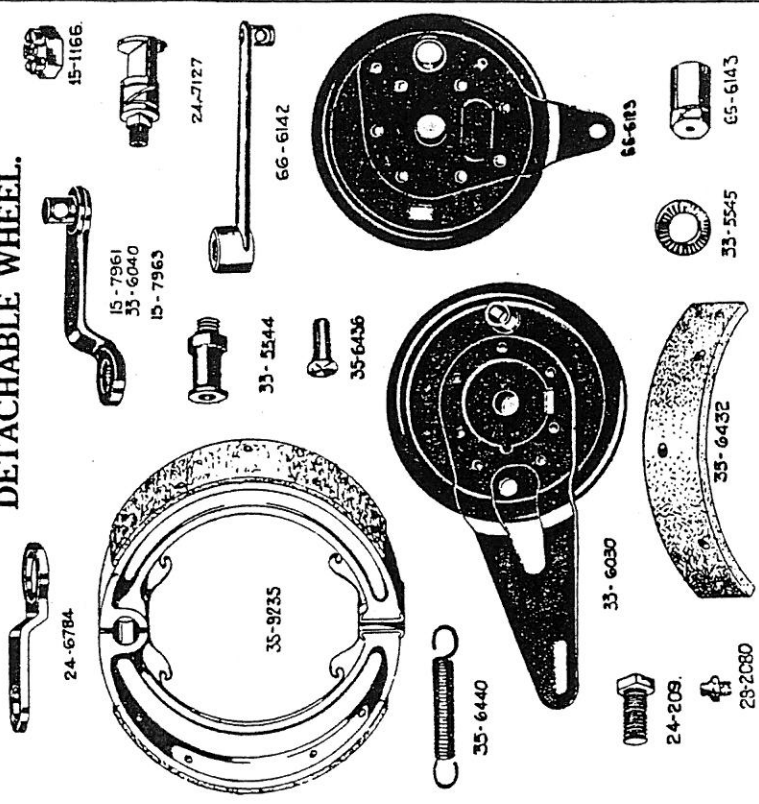



Bofors 25

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

FRONT HUB AND WHEEL FITTINGS.

DESCRIPTION.	C10. C11. C12.	B29.	M20. M21. M23.	G14.
Front Wheel, with WM1-19 rim, with spindle and bearings (less brake and tyre).	29-5717	—	—	—
Front Wheel Rim (WM1-19)	29-5558	—	—	—
Front Wheel Spoke (right-hand)	27-7016(20)	—	—	—
Do. (left-hand)	24-7012(10)	—	—	—
Do. (left-hand)	27-7010(10)	—	—	—
Front Wheel Spoke Nipple	27-6813(40)	—	—	—
Front Wheel, with WM1-20 rim, with spindle and bearings (less brake and tyre).	29-5718	—	60-5534	—
Front Wheel Rim (WM1-20)	29-5554	—	66-5497	—
Front Wheel Spoke (right-hand)	27-7011(20)	—	24-6813(20)	—
Do. (left-hand)	27-7013(20)	—	27-6813(40)	—
Do. Nipple	27-6813(40)	65-5780	—	—
Front Wheel, with WM2-19 rim, with spindle and bearings (less brake and tyre).	—	65-5520	—	—
Front Wheel Rim (WM2-19)	—	24-6899(20)	—	—
Front Wheel Spoke (short)	—	24-7012(20)	—	—
Do. (long)	—	27-6810(40)	60-5535	—
Front Wheel Spoke Nipple	—	—	66-5494	—
Front Wheel, with WM3-19 rim, with spindle and bearings (less brake and tyre).	—	—	66-5496	—
Front Wheel Rim (WM3-19)	—	—	24-6899(20)	—
Front Wheel Spoke (short)	—	—	24-7012(20)	—
Front Wheel Spoke (long)	—	—	27-6813(40)	—
Front Wheel Spoke Nipple	—	—	66-5518	—
Front Wheel, with WM3-19 rim, with spindle and bearings (less brake and tyre).	—	—	66-5519	—
Front Wheel Rim (WM3-19)	—	65-5785	—	—
Front Wheel Spoke (short)	—	—	—	—
Front Wheel Spoke (long)	—	—	—	—
Front Wheel Spoke Nipple	—	—	—	—
Front Hub, with spindle and bearings (less brake).	—	—	—	—
Front Hub only, with fittings	29-5724	—	—	—
Front Hub Cup	29-5701(2)	—	—	—
Front Hub Cone	29-5700	—	—	—
Do. (adjusting)	29-6153	—	—	—
Front Hub Cone Locknut	24-7000/1	—	—	—
Front Hub Ball	1/4" diam. (20)	—	—	—
Front Hub Roller Bearing	—	24-7058(2)	—	—
Front Hub Felt Washer Retaining Ring (right-hand).	—	—	24-6880(2)	—
Do. (left-hand)	—	—	24-6841	—
Front Hub Felt Washer (right-hand)	24-7047	—	24-6846(2)	—
Do. (left-hand)	24-7047	24-7047	24-6782	—
Felt Washer Retaining Cap	29-5710(2)	24-7047	66-5525	—
Do. Washer	29-5715(2)	29-5710(2)	—	—
Front Hub Grease Nipple	35-5016	35-5016	35-5016	—
Do. Oil Retaining Washer	29-5905	—	66-5526	—
Do. Spindle	29-5733	65-5797	—	—
Front Hub Speedometer Locknut	27-6716	—	—	—
Do. Washer	15-8164	—	—	—
Front Hub Spindle Nut	27-6732(6/2)	27-6732(8/2)	15-6737(6/2)	—
Front Hub Spindle Locknut	—	27-6716/6	24-6884/6	—
Do. Locknut Washer	—	15-8164	36-3528(2)	—
Do. Washer	—	—	66-5524	—
Do. Bearing Locknut	—	—	24-6868/6	—

Do. Adjusting Sleeve	60-5500/4	—	—	24-6884/6	—
Do. Locknut	24-7000/6	—	—	24-7051/6	—
Front Hub Distance Piece	29-5690/6	—	—	—	—
FRONT WHEEL BRAKE.					
Front Wheel Cover Plate, complete with fixed fittings.	29-5728	65-5793	—	66-5580	—
Do. (M23 only)	—	—	—	60-5590/8	—
Front Brake Shoe, with lining (r.h.)	24-7767	65-8179	—	35-8235	—
Do. (left-hand)	24-7768	65-8180	—	35-8235	—
Brake Shoe Lining	24-7775(2)	24-7985(2)	—	35-6432(2)	—
Do. Rivet	24-7990(14)	24-7990(18)	—	35-6436(14)	—

 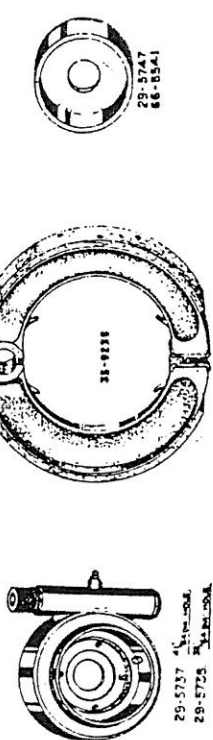

FRONT HUB AND WHEEL FITTINGS.

29-5737 29-5725 24-7767 24-7768 24-7769 24-7770 24-7771 24-7772 24-7773 24-7774 24-7775 24-7776 24-7777 24-7778 24-7779 24-7780 24-7781 24-7782 24-7783 24-7784 24-7785 24-7786 24-7787 24-7788 24-7789 24-7790 24-7791 24-7792 24-7793 24-7794 24-7795 24-7796 24-7797 24-7798 24-7799 24-7800 24-7801 24-7802 24-7803 24-7804 24-7805 24-7806 24-7807 24-7808 24-7809 24-7810 24-7811 24-7812 24-7813 24-7814 24-7815 24-7816 24-7817 24-7818 24-7819 24-7820 24-7821 24-7822 24-7823 24-7824 24-7825 24-7826 24-7827 24-7828 24-7829 24-7830 24-7831 24-7832 24-7833 24-7834 24-7835 24-7836 24-7837 24-7838 24-7839 24-7840 24-7841 24-7842 24-7843 24-7844 24-7845 24-7846 24-7847 24-7848 24-7849 24-7850 24-7851 24-7852 24-7853 24-7854 24-7855 24-7856 24-7857 24-7858 24-7859 24-7860 24-7861 24-7862 24-7863 24-7864 24-7865 24-7866 24-7867 24-7868 24-7869 24-7870 24-7871 24-7872 24-7873 24-7874 24-7875 24-7876 24-7877 24-7878 24-7879 24-7880 24-7881 24-7882 24-7883 24-7884 24-7885 24-7886 24-7887 24-7888 24-7889 24-7890 24-7891 24-7892 24-7893 24-7894 24-7895 24-7896 24-7897 24-7898 24-7899 24-7900 24-7901 24-7902 24-7903 24-7904 24-7905 24-7906 24-7907 24-7908 24-7909 24-7910 24-7911 24-7912 24-7913 24-7914 24-7915 24-7916 24-7917 24-7918 24-7919 24-7920 24-7921 24-7922 24-7923 24-7924 24-7925 24-7926 24-7927 24-7928 24-7929 24-7930 24-7931 24-7932 24-7933 24-7934 24-7935 24-7936 24-7937 24-7938 24-7939 24-7940 24-7941 24-7942 24-7943 24-7944 24-7945 24-7946 24-7947 24-7948 24-7949 24-7950 24-7951 24-7952 24-7953 24-7954 24-7955 24-7956 24-7957 24-7958 24-7959 24-7960 24-7961 24-7962 24-7963 24-7964 24-7965 24-7966 24-7967 24-7968 24-7969 24-7970 24-7971 24-7972 24-7973 24-7974 24-7975 24-7976 24-7977 24-7978 24-7979 24-7980 24-7981 24-7982 24-7983 24-7984 24-7985 24-7986 24-7987 24-7988 24-7989 24-7990 24-7991 24-7992 24-7993 24-7994 24-7995 24-7996 24-7997 24-7998 24-7999 24-8000 24-8001 24-8002 24-8003 24-8004 24-8005 24-8006 24-8007 24-8008 24-8009 24-8010 24-8011 24-8012 24-8013 24-8014 24-8015 24-8016 24-8017 24-8018 24-8019 24-8020 24-8021 24-8022 24-8023 24-8024 24-8025 24-8026 24-8027 24-8028 24-8029 24-8030 24-8031 24-8032 24-8033 24-8034 24-8035 24-8036 24-8037 24-8038 24-8039 24-8040 24-8041 24-8042 24-8043 24-8044 24-8045 24-8046 24-8047 24-8048 24-8049 24-8050 24-8051 24-8052 24-8053 24-8054 24-8055 24-8056 24-8057 24-8058 24-8059 24-8060 24-8061 24-8062 24-8063 24-8064 24-8065 24-8066 24-8067 24-8068 24-8069 24-8070 24-8071 24-8072 24-8073 24-8074 24-8075 24-8076 24-8077 24-8078 24-8079 24-8080 24-8081 24-8082 24-8083 24-8084 24-8085 24-8086 24-8087 24-8088 24-8089 24-8090 24-8091 24-8092 24-8093 24-8094 24-8095 24-8096 24-8097 24-8098 24-8099 24-8100 24-8101 24-8102 24-8103 24-8104 24-8105 24-8106 24-8107 24-8108 24-8109 24-8110 24-8111 24-8112 24-8113 24-8114 24-8115 24-8116 24-8117 24-8118 24-8119 24-8120 24-8121 24-8122 24-8123 24-8124 24-8125 24-8126 24-8127 24-8128 24-8129 24-8130 24-8131 24-8132 24-8133 24-8134 24-8135 24-8136 24-8137 24-8138 24-8139 24-8140 24-8141 24-8142 24-8143 24-8144 24-8145 24-8146 24-8147 24-8148 24-8149 24-8150 24-8151 24-8152 24-8153 24-8154 24-8155 24-8156 24-8157 24-8158 24-8159 24-8160 24-8161 24-8162 24-8163 24-8164 24-8165 24-8166 24-8167 24-8168 24-8169 24-8170 24-8171 24-8172 24-8173 24-8174 24-8175 24-8176 24-8177 24-8178 24-8179 24-8180 24-8181 24-8182 24-8183 24-8184 24-8185 24-8186 24-8187 24-8188 24-8189 24-8190 24-8191 24-8192 24-8193 24-8194 24-8195 24-8196 24-8197 24-8198 24-8199 24-8200 24-8201 24-8202 24-8203 24-8204 24-8205 24-8206 24-8207 24-8208 24-8209 24-8210 24-8211 24-8212 24-8213 24-8214 24-8215 24-8216 24-8217 24-8218 24-8219 24-8220 24-8221 24-8222 24-8223 24-8224 24-8225 24-8226 24-8227 24-8228 24-8229 24-8230 24-8231 24-8232 24-8233 24-8234 24-8235 24-8236 24-8237 24-8238 24-8239 24-8240 24-8241 24-8242 24-8243 24-8244 24-8245 24-8246 24-8247 24-8248 24-8249 24-8250 24-8251 24-8252 24-8253 24-8254 24-8255 24-8256 24-8257 24-8258 24-8259 24-8260 24-8261 24-8262 24-8263 24-8264 24-8265 24-8266 24-8267 24-8268 24-8269 24-8270 24-8271 24-8272 24-8273 24-8274 24-8275 24-8276 24-8277 24-8278 24-8279 24-8280 24-8281 24-8282 24-8283 24-8284 24-8285 24-8286 24-8287 24-8288 24-8289 24-8290 24-8291 24-8292 24-8293 24-8294 24-8295 24-8296 24-8297 24-8298 24-8299 24-8300 24-8301 24-8302 24-8303 24-8304 24-8305 24-8306 24-8307 24-8308 24-8309 24-8310 24-8311 24-8312 24-8313 24-8314 24-8315 24-8316 24-8317 24-8318 24-8319 24-8320 24-8321 24-8322 24-8323 24-8324 24-8325 24-8326 24-8327 24-8328 24-8329 24-8330 24-8331 24-8332 24-8333 24-8334 24-8335 24-8336 24-8337 24-8338 24-8339 24-8340 24-8341 24-8342 24-8343 24-8344 24-8345 24-8346 24-8347 24-8348 24-8349 24-8350 24-8351 24-8352 24-8353 24-8354 24-8355 24-8356 24-8357 24-8358 24-8359 24-8360 24-8361 24-8362 24-8363 24-8364 24-8365 24-8366 24-8367 24-8368 24-8369 24-8370 24-8371 24-8372 24-8373 24-8374 24-8375 24-8376 24-8377 24-8378 24-8379 24-8380 24-8381 24-8382 24-8383 24-8384 24-8385 24-8386 24-8387 24-8388 24-8389 24-8390 24-8391 24-8392 24-8393 24-8394 24-8395 24-8396 24-8397 24-8398 24-8399 24-8400 24-8401 24-8402 24-8403 24-8404 24-8405 24-8406 24-8407 24-8408 24-8409 24-8410 24-8411 24-8412 24-8413 24-8414 24-8415 24-8416 24-8417 24-8418 24-8419 24-8420 24-8421 24-8422 24-8423 24-8424 24-8425 24-8426 24-8427 24-8428 24-8429 24-8430 24-8431 24-8432 24-8433 24-8434 24-8435 24-8436 24-8437 24-8438 24-8439 24-8440 24-8441 24-8442 24-8443 24-8444 24-8445 24-8446 24-8447 24-8448 24-8449 24-8450 24-8451 24-8452 24-8453 24-8454 24-8455 24-8456 24-8457 24-8458 24-8459 24-8460 24-8461 24-8462 24-8463 24-8464 24-8465 24-8466 24-8467 24-8468 24-8469 24-8470 24-8471 24-8472 24-8473 24-8474 24-8475 24-8476 24-8477 24-8478 24-8479 24-8480 24-8481 24-8482 24-8483 24-8484 24-8485 24-8486 24-8487 24-8488 24-8489 24-8490 24-8491 24-8492 24-8493 24-8494 24-8495 24-8496 24-8497 24-8498 24-8499 24-8500 24-8501 24-8502 24-8503 24-8504 24-8505 24-8506 24-8507 24-8508 24-8509 24-8510 24-8511 24-8512 24-8513 24-8514 24-8515 24-8516 24-8517 24-8518 24-8519 24-8520 24-8521 24-8522 24-8523 24-8524 24-8525 24-8526 24-8527 24-8528 24-8529 24-8530 24-8531 24-8532 24-8533 24-8534 24-8535 24-8536 24-8537 24-8538 24-8539 24-8540 24-8541 24-8542 24-8543 24-8544 24-8545 24-8546 24-8547 24-8548 24-8549 24-8550 24-8551 24-8552 24-8553 24-8554 24-8555 24-8556 24-8557 24-8558 24-8559 24-8560 24-8561 24-8562 24-8563 24-8564 24-8565 24-8566 24-8567 24-8568 24-8569 24-8570 24-8571 24-8572 24-8573 24-8574 24-8575 24-8576 24-8577 24-8578 24-8579 24-8580 24-8581 24-8582 24-8583 24-8584 24-8585 24-8586 24-8587 24-8588 24-8589 24-8590 24-8591 24-8592 24-8593 24-8594 24-8595 24-8596 24-8597 24-8598 24-8599 24-8600 24-8601 24-8602 24-8603 24-8604 24-8605 24-8606 24-8607 24-8608 24-8609 24-8610 24-8611 24-8612 24-8613 24-8614 24-8615 24-8616 24-8617 24-8618 24-8619 24-8620 24-8621 24-8622 24-8623 24-8624 24-8625 24-8626 24-8627 24-8628 24-8629 24-8630 24-8631 24-8632 24-8633 24-8634 24-8635 24-8636 24-8637 24-8638 24-8639 24-8640 24-8641 24-8642 24-8643 24-8644 24-8645 24-8646 24-8647 24-8648 24-8649 24-8650 24-8651 24-8652 24-8653 24-8654 24-8655 24-8656 24-8657 24-8658 24-8659 24-8660 24-8661 24-8662 24-8663 24-8664 24-8665 24-8666 24-8667 24-8668 24-8669 24-8670 24-8671 24-8672 24-8673 24-8674 24-8675 24-8676 24-8677 24-8678 24-8679 24-8680 24-8681 24-8682 24-8683 24-8684 24-8685 24-8686 24-8687 24-8688 24-8689 24-8690 24-8691 24-8692 24-8693 24-8694 24-8695 24-8696 24-8697 24-8698 24-8699 24-8700 24-8701 24-8702 24-8703 24-8704 24-8705 24-8706 24-8707 24-8708 24-8709 24-8710 24-8711 24-8712 24-8713 24-8714 24-8715 24-8716 24-8717 24-8718 24-8719 24-8720 24-8721 24-8722 24-8723 24-8724 24-8725 24-8726 24-8727 24-8728 24-8729 24-8730 24-8731 24-8732 24-8733 24-8734 24-8735 24-8736 24-8737 24-8738 24-8739 24-8740 24-8741 24-8742 24-8743 24-8744 24-8745 24-8746 24-8747 24-8748 24-8749 24-8750 24-8751 24-8752 24-8753 24-8754 24-8755 24-8756 24-8757 24-8758 24-8759 24-8760 24-8761 24-8762 24-8763 24-8764 24-8765 24-8766 24-8767 24-8768 24-8769 24-8770 24-8771 24-8772 24-8773 24-8774 24-8775 24-8776 24-8777 24-8778 24-8779 24-8780 24-8781 24-8782 24-8783 24-8784 24-8785 24-8786 24-8787 24-8788 24-8789 24-8790 24-8791 24-8792 24-8793 24-8794 24-8795 24-8796 24-8797 24-8798 24-8799 24-8800 24-8801 24-8802 24-8803 24-8804 24-8805 24-8806 24-8807 24-8808 24-8809 24-8810 24-8811 24-8812 24-8813 24-8814 24-8815 24-8816 24-8817 24-8818 24-8819 24-8820 24-8821 24-8822 24-8823 24-8824 24-8825 24-8826 24-8827 24-8828 24-8829 24-8830 24-8831 24-8832 24-8833 24-8834 24-8835 24-8836 24-8837 24-8838 24-8839 24-8840 24-8841 24-8842 24-8843 24-8844 24-8845 24-8846 24-8847 24-8848 24-8849 24-8850 24-8851 24-8852 24-8853 24-8854 24-8855 24-8856 24-8857 24-8858 24-8859 24-8860

Rear Hub and Wheel Fittings—continued.

Rear Hub and Wheel Fittings—continued.	
Rear Brake Cam	65-5673
Do.	65-5674
Rear Brake Operating Lever, with stud	29-6028
Operating Lever Washer	15-431/6
Operating Lever Nut	EB171/6
Rear Brake Anchor Plate Strap	—
Do.	29-6110/6
Bolt Washer	24-7911/6
Bolt Nut	E28(2)
Bolt Split Pin	15-1166/6(2)
Rear Brake Cam Steady Strap	15-1268(2)
	65-6208

NOTE.—Figures in brackets denote number per set, e.g. (2), 2 per set. When no figures in brackets are shown one part constitutes a set.

When ordering Wheels or Wheel Parts particular note should be made as to size of tyre or rim. Also state diameter of Brake Drum.


When order/no wheels or Wheel Blms. please state finish and colour.

ELECTRICAL EQUIPMENT.

DESCRIPTION.	C10.		B29.	M20. M21.		M23.	G14.
	C11.	C12.					
J. LUCAS LTD., Great King Street, Birmingham.							
Magneto Unit	—	—	465109	465109	465109	463443	
Dynamo	200424	407901	—	—	—	—	
Distributor	—	403022	—	—	—	—	
Coil	—	—	—	—	—	—	
Voltage Regulator	390706	390706	390706	390706	390706	390706	
Headlamp	516034	515669	515669	515532	515532	515532	
Tail Lamp	—	052116	052116	052116	052116	052116	
Tank Panel, complete with cables	—	—	—	308421	308421	308422	
Battery (charged)	2384736	700771	2384736	2384736	2384736	2384736	
Electric Horn	—	—	700771	700771	700771	700771	066225

FRONT MUDGUARD AND FITTINGS.

DESCRIPTION.	C10. C11. C12.	B29.	M20. M21. M23.	G14.
Front Mudguard, with fixed fittings	29-6545	65-6536	66-6532	—
Do. (valanced type)	—	85-6538	66-6534	33-6601
Front Mudguard Stay	85-6512 (2)	85-6512	66-6540	—
Do. (for valanced type) ..	—	65-6533	15-7195	39-6599
Front Mudguard Stay Plate ..	—	—	15-7161 (6/2)	15-7160 (6/2)
Stay Plate Bolt	15-7161 (6/4)	15-7161 (6/2)	15-7161 (6/2)	15-7161 (6/2)
Stay Plate Washer	27-8560 (6/4)	27-8560 (6/2)	27-8560 (6/2)	27-8560 (6/2)
Stay Plate Spring Washer ..	K197 (4)	K197 (2)	K197 (2)	K197 (2)
Stay Plate Bolt Nut	EB113 (6/4)	EB113 (6/2)	EB113 (6/2)	EB113 (6/2)
Front Mudguard Stay Bolt ..	K132A (6/2)	K132A (6/2)	B751 (6/2)	B751 (6/2)
Stay Bolt Washer	—	—	—	B751A (6/2)
Stay Bolt Nut	EB102 (6/2)	M263 (6/2)	M263 (6/2)	EB102 (6/2)
Bottom Stay Bolt	24-7148 (6/2)	—	—	—
Bottom Stay Bolt Nut	BA111 (6/2)	—	—	—
Front Mudguard Support Washer	—	—	27-7166 (6	—
Do. Bolt	—	—	15-7354 (6	—
Front Number Plate	66-6535	66-6535	66-6535	31-6525
Do. Screw	EB673 (6/4)	EB673 (6/4)	24-7065 (6/4)	EB673 (6/4)
Do. Nut	25-7151 (4)	25-7151 (4)	25-7151 (4)	25-7151 (4)
Do. Screw Nut	—	—	—	—

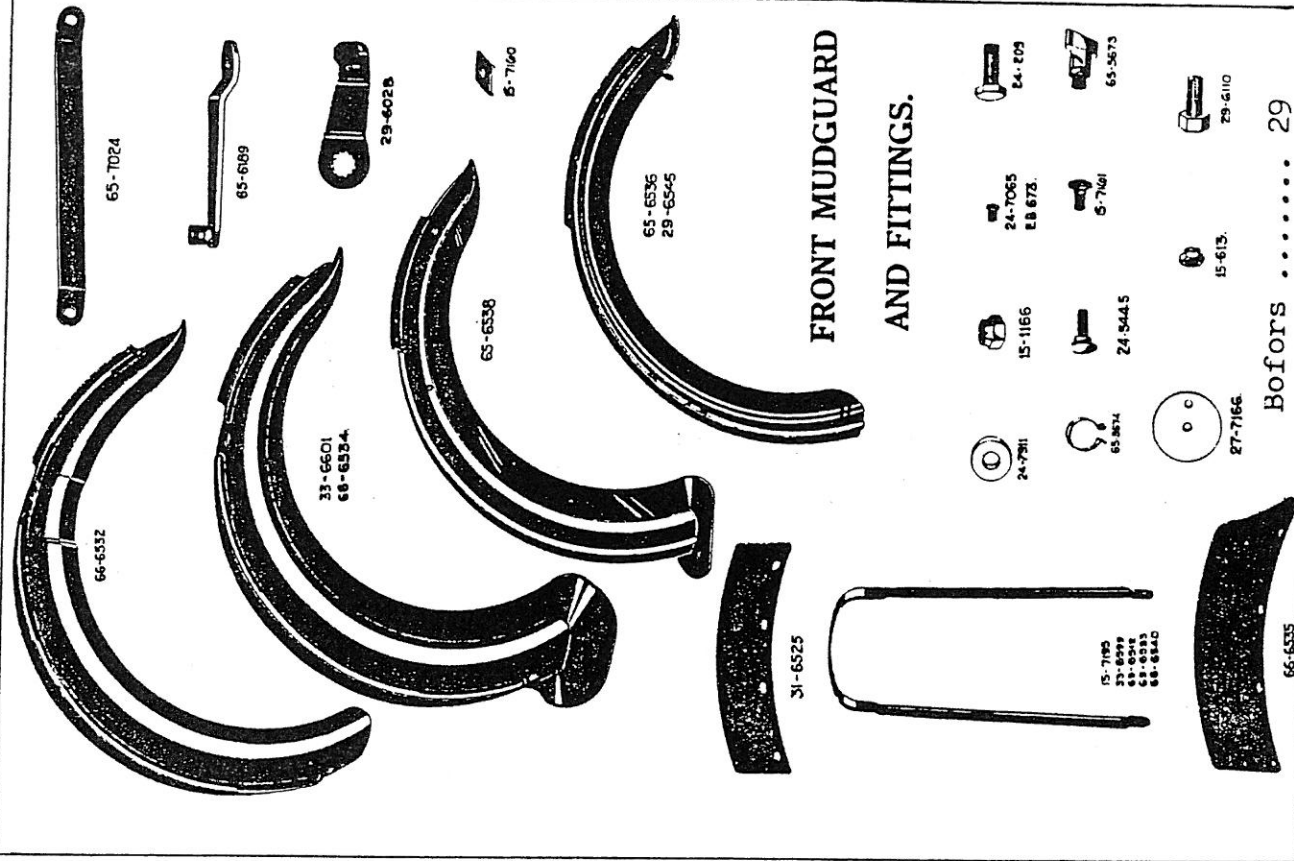

Quote type numbers when ordering Replacement Components for any of the above-mentioned Accessories.
Reference should also be made to the Spare Parts Catalogues issued by the Individual manufacturers.


REAR MUDGUARD AND FITTINGS.

DESCRIPTION.	G10. C11. C12.	B29.	N20. N21. N23.	G14.
Rear Mudguard Blade, complete with rivetted fittings only.	29-6850	65-6783	66-6940	33-6782
Rear Mudguard Tail ..	29-6853	65-6781	66-6941	33-6785
Tail Bolt ..	K132A/6(2)	15-7354/6(2)	66-6740/6(2)	—
Tail Bolt Washer ..	B751A/6(2)	—	—	24-225/6
Tail Hinge Bolt ..	—	—	—	K197
Do. Spring Washer ..	—	—	—	EB113/6
Do. Bolt Nut ..	—	—	—	24-7276/6(2)
Tail Hinge Bolt (top) ..	—	—	—	K197(2)
Do. Spring Washer (top) ..	—	—	—	EB113/6(2)
Do. Nut ..	—	—	—	33-6776
Rear Mudguard Connecting Strip ..	—	—	—	24-225/6
Do. Bolt ..	—	—	—	K197
Do. Spring Washer ..	—	—	—	M269/6
Do. Nut ..	—	—	—	24-7277
Rear Mudguard Tail Connecting Strip ..	—	65-6770	M80	M80
Rear Mudguard Top Bracket ..	K132A/6	M284/6	K132A/6(2)	K132/6(2)
Backstay Clip Bolt ..	K197	K197	K197(2)	*K197(2)
Do. Spring Washer ..	M263/6	M263/6	—	M263/6(2)
Do. Nut ..	—	EB113/6	EB113/6(2)	—
Do. Nut ..	—	K234A/6	27-8560/6(2)	—
Bolt Washer ..	—	—	EB242(2)	—
Bolt Fibre Washer ..	—	—	24-7985	—
Rear Mudguard Chainstay Bridge Clip ..	—	—	K132A/6(2)	—
Do. Bolt ..	—	—	27-8560/6(2)	—
Do. Washer ..	—	—	K197(2)	—
Do. Spring Washer ..	—	—	EB113/6(2)	—
Do. Nut ..	—	—	—	—
Chainstay Bolt ..	24-8328/6	—	—	—
Do. Nut ..	EB113/6	—	—	—
Rear Mudguard Chainstay Distance Tube Connecting Bolt.	—	—	—	K132/6(2)
Do. Nut ..	—	—	—	M263/6(2)
Do. Spring Washer ..	—	—	—	K197(2)
Rear Number Plate ..	66-6943	66-6943	66-6948	66-6943
Do. Top Bolt ..	K132/6(2)	K132/6(2)	K132/6(2)	K132/6(2)
Do. Bottom Bolt ..	24-225/6	24-225/6	24-225/6	24-225/6
Do. Nut ..	EB118/6(3)	EB113/6(3)	EB113/6(3)	EB113/6(3)
Do. Washer ..	K197(3)	K197(3)	K197(3)	K197(3)
Do. Bolt Rubber Washer ..	15-7383	15-7383	15-7383	15-7383
Upright Stay ..	—	65-6906(2)	66-6945(2)	33-6803
Do. Chainguard Bracket Bolt ..	—	—	—	27-6742/6
Do. do. Nut ..	—	—	—	EA80/6
Do. do. Washer ..	—	—	—	F21/6
Upright Stay Bolt ..	—	K132A/6(2)	K132A/6(2)	—
Do. Washer ..	—	K132A/6(2)	27-8560/6(2)	—
Do. Nut ..	—	M263/6(2)	M263/6(2)	—
Bottom Stay (right-hand) ..	29-6855	65-6904	66-6891	24-7347
Do. (left-hand) ..	29-6852	65-6905	66-6891	24-7347
Bottom Stay Bolt ..	K132A/6(2)	K132A/6(2)	—	B751/6(2)
Do. Washer ..	—	—	—	15-447/6(2)
Do. Nut ..	—	—	—	—
Bottom Bridge Bolt ..	—	—	B751/6(2)	—
Do. Washer ..	—	—	K234A/6(2)	—
Do. Nut ..	—	—	15-447/6(2)	—
Rear Mudguard Lifting Stay ..	29-6851	65-6903	66-6884	33-6825
Lifting Stay Top Bolt ..	K132A/6(2)	EB112/6(2)	M413/6(2)	—
Do. Nut ..	EB113/6(2)	M263/6(2)	EA80/6(2)	—
Do. Washer ..	K359A/6(2)	B751A/6	K359A/6(2)	—

Lifting Stay Saddle Washer ..
Do. Packing Piece ..
Do. Bottom Bolt (right-hand) ..
Do. do. (left-hand) ..
Bolt Nut ..
Bolt Washer ..

K196/6(2)
15-7342/6(2)
M413/6
27-6311/6
24-6040/6(2)
F21/6(2)

15-7363/6(2)
15-480/6
24-5205/6
EA80/6(2)
F21/6(2)

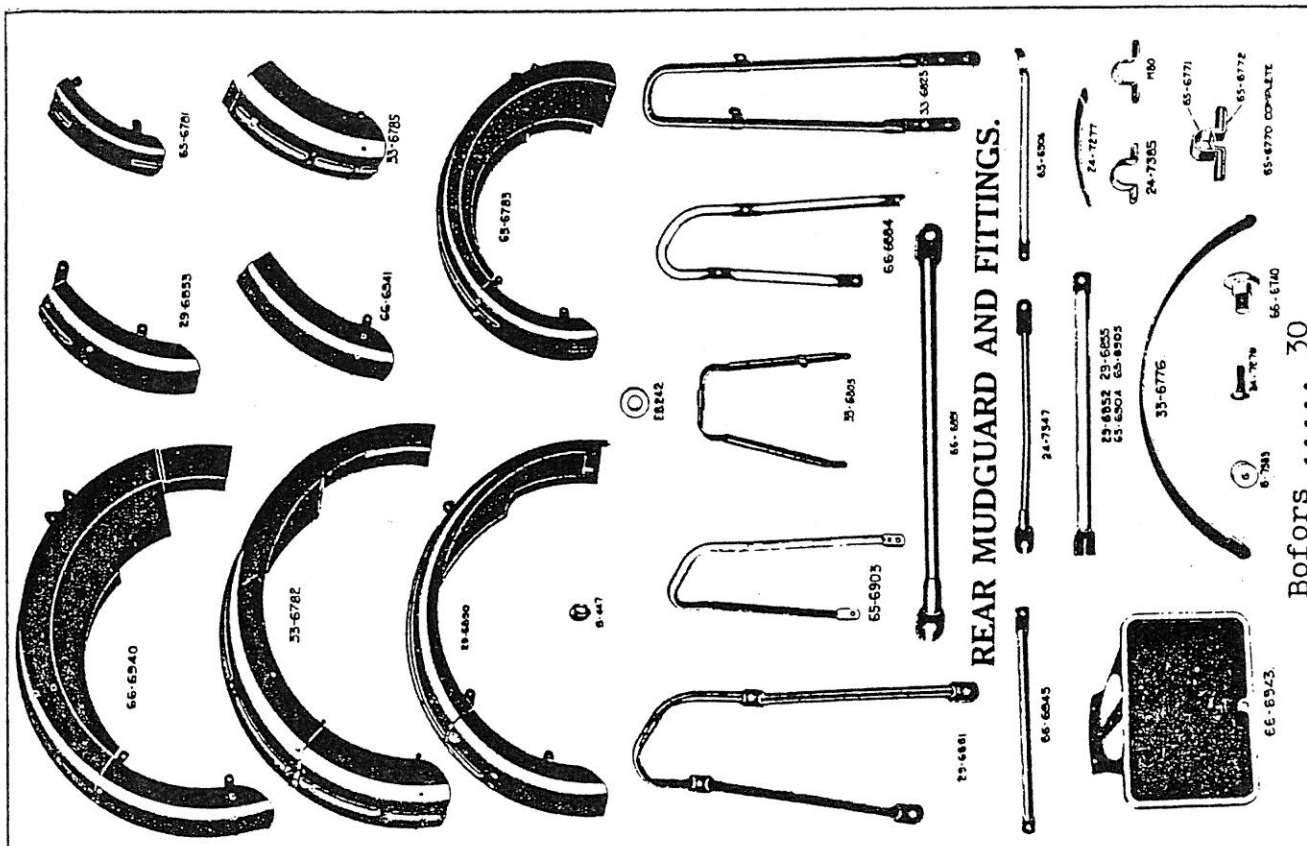

REAR MUDGUARD AND FITTINGS.

Bofors 30

Rear Mudguard and Fittings—Continued.

Rear Mudguard Changer Bolt	K132A/6	—	—	—	—
Do. Nut	EB113/6	—	—	—	—
Pillion Seat Support Stay (right-hand)	29-6858	—	—	—	—
Do. (left-hand)	29-6858	—	—	—	—
Do. Bolt	K132A/6	—	—	—	—
Do. Bolt Nut	EB113/6(2)	—	—	—	—
Do. Bolt Washer	B751A/6(2)	—	—	—	—
Voltage Control Bolt	M253/6(2)	—	—	—	—
Do. Washer	B751A/6(4)	—	—	—	—
Do. Washer (thin)	27-8560/6(6)	—	—	—	—
Do. Nut	M263/6(4)	—	—	—	—
Do. Locknut	EB102/6(2)	—	—	—	—
Do. Rubber	15-7383(2)	—	—	—	—


SADDLES AND SPARKING PLUGS.

DESCRIPTION.	C10. C11. C12.	B29.	M20. M21.	M23.	G14.
H. TERRY & SONS LTD., Redditch.					
Saddle	S802	—	S707	S707	S656
Saddle (Export)	—	—	—	—	S721
DUNLOP RUBBER CO. LTD., Fort Dunlop, Birmingham 24.					
Saddle	F89/4S.P.	—	—	—	—
J. B. BROOKS & CO. LTD., Great Charles Street, Birmingham 3.					
Saddle	—	B182	—	—	—
K.L.G. SPARKING PLUGS LTD., Putney Vale, London, S.W.15.					
Sparkling Plug	L777	831	L777	831	777

REAR BRAKE CONTROL.

DESCRIPTION.	C10. C11. C12.	B29.	M20. M21. M23.	G14.
Rear Brake Pedal	29-7319	66-7005	66-7006	33-7012
Do. (M23 only)	—	—	66-7006/3	—
Rear Brake Pedal Grease Nipple	—	28-2080	—	—
Do. Spring	29-7327	66-7032	66-7032	27-7920
Spring Bolt	—	27-6037	EA76/6	—
Spring Bolt Nut	—	—	K234/6/6	—
Spring Stop Plate	—	65-7023	66-7033	33-7045
Do. Washer	—	—	26-1005/6	—
Spring Stop, with stud	—	—	—	31-7009
Spring Stop Nut	—	—	—	27-1039/6
Rear Brake Pedal Spindle	—	66-7029	66-7035	31-7005
Pedal Spindle Locknut	—	15-541/6	15-1455/6	EA82/6
Pedal Spindle Nut	—	—	15-541/6	24-7911/6
Do. Washer	—	30-660/6	30-660/6	—
Do. Washer (thick)	29-7388	—	—	—
Pedal Shaft	29-7323	—	—	—
Do. Lever	27-8059/6(2)	—	—	—
Do. Nut	M101A/6(2)	—	—	—
Do. Washer	29-7325	65-7007	65-7007	15-7042
Rear Brake Rod, with toggle end	—	—	65-7007/3	—
Do. (M23 only)	EB72/1	27-4517/1	27-4517/1	27-4517
Toggle End Screw	EB102/1	EB102/1	EB102/1	EB102/1
Do. Nut	—	K187	K187	K187
Do. Spring Washer	—	—	—	—

Rear Brake Rod Spring	24-585	15-7980	15-7980
Do. Spring Locknut	N263/1	24-563/1	24-563/1
Do. Wing-nut	27-7983/1	15-7985/1	15-7985/1
Do. Bush	29-7328	65-7037	65-7037
Do. Grease Nipple	—	—	15-7975
Do. Grease Nipple Washer	—	—	28-2080
Do. Fulcrum Pin Bush	66-7034	—	S91/6
REAR BRAKE CONTROL (when Footplates are fitted).			
Rear Brake Pedal	—	66-7018	33-7011
Do. Bush	—	66-7019	—
Do. Stop Bolt	—	M253/6	—
Do. Locknut	—	M263/6	—
Do. Spring	—	66-7020	27-7920
Rear Brake Stop Plate	—	—	33-7045

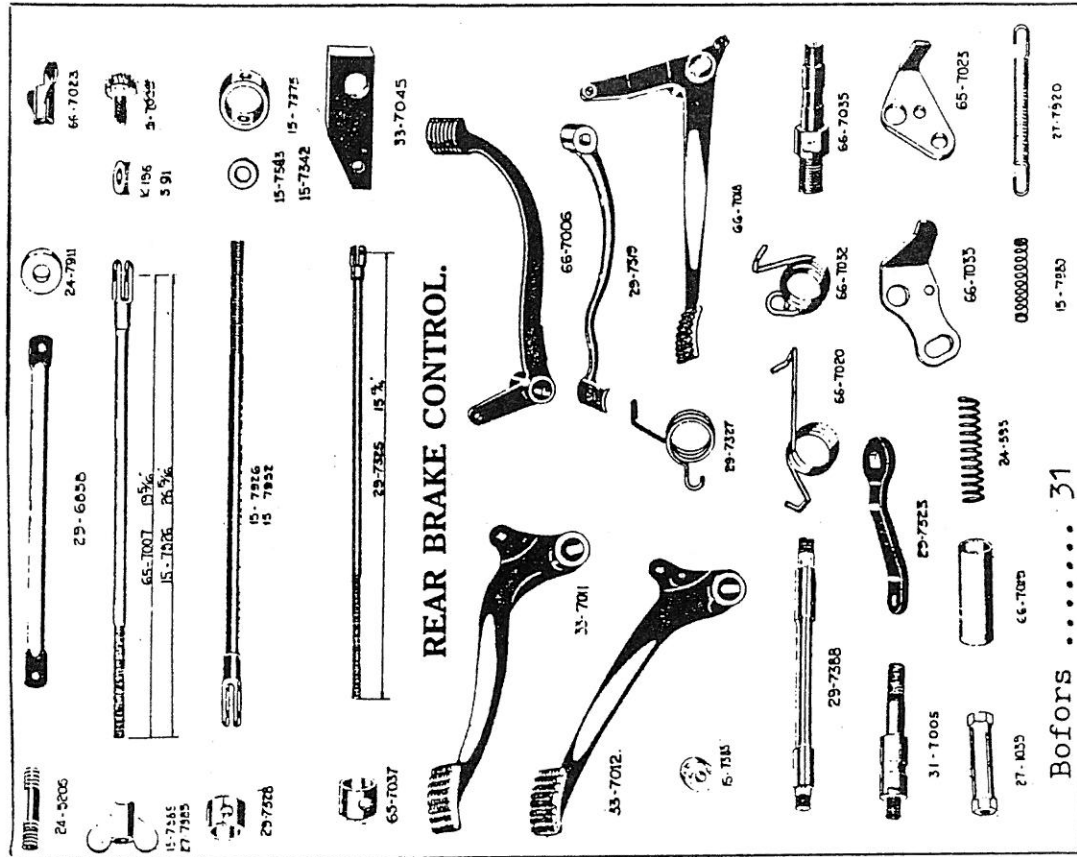


Rear Brake Stop, with stud	31-7009	—	—	—	—
Do. Stud Nut	27-1039/6	—	—	—	—
Rear Brake Pedal Spindle	31-7005	—	—	—	—
Pedal Spindle Locknut	EA60/6	—	—	—	—
Pedal Spindle Nut	EA82/6	—	—	—	—
Pedal Spindle Washer	24-7911/6	—	—	—	—
Rear Brake Rod, with toggle end	15-7952	—	—	—	—
Toggle End Screw	27-4517/1	—	—	—	—
Do. Nut	EB102/1	—	—	—	—
Do. Spring Washer	K197	—	—	—	—
Rear Brake Rod Spring	15-7890	—	—	—	—
Do. Locknut	M263/1	—	—	—	—
Do. Wing nut	66-7023	—	—	—	—
Do. Bush	65-7037	—	—	—	—
Do. Grease Nipple	—	—	—	—	—
Do. Grease Nipple Washer	28-2080	—	—	—	—
Do.	S91/6	—	—	—	—


Footrests, Footplates, Legshields and Fittings.

DESCRIPTION.	C10. C11. C12.	B29.	M20. M21. M23.	G14.
FOOTRESTS.				
Footrest Arm, with spindle	29-7536(2)	—	—	—
Footrest Rubber	15-8155(2)	15-8155(2)	15-8155(2)	—
Footrest Rod	—	66-4900/1	66-4900/1	—
Do. (right-hand)	29-7529/6	—	—	—
Do. (left-hand)	29-7544/6	—	—	—
Footrest Rod Spring Washer	33-35(4)	—	—	—
Do. Nut	27-8059/6(4)	15-5753/6(2)	15-5753/6(2)	—
Do. Distance Tube (right-hand)	29-7530	—	—	—
Do. do. (left-hand) (engine plate)	29-7504	—	—	—
Do. do. (left-hand) (front chain-case)	29-7531	—	—	—
Do. do. (left-hand) (chaincase and engine plate)	29-7545	—	—	—
Do. do. (left-hand)	29-7532	—	—	—
Do. Distance Tube	—	66-4906(2)	66-4906(2)	—
Footrest Brake Pedal Stop Plate	29-7534	—	—	—
Footrest Cork Washer	66-4902(2)	—	—	—
Chaincase Distance Piece	66-4903	—	—	—
Front Chaincase Sealing Washer	30-729/6(2)	—	—	—
Footrest Rod Washer	24-5914/6(2)	—	—	—
Footrest Bracket	66-4897(2)	—	—	—
B.S.A. PILLION FOOTRESTS (Folding Pattern).				
Pillion Footrest Spindle (left-hand)	Required when Nos. 12, 8A, 6A or 6C sidecar chassis is fitted.	33-8136	33-8136	33-8136
Do. Split Pin (left-hand)	—	35-722	35-722	35-722
Pillion Footrest Spindle	—	66-4936	66-4936	*15-8230(2)
Do. (right-hand)	—	66-4938	66-4938	—
Do. (left-hand) (when twin up-swept pipes are fitted).	—	66-4938	66-4938	—
Pillion Footrest Spindle Rubber	—	15-8155(2)	15-8155(2)	15-8155(2)
Do. Bolt	—	27-6312/6(2)	27-6312/6(2)	EB144/6(2)
Do. Bolt Nut	—	EA80/6(2)	EA80/6(2)	EB106/6(2)
Do. Bolt Spring Washer	—	—	—	EB150(4)
Pillion Footrest Spindle Fork	—	—	—	15-8229(2)
Do. Fork Nut	—	—	—	B806/6(2)
Pillion Footrest Spring Washer	—	—	—	35-36(2)
Do. Stud (right-hand) (chainstay lug).	—	—	—	33-4160/1
Do. Stud Nut	—	—	—	M365A/6
Do. Plate	—	—	—	*33-8133(2)
Do. Collar	—	—	—	*33-4599(2)
Do. Split Pin	—	—	—	C2-140(2)
FOOTPLATES.				
Footplate, complete with mat and clips	—	—	24-8090(2)	24-8090(2)
Do. Rubber Mat	—	—	15-8190(2)	15-8190(2)
Do. Rivet	—	—	15-8195(24)	15-8195(24)


Do. Spring Clip	15-8224(4)	15-8224(4)
Do. "U" Clip	24-8085(2)	24-8085(2)
Do. Spring Clip Bolt	24-8328/1(8)	24-8328/1(8)
Do. do. Nut	EB113/1(8)	EB113/1(8)
Do. do. Washer	K197(8)	K197(8)
Footplate Support (left-hand)	66-4807	33-8610
Do. (right-hand)	66-4806	33-8607
Footplate Front Support Rod	—	33-8612/6
Do. Nut	—	15-5753/6(2)
Do. Distance Tube	—	31-4132(2)
Footplate Rear Support Rod	66-4802	—
Do. Support Sleeve (left-hand)	90-729(2)	—
Do. Washer	65-4837	—
Do. Distance Piece	66-4813	—
Do. do. (right-hand)	66-4810	—
Do. Rear Support Bracket (r.h.)	66-4810	33-8605
Do. do. (left-hand)	24-5914/6(2)	33-8604
Footplate Rear Support Rod Washer	15-5753/6(2)	—
Do. Nut	—	—

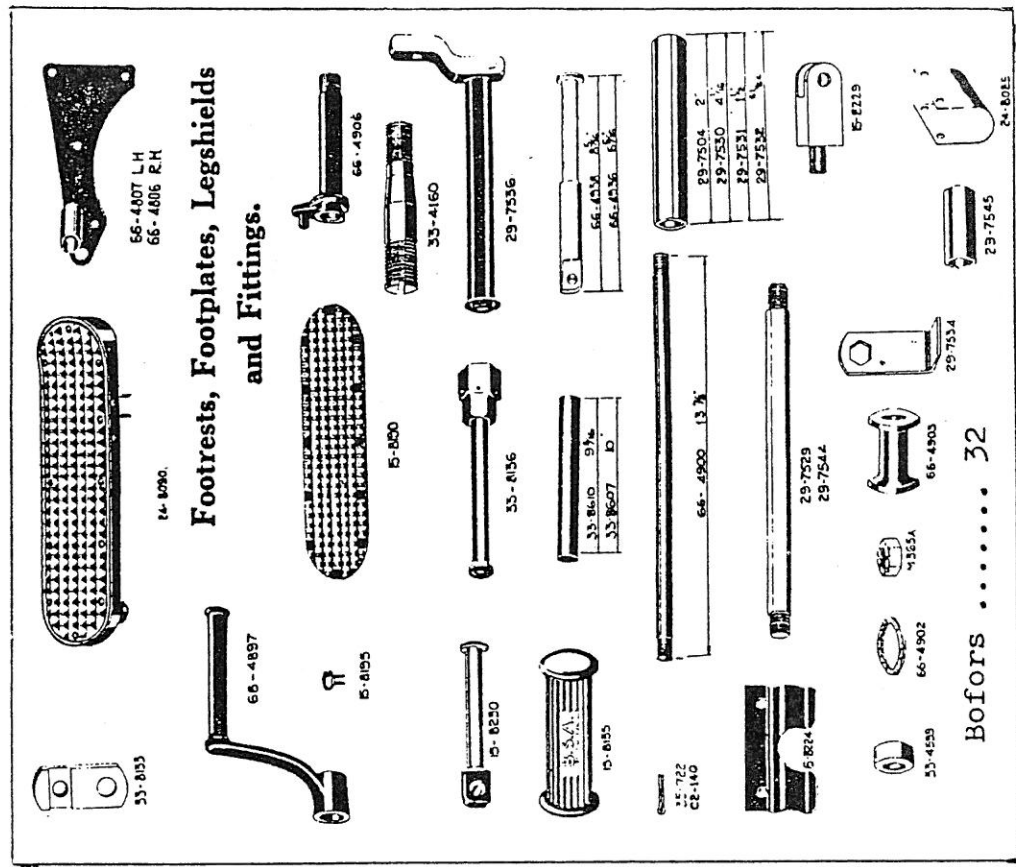

Footrests, Footplates, Legshields and Fittings.

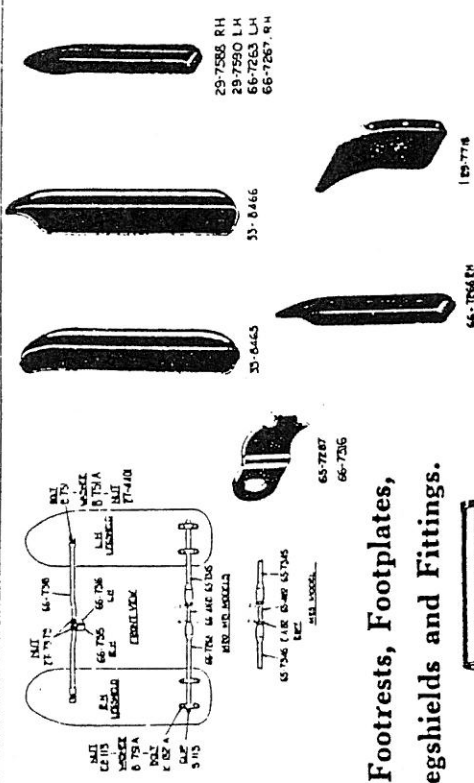

**Footrests, Footplates,
Legshields and Fittings.**

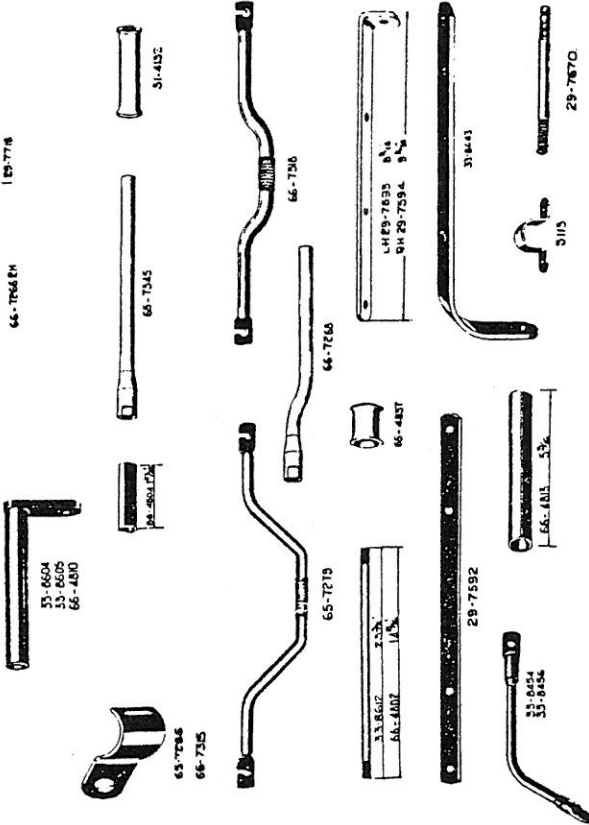


LEGGSHIELDS FOR FOOTRESTS.

Legshield, complete assembly (when hand gear change is fitted).	29-7586	—	66-7255	33-8468
Legshield, complete assembly (when foot gear change is fitted).	29-7586	—	66-7253	33-8459
Do. (M20, M21 only)	—	—	66-7250	—
Legshield (left-hand)	29-7590	—	66-7263	33-8465
Do. (right-hand) (when band gear change is fitted).	29-7588	—	66-7266	33-8468
Do. (right-hand) (when foot gear change is fitted).	29-7588	—	66-7267	33-8465
Legshield Support Tube (right-hand) (left-hand)	—	—	—	33-8454
Do. Bolt (frame)	—	—	—	33-8456
Do. Bolt Washer	—	—	—	E B700/6(2)
Legshield Support Tube (top) ..	65-7279	—	66-7318	24-6035(2)
Do. Frame Clip (right-hand) ..	65-7286	—	66-7315	—
Do. do. (left-hand)	65-7287	—	66-7316	—

Support Tube Nut	27-7979/6(2)	27-7979/6(2)	—	—	—
Do. Bolt	B751/6(2)	B751/6(2)	—	—	EB700/6(2)
Do. Bolt Nut	27-4401/6(2)	27-4401/6(2)	—	—	EA80/5(2)
Do. Bolt Washer	B751A/6(2)	B751A/6(2)	—	—	F21/6(2)
Do. Bolt Spring Washer	26-7718	—	—	—	24-6035(2)
Legshield Distributor Shield	EB673/6(8)	—	—	—	—
Do. Screw	1-4616/6(3)	—	—	—	—
Do. Nut	29-7594	—	—	—	—
Legshield Bottom Support (right-hand)	—	65-7345	—	—	33-8443
Do. (R20, M21 only)	29-7593	66-7268	—	—	—
Legshield Bottom Support (left-hand)	—	65-7345	—	—	33-8443
Legshield Bottom Support Clip	—	S113	—	—	—
Do. Strip	29-7592	—	—	—	—
Support Clip Bolt	K132A/6(4)	K132A/6(8)	—	—	—
Do. Bolt Washer	B751A/6(4)	B751A/6(8)	—	—	—
Do. Bolt Nut	M263/6(6)	EB113/6(8)	—	—	—
Legshield Bottom Support Strip Bolt	B751/6(2)	—	—	—	—
Legshield Bottom Support Bolt	—	—	—	—	EB700/6(4)
Do. Bolt Washer	—	—	—	—	F21/6(4)
Do. Bolt Spring Washer	—	—	—	—	24-6035(4)
Do. Bolt Nut	—	—	—	—	EA80/6(4)
Engine Plate and Crankcase Stud	29-7670/6	—	—	—	—
Do. Stud Nut	EA80/6(2)	—	—	—	—
Do. Stud Spring Washer	24-8784(2)	—	—	—	—

**Footrests, Footplates,
Legshields and Fittings.**

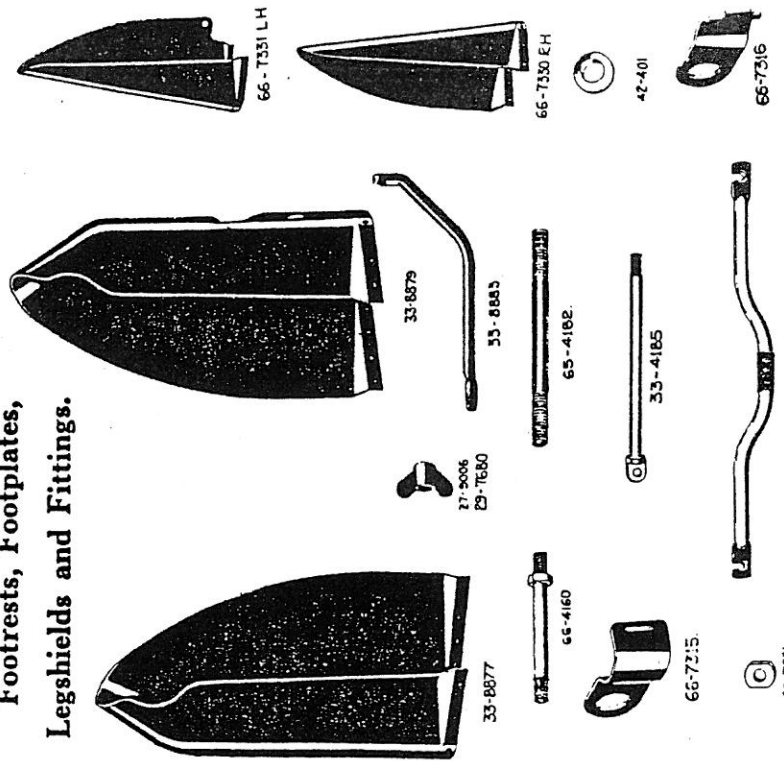

Bofors 33






Chance: Stud

Chaincase Stud	..	..	..	..		M263 1 27-8560/8
Do. Stud Nut ..	..	..	..	..		E A 80, 1 24-8784
Do. Stud Washer	..	..	..	..		33-7536
Do. Stud Nut (inside) ..	..	..	..	..		33-7537/1
Do. Stud Spring Washer	..	..	..	..		E B 76A
Chaincase Distance Piece	..	..	..	..		
Chaincase Attachment Bolt ..	..	..	..	..		
Do. Washer	..	..	..	..		
CHAINGUARD.						
Chainguard, with fixed fittings ..	..	..	..	..	65-7700	33-8030
Chainguard, complete with front end	..	..	..	..	—	33-8028
Chainguard Front End, with stud ..	..	..	..	..	—	33-8037
Chainguard and Front End Connecting Bolt.	..	..	..	..	—	15-645, 6(2)
Do. Washer	..	..	..	..	—	B 751 A / 6 (2)

CHAINGUARD.

Chainguard, with fixed fittings ..	29-8304	65-7700	66-7806	33-8030
Chainguard, complete with front end ..	—	—	—	33-8029
Chainguard Front End, with stud ..	—	—	—	33-8037
Chainguard and Front End Connecting Bolt.	—	—	—	15-645, 6(2)
Do. Washer	—	—	—	B751A, 6(2)

     **CHAINCASE,
CHAINGUARD AND FITTINGS.**

 29-8052
 66-7578
 66-7601
 66-7502
 66-7525
 24-8737
 33-7875
 33-7890
 24-8742
 66-7514
 5173
 64-7528
 33-581
 33-7537
 27-206
 15-8114
 33-8037
 66-7575
 27-201
 65-8633
 63-7700
 66-7606

CHAINCASE,
 CHAINGUARD AND FITTINGS.


Bofors 34

Chainguard Attachment Bolt (front)	—	—	15-645/6(2)
Chainguard Securing Nut	—	—	M263/6(2)
Do. Washer	M263/6	EB113/6	27-8560/6(2)
Do. Spring Washer	K2344/6	—	K197(2)
Chainguard (bottom)	—	—	—
Chainguard Bolt	—	15-8833	—
Do. Washer	—	1-4606/1(3)	—
Do. Nut	—	26-9461/1(3)	—
	—	53-7151/1(3)	—

TANK AND FITTINGS.

DESCRIPTION.	C10. C11. C12.	B29.	M20. M21. M23.	G14.
Petrol Tank, with fixed fittings (Matt Silver) (hand change).	29-7758	—	—	—
Do. (foot change).	29-7751	—	—	—
Petrol Tank, with fixed fittings (chromium plated with Matt Silver panels) (foot change).	29-7752	65-8335	66-8223	—
Do. (hand change)	29-7759	—	—	—
Petrol Tank, with fixed fittings (chromium plated with Matt Silver panels).	—	—	—	33-8236
Tank Connection Pipe, with nipples	—	—	33-8255/1	33-8255/1
Tank Filler Cap	29-7780(2)	29-7898	29-7898	29-7898
Do. Washer	28-4041(2)	—	—	—
Tank Socket Plug	—	—	—	33-8240/1
Do. Washer	—	—	—	24-8504
Knee Grip Rubber (left-hand) (hand change).	—	—	65-8094	—
Do. (right-hand) do.	—	—	65-8096	—
Do. (left-hand) (foot change)	65-8315	65-8315	65-8315	15-8018
Do. (right-hand) do.	65-8314	65-8314	65-8314	15-9017
Knee Grip Seiscrew (required when foot change is fitted).	—	—	—	15-4250/1
Knee Grip Plate (left-hand) (foot change).	65-8318	65-8318	65-8318	—
Do. (hand change)	—	—	65-8101	—
Do. (right-hand) (foot change)	65-8318	65-8318	65-8318	—
Do. (hand change)	—	—	65-8103	—
Knee Grip Plate Screw	EA761(4)	EA761(4)	EA761(4)	—
Tank Rear Support Bolt	—	65-8034/1(2)	66-8089/1(2)	24-5207/1(2)
Do. Bolt Washer	—	30-659/1(2)	30-659/1(2)	F21/1(2)
Do. Bolt Nut	—	—	—	EA80/1(2)
Do. Rubber Washer (top)	—	65-8032(2)	66-8091(2)	24-8514(2)
Do. do. (bottom)	—	66-8091(2)	36-4140(2)	—
Tank Front Support Bolt	—	M413/1(2)	M413/1(2)	M413/1(2)
Do. Sleeve	27-8447/1(2)	27-8447/1(2)	27-8447/1(2)	27-8447/1(2)
Tank Front Support Rubber	27-8448(2)	27-8448(2)	27-8448(2)	27-8448(2)
Do. Rubber Buffer Cup	27-8449/1(2)	27-8449/1(2)	27-8449/1(2)	27-8449/1(2)
Petrol Tap (one-way)	27-8552	27-8552	—	—
Do. (two-way)	—	—	—	15-8401
Do. (two level)	—	—	27-8553	—
Do. Washer	EB242	EB242	EB242	EB242
Petrol Tank Filter	27-8436 1	27-8436 1	27-8436 1	27-8436 1
Do. Washer	24-8504	24-8504	24-8504	24-8504
Petrol Pipe, with unions and nuts (M20, M21 only).	—	—	66-8057/1	—
Do. (M23 only)	—	—	66-8057/1	—
Petrol Pipe, with unions and nuts	—	65-8143, 1	—	33-8246/1
Do. (C12 only) (when air cleaner is not fitted).	29-7768/1	—	—	—
Do. (when air cleaner is fitted)	29-7769/1	—	—	—
Petrol Pipe, with unions and nuts (C10 only).	29-7812/1	—	—	—
Do. (C11 only)	29-7815/1	—	—	—
Petrol Pipe Nut (tap)	K464x/1	K464x/1	K464x/1	K464x/1
Do. (carburettor)	15-8434/1	15-8434/1	15-8434/1	15-8434/1

Cylinder Priming Tap, with pipe	—	—	33-8241
Do. Washer	—	—	EB242
Do. Socket	—	—	27-8441
Do. Washer	—	—	24-8504
Cylinder Priming Pipe (rear cylinder)	—	—	33-8248
Do. Nut	—	—	K464x/1
Voltage Control Stud Spring Washer	24-978(2)	—	—
Do. Nut	1-8032/1(2)	—	—
Rear Tank and Coil Fixing Bolt	65-8034/1(2)	—	—
Do. Washer (rubber)	65-8038(2)	—	—
Do. Washer	29-7796(2)	—	—

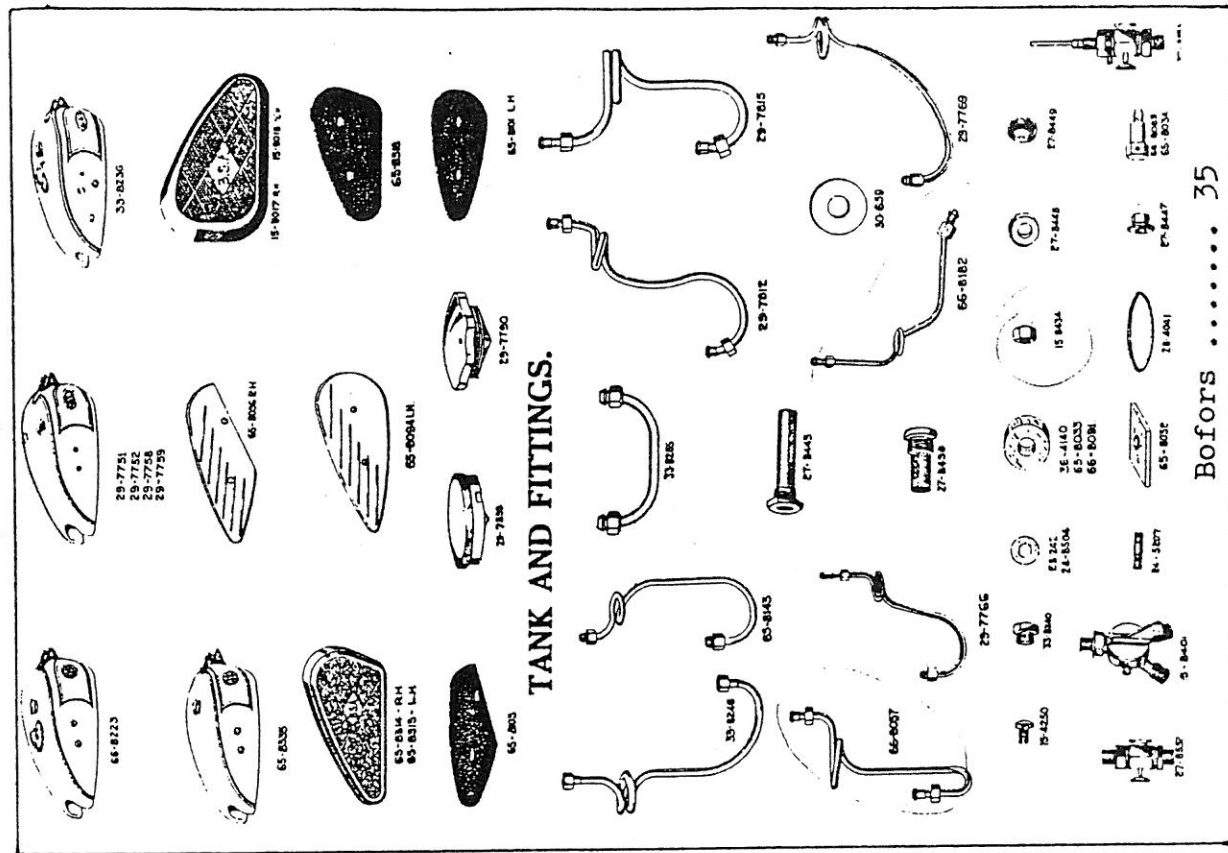


TANK AND FITTINGS.

INSTRUMENT PANEL.


Instrument Panel, complete with ammeter, switch, oil indicator button and inspection lamp.	—	—	66-8253	—	33-8296
Inspection Panel, complete with ammeter, switch and inspection lamp.	—	—	—	—	33-8284
Instrument Panel Top, with inspection lamp fixing.	—	—	—	66-8250	24-5334
Do. Rubber Joint Washer	—	—	—	—	24-5331/3(3)
Do. Screw	—	—	—	66-8233	66-8254
Instrument Panel Ammeter	—	—	—	—	—
Do. Lamp, with flex	—	—	—	—	—
OIL TANK.					
Oil Tank, with fixed fittings	—	65-8433	65-8433	33-8327	—
Oil Tank Filler Cap	—	29-7791	29-7791	29-7791	—
Do. Washer	—	28-4041	28-4041	28-4041	—
Oil Tank Drain Plug	—	EA95/1	EA95/1	31-8383/1	—
Do. Washer	—	EA132	EA132	EA132	—
Oil Tank Top Cap, with spring	—	65-8441	65-8441	65-8441	—
Oil Tank Filter	—	65-8436	65-8436	65-8436	—
Do. Element, with bottom cap	—	66-8359	66-8359	66-8359	—
Oil Tank Bottom Cap	—	66-8356	66-8356	66-8356	—
Oil Tank Filter	—	—	—	31-8359/1	—
Do. Washer	—	—	—	M196A	—
Oil Supply Pipe, with union	—	—	—	26-8600/1	—
Oil Return Pipe, with union	—	—	—	—	—
Oil Pipe	—	65-8418(2)	65-8418(2)	66-8345(2)	—
Oil Pipe Nut	—	66-8332/1(8)	66-8332/1(3)	66-8327/1(3)	26-828/1
Do. Union Screw	—	—	—	4 off M20, M21	31-8376/1
Do. Nipple (4 off M20, M21)	—	—	—	—	—
Oil Return Pipe Connection (B29, M23 only).	—	65-8419(3)	65-8419(3)	65-8419(3)	—
Do. Nut Washer (B29, M23 only)	—	65-8420	65-8420	65-8420	—
Do. Nut (B29, M23 only)	—	65-8421	65-8421	65-8421	—
Oil Pipe Ferrule	—	65-8422	65-8422	65-8424	—
Oil Tank Breather Extension Pipe	—	65-8427(4)	65-8427(4)	65-8422(4)	—
Oil Pipe Clip	—	66-8330/1	66-8330/1	66-8330/1	—
Do. Bolt	—	66-8340	66-8340	66-8340	—
Do. Bolt Nut	—	—	—	K132A/1	—
Oil Tank Breather Pipe	—	—	—	M263/1	—
Do. Bolt Nut	—	—	—	65-2060	—

TANK AND FITTINGS.

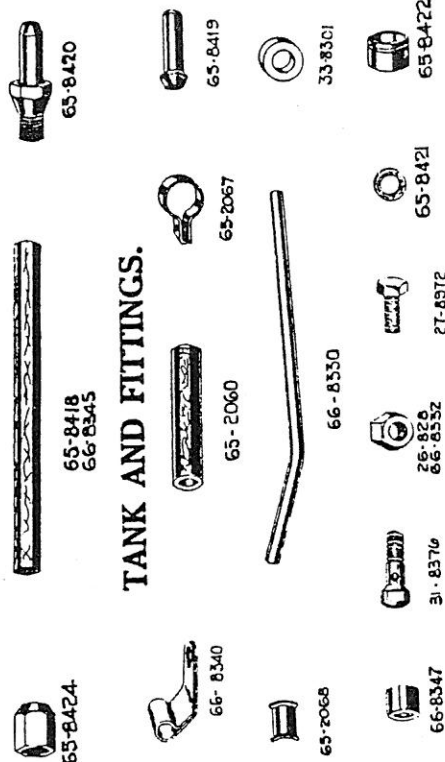

Bofors 36

TANK AND FITTINGS.

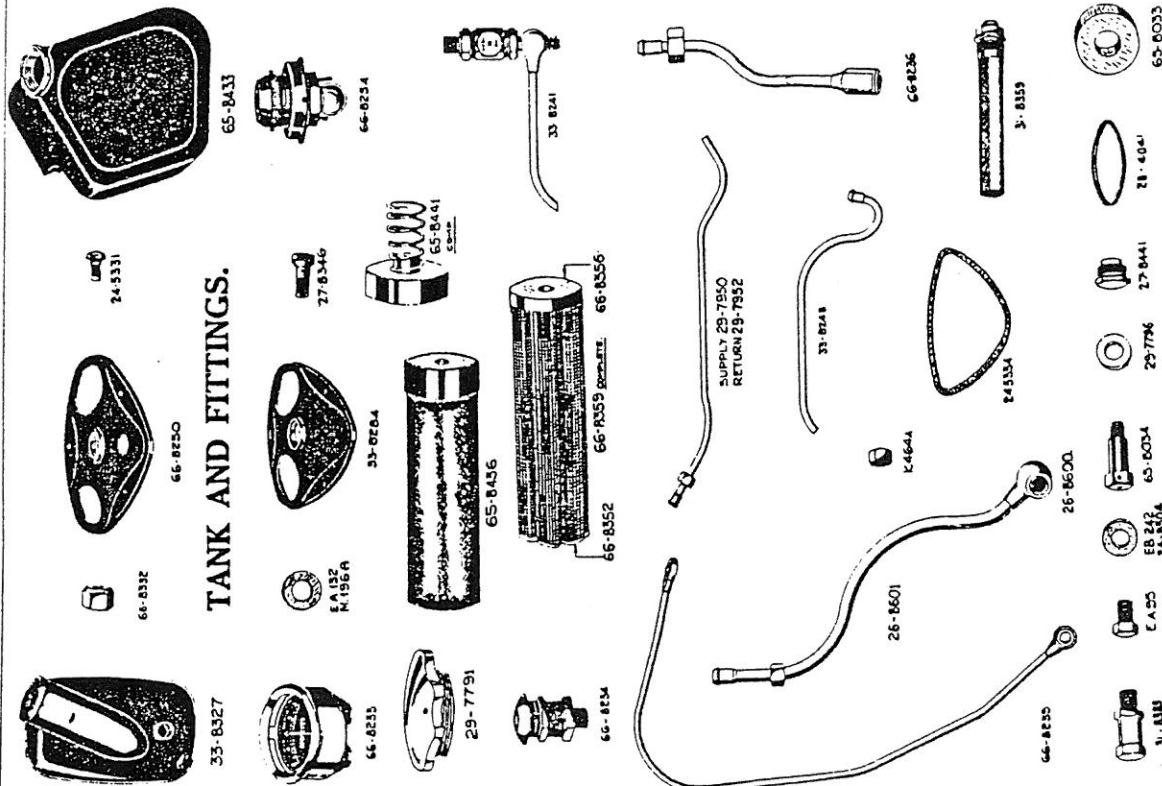

Tank and Fittings—continued.

TANK OIL PIPE (supply)			29-7950/1	—
Do.	(return)	..	29-7952/1	—
Do.	Nut ..	..	66-8332/1(2)	—
OIL INDICATOR BUTTON (when Instrument Panel is fitted).				
Oil Indicator Button ..			..	66-8234
Do.	Pipe, with unions and nuts	..	..	66-8236/1
Do.	Pipe (Union Screw	..	..	27-8346/1
Oil Button Pipe (engine), with unions	..	..	..	66-8239/1
Do.	Union Screw	..	..	27-8346/1

Oil Pipe Connection Clip ..	65-2067(2)	65-2067(2)	65-2067(2)
Do. Inner Strip ..	65-2068(2)	65-2068(2)	65-2068(2)
Do. Screw ..	C2-154(2)	C2-154(2)	C2-154(2)
Do. Nut ..	C2-158(2)	C2-158(2)	C2-158(2)
Oil Tank Fixing Bolt ..	15-480(6/3)	15-480(6/3)	15-480(6/3)
Do. (bottom) ..	F21/6(3)	F21/6(3)	F21/6(3)
Oil Tank Fixing Bolt Washer ..	66-8347(3)	66-8347(3)	66-8347(3)
Oil Tank Distance Collar ..	—	—	—
Oil Tank Rubber Mounting ..	—	—	—

NOTE.—Figures in brackets denote number per set, e.g. (2), 2 per set.
When no figures in brackets are shown one part constitutes a set.

When ordering Petrol Tanks, please specify colour.

When ordering Instrument Panel, please specify colour.

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

HANDLEBAR CONTROLS.

DESCRIPTION.	C10. C11. C12.	B29.	M20. M21. M23.	G14.
--------------	----------------------	------	----------------------	------

FRONT BRAKE CONTROL (when Lever or Twist Grip Throttle with other controls of lever type—not B.S.A. Clamp-on Pattern—are fitted).

Front Brake Control, complete less cable and cover.	65-8600/3	65-8600/3	—	—
Handlebar Control Body ..	65-8610/3	65-8610/3	—	—
Handlebar Control Lever ..	65-8611/3	65-8611/3	—	—
Clutch Lever Fulcrum Pin ..	65-8612/3	65-8612/3	—	—
Fulcrum Pin Nut ..	65-8613/1	65-8613/1	—	—
Control Body Clip ..	65-8614/3	65-8614/3	—	—
Do. Screw ..	65-8615/3(2)	65-8615/3(2)	—	—
Front Brake Control Cable and Cover, complete.	29-8661	65-8626	—	—
Front Brake Control Cable ..	29-8662	65-8627	—	—
Front Brake Cable Cover ..	29-8663	65-8628	—	—
Cable Cover Cap ..	27-9355(2)	27-9355(2)	—	—
Cable Nipple ..	27-9330	27-9330	—	—
Do. (control end) ..	65-8601	65-8601	—	—
Cable Cover Tube ..	29-5867	65-8616	—	—
Cable Toggle End ..	29-5871	29-5871	—	—
Toggle End Screw ..	EB72/1	EB72/1	—	—
Do. Spring Washer ..	K197	K197	—	—
Do. Nut ..	EB102/1	EB102/1	—	—
Front Brake Adjusting Screw ..	24-7848/1	24-7848/1	—	—
Do. Locknut ..	24-7849/1	24-7849/1	—	—

CLUTCH CONTROL (when Lever or Twist Grip Throttle with other controls of lever type—not B.S.A. Clamp-on Pattern—are fitted).

Clutch Control, complete less cable and cover.	65-8600/3	65-8600/3	—	—
Handlebar Control Body ..	65-8610/3	65-8610/3	—	—
Handlebar Control Lever ..	65-8611/3	65-8611/3	—	—
Clutch Lever Fulcrum Pin ..	65-8612/3	65-8612/3	—	—
Do. Nut ..	65-8613/1	65-8613/1	—	—
Control Body Clip ..	65-8614/3	65-8614/3	—	—
Do. Screw ..	65-8615/3(2)	65-8615/3(2)	—	—
Clutch Control Cable and Cover, complete.	29-8617	65-8653	—	—
Clutch Cable ..	29-8618	65-8654	—	—
Clutch Cable Cover ..	29-8608	65-8655	—	—
Do. Cap ..	27-9353(2)	27-9353(2)	—	—
Clutch Cable Ball Nipple ..	66-8246	27-9329	—	—
Clutch Cable Nipple (control end) ..	65-8601	65-8601	—	—
Clutch Cable Adjusting Screw ..	25-9360/1	25-9360/1	—	—
Do. Locknut ..	25-9365/1	25-9365/1	—	—

IGNITION AND EXHAUST CONTROL (when Twist Grip with other controls of lever type—not B.S.A. Clamp-on Pattern—are fitted).

Ignition and Exhaust Control (combined), less cable and cover.	—	27-7655/3	—
Ignition Control Body ..	—	27-7682/3	—
Do. Screw ..	—	27-9572/3(2)	—
Ignition Control Lever ..	—	27-9532/3	—
Ignition Control Body Spring Washer ..	—	27-9600	—
Ignition Control Body Cap ..	—	27-9573/3	—
Do. Cap Screw ..	—	27-9567/3	—
Ignition Control Cable and Cover, complete.	—	65-8710	—
Do. Cover ..	—	65-8711	—
Do. Cover Cap ..	—	65-8712	—
Do. Nipple (control end) ..	—	27-9579(2)	—
Exhaust Lifter Control, complete less cable and cover (C12 and B29 only).	27-7791/3	27-9443	—
Exhaust Lifter Control Cable and Cover, complete (C12 and B29 only).	65-8777	65-8781	—
Exhaust Lifter Cable ..	65-8778	65-8782	—
Do. Cover ..	65-8779	65-8783	—
Cable Cover Cap ..	27-9579(2)	27-9579(2)	—
Cable Nipple (control end) ..	27-7768	27-7768	—
Exhaust Lifter Cable Toggle ..	66-8507	66-8507	—
Cable Toggle Screw ..	C2-154/1	C2-154/1	—
Do. Nut ..	C2-158/1	C2-158/1	—
Exhaust Lifter Cable Adjuster ..	A202/1	A202/1	—
Do. Locknut ..	A223/1	A223/1	—
Do. Return Spring ..	15-1812	15-1812	—
Exhaust Lifter Control Body ..	—	27-7747/3	—
Do. Lever ..	—	27-7752/3	—
Exhaust Lifter Lever Fulcrum Pin ..	—	27-7758/3	—
Fulcrum Pin Nut ..	—	27-7763/3	—

CARBURETTOR AIR CONTROL (when Twist Grip Throttle with other controls of lever type—not B.S.A. Clamp-on Pattern—are fitted).


Air Control, complete less cable and cover (C12 and B29 only).	27-9416/3	27-9416/3	—
Air Control Body, with clips ..	27-9535/3	27-9535/3	—
Air Control Lever ..	15-8611/3	15-8611/3	—
Air Control Body Spring Washer ..	27-9546	27-9546	—
Do. Cap ..	27-9573/3	27-9573/3	—
Body Cap Screw ..	27-9568/3	27-9568/3	—
Body Clip Screw ..	15-9550/3	15-9550/3	—
Air Control Cable and Cover, complete (C12 and B29 only).	29-8702	65-8857	—
Air Control Cable (C12 and B29 only).	15-9624	65-8858	—
Do. Cover (C12 and B29 only).	29-8703	25-7729	—
Cable Cover Cap ..	27-9579(2)	27-9579(2)	—
Control Cable Nipple (control end) ..	27-9443	27-9443	—
Do. (carburettor end) ..	27-9506	27-9506	—

CARBURETTOR THROTTLE CONTROL (when Twist Grip with other controls of lever type—not B.S.A. Clamp-on Pattern—are fitted).

Throttle Cable and Cover, complete (C12 and B29 only).	65-8863	65-8863	—
Throttle Cable (C12 and B29 only).	65-8862	65-8862	—
Do. Cover (C12 and B29 only).	24-9511	24-9511	—
Cable Cover Cap ..	27-9579(2)	27-9579(2)	—
Cable Nipple (control end) ..	27-9443	27-9443	—
Do. (carburettor end) ..	27-9506	27-9506	—

NOTE.—Figures in brackets denote number per set, e.g. (2), 2 per set.
When no figures in brackets are shown one part constitutes a set.

DESCRIPTION.	G10. G11. G12.	B29.	M20. M21. M23.	G14.
FRONT BRAKE AND AIR CONTROLS (B.S.A. Clamp-on Pattern Controls).				
Brake and Air Controls, complete less cable and covers.	—	—	24-7570/3	24-7561/3
Brake and Air Control Clamp	—	—	27-7818/3	24-7563/3
Brake Control Lever ..	—	—	27-7820/3	27-7820/3
Do. Body ..	—	—	27-7819/3	27-7819/3
Do. Ratchet Thumb Knob and Spring.	—	—	27-7833/3	27-7833/3
Do. Lever Fulcrum Pin ..	—	—	26-9440/3(2)	26-9440/3(2)
Fulcrum Pin Nut ..	—	—	A223/1(2)	A223/1(2)
Air Control Body ..	—	—	27-7824/3	27-7824/3
Do. Lever ..	—	—	24-7564/3	27-7822/3
Do. Lever Spring Washer	—	—	27-7823	27-7823

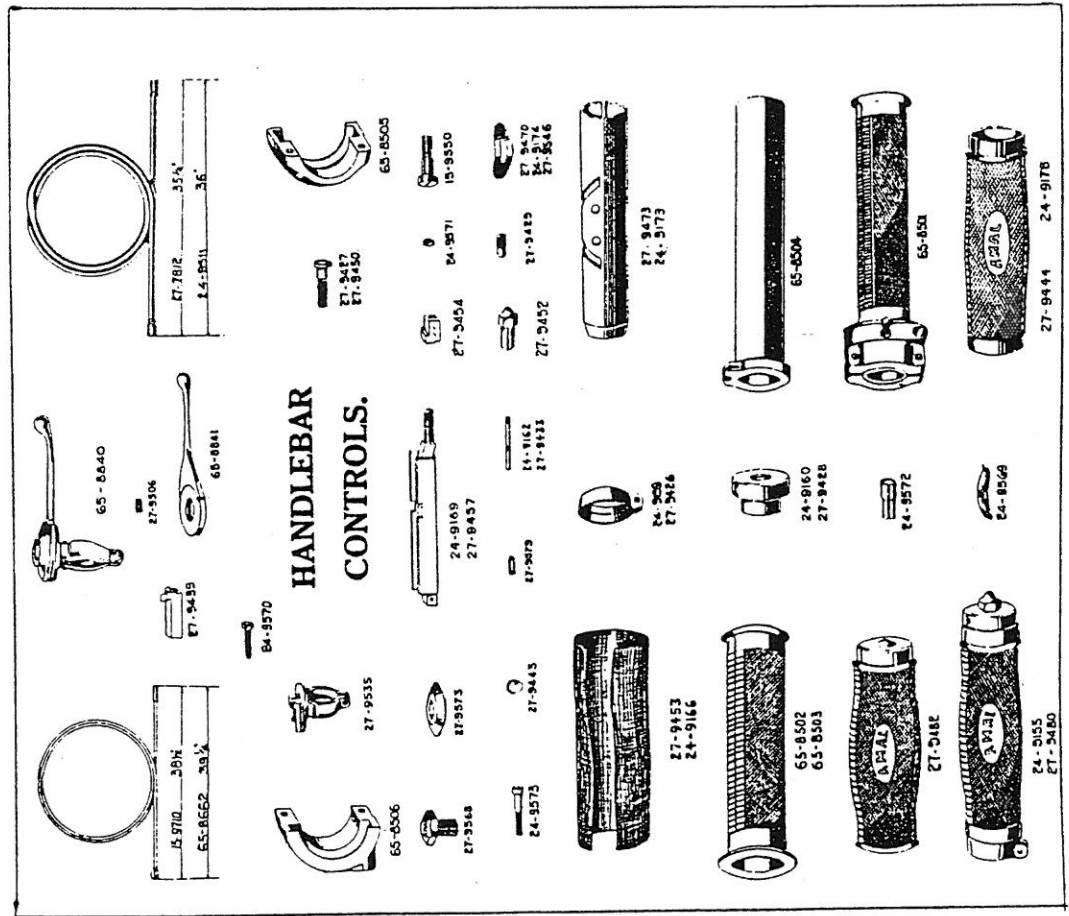

Control Lever Cap ..	27-7825/3	27-7825/3	27-7825/3	27-7825/3
Control Clamp Bolt ..	27-7830/1	27-7830/1	27-7830/1	27-7830/1
Control Lever Bolt ..	27-7831/3	27-7831/3	27-7831/3	27-7831/3
Bolt Nut ..	EA80/1	EA80/1	EA80/1	EA80/1
Front Brake Control Cable and Cover, complete.	—	—	—	—
Brake Control Cable ..	66-8737	66-8737	66-8737	66-8737
Do. Cover ..	33-8527	33-8527	33-8527	33-8527
Cable Cover Cap ..	27-8353(2)	27-8353(2)	27-8353(2)	27-8353(2)
Cable Nipple ..	24-7729	24-7729	24-7729	24-7729
Brake Control Cable Gripping Pin ..	26-9431/1	26-9431/1	26-9431/1	26-9431/1
Gripping Pin Washer ..	26-9461/1	26-9461/1	26-9461/1	26-9461/1
Do. Nut ..	EB116/1	EB116/1	EB116/1	EB116/1
Control Lever Roller ..	26-9481/1	26-9481/1	26-9481/1	26-9481/1
Cable Adjusting Screw ..	24-7848/1	24-7848/1	24-7848/1	24-7848/1
Do. Locknut ..	24-7849/1	24-7849/1	24-7849/1	24-7849/1
Brake Rod Spring ..	24-7835	24-7835	24-7835	24-7835
Do. Outer Sleeve ..	24-7825/1	24-7825/1	24-7825/1	24-7825/1
Do. Adjusting Sleeve ..	24-7830/1	24-7830/1	24-7830/1	24-7830/1
Adjusting Sleeve Nut ..	EB116/1	EB116/1	EB116/1	EB116/1
Front Brake Rod, with tube, cup and end caps.	15-7711	15-7711	15-7711	15-7711
Front Brake Rod, with tube, cup and end caps.	15-7717	15-7717	15-7717	15-7717
Rod Fork End ..	EB72/1	EB72/1	EB72/1	EB72/1
Fork End Screw ..	EB102/1	EB102/1	EB102/1	EB102/1
Do. Nut ..	K197	K197	K197	K197
Do. Spring Washer ..	—	—	—	—

EXHAUST AND CLUTCH CONTROL (B.S.A. Clamp-on Pattern Controls).

Exhaust and Clutch Control, complete less cables and covers.	24-7562/3	24-7562/3	24-7562/3	24-7562/3
Exhaust and Clutch Control Clamp ..	27-7818/3	27-7818/3	27-7818/3	27-7818/3
Clutch Control Lever ..	27-7826/3	27-7826/3	27-7826/3	27-7826/3
Do. Body ..	27-7827/3	27-7827/3	27-7827/3	27-7827/3
Do. Lever Fulcrum Pin ..	26-9440/3	26-9440/3	26-9440/3	26-9440/3
Fulcrum Pin Nut ..	A223/1	A223/1	A223/1	A223/1
Exhaust Control Body ..	27-7829/3	27-7829/3	27-7829/3	27-7829/3
Do. Lever ..	27-7828/3	27-7828/3	27-7828/3	27-7828/3
Control Lever Cap ..	27-7825/3	27-7825/3	27-7825/3	27-7825/3
Control Clamp Bolt ..	27-7830/1	27-7830/1	27-7830/1	27-7830/1
Clamp Bolt Washer ..	F21/1	F21/1	F21/1	F21/1
Control Lever Bolt ..	27-7831/3	27-7831/3	27-7831/3	27-7831/3
Do. Nut ..	EA80/1	EA80/1	EA80/1	EA80/1
Exhaust Lifter Cable and Cover, complete (M20 and M21 only).	66-8508	66-8508	66-8508	66-8508
Do. (M23 and G14 only) ..	66-8502	66-8502	66-8502	66-8502
Exhaust Lifter Cable (M20, M21 only) ..	66-8509	66-8509	66-8509	66-8509
Do. (M23 and G14 only) ..	66-8503	66-8503	66-8503	66-8503
Do. Cover (M20 and M21 only) ..	66-8510	66-8510	66-8510	66-8510
Do. Cover (M23 only) ..	—	—	—	—
Do. Cover (short) ..	—	—	—	—
Do. Cover (long) ..	—	—	—	—
Exhaust Lifter Cover Cap ..	27-9579(2)	27-9579(2)	27-9579(2)	27-9579(2)
Do. Cable Nipple (control end) ..	27-9443	27-9443	27-9443	27-9443
Do. Cable Ball Nipple ..	66-8507	66-8507	66-8507	66-8507
Do. Cable Toggle ..	C2-154/1	C2-154/1	C2-154/1	C2-154/1
Toggle Screw ..	A202/1	A202/1	A202/1	A202/1
Do. Nut ..	A223/1	A223/1	A223/1	A223/1
Exhaust Lifter Cable Adjuster ..	15-1312	15-1312	15-1312	15-1312
Do. Locknut ..	—	—	—	—
Cable Return Spring (M20, M21 only) ..	66-8569	66-8569	66-8569	66-8569
Do. (M23 only) ..	33-8548	33-8548	33-8548	33-8548
Cable Adjusting Sleeve ..	66-8570	66-8570	66-8570	66-8570
Clutch Control Cable ..	27-9353(2)	27-9353(2)	27-9353(2)	27-9353(2)
Do. Cover ..	—	—	—	—
Do. Cover Cap ..	27-9329	27-9329	27-9329	27-9329
Clutch Cable Ball Nipple ..	—	—	—	—

24-9154
24-9159/3
27-9427/3
24-9160
27-9429
27-9452/3
24-9179
27-9438
24-9178
24-9166
24-9172
24-9162



Control Cable Adjusting Screw
D . Locknut . .
Clutch Cable Gripping Pin . .
Gripping Pin Washer . .
Do. Nut . .
Clutch Control Lever Roller..

Bofors ...

33-8427	44 $\frac{1}{2}$
33-8548	68
56-8509	26 $\frac{1}{2}$
56-8502	40 $\frac{1}{2}$
33-8483	45
66-8569	57 $\frac{1}{2}$

33-8549	65 1/2
33-8484	42 1/2
33-8488	6 1/2
66-8510	22 1/2
66-8503	31
33-8489	34 1/2
66-8570	52 1/2

20
0047

25-9360 

27-9438

27-9452

443 A22

4-2159

15-686
15-1312

FMAR

24-9179



24-9154

Twist Grip Spring Washer	..	..	..	24-9174
Indicator Spring	..	..	..	27-9471
Ignition Control Cable and Cover, complete.	..	..	..	33-8482
Ignition Control Cable	..	..	..	33-8483
Do. Cover	..	..	..	33-8484
Do. Cover Cap	..	..	..	27-9579(2)
Cable Nipple (control end)	..	..	..	27-9448

IGNITION CONTROL LEVER.

Ignition Control Lever, less cable and cover.	..
Control Body, with clips	..
Control Lever	..
Control Body Clip Screw	..
Clip Screw Spring Washer	..
Control Body Cap	..
Body Cap Screw	..
Ignition Control Cable and Cover, complete.	..

HANDLEBAR CONTROLS.

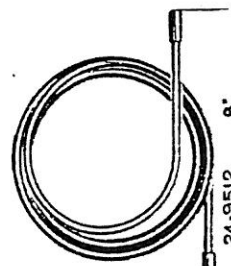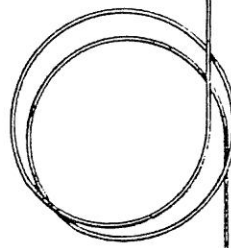

33-8698	40 $\frac{1}{2}$
33-8701	42 $\frac{1}{2}$
66-8890	25 $\frac{3}{4}$
15-9913	35 $\frac{1}{2}$
65-8862	39 $\frac{1}{4}$
66-8807	45 $\frac{1}{2}$
15-9625	37 $\frac{1}{2}$

24-5512.	0
33-8699	36 $\frac{1}{2}$
33-8702	39 $\frac{1}{2}$
66-8891	21 $\frac{1}{2}$
15-9282	24 $\frac{1}{2}$
24-9511	36 $\frac{1}{2}$
66-8808	42 $\frac{1}{2}$
15-9583	33



15-9579



97.9567



15-9577



15-9577



24-7566



27-9482



15-9578



66-8810



27-9573



27-9600



15-9580



27-9579

AIR CLEANERS FOR 1940 MOTOR CYCLES.

Model	Cleaner	Adaptor	Adaptor Bolt	Elbow	Clip and Bolt	Support Arm
C10	65-2720	65-2725	—	—	—	—
C11	65-2720	—	—	15-005	—	—
C12	65-2720	—	—	66-227	6-201	29-7772
B29	33-745	26-1319	15-4170	—	—	—
N20	65-2720	—	—	66-227	6-201	—
N21	65-2720	—	—	66-227	6-201	—
N23	65-2720	66-228	—	—	—	—
G14	65-2720	26-1319	15-4170	—	—	—

CARBURETTER THROTTLE CONTROL (when Twist Grip with other controls of lever type—not B.S.A. Clamp-on pattern—are fitted) (Model CII only).

Throttle Cable and Cover, complete.	29-8707	—
Throttle Cable	65-8847	—
Throttle Cable Cover	27-7812	—

DESCRIPTION.

TOOLS AND SUNDRIES.

DESCRIPTION.	C10. C11. C12.	B29.	N20. N21. N23.	G14.
TOOLBOX.				
Toolbox only (right-hand) ..	..	..	..	31-9001
Do. (left-hand) ..	..	..	..	31-9001
Toolbox ..	29-9108	..	..	..
Do. Strap ..	..	65-9019	65-9019	..
Do. Bolt ..	..	65-9021	65-9021	..
Do. Bolt Nut ..	..	15-7161/6(2)	15-7161/6(2)	..
Do. Bolt Spring Washer ..	..	EB113/6(2)	EB113/6(2)	..
Do. Clip ..	..	K197(2)	K197(2)	..
Do. Bolt ..	..	27-9001	27-9001	..
Do. Bolt ..	..	24-225/6	24-225/6	..
Do. Bolt Washer ..	..	K234A/6	K234A/6	..
Do. Bolt Nut ..	..	M263/6	M263/6	..
Do. Plate ..	..	..	..	..
Do. Bolt Distance Piece ..	..	..	..	..
Toolbox Bolt ..	66-4184(2)	..	..	..
Do. Nut ..	24-7343/6(2)	..	..	..
Do. Washer ..	M263/6(2)	..	..	..
Do. Spring Washer ..	29-9104/6(2)	..	..	..
TOOLS.				
Toolbag, complete with tools ..	..	65-9138	66-9066	33-9014
Do. (C10, C12, M23 only) ..	29-9151	..	66-9065	..
Do. (C11 only) ..	29-9152	..	..	..
Adjustable Spanner ..	..	..	..	..
Box Spanner ..	15-832	15-832	15-832	..
B.S.A. Double-ended Spanner ..	EB259	EB259	EB259	..
Carburettor Spanner ..	15-8945	15-8945	15-8945	..
Cylinder Base Nut Spanner ..	66-9038	..	66-9036	..
Detachable Wheel Spanner ..	..	..	66-9068	..
Dynamo Spanner ..	35-7600	..	..	..
Front Hub Cone Spanner ..	29-9255	..	..	..
Gearbox Box Spanner ..	..	..	..	..
Grease Gun ..	28-4265	28-4265	28-4265	..
Hub Bearing Adjustment Spanner ..	29-9254	29-9254	29-9254	..
Hub Adjustable Sleeve Spanner ..	..	..	66-9067	..
Hub Spindle Nut Spanner ..	..	29-9251	29-9251	..
Magneto Spanner ..	..	66-9071	66-9071	..
Push Rod Gland Nut Spanner (B29, M23 only) ..	..	..	..	..
Pliers ..	..	..	..	..
Rear Hub Nut Spanner ..	S166	S166	..	..
Speedometer Drive Spanner ..	..	..	..	..
Spark Plug Spanner ..	66-9039	66-9039	66-9039	..
Screwdriver Attachment ..	66-9038	66-9038	66-9038	..
Screwdriver ..	..	..	..	..
Tyre Lever ..	29-9252	29-9252	29-9252	..
Tommy Bar ..	29-9253	29-9253	29-9253	..
Tappet Adjusting Spanner ..	65-9133	65-9133	65-9133	..
Tappet Adjusting Spanner ..	..	..	..	..
Tappet Adjusting Spanner ..	..	..	..	..
Do. (C10, C12 only) ..	65-9132	27-8925	65-9132	..
Do. (C11, M23 only) ..	27-8925	..	..	..
Tappet Feelers ..	..	..	27-8925	..
Toolbag ..	65-9130	65-9130	65-9130	..
Tubular Spanner ..	15-8930	15-8930	15-8930	..
Union Spanner ..	65-9115	65-9115	..	..
Valve Grinding Tool (B29, M23 only) ..	..	66-9044	66-9044	..
Do. (C11 only) ..	66-9044	..	..	..
Valve Spring Compressing Tool ..	..	..	..	..
Wheel Alignment Gauge ..	..	..	..	..

DESCRIPTION.	C10. C11. C12.	B29.	N20. N21. N23.	G14.
SUNDRIES.				
Inflator ..	..	27-8958	..	..
Speedometer Bracket ..	..	15-9043	..	..
Speedometer Bracket Bolt ..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	..
..	..	15-9043	..	..
..	..	24-7148/6(2)	..	..
..	..	27-8958	..	

Tools and Sundries—continued.

Headlamp Bracket (top)	15-9001(2)	15-9001(2)
Do. (bottom)	27-8032(2)	66-9078(2)
Headlamp Bracket Top Bolt	27-8032(2)	15-8994(6)
Do. (long)	K132A/6	15-8994(6)
Headlamp Bracket Bottom Bolt	B751/6	15-8994(6)
Do. Bolt Nut (top)	K132A/6(2)	EAB0/6(2)
Do. do. (bottom)	M283/6(2)	EAB0/6(2)
Do. Bolt Spring Washer	M283/6(2)	24-8784(4)
Valve Removing Tool	—	65-9116
Hub Spindle Nut Spanner	—	61-1918
Do. Tommy Bar	—	61-1917
Transmission Chain (88 links)	—	24-8930
Do. (68 links)	24-8931	24-8931
Do. (70 links)	24-8932	24-8932
Do. (71 links)	—	24-8933
Do. (72 links)	—	24-8915
Do. (73 links)	—	24-8913
Do. (92 links)	—	—
Do. (94 links)	15-811	—
Do. (95 links)	—	15-8969
Do. (104 links)	—	24-8713
Front Chain Connecting Link (for B.S.A. Chain)	65-9188	24-8938
Do. Double Connecting Link (for B.S.A. Chain)	27-8746	27-8746
Do. Cranked Link (for B.S.A. Chain)	27-8810	27-8810
Rear Chain Connecting Link (for B.S.A. Chain)	27-8805	27-8905
Do. Double Connecting Link (for B.S.A. Chain)	27-7846	15-816
Do. Cranked Link (for B.S.A. Chain)	27-8810	15-8976
Connecting Link Key (K*) (for B.S.A. Chain)	27-8805	15-8972
	—	24-8985
		24-8985

NOTE.—Figures in brackets denote number per set, e.g. (2), 2 per set. When no figures in brackets are shown one part constitutes a set.

Quote Engine and Frame Numbers, with prefix letters, when ordering spares.

TOOLS AND SUNDRIES.

24-8930	60 Links	L ₁ X 305
24-8931	69	L ₁ X 305
24-8932	70	L ₁ X 305
24-8933	71	L ₁ X 305
24-8915	72	L ₁ X 305
24-8913	73	L ₁ X 305
15-811	92	L ₁ X 250
15-8969	94	L ₁ X 250
24-8713	95	L ₁ X 250
24-8938	95	L ₁ X 375
65-8188	104	L ₁ X 305



15-8972.
24-8977.
27-8805.



24-8985



15-8976
24-8979
27-8810



27-8746
15-816
5255A

Bofors 43

Speedometer Cable	29-9320	24-5489
Do. Length	231"	29"
Do. Clip	29-9323	24-5817
Speedometer Fixing Strap	—	EB673/6
Do. Bolt	—	EB116/6
Do. Bolt Nut	24-8944(2)	24-8944(2)
Cable Clip (Shamrock pattern)	66-9049(2)	27-8953(2)
Cable Clip	66-9050(2)	31-9016(2)
Cable Clip	66-9051	33-9052
Do. (wiring mudguard stay)	25-8980(2)	25-8980(2)
Licence Holder	29-9221	29-9221
Do. (sidescar machine)	29-9222	29-9222
Pillion Seat Fixing Bolt	K132A/6(4)	K132A/6(4)
Do. Bolt Nut	EB113/6(4)	EB113/6(4)
Do. Bolt Spring Washer	K197(4)	K197(4)

65-9140

15-9043

66-9045

27-9032

27-8953

25-8980

25-9221

15-9000

65-9116

65-9115

65-9130

24-2517

24-5489

29-9320

66-9112

61-1917

66-9058

66-9054

35-9052

24-8944

19-8222

17-8953

TOOLS AND SUNDRIES.

British Only

MOTORCYCLES AND PARTS INC.

32451 PARK LANE
GARDEN CITY, MI 48135 USA

PHONE ORDER HOURS:
MONDAY THRU FRIDAY 10-6 EST

Fax or email 24 hours a day!

RETAIL: 734-421-0303
WHOLESALE: 734-525-1980
FAX: 734-422-9253
EMAIL: info@britishonly.com
WEBSITE: www.britishonly.com

THE BIGGEST!

ENGINE REBUILDING PARTS
GASKETS-SEALS-BEARINGS
BUSHINGS-PISTONS-RINGS
CLUTCHES-TUNE UP PARTS
SPEED EQUIPMENT

THE BEST!

STOCK AND CUSTOM PARTS
SEATS-HANDLEBARS-CHAINS
TIRES-TUBES-EXHAUST PIPES
MUFFLERS-GAS TANKS-FENDERS
RESTORATION PARTS

THE ONLY!

WORLD'S LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS
45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!
CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

CALL FOR OUR FREE
200 PAGE CATALOG!

OVERSEAS CUSTOMERS PLEASE SEND \$10.00 FOR AIR POST

1-800-BRT-ONLY

OR

1-800-278-6659

Visit our ever expanding website!

www.britishonly.com

50,000+ PARTS LISTED ONLINE

7,000+ PARTS VIEWABLE ONLINE

SPECIALIZING IN

Triumph

Norton

BSA

PARTS
SHIPPED
WORLDWIDE!



— AMAL
— LUCAS
— SMITHS
— ROWE
— HEPOLITE
— MORGO
— DUNLOP
— RENOLD
— MEGACYCLE
— JOE HUNT
— BOOKSTORE
— NORVIL
— MORGO
— BARNETT
— JP PISTONS
— ALPHA

V.I.P. Buyers Club

10% OR MORE OFF 17,000 PARTS



British Only E-Store

Bookstore
New Products
Scratch & Dent
Blue Light Specials

50,000+ PARTS
LISTED ONLINE
7,000+ PARTS
VIEWABLE ONLINE

