

DETAILS OF PUMP PARTS FOR NEEDLE TYPE STANDARD AMAL CARBURETTERS.

Component	Types 4/ & 74/	Types 5/ & 75/	Types 6/ & 76/	Types 29/ & 89/	Price s. d.
Mixing Chamber Union Nut	36/001	36/001	36/002	36/003	2 0
Needle Jet	36/004	36/004	36/004	36/004	2 6
Holding Bolt	36/005	36/005	36/005	36/005	2 6
Fibre Washer	36/006	36/006	36/006	36/006	2
Plunger Spring	36/007	36/007	36/007	36/007	3
Plug for Needle Jet	36/008	36/008	36/008	36/008	1 6
Pump Plunger	36/009	36/009	36/009	36/009	1 0
Ball Seating Plug	36/010	36/010	36/010	36/010	6
Steel Ball	36/011	36/011	36/011	36/011	1

FLOAT CHAMBER PARTS AND PRICES FOR TYPES FROM 1929 TO 1934.

Component	PART NUMBERS				Price s. d.
	Large Float Chamber		Small Float Chamber		
	Bottom Feed	Top Feed	Bottom Feed	Top Feed	
Float Chamber Complete, Twin Standard	14/076	14/096	—	—	33 0
Float Chamber Complete	64/079	64/099	—	—	18 0
Ditto ditto Single Standard	—	—	62/079	62/099	14 6
*Float Chamber Body	64/155SP	64/162SP	—	—	12 0
*Ditto ditto	64/155SBP	64/162SBP	—	—	12 0
*Ditto ditto	64/153LP	64/157LP	—	—	12 0
*Ditto ditto	64/153LBP	64/157LBP	—	—	12 0
*Ditto ditto	64/154L	64/161L	—	—	12 0
*Ditto ditto	64/154LB	64/161LB	—	—	12 0
*Ditto ditto	64/156S	64/163S	—	—	12 0
*Ditto ditto	64/156SB	64/163SB	—	—	12 0
*Ditto ditto	—	64/187 Bent	—	—	14 6
*Ditto ditto	—	—	62/025S	62/028S	8 6
*Ditto ditto	—	—	22/001SP	22/002SP	8 6
*Ditto ditto (Horizontal)	64/177HZ	64/176HZ	—	—	12 0
*Ditto ditto ditto	—	—	22/005/15HZ	22/006/15HZ	8 6
*Ditto ditto	14/009 Twin	14/010 Twin	—	—	20 0
*Ditto ditto	14/009 Twin-P	14/010 Twin-P	—	—	20 0
Float Chamber Cover (Standard)	14/011	14/012	22/011	22/012	2 6
Float Chamber Cover (for Banjo fitting)	—	14/034	—	15/663	2 6
Float Chamber Cover Lock Screw	14/021	—	—	—	3
Float	14/015	14/017	22/016	22/016	2 6
Needle Valve	14/024	14/030	22/013	22/014	11
Tickler	14/031	14/031	22/021	22/021	7
Tickler Spring	14/032	14/032	14/032	14/032	2
Tickler Cotter Pin	14/033	14/033	14/033	14/033	1
Petrol Union Nut	14/025	14/025	14/025	14/025	6
Petrol Union Nipple	14/026	14/026	14/026	14/026	3
Bow Spring for Float	14/014	—	—	—	3
Banjo Connection (Single)	14/035	14/035	—	—	2 0
Ditto ditto ditto direct pipe fitting	—	—	—	15/664	1 6
Ditto ditto (Twin 90°)	14/043	14/043	—	—	4 6
Ditto ditto (Twin 180°)	14/173	14/173	—	—	4 6
Banjo Connection Nut	14/036	14/036	—	15/665	6
Banjo Connection Nut Washer	14/037	14/037	—	—	2
Banjo Connection Copper Washer	—	—	—	3039	2
Banjo Connection Fibre Washer	—	—	—	15/666	1
Float Chamber Platform Plug Screw	13/153	13/153	—	—	2
Washer for above	14/039	14/039	—	—	1
Seating Locknut	14/178	—	14/178	—	3
Seating Washer	14/175	—	14/175	—	2
1/8" Lock Screw for Float Chamber Cover	3319	3319	—	—	2

Please SEND patterns when possible.

*When ordering Float Chamber Bodies please state finish (Chromium or Black).

EXTRA CHARGE is made for Float Chamber Bodies having twisted bases.

*RE FLOAT CHAMBER SYMBOLS :—

SP denotes Short Base—Pump type.
 SBP " Short Base—Banjo Pump type.
 LP " Long Base—Pump type.
 LBP " Long Base—Banjo Pump type.
 L " Long Base—Standard type.
 LB " Long Base—Standard Banjo type.
 S " Short Base—Standard type.
 SB " Short Base—Standard Banjo type.
 HZ " Type fitted to Horizontal Mixing Chamber Carburetters.