

MAINTENANCE


To maintain the carburetor in good condition, proceed as follows:

Disassemble the carburetor and clean the jet and all the carburetor passages with a cleaning fluid and air.

Control the efficiency of all components, especially the needle, needle jet, fuel passage valve and the float bowl.

If necessary, replace with new parts of the same specifications.

DIMENSIONS

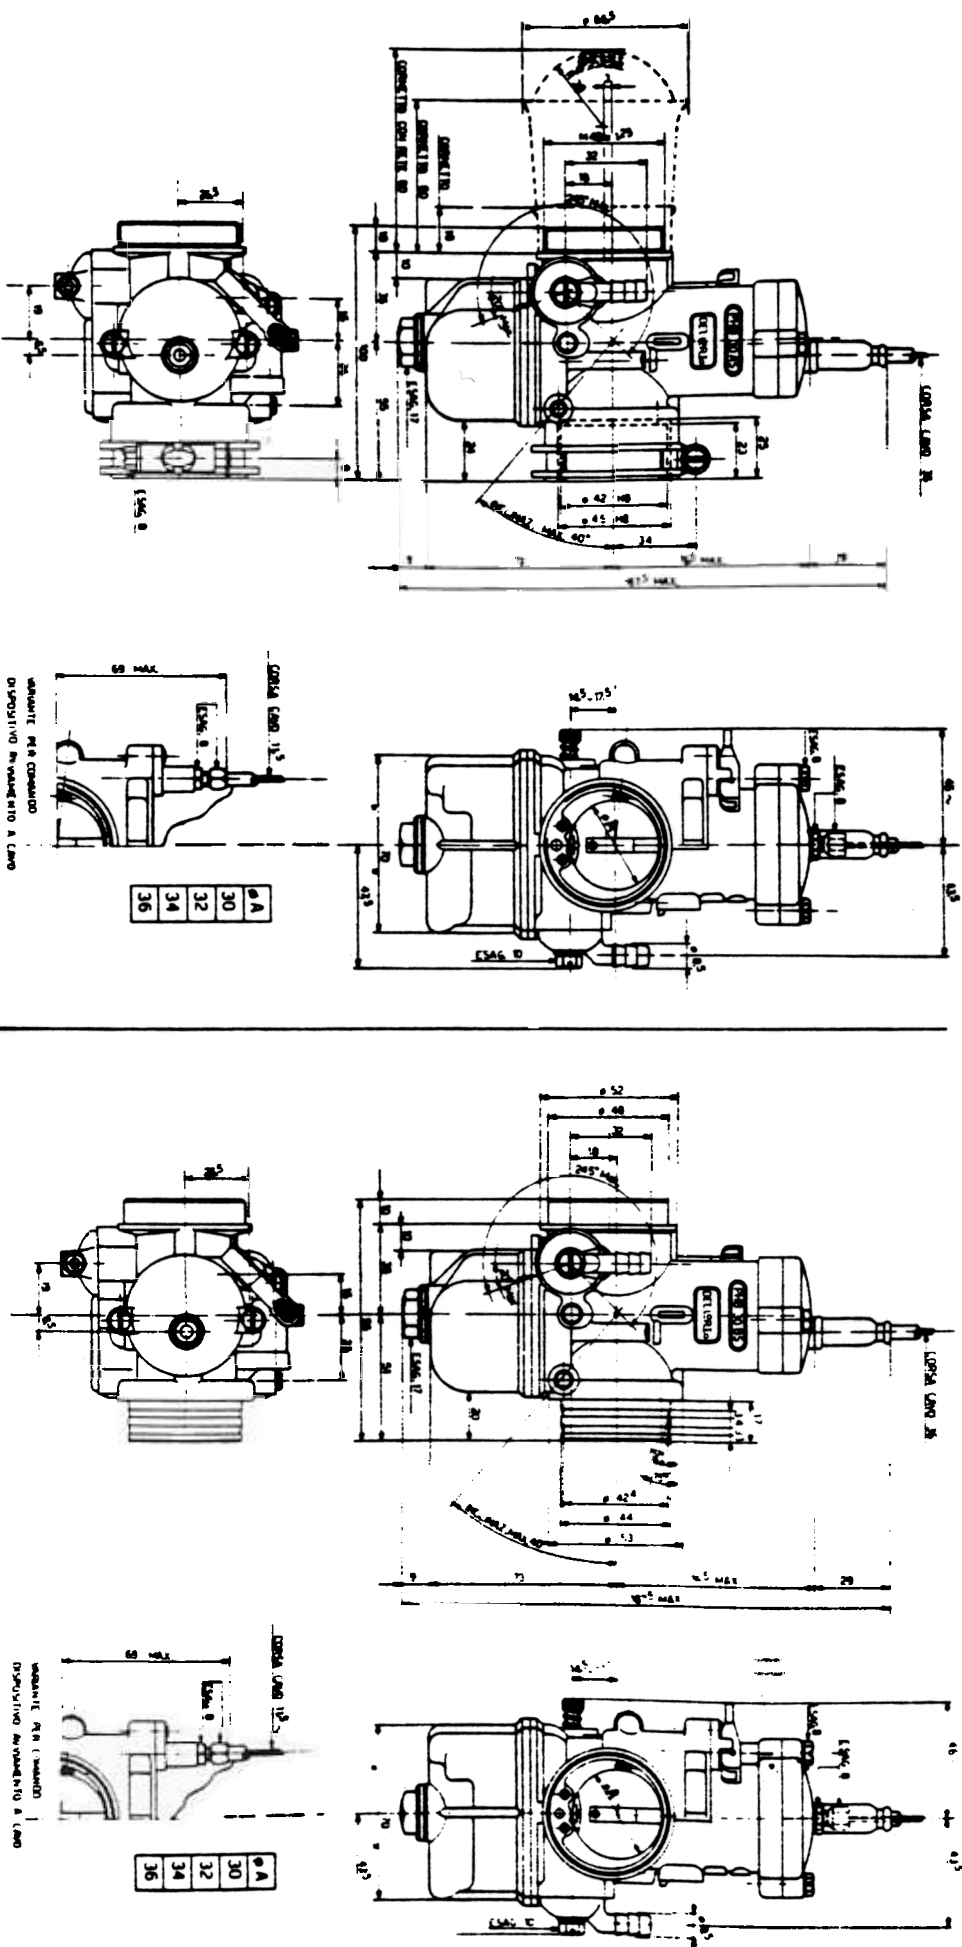

PHB...A

PHB...B