

20-10370C



**SPARE PARTS
LIST FOR 1957**

Models 77, 88 and 99

NORTON MOTORS LTD.

BRACEBRIDGE ST., BIRMINGHAM, 6, ENGLAND

Phone: Aston Cross 3711 (Private Branch Exchange)

Grams: "Nortomo, Birmingham"

20-10320C

British Only

MOTORCYCLES AND PARTS INC.

32451 PARK LANE

GARDEN CITY, MI 48135 USA

PHONE ORDER HOURS:

MONDAY THRU FRIDAY 10-6 EST

Fax or email 24 hours a day!

RETAIL: 734-421-0303
WHOLESALE: 734-525-1980
FAX: 734-422-9253
EMAIL: info@britishonly.com
WEBSITE: www.britishonly.com

THE BIGGEST!

ENGINE REBUILDING PARTS
GASKETS-SEALS-BEARINGS
BUSHINGS-PISTONS-RINGS
CLUTCHES-TUNE UP PARTS
SPEED EQUIPMENT

THE BEST!

STOCK AND CUSTOM PARTS
SEATS-HANDLEBARS-CHAINS
TIRES-TUBES-EXHAUST PIPES
MUFFLERS-GAS TANKS-FENDERS
RESTORATION PARTS

THE ONLY!

WORLD'S LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

CALL FOR OUR FREE 272 PAGE CATALOG!

OVERSEAS CUSTOMERS PLEASE SEND \$10.00 FOR AIR POST

1-800-BRT-ONLY

OR

1-800-278-6659

Visit our website!

www.britishonly.com

50,000+ PARTS LISTED ONLINE
9,000+ PARTS VIEWABLE ONLINE

SPECIALIZING IN

TRIUMPH

Norton

BSA

PARTS
SHIPPED
WORLDWIDE!



— HYDE
— AMAL
— LUCAS
— SMITHS
— ROWE
— HEPOLITE
— MORGO
— DUNLOP
— RENOLD
— MEGACYCLE
— JOE HUNT
— BOOKSTORE
— NORVIL
— MORGO
— BARNETT
— JP PISTONS
— ALPHA

V.I.P. Buyers Club

SAVE 10% OR MORE
ON 17,000+ PARTS



British Only E-Store

Bookstore
New Products

Scratch & Dent

Blue Light Specials

50,000+ PARTS
LISTED ONLINE

9,000+ PARTS
VIEWABLE ONLINE

British Only

MOTORCYCLES AND PARTS INC.

32451 PARK LANE

GARDEN CITY, MI 48135 USA

PHONE ORDER HOURS:

MONDAY THRU FRIDAY 10-6 EST

Fax or email 24 hours a day!

**CALL FOR OUR FREE
272 PAGE CATALOG!**

OVERSEAS CUSTOMERS PLEASE SEND \$10.00 FOR AIR POST

1-800-BRT-ONLY

OR

1-800-278-6659

Visit our website!

www.britishonly.com

50,000+ PARTS LISTED ONLINE
9,000+ PARTS VIEWABLE ONLINE

SPECIALIZING IN

TRIUMPH

Norton

BSA

**PARTS
SHIPPED
WORLDWIDE!**



THE BIGGEST!

**ENGINE REBUILDING PARTS
GASKETS-SEALS-BEARINGS
BUSHINGS-PISTONS-RINGS
CLUTCHES-TUNE UP PARTS
SPEED EQUIPMENT**

THE BEST!

**STOCK AND CUSTOM PARTS
SEATS-HANDLEBARS-CHAINS
TIRES-TUBES-EXHAUST PIPES
MUFFLERS-GAS TANKS-FENDERS
RESTORATION PARTS**

THE ONLY!

— HYDE
— AMAL
— LUCAS
— SMITHS
— ROWE
— HEPOLITE
— MORGO
— DUNLOP
— RENOLD
— MEGACYCLE
— JOE HUNT
— BOOKSTORE
— NORVIL
— MORGO
— BARNETT
— JP PISTONS
— ALPHA

WORLD'S LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS

45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!

CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

V.I.P. Buyers Club

**SAVE 10% OR MORE
ON 17,000+ PARTS**



British Only E-Store

**Bookstore
New Products**

Scratch & Dent

Blue Light Specials

**50,000+ PARTS
LISTED ONLINE**

**9,000+ PARTS
VIEWABLE ONLINE**

FOR ENAMELLED PARTS—PLEASE STATE COLOUR

INDEX

	Page		Page
Air cleaner and fittings	32	Headlamp and fittings (all prices Retail nett)	30
Amal carburetter	11	Kickstarter parts	19
Battery (price Retail nett)	30	Lapel badges (this price Retail nett) ...	32
Brake shoe linings and shoes	23	Magneto and drive parts (all prices Retail nett)	8
Cable clips	32	Norton road holder front forks and fittings	13
Centre stand and fittings	28	Number plates	29
Clutch	21	Oil pipes and fittings	18
Connecting rods and big end bearings ...	11	Oil pump parts	9
Control cable, adjusters and nipples ...	15	Oil tank and fittings	16
Crankcase, engine plate bolts, etc. ...	6	Parts common to front and rear hubs ...	23
Crankcase and fittings	5	Petrol tank and fittings	15
Crankcase pressure and breather fittings	5	Pillion footrests	25
Cylinder head, barrel, studs and nuts ...	9	Pistons and rings	9
Dual seat and fittings	31	Positive footchange	19
Dynamo drive parts and securing fittings...	8	Push rods and tappets	7
Electric horn and fittings	31	Rear brake pedal and fittings	25
Enamel (this price Retail nett)	32	Rear chain adjusters	27
Engine plates	25	Rear chainguard and fittings	24
Engine sprockets	27	Rear suspension	27
Engine steady stay and fittings	7	Rear wheel and fittings	23
Exhaust pipe, silencer and fittings...	13	Rear mudguard and fittings	29
Flywheels, crankshaft and main bearings ...	5	Rocker box fittings	7
Footrests and fittings	25	Side prop stand and fittings	28
Frame	27	Speedometer and fittings (all prices Retail nett)	31
Front and rear chains	27	Swinging arm and fittings	27
Front chaincase and fittings	24	Tail and stop lights	29
Front wheel and fittings	21	Timing gear fittings	7
Front mudguard, stays and fittings ...	28	Tool box, tool tray and fittings	30
Gearbox fixing bolts	18	Tool kit	31
Gearbox front chain adjuster	18	Transfers	32
Gearbox pinions, shafts and bearings ...	19	Valves, guides, springs, etc.	9
Gearbox shell	18	Voltage control and fittings	31
Handlebars and fittings	15	Wheel rims and spokes	24

INSTRUCTIONS FOR ORDERING SPARE PARTS

This Spare Parts List deals with replacement parts for Models 88, 99 and 77 of 1957 manufacture.

It is most essential that the Engine and Frame Number of the machine is stated. The Engine Number is to be found on the transmission side of the Crankcase directly below cylinder base. The frame number is stamped on the nearside of the frame gusset plate on 88 and 99 models and on the petrol tank front mounting lug on the Model 77. It is always advisable to order parts on a separate sheet, and not to include on the same sheet other matter of a different nature; this facilitates prompt despatch.

It is found in a number of instances that money orders and postal orders are sent in parcels containing patterns; this is inadvisable. We strongly recommend parts as patterns being despatched separately, and a covering letter sent containing the remittance for replacement parts.

RETURNING MACHINES FOR OVERHAULING

When returning machines or parts for repair or overhaul, these should be sent carriage paid, and with the sender's name and address in full securely attached. It is also advisable to state on the tally that a letter has been sent respecting the parts, and giving the date. All easily detached fittings should be removed, such as Lamps, Horns, Tool Bags, Speedometers, etc.; these are liable to be lost or damaged in transit, and the Company cannot accept any responsibility for them.

ESTIMATES FOR REPAIRING MACHINES

We are always prepared to give approximate estimates for the cost of repairs; it is quite impossible to give a firm quotation. Additional parts may be found necessary during the process of repair, unforeseen when preparing an estimate. Should our estimate for repair not be accepted, a charge may be made in accordance with work entailed in dismantling and re-assembling. When we give an estimate for cost of repairs, and this is curtailed by the owner, we cannot accept any responsibility for the performance of the machine; it is always preferable to accept our estimate in full.

PURCHASE OF SPARE PARTS


Norton Dealers throughout the British Isles generally carry a very comprehensive stock of Norton spare parts and it is recommended that owners should obtain any spare parts required through them.

The name of the nearest Norton dealer will be supplied on request and if any difficulty whatever is experienced in obtaining spare parts through a Norton Dealer, if we are advised, we shall be very pleased to investigate the matter.

It is our desire that replacement parts are available to Norton owners with the least possible delay.

Please note we reserve the right to alter the prices in the list at any time without notice.

PLATE T.A.

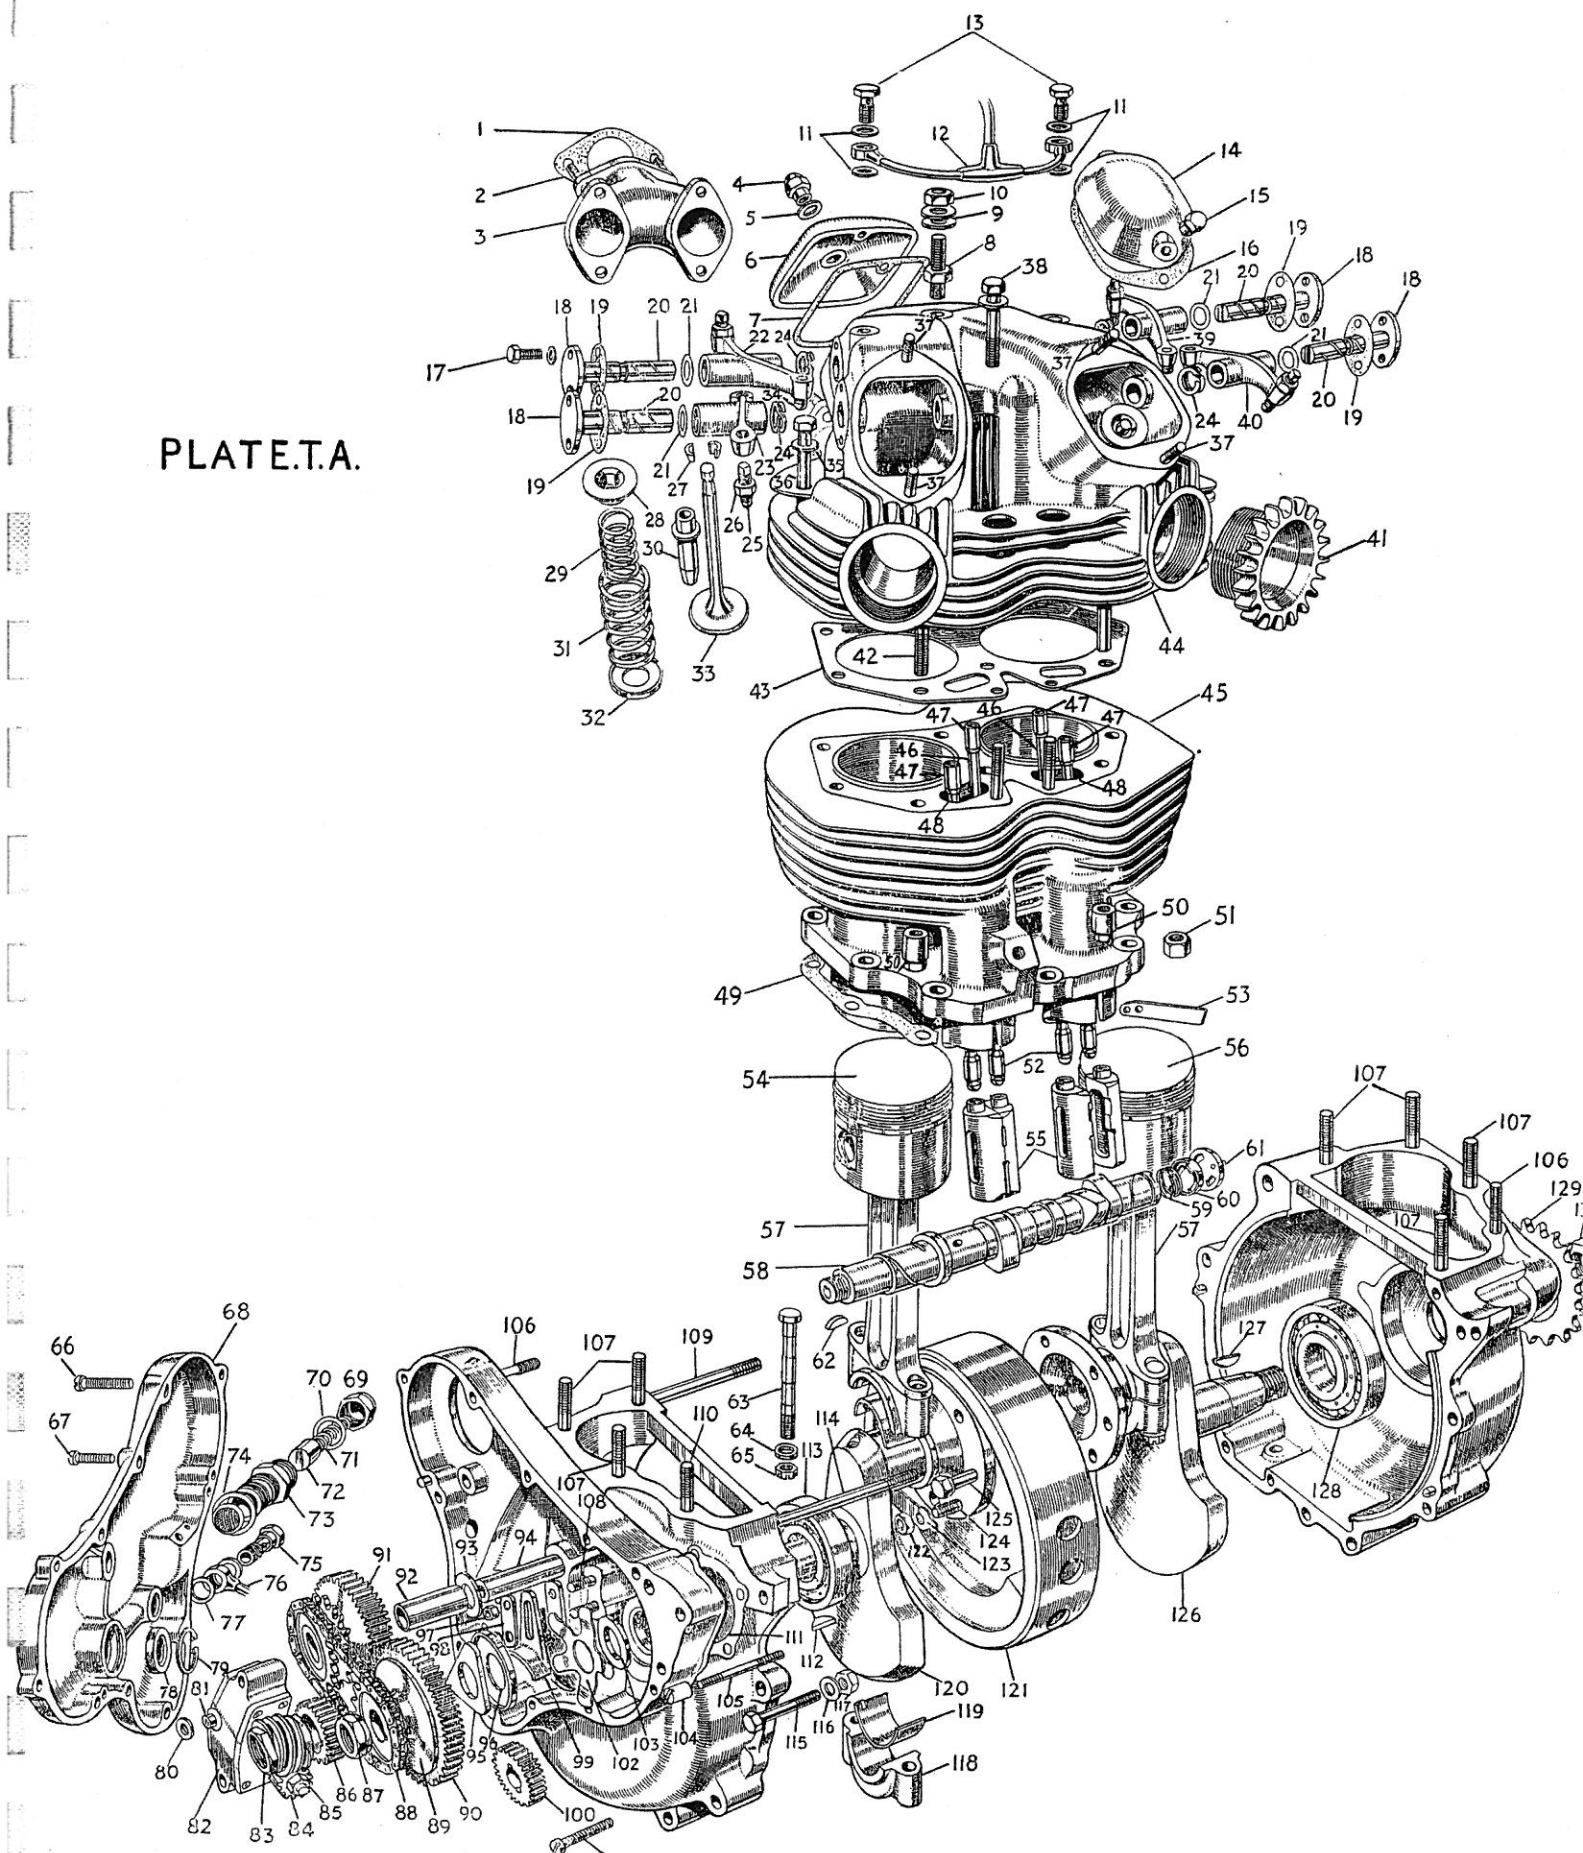

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
-------------	-------------------	--------------	-------------	------	-------	---------------

CRANKCASE AND FITTINGS

£ s. d.

50235	—	—	Crankcase with timing cover	1	88, 99, 77	
19257	—	TA68	Timing cover	1	88, 99, 77	
T2236	—	—	Crankcase timing cover paper washer ...	1	88, 99, 77	
19228	—	—	Timing cover badge	1	88, 99, 77	
50234	H12/704	—	Crankcase, driving side	1	88, 99, 77	
50177	H12/703	—	Crankcase, timing side	1	88, 99, 77	
NOTE.—Half crankcases and timing cover cannot be supplied separately. Therefore it is necessary to return the sound half for matching at the works.						
T2036	D12/18/TS	—	Crankcase camshaft bush timing side ...	1	88, 99, 77	
T2037	D12/18/DS	—	Crankcase camshaft bush driving side ...	1	88, 99, 77	
T2018	D12/2(L)	TA107	Crankcase cylinder base stud $\frac{3}{8}$ " dia. ...	6	88, 99, 77	
T2209	D12/2(S)	TA110	Crankcase cylinder base stud $\frac{5}{16}$ " dia. ...	2	88, 99, 77	
18943	—	—	Crankcase cylinder base stud $\frac{3}{8}$ " dia. (front centre)	1	88, 99, 77	
T2016	D12/3(L)	—	Crankcase cylinder base stud nut $\frac{3}{8}$ " dia. ...	7	88, 99, 77	
T2210	D12/3(S)	—	Crankcase cylinder base stud nut $\frac{5}{16}$ " dia. ...	2	88, 99, 77	
T2211	—	—	Crankcase cylinder base stud washer ...	2	88, 99, 77	
T2191	D12/912	—	Crankcase and magneto joint washer ...	1	88, 99, 77	
10940	—	TA66	Crankcase timing cover screws (long) ...	8	88, 99, 77	
11775	—	—	Crankcase timing cover washer	16	88, 99, 77	
E6980	—	TA67	Crankcase timing cover screws (short) ...	6	88, 99, 77	
T2124	D12/913	TA78	Timing cover mainshaft oil seal	1	88, 99, 77	
17841	D12/914	TA79	Timing cover mainshaft oil seal circlip ...	1	88, 99, 77	
E4591	—	—	Timing cover oilway plug	1	88, 99, 77	
16945	H12/16945	—	Crankcase oil sump filter body	1	88, 99, 77	
16949	H12/16949	—	Filter body copper and asbestos washer ...	1	88, 99, 77	
16946	H12/16946	—	Filter body gauze	1	88, 99, 77	
16947	H12/16947	—	Filter body gauze retaining plate	1	88, 99, 77	
16948	H12/16948	—	Filter body gauze retaining plate circlip ...	1	88, 99, 77	
15399	—	—	Name plate for drive side of crankcase ...	1	88, 99, 77	
17842	—	—	Screws for name plate	2	88, 99, 77	

CRANKCASE PRESSURE AND BREATHER FITTINGS

D12/915	—	—	Timing cover pressure release valve complete	1	88, 99, 77	
T2059	D12/916	TA73	Timing cover pressure release valve body ...	1	88, 99, 77	
T2060	D12/920	TA69	Timing cover pressure release valve body nut	1	88, 99, 77	
T2057	D12/921	TA70	Timing cover pressure release valve body nut washer	1	88, 99, 77	
T2054	D12/917	TA72	Timing cover pressure release valve piston	1	88, 99, 77	
T2061	D12/918	TA71	Timing cover pressure release valve spring	1	88, 99, 77	
T2056	D12/919	TA76	Timing cover pressure release valve body washer	1	88, 99, 77	
T2058	—	—	Timing cover pressure release valve union washer	1	88, 99, 77	
19382A	D12/708	—	Crankcase breather pipe with flange ...	1	88, 99, 77	
T2213	D12/923	—	Crankcase breather pipe securing bolt ...	1	88, 99, 77	
19383	—	—	Oil pipe rubber	1	88, 99, 77	
16902	—	—	Set pin for oil gauge hole	1	88, 99, 77	
T1084	—	—	Set pin washer	1	88, 99, 77	

FLYWHEELS, CRANKSHAFT AND MAIN BEARINGS

D12/24	—	—	Flywheel and crankshaft assembly with con rods	1	88	
L14/24	—	—	Flywheel and crankshaft assembly with con rods	1	99, 77	
18246	D12/924	TA126	Flywheel	1	88	
18744	L14/924	—	Flywheel	1	99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
FLYWHEELS, CRANKSHAFT AND MAIN BEARINGS—cont.						£ s. d.
18247	D12/705	TA120	Crankshaft, timing side ...	1	88	
18746	L14/705	—	Crankshaft, timing side ...	1	99, 77	
18248	D12/706	TA126	Crankshaft, driving side ...	1	88	
18745	L14/706	—	Crankshaft, driving side ...	1	99, 77	
T2033A	—	TA125	Flywheel and crankshaft bolt ...	3	88, 99, 77	
T2033	D12/925	—	Flywheel and crankshaft bolt ...	1	88, 99, 77	
T2086	D12/926	TA124	Flywheel and crankshaft stud ...	2	88, 99, 77	
T2031	D12/927	TA122	Flywheel and crankshaft bolt or stud nut ...	8	88, 99, 77	
T2105	D12/928	—	Dowel for flywheel ...	1	88, 99, 77	
T2032	D12/929	TA123	Retaining plate for dowel ...	2	88, 99, 77	
17822	D12/30	TA113	Mainshaft ball bearing, timing side ...	1	88, 99, 77	
					nett	
T2008	D12/930	TA96	Mainshaft ball bearing timing side sealing washer ...	1	88, 99, 77	
17824	D12/32	TA128	Mainshaft roller bearing, driving side ...	1	88, 99, 77	
					nett	
T2187	D12/931	—	Driving side shaft oil seal ...	1	88, 99, 77	
T2196A	—	—	Mainshaft packing shim ...	A.R.	88, 99, 77	
T2196B	—	—	Mainshaft packing shim ...	A.R.	88, 99, 77	
CRANKCASE AND ENGINE PLATE BOLTS, NUTS AND WASHERS						
E4256	—	—	Stud, engine plate to frame front ...	1	77	
E5377	—	—	Washer, engine plate to frame ...	2	77	
E3223	—	—	Engine plate to frame nuts ...	1	77	
E3224	—	—	Nuts, engine plate to frame ...	2	77	
T2012	—	—	Crankcase to engine plate stud (bottom) ...	2	77	
E5376	—	—	Washer, crankcase to engine plate stud ...	5	77	
E3224	—	—	Nuts, crankcase to engine plate stud ...	6	77	
E4262	—	—	Studs, crankcase to bottom frame tube ...	2	77	
17696	—	—	Washers, crankcase to bottom frame tube stud ...	4	77	
E3223	—	—	Nuts, crankcase to bottom frame tube stud ...	3	77	
E4268	—	—	Bolt, engine ...	2	77	
E5377	—	—	Washers, crankcase to engine plate ...	5	77	
E3224	—	—	Nuts, crankcase to engine plate studs ...	6	77	
E4268	—	—	Bolts, engine plate to frame ...	2	77	
E5377	—	—	Washers, engine plate to frame bolt ...	2	77	
T2231	—	—	Crankcase and prop stand stud ...	1	77	
E4262	—	—	Crankcase and prop stand stud ...	1	77	
T2012	—	—	Crankcase to engine plate stud (top) ...	1	88, 99	
E5376	—	—	Washer to engine plate stud ...	1	88, 99	
E3224	—	—	Nuts to engine plate stud ...	2	88, 99	
18649	—	—	Bolts, bottom fixing frame to engine plates ...	2	88, 99	
E5456	—	—	Washers, bottom fixing frame to engine plate bolts ...	4	88, 99	
T2017	—	—	Nuts, bottom fixing frame to engine plate bolts ...	2	88, 99	
E4261	—	—	Crankcase to engine plate bolt (bottom) ...	1	88, 99	
E3223	—	—	Crankcase to engine plate bolt nut ...	1	88, 99	
T2012	—	—	Crankcase to engine plate bolt stud ...	1	88, 99	
E5376	—	—	Crankcase to engine plate bolt washer ...	2	88, 99	
E3224	—	—	Crankcase to engine plate bolt nuts ...	2	88, 99	
T2012	—	—	Crankcase to engine plate stud (top) ...	1	88, 99	
E5376	—	—	Crankcase to engine plate bolt washers ...	2	88, 99	
E3224	—	—	Crankcase to engine plate bolt nuts ...	2	88, 99	
16317	—	—	Front and rear engine plate to frame bolts ...	6	88, 99	
E5376	—	—	Washers for bolts ...	12	88, 99	
E3224	—	—	Nuts for bolts ...	6	88, 99	
13870	—	—	Crankcase bolts (short) ...	1	88, 99, 77	
E3223	—	—	Crankcase bolt nuts ...	1	88, 99, 77	
E5456	—	—	Crankcase bolt washers ...	1	88, 99, 77	
T2013	—	—	Crankcase top studs (rear) ...	1	88, 99	
19077	—	—	Crankcase top studs (front) ...	1	88, 99	
E3224A	—	—	Crankcase top stud nuts (rear) ...	1	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
CRANKCASE AND ENGINE PLATE BOLTS, NUTS AND WASHERS—cont.						£ s. d.
E3229	—	—	Crankcase top stud nuts (front) ...	1	88, 99	
E5376	—	—	Crankcase top stud washers (rear) ...	1	88, 99	
T2221	—	—	Crankcase top stud washers (front) ...	1	88, 99	
E3214	—	—	Crankcase top stud ...	1	88, 99	
E3231	—	—	Crankcase stop stud nuts ...	2	88, 99	
10940	—	—	Screws, T.S. to D.S. ...	2	88, 99, 77	
11775	—	—	Washers for screws ...	2	88, 99, 77	

ENGINE STEADY STAY AND FITTINGS

18637	H12-2/932	—	Head steady Plate ...	1	88, 99	
15315	—	—	Head steady plate ...	1	77	
18032	—	—	Head steady stay stud ...	1	88, 99, 77	
E3224	—	—	Head steady stay stud nut ...	1	88, 99, 77	
E5376	—	—	Head steady stay stud nut washer ...	1	88, 99, 77	
E3798	—	—	Steady stay fixing bolts ...	2	88, 99	
11796	—	—	Steady stay fixing bolt washers ...	2	88, 99	
E3223	—	—	Steady stay fixing bolt nuts ...	2	88, 99	
18202	—	—	Steady stay fixing bolt washers ...	2	88, 99	

TIMING GEAR FITTINGS

17413	D12/790	TA58	Camshaft ...	1	88, 99, 77	
T2043	D12/774	—	Camshaft washer ...	1	88, 99, 77	
T2078	D12/933	TA61	Camshaft breather stationary plate ...	1	88, 99, 77	
T2075	D12/934	TA60	Camshaft breather rotary plate ...	1	88, 99, 77	
T2108	D12/935	TA59	Camshaft breather spring ...	1	88, 99, 77	
T2035	D12/58	TA86	Half time pinion ...	1	88, 99, 77	
T2007	D12/936	TA95	Half time pinion backing plate ...	1	88, 99, 77	
E3683	—	TA112	Half time pinion driving key ...	1	88, 99, 77	
50008	D12/937	TA91	Intermediate gear with sprockets ...	1	88, 99, 77	
T2026	D12/938	TA92	Intermediate gear bush ...	1	88, 99, 77	
T2080	D12/939	TA93	Intermediate gear washer ...	1	88, 99, 77	
T2021	D12/940	TA94	Intermediate gear spindle ...	1	88, 99, 77	
17823	D12/941	—	Intermediate gear spindle circlip ...	1	88, 99, 77	
E3683	—	TA62	Cam shaft sprocket key ...	1	88, 99, 77	
T2044	D12/79	TA89	Cam shaft sprocket ...	1	88, 99, 77	
T2046	D12/942	TA87	Cam shaft sprocket nut ...	1	88, 99, 77	
T2043	D12/774	—	Cam shaft sprocket washer ...	1	88, 99, 77	

PUSH RODS AND TAPPETS

M12/82 In.	—	TA46	Push rod complete, inlet ...	2	88	
M12/82 Ex.	—	TA48	Push rod complete, exhaust ...	2	88	
M14/82 In.	—	TA46	Push rod complete, inlet ...	2	99, 77	
M14/82 Ex.	—	TA48	Push rod complete, exhaust ...	2	99, 77	
20130	—	—	Push rod only, inlet ...	2	88	
20131	—	—	Push rod only, exhaust ...	2	88	
20132	—	—	Push rod only, inlet ...	2	99, 77	
20133	—	—	Push rod only, exhaust ...	2	99, 77	
T2064	D12/86	TA47	Push rod top ...	4	88, 99, 77	
T2182	D12/83	TA52	Push rod ball end ...	4	88, 99, 77	
18784A	H12/75A	TA55	Tappets, right-hand ...	2	88, 99, 77	
18784B	H12/75B	TA55	Tappets, left-hand ...	2	88, 99, 77	
T2142	D12/943	TA53	Tappet location plates ...	2	88, 99, 77	
T2143	D12/944	—	Tappet location plate screws ...	4	88, 99, 77	

ROCKER BOX FITTINGS

18249	D12/99RH	TA22	Rocker, inlet, R.H. ...	1	88, 99, 77	
18250	D12/99LH	TA39	Rocker, inlet, L.H. ...	1	88, 99, 77	
18252	D12/100LH	TA40	Rocker, exhaust, L.H. ...	1	88, 99, 77	
18251	D12/100RH	TA23	Rocker, exhaust, R.H. ...	1	88, 99, 77	
T2074	D12/803	TA25	Rocker adjuster ...	4	88, 99, 77	
T232	D12/804	TA26	Rocker adjuster nuts ...	4	88, 99, 77	
T2063	D12/104	—	Rocker ball ends ...	4	88, 99, 77	
T2237	D12/97	TA20	Rocker shafts ...	4	88, 99, 77	
18102	D12/951	TA21	Rocker shaft thrust washer ...	4	88, 99, 77	
18103	D12/950	TA24	Rocker shaft spring ...	4	88, 99, 77	
T2083	D12/947	—	Rocker shaft washers ...	4	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
ROCKER BOX FITTINGS—cont.						
						£ s d.
T2240	D12/948	—	Rocker shaft joint washers ...	4	88, 99, 77	
T2238	D12/945	TA19	Rocker shaft locking plates ...	4	88, 99, 77	
T2239	D12/946	TA18	Rocker shaft retaining plate ...	4	88, 99, 77	
T2256	K12/949	—	Rocker shaft bolts ...	8	88, 99, 77	
18094	D12/93R	TA6	Rocker box rear cap ...	1	88, 99, 77	
T2084	D12/95R	TA7	Rocker box rear cap washer ...	1	88, 99, 77	
T2082	D12/956	TA5	Rocker box rear cap washer ...	1	88, 99, 77	
T2162	D12/955	TA1	Rocker box rear cap acorn nuts ...	1	88, 99, 77	
18093	D12/93F	TA14	Rocker box front caps ...	2	88, 99, 77	
T2088	D12/95F	TA16	Rocker box front joint washer ...	2	88, 99, 77	
T2252	K12/952	TA37	Rocker box front cap studs ...	4	88, 99, 77	
T2085	D12/953	TA15	Rocker box front cap nuts ...	4	88, 99, 77	
18033	K12/954	—	Rocker box rear cap studs ...	1	88, 99, 77	
13937	—	—	Rocker box rear cap dowel ...	1	88, 99, 77	
18380	K12/985	—	Inlet manifold fixing studs ...	4	88, 99, 77	

DYNAMO DRIVE PARTS AND SECURING FITTINGS

20167	—	—	Dynamo ...	1	88, 99, 77	
						nett
T2243	D12/1013	TA100	Dynamo steel driven pinion ...	1	88, 99, 77	
T2244	F12/957	TA90	Dynamo fibre gear wheel ...	1	88, 99, 77	
19280	—	TA105	Dynamo to crankcase securing pins ...	3	88, 99, 77	
T2184	—	TA111	Dynamo sealing washer ...	1	88, 99, 77	
T2027	D12/962	—	Dynamo fixing strap ...	1	88, 99, 77	
T2029	D12/963	—	Dynamo fixing strap dowel ...	1	88, 99, 77	
T2028	D12/964	—	Dynamo fixing strap roller ...	1	88, 99, 77	
T2030	D12/965	—	Dynamo fixing strap bolt ...	1	88, 99, 77	
T2039	D12/958	TA102	Friction spring for fibre gear wheel ...	1	88, 99, 77	
T2242	D12/960	—	Locating peg for friction spring ...	1	88, 99, 77	
T2224	D12/959	—	Plate for friction spring ...	1	88, 99, 77	
17806	D12/961	TA86	Dynamo chain, 38-link ...	1	88, 99, 77	
						nett
T2217	D12/968	TA99	Dynamo chain tensioner slipper ...	1	88, 99, 77	
T247	D12/969	TA108	Dynamo chain tensioner stud ...	2	88, 99, 77	
T2218	D12/971	TA98	Plate for chain tensioner (thick) ...	1	88, 99, 77	
T2218A	—	—	Plate for chain tensioner (thin) ...	1	88, 99, 77	
E3231	—	—	Chain tensioner stud nuts ...	2	88, 99, 77	
200737	—	—	Brushes for dynamo ...	1 set	88, 99, 77	
						per set nett

MAGNETO AND DRIVE PARTS (all prices RETAIL NETT)

20201	—	—	Magneto ...	1	88, 99	
						nett
18256	—	—	Magneto ...	1	77	
						nett
47508	—	—	Magneto sprocket with automatic advance and retard unit ...	1	88, 99, 77	
18257	D12/113	—	Magneto chain ...	1	88, 99, 77	
458368	—	—	Pick-up assembly, left-hand ...	1	88, 99, 77	
458367	—	—	Pick-up assembly, right-hand ...	1	88, 99, 77	
458638	—	—	Magneto contact breaker cover ...	1	88, 99, 77	
470534	—	—	Magneto contact breaker ...	1	88, 99, 77	
104244	—	—	Magneto contact breaker cover nuts ...	2	88, 99, 77	
470609	—	—	Magneto contact breaker points ...	1 set	88, 99, 77	
						per set
455191	—	—	Brush spring and holder (magneto to earth) ...	1	88, 99, 77	
455190	—	—	Brush spring (magneto to earth) ...	1	88, 99, 77	
T2245	—	TA106	Crankcase T.S. to magneto, studs ...	3	88, 99, 77	
E3231	—	—	Crankcase T.S. to magneto, stud nuts ...	3	88, 99, 77	
11796	—	—	Crankcase T.S. to magneto, stud washers ...	3	88, 99, 77	
18464	—	—	Spark plug cover ...	2	88, 99, 77	
18465	—	—	Spark plug cover with suppressor ...	2	88, 99, 77	
20347	—	—	Magneto cut-out lead and button ...	1	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
OIL PUMP PARTS						
15522	D12/128	TA82	Oil pump assembly	1	88, 99, 77	
15511A	A2/129	TA85	Oil pump spindle nut	1	88, 99, 77	
T2077	D12/130	TA84	Oil pump spindle gear wheel	1	88, 99, 77	
17697	A2/131	—	Oil pump spindle gear wheel key	1	88, 99, 77	
15515	A2/132	TA81	Body and timing cover connection bush	1	88, 99, 77	
T272	D12/133	TA80	Body and timing cover connection bush washer	1	88, 99, 77	
T2076	D12/134	TA83	Mainshaft pump driving worm	1	88, 99, 77	
E4440	—	—	Pump crankcase studs	2	88, 99, 77	
E3231	—	—	Pump crankcase stud nuts	2	88, 99, 77	
E4590	—	—	Grub screw oil stop	1	88, 99, 77	

£ s. d.

VALVES, GUIDES, SPRINGS, ETC.


T2010	D12/142	—	Valve inlet	2	88, 99, 77	
T2204	D12/143	TA33	Valve exhaust	2	88, 99, 77	
T2011	K12/140	TA30	Valve guides	4	88, 99, 77	
T186	D12/148	TA32	Valve collars	4	88, 99, 77	
T2073	D12/147	TA28	Valve spring cups	4	88, 99, 77	
T187	D12/149	TA27	Valve cotters	4 pr.	88, 99, 77	
19302	K12/145	TA29	Valve springs (inner)	4	88, 99, 77	
19303	K12/146	TA31	Valve springs (outer)	4	88, 99, 77	
16339	H12/16339	—	Heat resisting washers	4	88, 99, 77	

CYLINDER HEAD, BARREL, STUDS AND NUTS

18244	H12/135	TA45	Cylinder barrel	1	88	
18743	L14/135	—	Cylinder barrel	1	99, 77	
50166	K12/136	TA44	Cylinder head	1	88, 99, 77	
T2141	D12/137	TA43	Cylinder head gasket	1	88, 99, 77	
T2093	D12/157	TA49	Cylinder base washer	1	88, 99, 77	
T2096	D12/972	TA36	Cylinder barrel and head bolts (long) ...	4	88, 99, 77	
T2097	D12/973	TA38	Cylinder barrel and head bolts (short)...	1	88, 99, 77	
E5376	D12/974	TA35	Cylinder barrel and head bolt washers ...	4	88, 99, 77	
T2161	D12/975	—	Cylinder head fixing studs	2	88, 99, 77	
T2017	D12/976	—	Cylinder head and barrel stud nuts $\frac{5}{16}$ " ...	2	88, 99, 77	
18756	K12/977	TA42	Cylinder head studs	3	88, 99, 77	
T2034	D12/978	—	Cylinder head stud nut (front)	2	88, 99, 77	
E3224	D12/979	—	Cylinder head stud nuts (rear)	1	88, 99, 77	
E5376	D12/974	—	Cylinder head stud washer	1	88, 99, 77	
20344	—	—	Carburetter to manifold studs	2	88, 99, 77	
E3231	—	—	Carburetter to manifold stud nuts	2	88, 99, 77	
T2221	—	—	Carburetter to manifold stud washers ...	2	88, 99, 77	
18242	D12/983	TA3	Cylinder head and carburetter manifold	1	88, 99, 77	
T2241	D12/984	—	Cylinder head and carburetter manifold fibre distance piece	1	88, 99, 77	
18380	K12/985	—	Studs, securing to manifold cyl. head ...	4	88, 99, 77	
T2220	D12/986	—	Securing manifold to cyl. head stud nuts	4	88, 99, 77	
T2224	D12/987	—	Securing manifold to cyl. head stud washers	4	88, 99, 77	

PISTONS AND RINGS

19785	—	TA54	Piston assembly, L.H.	1	88	
19786	—	TA56	Piston assembly, R.H.	1	88	
19406	L14/702LH	—	Piston assembly, L.H.	1	99, 77	
19407	L14/702RH	—	Piston assembly, R.H.	1	99, 77	
19789	D12/161	—	Piston ring (compression)	2	88	
L14/161	—	—	Piston ring (compression)	2	99, 77	
L14/162	—	—	Piston ring (scraper)	1	99, 77	
19790	D12/162	—	Piston ring (scraper)	1	88	
19791	D12/163	—	Gudgeon pin	1	88, 99, 77	
L14/164	—	—	Gudgeon pin circlip	4	88, 99, 77	

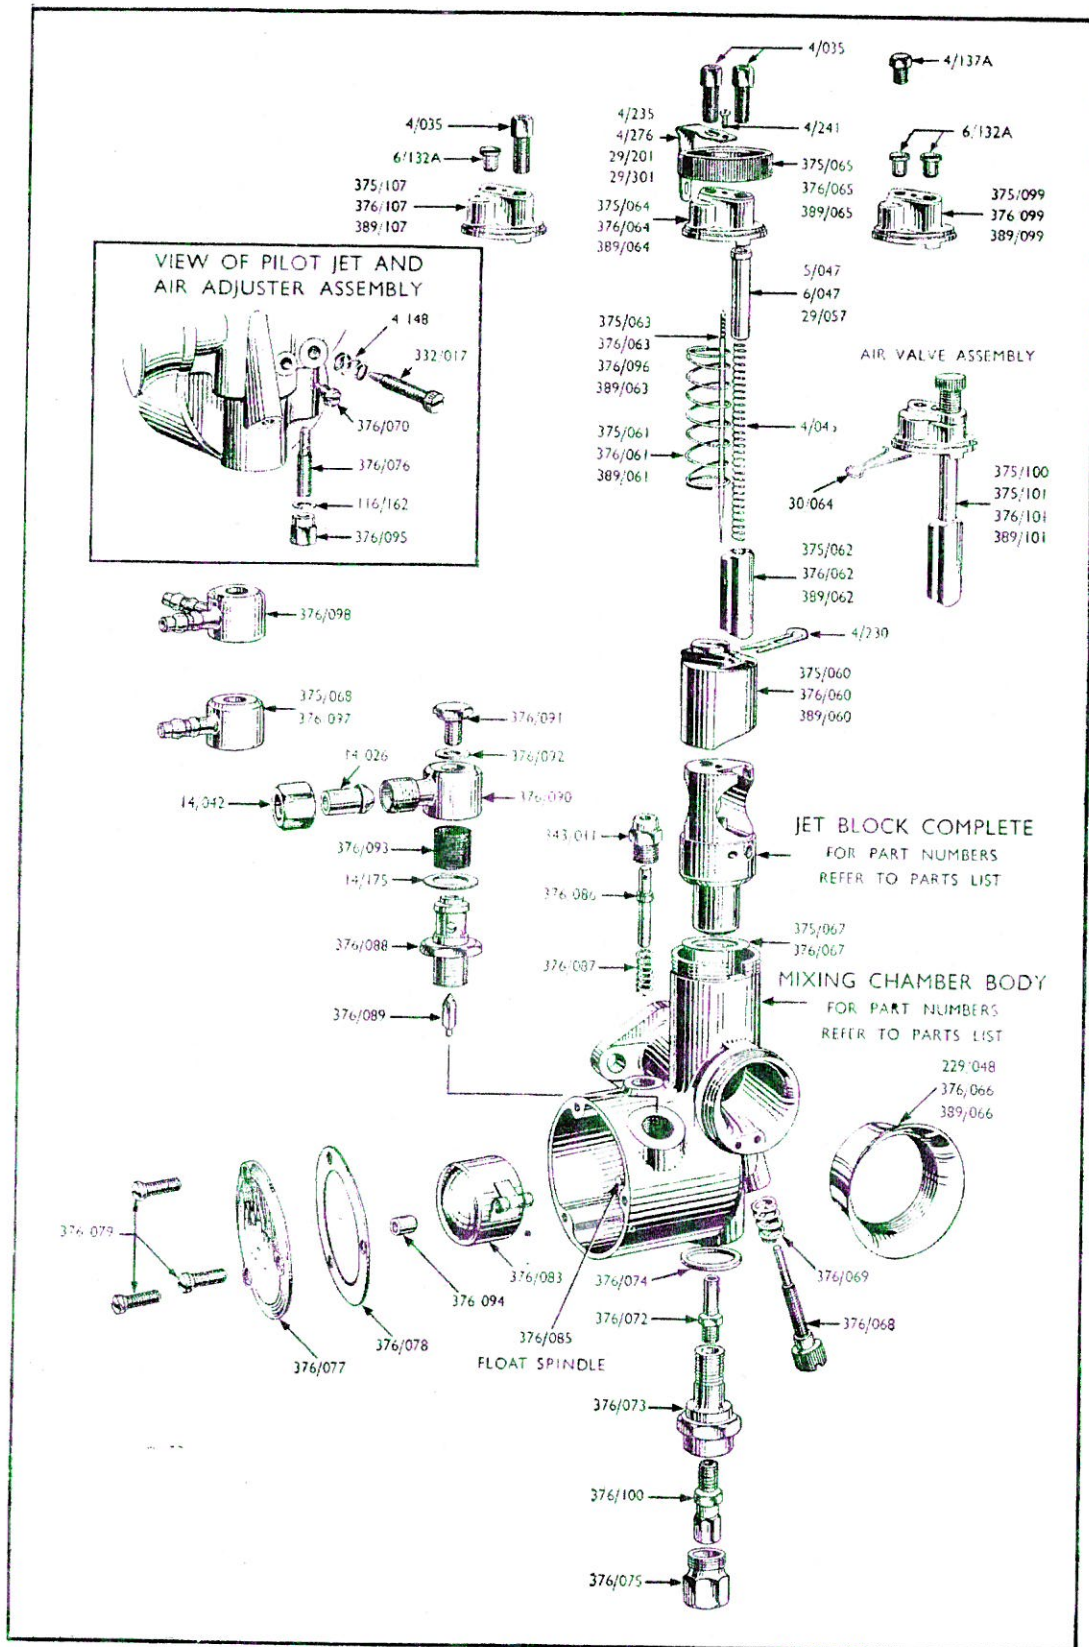

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
CONNECTING RODS AND BIG END BEARINGS						£ s. d.
50023	D12/158	TA57	Connecting rod with small end bush, big end bearing and bolts ...	2	88, 99, 77	
T2160	D12/159	—	Small end bush ...	2	88, 99, 77	
17828	D12/27	TA119	Big end bearing (2 halves) ...	2	88, 99, 77	
T2150	D12/989	TA63	Big end cap bolts ...	4	88, 99, 77	
T2152	D12/990	TA64	Big end cap bolt washers ...	4	88, 99, 77	
17827	—	TA65	Big end cap bolt nuts ...	4	88, 99, 77	

AMAL CARBURETTER (all prices RETAIL NETT)

376 66	—	—	Carburetter complete with cables less twist grip ...	1	88	
376 67	—	—	Carburetter complete with cables less twist grip ...	1	99, 77	
376 1 $\frac{1}{8}$ "	—	—	Mixing chamber body ...	1	99, 77	
376 1"	—	—	Mixing chamber body ...	1	88	
376 056	—	—	Jet block ...	1	88	
376 057	—	—	Jet block ...	1	99, 77	
376 070	—	—	Locating peg for jet block ...	1	88, 99, 77	
376 067	—	—	Washer ...	1	88, 99, 77	
376 064	—	—	Mixing chamber top ...	1	83, 99, 77	
376 065	—	—	Mixing chamber top cap ring ...	1	88, 99, 77	
4 235	—	—	Cap ring for top ...	1	83, 99, 77	
4 241	—	—	Fixing screw for cap spring ...	1	88, 99, 77	
4 035	—	—	Cable adjuster ...	1	88, 99, 77	
6 132A	—	—	Cable ferrule (top hat) ...	1	88, 99, 77	
4 137A	—	—	Plug screw ...	1	88, 99, 77	
376 060	—	—	Throttle valve ...	1	88, 99, 77	
376 061	—	—	Throttle valve spring ...	1	88, 99, 77	
376 063	—	—	Taper needle ...	1	88, 99, 77	
4 230	—	—	Taper needle clip ...	1	88, 99, 77	
376 062	—	—	Air valve ...	1	88, 99, 77	
6 047	—	—	Air valve guide ...	1	88, 99, 77	
4 046	—	—	Air valve spring ...	1	88, 99, 77	
376 101	—	—	Rod control air valve assembly ...	1	88, 99, 77	
30 064	—	—	Click spring for rod control air valve assembly ...	1	88, 99, 77	
376 072	—	—	Needle jet ...	1	88, 99, 77	
376 100	—	—	Main jet (specify size) ...	1	88, 99, 77	
376 073	—	—	Main jet holder ...	1	88, 99, 77	
376 074	—	—	Main jet holder washer ...	1	88, 99, 77	
376 075	—	—	Main jet cover nut ...	1	88, 99, 77	
376 076	—	—	Pilot jet ...	1	88, 99, 77	
376 095	—	—	Pilot jet cover nut ...	1	88, 99, 77	
116 162	—	—	Pilot jet cover nut washer ...	1	88, 99, 77	
332 017	—	—	Air adjusting screw ...	1	88, 99, 77	
4 148	—	—	Air adjusting screw spring ...	1	88, 99, 77	
376 068	—	—	Throttle stop screw ...	1	88, 99, 77	
376 069	—	—	Throttle stop screw spring ...	1	88, 99, 77	
376 066	—	—	Air intake tube ...	1	88, 99, 77	
376 083	—	—	Float complete ...	1	88, 99, 77	
376 085	—	—	Float hinge spindle ...	1	88, 99, 77	
376 094	—	—	Float spindle bush... ...	1	88, 99, 77	
376 089	—	—	Float needle ...	1	88, 99, 77	
376 088	—	—	Float needle seating ...	1	88, 99, 77	
14 175	—	—	Float needle seating washer ...	1	88, 99, 77	
376 097	—	—	Banjo single ...	1	88, 99, 77	
14 175	—	—	Banjo washer ...	1	88, 99, 77	
376 091	—	—	Banjo bolt ...	1	88, 99, 77	
376 092	—	—	Banjo bolt washer... ...	1	88, 99, 77	
376 086	—	—	Tickler ...	1	88, 99, 77	
343 011	—	—	Tickler body ...	1	88, 99, 77	
376 087	—	—	Tickler spring ...	1	88, 99, 77	
376 077	—	—	Float chamber cover ...	1	88, 99, 77	
376 078	—	—	Float chamber cover joint ...	1	88, 99, 77	
376 079	—	—	Float chamber cover screws ...	1	88, 99, 77	
376 093	—	—	Filter gauze ...	1	88, 99, 77	
20000	—	—	Carburetter sealing ring ...	1	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
EXHAUST PIPE, SILENCER AND FITTINGS						
£ s. d.						
19464	—	—	Exhaust pipe, L.H. ...	1	88	
19466	—	—	Exhaust pipe, L.H. ...	1	99	
20310	—	—	Exhaust pipe, L.H. ...	1	77	
19465	—	—	Exhaust pipe, R.H. ...	1	88	
19467	—	—	Exhaust pipe, R.H. ...	1	99	
20311	—	—	Exhaust pipe, R.H. ...	1	77	
18092	D12 167	—	Exhaust pipe locking ring ...	2	88, 99, 77	
T2166	D12 166	—	Exhaust pipe locking washer ...	2	88, 99, 77	
20110	—	—	Silencer, R.H. ...	1	88, 99, 77	
20111	—	—	Silencer, L.H. ...	1	88, 99, 77	
20064	—	—	Silencer fixing bracket, L.H. ...	1	88, 99	
19473	—	—	Silencer fixing bracket, R.H. ...	1	88, 99	
17075	—	—	Silencer fixing bolts ...	4	77	
E 5456	—	—	Silencer fixing bolt washers ...	4	77	
16255	H12 168	—	Silencer to exhaust pipe clips ...	2	88, 99, 77	
E3154	—	—	Silencer to exhaust pipe clip bolts ...	2	88, 99, 77	
E3231	—	—	Silencer to exhaust pipe clip bolt nuts ...	2	88, 99, 77	
20307	—	—	Silencer fixing brackets ...	2	77	

NORTON ROAD HOLDER FRONT FORKS AND FITTINGS

M12-2 170	—	—	Road-holder forks complete ...	1	88, 99	
M15 170	—	—	Road-holder forks complete ...	1	77	
18482	H12-2/605	—	Fork main tube ...	2	88, 99	
18467	B2/605	—	Fork main tube ...	2	77	
T1055	B2/606	MJ32	Fork main tube bottom bush ...	2	88, 99, 77	
T1048	B2/614	MJ35	Fork main tube top bush ...	2	88, 99, 77	
14298	E11M/1044	MJ90	Fork main tube circlips ...	2	88, 99	
19299	—	MJ92	Fork end (left-hand) ...	1	88, 99	
19310	—	MJ33	Fork end (left-hand) ...	1	77	
19298	—	—	Fork end (right-hand) ...	1	88, 99	
19309	—	—	Fork end (right-hand) ...	1	77	
16664	—	MJ42	Fork end hub spindle pinch stud ...	1	88, 99, 77	
13434	—	MJ43	Fork end hub spindle pinch stud nut ...	1	88, 99, 77	
T387	B2/612	MJ29	Fork end drain plug ...	2	88, 99, 77	
11775	B2/613	MJ38	Fork end drain plug washer ...	2	88, 99, 77	
T1090	B2/608	MJ34	Tab locking washers ...	2	77	
T1047	B2/607	MJ35	Main tube bush retaining washer ...	2	77	
17713	D3T 616	MJ29	Oil seals ...	2	88, 99, 77	
T1054	B2/615	—	Oil seal locking rings ...	2	77	
T1049	B2/617	MJ30	Oil seal paper washer ...	2	88, 99, 77	
50177	F11M 615	MJ91	Main tube lock ring with cup ...	2	88, 99	
18491	B2/625	MJ24	Bottom cover tubes ...	2	77	
19816	—	MJ25	Bottom cover tube screws ...	4	77	
18809	E2/620	MJ22	Fork spring ...	2	77	
18813	F11M2 620	MJ65	Fork spring ...	2	88, 99	
16880	—	—	Fork spring locating bushes ...	2	88, 99	
T595	B2/621	MJ27	Fork spring bottom leather washer ...	2	77	
T594	B2/619	MJ22	Fork spring top leather washer ...	2	77	
18490	B2/622	MJ19	Spring top cover tube ...	2	77	
19307	L12-2 622	MJ84	Spring top cover tube ...	2	88, 99	
T831	B2/623	MJ20	Spring top cover tube securing plate ...	2	88, 99	
T702	B2/624	MJ21	Spring top cover tube securing plate screws ...	6	88, 99	
13197	B2/627	MJ36	Oil damper pegs ...	2	77	
16001	F11M/627	MJ93	Oil damper tubes ...	2	88, 99	
15801	F11M/1049	MJ64	Oil damper rods ...	2	88, 99	
17075	C2/630	MJ40	Oil damper peg bolts ...	2	77	
14275	F11M2/630	—	Oil damper tube bolts ...	2	88, 99	
T814	B2/628	MJ37	Oil damper peg washers ...	2	88, 99, 77	
T1009	C2/629	MJ41	Oil damper peg bolt washer ...	2	88, 99, 77	
14119	E11M/1048	MJ86	Piston locating pegs ...	2	88, 99	
14118B	E11M/1046	MJ87	Oil damper valve cup ...	2	88, 99	
14117	E11M/1047	MJ88	Oil damper valve cup slotted ring ...	2	88, 99	
E3231	—	—	Oil damper rod bottom nuts ...	2	88, 99	
14605	E11M/1045	MJ85	Oil damper tube cap ...	2	88, 99	
E3224A	—	MJ60	Oil damper rod nuts (top) ...	2	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
NORTON ROAD HOLDER FRONT FORKS AND FITTINGS—cont.						£ s. d.
50259	—	MJ13	Crown lug complete with column ...	1	88, 99	
50001	B2/172	—	Crown lug complete with column ...	1	77	
13457	B2/642	MJ17	Pinch stud for crown lug ...	1	77	
16164	F11M2/642	—	Pinch stud for crown lug... ...	1	88, 99	
16187	F11M2/643	—	Pinch stud nuts ...	2	88, 99	
13459	B2/643	—	Pinch stud nuts ...	2	77	
15628	F11M2/644	MJ67	Fork head clip ball race cover ...	1	88, 99	
15630	F11M2/645	MJ58	Fork head race adjuster nut ...	1	88, 99	
19275	L12-2/635	MJ68	Top cover tube, complete with lamp bracket, L.H. ...	1	88, 99	
19276	L12-2/636	MJ56	Top cover tube, complete with lamp bracket, R.H. ...	1	88, 99	
19340	L4/635	MJ10	Top cover tube, complete with lamp bracket, L.H. ...	1	77	
19339	L4/636	MJ9	Top cover tube, complete with lamp bracket, R.H. ...	1	77	
15398	B2/637	MJ11	Top cover tube name plate ...	2	88, 99, 77	
T1081	B2/638	—	Top cover tube name plate rivets ...	4	77	
18810	—	—	Top cover tube name plate rivets ...	4	88, 99	per set
19272	—	—	Lamp bracket distance pieces ...	2	88, 99	per set
T597	F11M2/639	MJ61	Main tube top cover rubber ring ...	2	88, 99	
T1079	B2/639	—	Main tube top cover rubber ring ...	2	77	
T347	B2/207	MJ50	Steering damper friction washer ...	1	77	
T838	B2/206	MJ51	Steering damper anchor plate ...	1	77	
5002	B2/208	MJ52	Steering damper friction plate ...	1	77	
19537	—	—	Bolt for friction plate and cable clip ...	1	77	
19530	—	—	Cable clip for brake cable ...	1	77	
11796	—	—	Washer between cable clip and friction plate bolt ...	1	77	
12342	—	—	Bolt for anchor plate to frame ...	1	77	
E5379	—	—	Washer for anchor plate to frame bolt ...	1	77	
16725	—	MJ16	Headrace (bottom) ...	1	77	
T358	—	MJ15	Headrace (top) ...	1	77	
17714	A2/521	—	Headrace ball bearings (top or bottom)...	34	77	per set
14365	B2/644	—	Headrace cover ...	1	77	
T355	B2/645	—	Fork head race adjuster nut ...	1	77	
19015	L4/174	MJ7	Head clip ...	1	77	
T695	B2/646	—	Fork crown and column lock nut washer ...	1	77	
T352A	B2/205	—	Fork crown and column lock nut ...	1	77	
19019	L12-2/174	MJ59	Head clip ...	1	88, 99	
15627	—	—	Fork crown and column lock nut washer ...	1	88, 99	
19490	L12-2/205	—	Fork crown and column lock nut ...	1	88, 99	
T830	B2/203	MJ49	Steering damper rod ...	1	77	
E3231	B2/640	MJ48	Steering damper rod nuts ...	2	77	
E4563	B2/202	MJ47	Steering damper rod spring ...	1	77	
E4643	B2/201	MJ81	Steering damper adjuster ...	1	77	
T816	B2/633	MJ3	Fork main tube filler and retaining plug... ..	2	77	
16998	H12-2/633	MJ57	Fork main tube filler and retaining plug... ..	2	88, 99	
T320	B2/634	MJ54	Fork main tube filler and retaining plug washer ...	2	88, 99, 77	
18769	H12-2/206	MJ74	Front fork stop and anchor plate ...	1	88, 99	
16008	H12-2/207	MJ72	Front fork stop and anchor plate friction disc ...	1	88, 99	
12343	—	—	Front fork stop and anchor plate bolt ...	1	88, 99	
E3229	—	—	Front fork stop and anchor plate bolt nut ...	1	88, 99	
E5379	—	—	Front fork stop and anchor plate bolt washer ...	1	88, 99	
15686	—	—	Front fork stop and anchor plate distance piece ...	1	88, 99	
19021A	L4/175	MJ6	Caps for handlebar top clip ...	2	88, 99, 77	
19437	L4/176	MJ3	Handlebar top slip securing screws ...	4	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
HANDLEBARS AND FITTINGS						£ s. d.
19396	L4 211	—	Handlebar bend	1	77	
19405	L12-2 211	—	Handlebar bend	1	88, 99	
19410	—	—	Front brake lever and air control lever, complete	1	88, 99, 77	
19414	—	—	Throttle grip (plastic)	1	88, 99, 77	
20267	—	—	Dummy grip	1	88, 99, 77	
M122 216	—	—	Air lever complete	1	88, 99, 77	
M122 217	—	—	Air lever only	1	88, 99, 77	
M122 218	—	—	Air lever body	1	88, 99, 77	
M122 219	—	—	Air lever cap screw	1	88, 99, 77	
M122 220	—	—	Air lever cap	1	88, 99, 77	
A2 221	—	—	Air lever cap spring washer	1	88, 99, 77	
M122 223	—	—	Air lever clip screw	2	88, 99, 77	
M12-2 224	—	—	Front brake control lever, complete	1	88, 99, 77	
M12-2 225	—	—	Front brake control lever only	1	88, 99, 77	
M12-2 226	—	—	Clutch lever complete	1	88, 99, 77	
M12-2 227	—	—	Clutch lever only	1	88, 99, 77	
M12-2 228RH	—	—	Front brake lever body	1	88, 99, 77	
M122 226LH	—	—	Clutch lever body	1	88, 99, 77	
A2 222	—	—	Clutch lever body clip	1	88, 99, 77	
A2 223	—	—	Clutch lever body clip pins	2	88, 99, 77	
M122 229	—	—	Clutch or front brake lever pivot pin	2	88, 99, 77	
M122 230	—	—	Clutch or front brake pivot pin nut	2	88, 99, 77	
M12-2 238	—	—	Twist grip top half clip	1	88, 99, 77	
M12-2 239	—	—	Twist grip bottom half clip	1	88, 99, 77	
A2 240	—	—	Twist grip clip fixing pins	2	88, 99, 77	
M12-2 241	—	—	Twist grip control barrel	1	88, 99, 77	
A2 242	—	—	Twist grip control barrel adjusting screw	1	88, 99, 77	
A2 236	—	—	Twist grip control barrel adjuster nut	1	88, 99, 77	
M12-2 243	—	—	Twist grip control barrel adjuster spring	1	88, 99, 77	
M12-2 244	—	—	Twist grip cable stop	1	88, 99, 77	
M12-2 237	—	—	Twist grip complete	1	88, 99, 77	

CONTROL CABLE, ADJUSTERS AND NIPPLES

19828	—	—	Clutch cable	1	88, 99	
19827	—	—	Clutch cable	1	77	
A2 267	—	—	Clutch cable inner	1	77	
M12-2 267	—	—	Clutch cable inner	1	88, 99	
M12-2 266	—	—	Clutch cable outer	1	88, 99	
M15 266	—	—	Clutch cable outer	1	77	
20295	B2 268	—	Front brake cable inner and outer	1	88, 99, 77	
B2 270	—	—	Front brake cable inner	1	88, 99, 77	
B2 269	—	—	Front brake cable outer	1	88, 99, 77	
20276	—	—	Air control cable complete	1	88, 99, 77	
M12- 260	—	—	Air control cable inner	1	88, 99, 77	
M12-2 261	—	—	Air control cable outer	1	88, 99, 77	
20277	—	—	Throttle control cable complete	1	88, 99, 77	
18881	A2 247	—	Front brake cable adjuster	1	88, 99, 77	
18889	A2 248	—	Clutch cable adjuster	1	88, 99, 77	
A2 249	—	—	Air or throttle cable nipple (handlebar end)	1	88, 99, 77	
19987	A2 253	—	Clutch cable nipple (gear box end)	1	88, 99, 77	
14759	A2 709	—	Front brake U clip	1	88, 99, 77	
A2 427	—	—	Front brake U clip pin	1	88, 99, 77	
A2 195	—	—	Front brake U clip cotter pin	1	88, 99, 77	


PETROL TANK AND FITTINGS

200072	—	—	Petrol Tank	1	88, 99	
20154	—	—	Petrol tank	1	77	
18524	K12 280	—	Petrol Tank filler cap	1	88, 99, 77	
16256	H12-2 1070	—	Petrol Tank fixing strap	1	88, 99	
16238	H12-2 1071	—	Petrol tank fixing strap rubber	1	88, 99	
16372	H12-2 1072	—	Petrol tank fixing strap roller (front)	1	88, 99	
16257	H12-2 1073	—	Fulcrum pin for strap	1	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
PETROL TANK AND FITTINGS—cont.						£ s. d.
18291	A2 281	—	Fulcrum pin split pin	2	88, 99	
16365	H12-2/1074	—	Petrol tank strap roller (tool tray end)...	1	88, 99	
18747	—	—	Roller bracket	1	88, 99	
16413	—	—	Roller bracket pins	2	88, 99	
17013	—	—	Petrol tank strap roller fixing bolt ...	1	88, 99	
E5380	—	—	Petrol tank strap roller fixing bolt washer	2	88, 99	
E3223	—	—	Petrol tank strap roller fixing bolt nut ...	1	88, 99	
16237	H12-2 289	—	Petrol tank mounting rubbers	6	88, 99	
20262	—	—	Petrol tank side panels, L.H.	1	88, 99	
20261	—	—	Petrol tank side panels, R.H.	1	88, 99	
20231	—	—	Petrol tank side panel fixing screws ...	4	88, 99	
20233	—	—	Petrol tank side panel plastic bead ...	2	88, 99	
18727	L12-2/283	—	Petrol pipe complete	1	88, 99	
16294	H12-2/285	—	Petrol tap	1	88, 99	
13786	—	—	Petrol tap washer... ..	1	88, 99	
E5264	—	—	Petrol tap wash	1	88, 99	
E6745	A2 277	—	Petrol tank attachment bolt	4	77	
E6744	A2 276	—	Petrol tank platform rubber washer ...	4	77	
E6743	A2 278	—	Petrol tank attachment bolt rubber washer	4	77	
E6742	A2 279	—	Petrol tank attachment bolt rubber washer steel cup	4	77	
10914	A2 275	—	Petrol tank platform packing washer (steel)	4	77	
20197	—	—	Petrol tank side panel, L.H.	1	77	
20196	—	—	Petrol tank side panel, R.H.	1	77	
20231	—	—	Petrol tank side panel fixing pins ...	4	77	
20232	—	—	Petrol tank side panel plastic bead ...	2	77	
E3073	A2 289	—	Petrol tank top tube packing	2	77	
20309	—	—	Petrol pipe assembly	1	77	
19388A	—	—	Petrol pipe rubber (short)	1	77	
19388B	—	—	Petrol pipe rubber (long)	2	77	
19439	—	—	Petrol pipe T piece	1	77	
19325	L4 285	—	Petrol tap with filter and banjo ...	2	77	
18700	—	—	Petrol tap washer	2	77	
11208/3	L4 287	—	Nut for petrol tap	2	77	
18678	—	—	Petrol tank badge	2	88, 99, 77	
20230	—	—	Petrol tank badge screws	4	88, 99, 77	
18786	—	—	Petrol tank badge washers	4	88, 99, 77	
20222	—	—	Petrol tank knee grip, L.H.	1	88, 99, 77	
20223	—	—	Petrol tank knee grip, R.H.	1	88, 99, 77	

OIL TANK AND FITTINGS

19208E	—	—	Oil tank complete	1	88, 99	
20290	—	—	Oil tank complete	1	77	
18526	K12 291	—	Oil tank filler cap	1	88, 99, 77	
12342	—	—	Oil tank top fixing bolt	1	88, 99, 77	
E5379	—	—	Oil tank top fixing bolt washer ...	2	88, 99, 77	
17698	—	—	Oil tank to fixing bolt washer	1	88, 99	
E3229	—	—	Oil tank top fixing bolt nut	1	88, 99	
19678	—	—	Oil tank fixing bolt	1	77	
E5456	—	—	Oil tank fixing bolt washer	1	77	
E6453	—	—	Oil tank bottom fixing studs	2	88, 99, 77	
E3223	—	—	Oil tank bottom fixing stud nuts ...	2	88, 99, 77	
14867	E2 1050	—	Oil tank bottom fixing plate	1	77	
19201	L12-2 1075	—	Oil tank and battery box platform ...	1	88, 99	
19212	L12 1076	—	Oil tank and battery box platform rubber mat	1	88, 99	
14481	—	—	Oil tank platform fixing bolts	4	88, 99	
E3229	—	—	Oil tank platform fixing bolt nuts ...	4	88, 99	
E5379	—	—	Oil tank platform fixing bolt washers ...	8	88, 99	
17014	L12-2/298	—	Oil tank breather pipe	1	88, 99, 77	
19380	L4 1055	—	Oil tank return pipe adapter	1	88, 99, 77	
13786	E3 1056	—	Oil tank return pipe adapter washers ...	2	88, 99, 77	
13765	—	—	Oil tank drain plug	1	88, 99, 77	

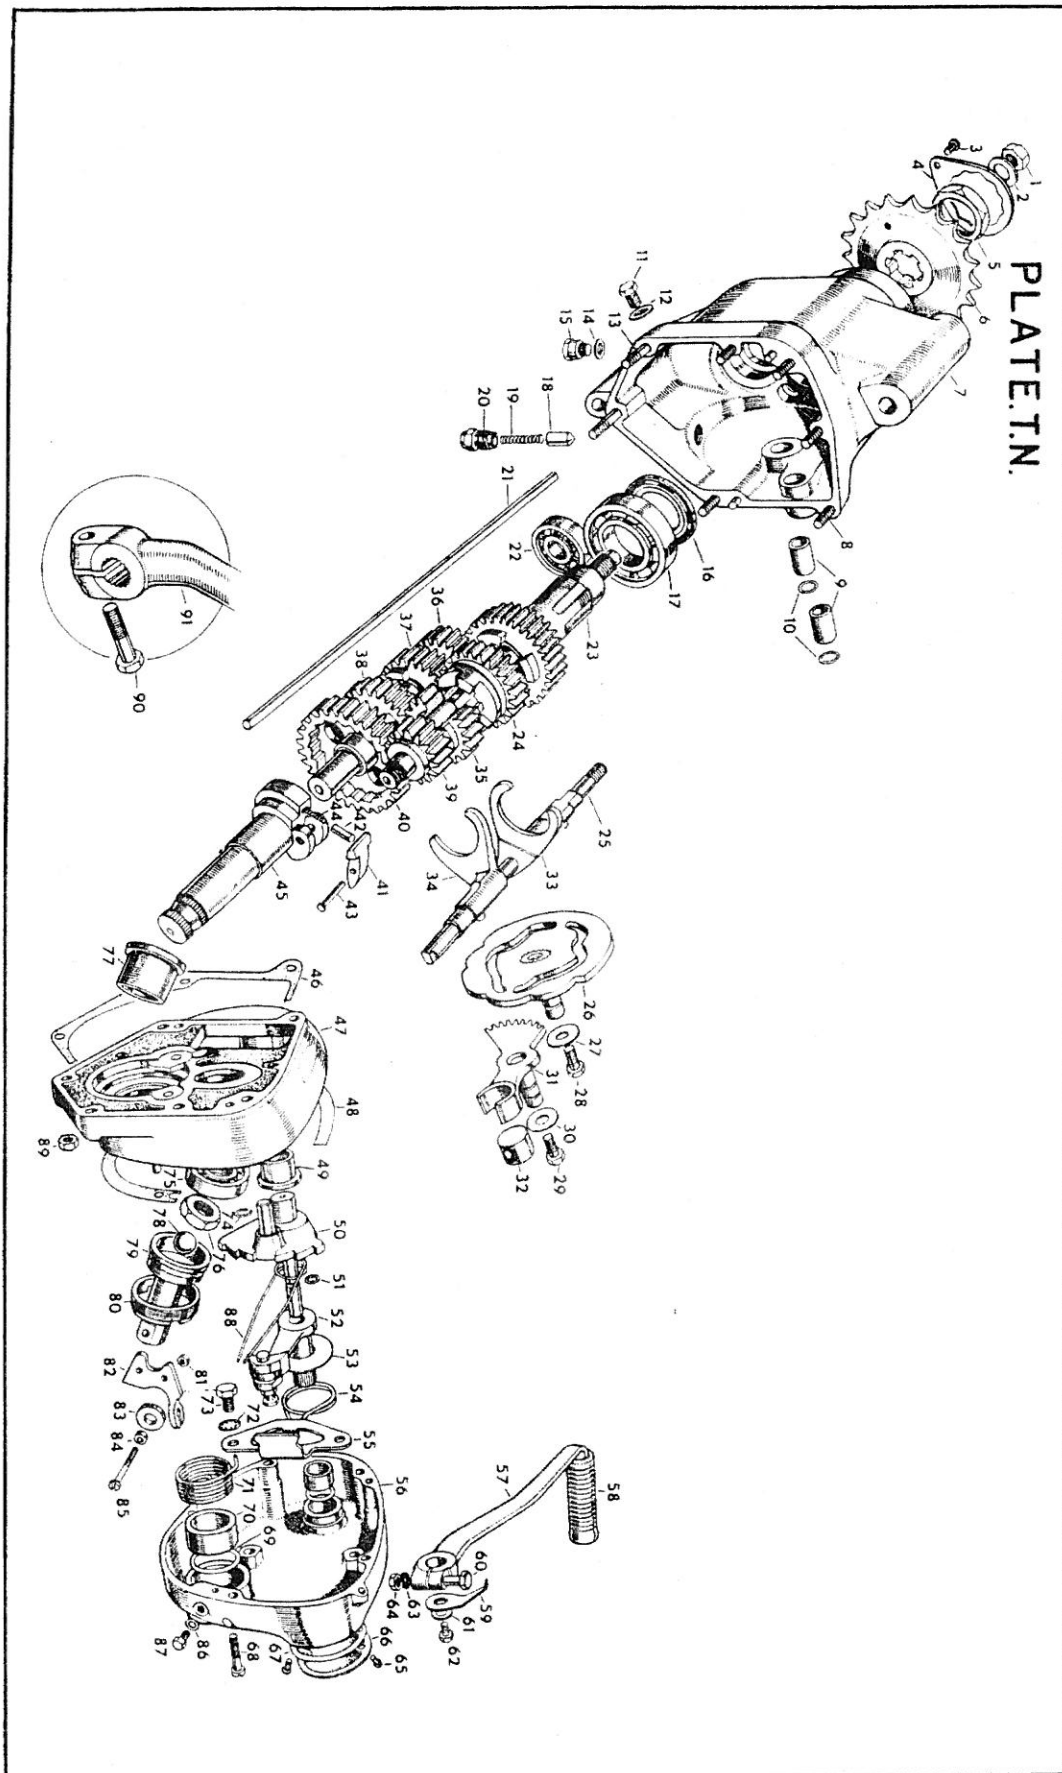

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
OIL TANK AND FITTINGS—cont.						
13833	—	—	Oil tank drain plug washer ...	1	88, 99, 77	£ s. d.
19379	L4292	—	Oil tank filter union with gauze ...	1	88, 99, 77	
E6640	A2 293	—	Oil tank filter union washer ...	1	88, 99, 77	

OIL PIPES AND FITTINGS

20316	—	—	Junction box with oil pipes ...	1	77	
19457	D12/993	—	Junction box with oil pipes ...	1	88, 99	
T2100	D12/995	—	Junction box washer ...	1	88, 99, 77	
T2106	D12/994	—	Junction box dowel ...	1	88, 99, 77	
T2006	—	—	Junction box stud ...	1	88, 99, 77	
E5377	D12/997	—	Junction box stud washer ...	1	88, 99, 77	
T2101	D12/996	—	Junction box stud nut ...	1	88, 99, 77	
19542	L4 295/6	—	Oil pipes, feed and return ...	2	88, 99, 77	
19425	L12-2/699	TA12	Rocker box oil feed pipe...	1	88, 99	
18716	—	—	Rocker box oil feed pipe...	1	77	
18101	D12/700	TA13	Rocker box banjo bolts ...	2	88, 99, 77	
T1084	D12 701	TA11	Rocker box banjo bolt washers ...	4	88, 99, 77	

GEARBOX SHELL

040097	—	TN7	Gearbox shell assembly ...	1	88, 99, 77	
040056	—	—	Gearbox bush ...	2	88, 99, 77	
000577	—	—	Gearbox dowel pins ...	2	88, 99, 77	
040064	—	TN8	Gearbox studs (short) ...	2	88, 99, 77	
000271	—	TN13	Gearbox studs (long) ...	5	88, 99, 77	
000004	—	—	Gearbox stud nuts ...	7	88, 99, 77	
040030	—	TN46	Gearbox shell gasket ...	1	88, 99, 77	
040403	—	TN47	Gearbox inner cover ...	1	88, 99, 77	
040072	—	TN77	Gearbox inner cover K/S ...	1	88, 99, 77	
040042	—	—	Gearbox inner cover K/S stop ...	1	88, 99, 77	
040071	—	—	Gearbox inner cover K/S cam ...	1	88, 99, 77	
040041	—	—	Kickstarter cam and stop rivets...	2	88, 99, 77	
040061	—	TN49	Inner bush for gear change ...	1	88, 99, 77	
000577	—	—	Dowel pins... ...	2	88, 99, 77	
040063	—	—	Bush for gear change ...	1	88, 99, 77	
040058	—	TN70	Bush for kickstarter ...	1	88, 99, 77	
040133	—	TN56	Gearbox outer cover ...	1	88, 99, 77	
040055	—	TN48	Outer cover gasket ...	1	88, 99, 77	
000482	—	—	Outer cover screws ...	5	88, 99, 77	
040138	—	TN11	Drain plug ...	1	88, 99, 77	
000200	—	TN12	Drain plug washer ...	1	88, 99, 77	
040053	—	TN66	Inspection cover ...	1	88, 99, 77	
040057	—	TN67	Inspection cover washer ...	1	88, 99, 77	
000450	—	TN65	Inspection cover pins ...	2	88, 99, 77	
000348	—	TN87	Oil level plug ...	1	88, 99, 77	
000203	—	TN86	Oil level plug washer ...	1	88, 99, 77	

GEARBOX FIXING BOLTS

14367	D12/310	MJ25	Gearbox top bolt ...	1	88, 99, 77	
15170	D12/313	MJ17	Gearbox top bolt nut ...	1	88, 99, 77	
16410	H12-2/312	—	Gearbox bottom stud less nut ...	1	88, 99	
18495	A2/312	—	Gearbox bottom bolt less nut ...	1	77	
E4533	A2 311	—	Gearbox bottom bolt nut ...	1	77	
11809	—	MJ28	Gearbox bottom bolt washer ...	1	88, 99, 77	
E3227	—	MJ27	Gearbox bottom bolt nut ...	1	88, 99	

GEARBOX FRONT CHAIN ADJUSTER

H2/314	—	MJ16	Gearbox front chain adjuster eye bolt and nut ...	1	88, 99, 77	
E3231	—	MJ18	Gearbox front chain adjuster nuts ...	2	88, 99, 77	
16997	H2/1008	—	Gearbox front chain adjuster bolt only...	1	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
GEARBOX PINIONS, SHAFTS AND BEARINGS						£ s. d.
040128	—	—	Gearbox complete less clutch ...	1	88, 99, 77	
040098	—	TN17	Ballrace, mainshaft (large) ...	1	88, 99, 77	
040099	—	TN75	Ballrace, mainshaft (small) ...	1	88, 99, 77	
040100	—	TN22	Ballrace, layshaft ...	1	88, 99, 77	
040131	—	—	Axle sprocket spacer ...	1	88, 99, 77	
040132	—	TN16	Sleeve gear oil seal ...	1	88, 99, 77	
040116	—	TN23	Sleeve gear assembly ...	1	88, 99, 77	
040062	—	—	Sleeve gear bushes ...	2	88, 99, 77	
040010	—	TN6	Axle sprocket ...	1	88, 99, 77	
040076	—	TN4	Axle sprocket locking plate ...	1	88, 99, 77	
000450	—	TN3	Axle sprocket locking plate screw ...	1	88, 99, 77	
040070	—	TN1	Axle sprocket nut ...	1	88, 99, 77	
040108	—	TN26	Cam plate assembly ...	1	88, 99, 77	
040018	—	—	Cam plate bare ...	1	88, 99, 77	
040015	—	—	Cam plate spindle ...	1	88, 99, 77	
040109	—	TN31	Quadrant assembly ...	1	88, 99, 77	
040129	—	—	Quadrant O ring ...	1	88, 99, 77	
000174	—	TN27	Washer for cam and quadrant ...	2	88, 99, 77	
040136	—	TN28-30	Screw for cam and quadrant ...	2	88, 99, 77	
040022	—	TN34	Selector fork ...	2	88, 99, 77	
040035	—	TN23	Selector fork shaft ...	1	88, 99, 77	
040001	—	—	Mainshaft ...	1	88, 99, 77	
040023	—	TN74	Mainshaft nut ...	1	88, 99, 77	
040012	—	TN24	Mainshaft, 3rd gear ...	1	88, 99, 77	
040021	—	TN35	Mainshaft, 2nd gear ...	1	88, 99, 77	
040048	—	—	Mainshaft, 2nd gear bush ...	1	88, 99, 77	
040026	—	TN39	Mainshaft, bottom gear ...	1	88, 99, 77	
040025	—	—	Layshaft ...	1	88, 99, 77	
040020	—	TN36	Layshaft pinion ...	1	88, 99, 77	
040016	—	TN37	Layshaft, 3rd gear ...	1	88, 99, 77	
040047	—	—	Layshaft, 3rd gear bush ...	1	88, 99, 77	
040019	—	TN38	Layshaft, 2nd gear ...	1	88, 99, 77	
040115	—	TN40	Layshaft, bottom gear ...	1	88, 99, 77	
040046	—	—	Layshaft, bottom gear bush ...	1	88, 99, 77	
040078	—	TN32	Roller for knuckle pin ...	1	88, 99, 77	
040036	—	TN20	Index plunger bush ...	1	88, 99, 77	
040045	—	TN19	Index plunger spring ...	1	88, 99, 77	
040034	—	TN18	Index plunger ...	1	88, 99, 77	


KICKSTARTER PARTS

040114	—	TN45	Kickstarter axle assembly ...	1	88, 99, 77	
040032	—	TN77	Kickstarter axle assembly bush ...	1	88, 99, 77	
040017	—	TN41	Kickstarter pawl ...	1	88, 99, 77	
040033	—	TN43	Kickstarter pawl pin ...	1	88, 99, 77	
040044	—	TN44	Kickstarter pawl spring ...	1	88, 99, 77	
040069	—	TN42	Kickstarter pawl plunger ...	1	88, 99, 77	
040269	—	—	Kickstarter crank, folding type ...	1	88, 99, 77	
041315	—	—	Pedal for folding kickstarter crank ...	1	88, 99, 77	
041817	—	—	Securing bolt for pedal ...	1	88, 99, 77	
041318	—	—	Spring for folding pedal ...	1	88, 99, 77	
040101	—	TN91	Kickstarter crank ...	1	88, 99, 77	
040102	—	TN90	Kickstarter crank bolt ...	1	88, 99, 77	
040043	—	TN71	Kickstarter return spring ...	1	88, 99, 77	
040005	—	TN69	Kickstarter O ring ...	1	88, 99, 77	
N8C81	—	—	Kickstarter rubber ...	1	88, 99, 77	

POSITIVE FOOTCHANGE

040004	—	TN57	Footchange lever ...	1	88, 99, 77	
040086	—	TN58	Footchange lever rubber ...	1	88, 99, 77	
040105	—	TN60	Footchange lever bolt ...	1	88, 99, 77	
000191	—	TN63	Footchange lever bolt washer ...	1	88, 99, 77	
000005	—	TN64	Footchange lever bolt nut ...	1	88, 99, 77	
040051	—	TN59	Footchange gear indicator ...	1	88, 99, 77	
040137	—	TN62	Footchange gear indicator screw ...	1	88, 99, 77	
000012	—	TN61	Footchange gear indicator washer ...	1	88, 99, 77	
040111	—	TN50	Footchange ratchet plate with spindle ...	1	88, 99, 77	

PLATE M Q

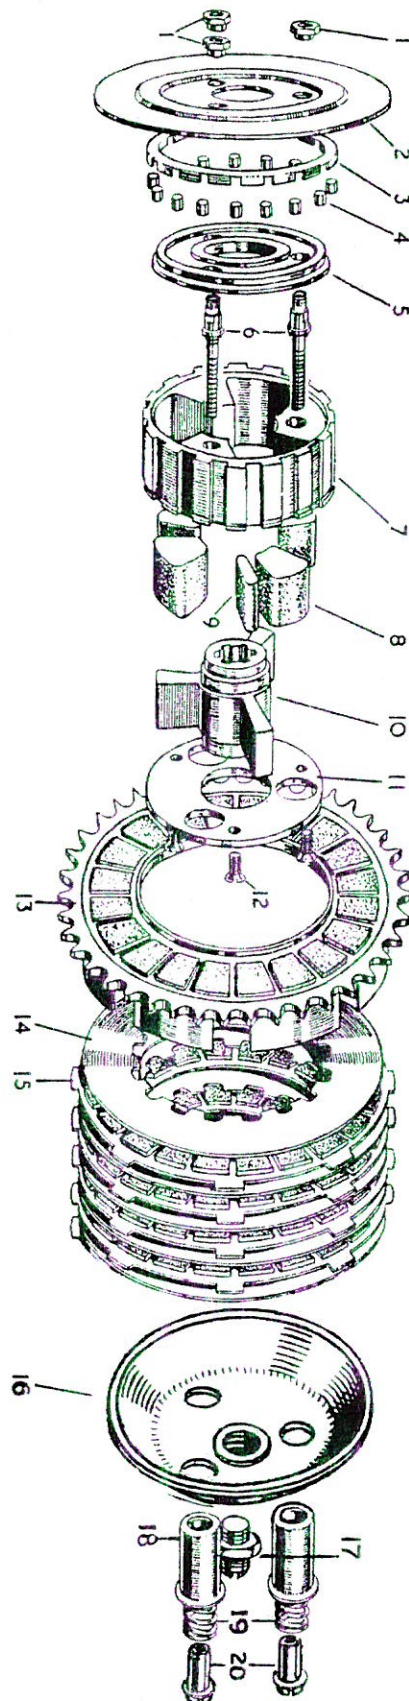

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
POSITIVE FOOTCHANGE—cont.						£ s. d.
040066	—	—	Footchange ratchet plate spindle ...	1	88, 99, 77	
040052	—	TN55	Footchange stop plate ...	1	88, 99, 77	
041400	—	TN73	Footchange stop plate screw ...	2	88, 99, 77	
014117	—	TN72	Footchange stop plate spring washer ...	2	88, 99, 77	
040079	—	—	O ring for ratchet spindle ...	1	88, 99, 77	
04006	—	—	O ring for footchange ...	1	88, 99, 77	
040038	—	TN88	Footchange pawl return spring ...	1	88, 99, 77	
040110	—	TN52	Footchange pawl carrier assembly ...	1	88, 99, 77	
040002	—	—	Footchange pawl carrier only ...	1	88, 99, 77	
040024	—	—	Footchange pawl ...	1	88, 99, 77	
040067	—	—	Footchange pawl carrier pin ...	1	88, 99, 77	
040049	—	—	Footchange pawl circlip ...	1	88, 99, 77	
040075	—	TN54	Footchange pawl return spring ...	1	88, 99, 77	
040135	—	TN53	Footchange pawl return spring washer ...	1	88, 99, 77	
040061	—	—	Footchange inner bush ...	1	88, 99, 77	

CLUTCH

040390	—	—	Clutch complete ...	1	88, 99, 77	
040031	—	TN78	Clutch operating ball ...	1	88, 99, 77	
040059	—	TN79	Clutch operating body ...	1	88, 99, 77	
040003	—	TN80	Clutch operating body locking ring ...	1	88, 99, 77	
040029	—	TN82	Clutch operating lever ...	1	88, 99, 77	
040060	—	TN83	Clutch operating roller ...	1	88, 99, 77	
040065	—	TN84	Clutch roller sleeve ...	1	88, 99, 77	
000457	—	TN85	Clutch roller screw (2BA) ...	1	88, 99, 77	
011846	—	TN81	Clutch roller screw nut ...	1	88, 99, 77	
040084	—	TN.21	Clutch rod ...	1	88, 99, 77	
040353	—	MQ2	Clutch back plate ...	1	88, 99, 77	
040367	A2 382	MQ3	Clutch roller cage ...	1	88, 99, 77	
000075	A2 383	MQ4	Clutch rollers (15 per set) ...	1 set	88, 99, 77	
040351	—	MQ5	Clutch race plate ...	1	88, 99, 77	
040384	—	MQ6	Clutch spring stud ...	3	88, 99, 77	
040356	A2 402	MQ1	Clutch spring stud nut ...	3	88, 99, 77	
040366	—	MQ7	Clutch body only ...	1	88, 99, 77	
040386	A2 388	MQ8	Clutch shock absorber rubbers (large) ...	3	88, 99, 77	
040387	A2 389	MQ9	Clutch shock absorber rubbers (small) ...	3	88, 99, 77	
040362	—	MQ11	Clutch shock absorber cover plate ...	1	88, 99, 77	
040363	—	MQ12	Clutch shock absorber cover plate pins ...	3	88, 99, 77	
040354	—	MQ10	Clutch body centre ...	1	88, 99, 77	
040392	—	MQ13	Clutch sprocket and inserts ...	1	88, 99, 77	
040371	—	—	Clutch sprocket inserts (thick) ...	18	88, 99, 77	
					per doz.	
040391	—	MQ15	Clutch friction plate and inserts ...	4	88, 99, 77	
040370	—	—	Clutch friction plate inserts (thin) ...	80	88, 99, 77	
					per doz.	
040355	—	MQ14	Clutch plate (plain) ...	4	88, 99, 77	
040365	—	MQ16	Clutch pressure plate ...	1	88, 99, 77	
040360	—	MQ7	Clutch adjuster ...	1	88, 99, 77	
040376	—	—	Clutch adjuster lock nut ...	1	88, 99, 00	
040388	—	MQ18	Clutch spring cup ...	3	88, 99, 77	
040385	—	MQ19	Clutch spring ...	3	88, 99, 77	
040389	—	MQ20	Clutch spring adjuster nut ...	3	88, 99, 77	
040373	E6254	—	Main axle nut ...	1	88, 99, 77	
040374	E6266	—	Main axle nut washer ...	1	88, 99, 77	

FRONT WHEEL AND FITTINGS

M12-2/714	—	—	Front wheel complete with bearings and brake less tyre ...	1	88, 99	
K12-2/714	—	—	Front wheel complete with bearings and brake less tyre ...	1	77	
K12-2/428	—	—	Front wheel with hub shell only ...	1	77	
M12-2/428	—	—	Front wheel with hub shell only ...	1	88, 99	
13716	—	KR21	Front wheel hub shell with brake drum ...	1	77	
19664	—	—	Front wheel hub shell with brake drum ...	1	88, 99	
18214	—	—	Front wheel brake drum to hub studs ...	3	77	
E6183	—	KR19	Front wheel brake drum to hub stud nuts ...	3	77	



PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
FRONT WHEEL AND FITTINGS—cont.						£ s. d.
16783	J2/441	KR23	Front wheel hub bearing distance piece...	1	88, 99, 77	
E6888	A2/440	KR24	Front wheel hub bearing locking ring ...	1	88, 99, 77	
19719	—	KR15	Front wheel hub bearing oil retaining washer	1	88, 99, 77	
19646	—	KR18	Front wheel hub bearing distance tube ...	1	88, 99 ...	
50036	C2/656	—	Front wheel hub bearing distance tube...	1	77	
18551	K12-2/442	KR25	Front wheel hub bearing dust cap ...	1	88, 99, 77	
20249	B2/452	KR26	Front wheel hub spindle	1	88, 99, 77	
E4768	B2/454	KR3	Front wheel hub spindle nut	1	88, 99, 77	
50257	—	KR2	Front wheel brake plate	1	88, 99	
50127	J2/457	—	Front wheel brake plate	1	77	
50249	—	—	Front wheel brake shoe cam and washer	1	88, 99	
50121	J2/448F	—	Front wheel brake shoe cam and washer	1	77	
19653	—	KR7	Front wheel brake plate pivot pin ...	1	88, 99, 77	
13079	B2/658	KR1	Front wheel brake plate pivot pin nut...	1	88, 99, 77	
20052	—	KR4	Front wheel brake cam lever	1	88, 99	
16781	J2/459	—	Front wheel brake cam lever	1	77	
E3255	—	—	Front wheel brake cam lever pin ...	1	88, 99, 77	
18942	—	—	Front wheel brake cam lever nut ...	1	88, 99, 77	
E5455	—	—	Front wheel brake cam lever pin washer	1	88, 99, 77	
17735	A2/195	—	Front wheel brake cam lever split cotter	1	88, 99, 77	
E5944A	—	—	Front wheel brake plate packing washer	1	88, 99, 77	

PARTS COMMON TO FRONT AND REAR HUBS

17719	A2/435	KR22	Hub bearing (nearside front, offside rear)	2	88, 99, 77 nett
17721	A2/436	KR17	Hub bearing (offside front, nearside rear)	2	88, 99, 77 nett
E6885	A2/437	KR16	Hub bearing felt washer	4	88, 99, 77
E6889	A2/438	KR15	Hub bearing pen steel washer	2	88, 99, 77
E5832	A2/445	KR14	Brake shoe return spring	4	88, 99, 77
14454	—	KR11	Brake shoe pivot pin retaining plate ...	2	88, 99, 77
14506	—	KR12	Brake shoe pivot pin retaining plate tab washer	2	88, 99, 77
14455	—	KR13	Brake plate bolts	2	88, 99, 77

BRAKE SHOE LININGS AND SHOES

18502	T2/443F	KR8	Hub brake shoe and linings (front) ...	2	88, 99, 77
19584	H2/443R	KR39	Hub brake shoe and linings (rear) ...	2	88, 99, 77
16547	H2/444R	KR40	Hub brake shoes linings (R)	1 pr.	88, 99, 77 per pair nett
16782	J2/444F	KR10	Hub brake shoe linings (F)	1 pr.	88, 99, 77 per pair nett
E5061	A2/445	KR9	Hub brake shoe lining rivets (per set 14)	2 set	88, 99, 77 per set

REAR WHEEL AND FITTINGS

M12-2/715	—	—	Rear wheel complete with bearings and brakes less tyre	1	88, 99, 77
M12-2/649	—	—	Rear wheel with hub shell only ...	1	88, 99, 77
19689	—	KR46	Rear hub only	1	88, 99, 77
18348	—	KR48	Rear hub diaphragm	1	88, 99, 77
18396	—	KR49	Rear hub diaphragm drive screws ...	3	88, 99, 77
18731A	—	KR52	Rear hub rubber grommets	3	88, 99, 77
50245	—	KR42	Rear hub brake drum with studs 43T ...	1	88, 99, 77
18233	K12-2/451	KR51	Rear hub brake drum stud sleeve nuts ...	3	88, 99, 77
18234	K12-2/441	KR47	Rear hub bearing distance piece ...	1	88, 99, 77
18232	K12-2/440	KR50	Rear hub bearing locking ring	1	88, 99, 77
19714	—	KR45	Rear hub felt washer cup retaining washer	1	88, 99, 77
18231	K12-2/434	KR32	Rear hub inner sleeve	1	88, 99, 77
E4760	K12-2/464	KR43	Rear hub brake drum attachment piece...	1	88, 99, 77
13270	B2/660	KR53	Speedometer drive distance piece ...	1	88, 99, 77
18235	K122/461	KR54	Hub spindle distance piece	1	88, 99, 77
19265	A2/460	KR33	Hub spindle	1	88, 99, 77
19266	B2/659	KR28	Hub spindle washers	2	88, 99, 77
19267	A2/454	KR29	Hub spindle nut	1	88, 99, 77

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
REAR WHEEL AND FITTINGS—cont.						£ s. d.
19852	—	KR38	Rear brake plate	1	88, 99	
50069	A2 462	—	Rear brake plate	1	77	
50011	—	KR41	Rear brake shoe cam with washer	1	88, 99, 77	
18338	—	—	Rear brake drum stud locating	1	88, 99, 77	
18339	—	—	Rear brake drum stud non-locating	2	88, 99, 77	
13684	H12 470	KR35	Brake lever return spring	1	77	
18177	H12 469	KR34	Brake cam lever	1	77	
19765	—	—	Brake cam lever	1	88, 99	
E5455	—	KR6	Brake cam lever washer	1	88, 99, 77	
18942	—	KR5	Brake cam lever nut	1	88, 99, 77	
19268	A2 465	KR36	Brake plate distance piece	1	88, 99, 77	
15704	A2 466	—	Rear brake torque arm	1	77	
15703	—	—	Bolt to frame	1	77	
E3224A	—	—	Nut to plate	1	77	
E5375	—	—	Washer	1	77	
18923	—	—	Nut	1	77	
T5276	—	—	Brake plate washers	AR	88, 99, 77	

WHEEL RIMS AND SPOKES

18350	K12-2 432	—	Wheel Rim	2	88, 99, 77	
20063	—	—	Spokes (long head) (per set)	20	88, 99, 77	
20061	—	—	Spokes (short head) (per set)	20	88, 99, 77	per set
17717	A2 431	—	Nipples (per set)	40	88, 99, 77	per set
17724	—	—	Security Bolts (rear)	1	88, 99	per set

FRONT CHAINCASE AND FITTINGS

20224A	—	—	Front chaincase inner, complete	1	77	
19655	—	—	Front chaincase inner, complete	1	88, 99	
15639	H12 485	—	Front chaincase outer	1	88, 99, 77	
14855	D12 492	—	Crankcase spigot washer	1	88, 99, 77	
E6354	—	—	Crankcase to chaincase bolt	1	88, 99, 77	
E6202	A2 490	—	Chaincase locking washer	1	88, 99, 77	
14371	D12 491	—	Chaincase support stud	1	77	
E3231	—	—	Chaincase support stud nut	1	77	
E3223	—	—	Chaincase support stud nut	1	77	
E5456	—	—	Chaincase support stud washer	1	77	
10914	A2 275	—	Chaincase support stud washer	1	88, 99, 77	
13185	A2 486	—	Chaincase sealing washer	1	88, 99, 77	
E6207	A2 494	—	Chaincase footrest tube felt washer	1	88, 99, 77	
E3336	—	—	Chaincase oil drain plug	1	88, 99, 77	
E5264	—	—	Chaincase oil drain plug washer	1	88, 99, 77	
14837	A2 487	—	Chaincase inspection cover	1	88, 99, 77	
E6085	A2 488	—	Chaincase inspection cover washer	1	88, 99, 77	
E6055	A2 495	MZ47	Chaincase attachment nut	1	88, 99, 77	
E6056	A2 496	MZ46	Chaincase attachment nut washer	1	88, 99, 77	

REAR CHAINGUARD AND FITTINGS

19846	—	—	Rear chainguard	1	88, 99	
16810	H12 497	—	Rear chainguard	1	77	
12342	—	—	Rear chainguard front fixing bolts	2	88, 99	
12342	—	—	Rear chainguard front fixing bolt	1	77	
E5379	—	—	Rear chainguard front fixing bolt washers	4	88, 99	
E5379	—	—	Rear chainguard front fixing bolt washers	2	77	
E3229	—	—	Rear chainguard front fixing bolt nut	1	77	
E3229	—	—	Rear chainguard front fixing bolt nuts	2	88, 99	
15817	—	—	Rear chainguard rear fixing bolt	1	88, 99, 77	
E5379	—	—	Rear chainguard rear fixing bolt washers	2	88, 99, 77	
E3229	—	—	Rear chainguard rear fixing bolt nut	1	88, 99, 77	
15186	—	—	Rear chainguard distance piece	1	88, 99	
16879	—	—	Rear chainguard distance piece	1	77	
18285	—	—	Rear chainguard grommet	1	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
REAR BRAKE PEDAL AND FITTINGS						£ s. d.
19995	—	MZ62	Rear brake pedal	1	88, 99	
20308	—	—	Rear brake pedal	1	77	
19996	—	MZ69	Rear brake pedal spindle... ..	1	88, 99	
14374	D12/502	—	Rear brake pedal spindle... ..	1	77	
E5456	—	—	Rear brake pedal spindle washer	1	77	
E3223	—	—	Rear brake pedal spindle nut	1	77	
15820	H12/504	MZ66	Rear brake pedal jaw joint	1	77	
E3227	—	MZ67	Rear brake spindle nut	1	88, 99	
11809	—	MZ68	Rear brake spindle washer	1	88, 99	
19997	—	—	Rear brake spindle distance piece	1	88, 99	
19976	—	MZ74	Rear brake spindle stop	1	88, 99	
E3808	—	MZ72	Rear brake pedal adjusting screw	1	77	
13145	—	—	Rear brake pedal adjusting screw lock nut	1	77	
19929	—	—	Rear brake pedal return spring	1	88, 99	
19978	—	MZ63	Rear brake pedal grease nipple	1	88, 99	
17727	A2/500	—	Rear brake pedal grease nipple	1	77	
18929	—	—	Rear brake lever roller	1	88, 99, 77	
15819	H12-2/503	MZ73	Rear brake rod	1	88, 99	
16847	H12/503	—	Rear brake rod	1	77	
20134	—	MZ66	Rear brake rod jaw joint assembly	1	88, 99	
E3255	—	MZ64	Rear brake rod jaw joint pin	1	88, 99	
17043	H12/506	—	Rear brake rod jaw joint pin	1	77	
17735	A2/195	MZ65	Rear brake rod jaw joint split pin	1	88, 99, 77	
15821	H12/505	MZ75	Rear brake rod adjuster	1	88, 99, 77	

FOOTRESTS AND FITTINGS

18772	D12/513RH	MZ52	Footrest hanger right-hand	1	88, 99, 77	
18149	A2/513LH	MZ16	Footrest hanger left-hand	1	88, 99, 77	
19984	—	—	Footrest hanger spindle	2	88, 99, 77	
19983	—	MZ24	Footrest rubber	2	88, 99, 77	
15641	—	—	Distance piece	1	88, 99	
E5377	—	MZ40	Footrest rod washer	2	88, 99, 77	
E3238	—	MZ51	Footrest rod plain nut	1	88, 99, 77	
E3220	—	MZ39	Footrest rod domed nut	1	88, 99, 77	
14366	D12/510	MZ38	Footrest rod	1	88, 99, 77	
18268	H12-2/1078	MZ50	Footrest tube serrated end, right-hand	1	88, 99	
15640	H12-2/1077	MZ49	Footrest tube serrated end, left-hand	1	88, 99	

PILLION FOOTRESTS

H12/584	—	—	Pillion footrest complete (per pair)	1	88, 99, 77	
18254	H12/1086	MZ54	Pillion footrest bar	1	88, 99, 77	
16244	H12/1087	MZ57	Pillion footrest lug	1	88, 99, 77	
16841	—	—	Pillion footrest and silencer fixing studs	2	77	
16842	—	—	Pillion footrest and silencer fixing stud, L.H.	1	88, 99	
16246	—	—	Pillion footrest and silencer fixing stud, R.H.	1	88, 99	
16248	—	MZ55	Pillion footrest bar pins	2	88, 99, 77	
16250	—	—	Pillion footrest bar pin spring washers	2	88, 99, 77	
E5376	—	MZ59	Pillion footrest lug fixing washers	2	88, 99, 77	
E3224	—	MZ60	Pillion footrest lug fixing nuts	2	88, 99, 77	
16249	M12/583	MZ53	Pillion footrest rubbers	2	88, 99, 77	
16247	—	—	Pillion footrest bar pin lock nuts... ..	2	88, 99, 77	

ENGINE PLATES

16816A	—	—	Rear engine plate R.H. with footrest tube	1	77	
14854A	—	—	Rear engine plate L.H. with footrest tube	1	77	
50229	L12-2/517	MZ22	Rear engine plate R.H.	1	88, 99	
19177	L12-2/516	MZ24	Rear engine plate L.H.	1	88, 99	
19100	—	—	Rear engine plate cover	1	88, 99	
15621	H12-2/522	MZ6	Front engine plates	2	88, 99	
14341	D12/522	—	Front engine plates	2	77	
19255	H12-2/491	—	Centre stand spring anchor stud	1	88, 99	
E5456	—	—	Centre stand spring anchor stud washer	1	88, 99	
E3223	—	—	Centre stand spring anchor stud nut	1	88, 99	
E6354	—	—	Rear engine plate bolt R.H.	1	88, 99	
E5456	—	—	Rear engine plate bolt washer R.H.	1	88, 99	
E3223	—	—	Rear engine plate bolt nut R.H.	1	88, 99	



PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
-------------	-------------------	--------------	-------------	------	-------	---------------

ENGINE SPROCKETS

£ s. d.

T2180D	D12/473/20T	TA129	Engine sprocket 20T	1	88	
T2180E	D12/473/21T	—	Engine sprocket 21T	1	99, 77	
E3682	A2/474	—	Engine sprocket key	1	88, 99, 77	
E4210	—	TA130	Engine sprocket nut	1	88, 99, 77	

FRONT AND REAR CHAINS

18265	—	—	Front chain 75L	1	88	nett
17835	—	—	Front chain 76L	1	99	nett
17730	—	—	Front chain 77L	1	77	nett
17729	—	—	Rear chain 90L	1	77	nett
18095	—	—	Rear chain 98L	1	88	nett
18563	—	—	Rear chain 97L	1	99	nett
A2/480	—	—	Front chain crank link	1	88, 99, 77	nett
A2/479	—	—	Front chain spring link	1	88, 99, 77	nett
A2/481	—	—	Rear chain spring link	1	88, 99, 77	nett
A2/482	—	—	Rear chain crank link	1	88, 99, 77	nett

REAR CHAIN ADJUSTERS

19264	—	—	Fork end rear wheel adjuster	2	88, 99, 77	
E3229	—	—	Fork end rear wheel adjuster lock nuts...	2	88, 99, 77	

FRAME

20060	—	MZ2	Frame complete	1	88, 99	
20237	—	—	Frame complete	1	77	
17727	A2/500	—	Frame head lug grease nipple	1	77	
E3744	—	—	Frame head race bearings	2	77	
18263	125AC	—	Frame head lug bearings (top and bottom)	2	88, 99	nett
15631	—	—	Frame head lug bearing felt washers ...	2	88, 99	
17429	—	—	Frame head lug bearing washers	2	88, 99	
16825	H12/1091	—	Frame bridge piece assembly	1	77	
17075	—	—	Frame bridge piece fixing screws	2	77	
15893	—	MZ21	Rod for rear engine cross tube	1	88, 99	
E5377	—	MZ20	Rear engine cross tube rod washers ...	2	88, 99	
13459	—	MZ19	Rear engine cross tube rod nuts	2	88, 99	
15844	H12-2/1091	MZ23	Rear mudguard and engine plate support tube	1	88, 99	
19351	—	—	Fork lock stop bolt	2	77	
16247	—	—	Fork lock stop bolt nut	1	77	

SWINGING ARM AND FITTINGS

L12-2/1088	—	MZ72	Swinging arm with bushes and bolt ...	1	88, 99	
M15/1088	—	—	Swinging arm with bushes and bolt ...	1	77	
20083	—	MZ82	Swinging arm silent bloc bearing	2	88, 99, 77	
20126	—	—	Gusset plate cover	1	88, 99	
15894	—	MZ81	Swinging arm rod	1	88, 99	
16809	—	—	Swinging arm rod	1	77	
11809	—	MZ79	Swinging arm rod washer	2	88, 99	
11809	—	—	Swinging arm rod washer	1	77	
16840	—	—	Swinging arm rod nut	1	77	
15356	—	MZ78	Swinging arm rod nut	2	88, 99	
18578	H12-2/1090	—	Silent bloc bearing spacer tube	1	88, 99	
16790	H12/1090	—	Silent bloc bearing spacer tube	1	77	

REAR SUSPENSION

20184	—	MZ98	Rear shock absorber units	2	88, 99, 77	nett
18704	—	MZ101	Rear shock absorber bolts	2	88, 99, 77	
11796	—	—	Rear shock absorber bolt washers ...	4	88, 99, 77	
E3223	—	MZ100	Rear shock absorber bolt nuts	2	77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
REAR SUSPENSION—cont.						£ s d.
19421	—	—	Rear shock absorber and mudguard fixing bolts	2	77	
19504	—	MZ85	Rear shock absorber and mudguard fixing bolts	2	88, 99	
18537	—	MZ84	Rear shock absorber and mudguard fixing distance piece	2	88, 99	
19420	—	—	Rear shock absorber and mudguard fixing distance piece	2	77	
E5456	—	MZ87	Rear shock absorber and mudguard fixing bolt washers	2	88, 99, 77	
E3223	—	MZ86	Rear shock absorber and mudguard fixing bolt nuts	2	88, 99, 77	
CENTRE STAND AND FITTINGS						
17175	H12-2/524	MZ37	Centre stand complete	1	88, 99	
16813	H12/524	—	Centre stand complete	1	77	
11466	—	—	Centre stand bolts	2	77	
16763	—	MZ35	Centre stand bolts	2	88, 99	
16764	—	MZ36	Centre stand bolt nuts	2	88, 99	
16411	H12-2/527	MZ26	Centre stand spring	1	88, 99	
16937	H2 527	—	Centre stand spring	1	77	
14392	H12/1082	—	Centre stand spring slip	1	88, 99, 77	
E3135	—	—	Centre stand spring clip bolt	1	88, 99, 77	
E3223	—	—	Centre stand spring clip bolt nut	1	88, 99, 77	
E5456	—	—	Centre stand spring clip bolt washer	2	88, 99, 77	
17591	—	—	Centre stand rubber stop	1	88, 99	
E5278	—	—	Centre stand rubber stop pin	1	88, 99	
SIDE PROP STAND AND FITTINGS						
18750	H12-2/1014	MZ23	Side prop stand	1	88, 99	
14791	H12/1014	—	Side prop stand	1	77	
18275	—	MZ30	Side prop stand clip lug front	1	88, 99	
18605	—	MZ32	Side prop stand clip lug rear	1	88, 99	
16373	—	MZ31	Side prop stand clip lug and spring fixing stud	1	88, 99	
16374	—	—	Side prop stand clip lug fixing stud	1	88, 99	
16174	—	—	Side prop stand leg fulcrum pin	1	88, 99	
16176	H12-2/1015	MZ34	Side prop stand spring	1	88, 99	
11824	—	—	Side prop stand clip lug and spring fixing stud nut	1	88, 99	
E3224	—	—	Side prop stand clip lug stud nut	1	88, 99	
14783	E2/1015	—	Side prop stand spring	1	77	
E6706	—	—	Side prop stand head bolt	1	77	
12079	—	—	Side prop stand head bolt lock nut	1	77	
50071	—	—	Side prop stand fixing plate	1	77	
FRONT MUDGUARD STAYS AND FITTINGS						
19286	L4/529	—	Front mudguard complete with number plate stanchions and brake cable guide	1	77	
19362	L12-2/529	—	Front mudguard complete with number plate stanchions and brake cable guide	1	88, 99	
19291	L12/530	—	Front mudguard stays	4	88, 99	
19287	L4/530	—	Front mudguard stays	2	77	
19285	L4/544	—	Front stand	1	77	
E3262	—	—	Front stand fixing stud	1	77	
E3223	—	—	Front stand fixing stud nut	1	77	
E5456	—	—	Front stand fixing stud washer	2	77	
E3218	—	—	Front stand nut	1	77	
19283	L4/680	—	Front mudguard centre stay	1	77	
19282	L12-2/680	—	Front mudguard centre stay	1	88, 99	
18710	—	—	Front mudguard stay bolts	4	88, 99	
18710	—	—	Front mudguard stay bolts	2	77	
18711	—	—	Front mudguard stay bolt washers	2	77	
18711	—	—	Front mudguard stay bolt washers	4	88, 99	
E5379	—	—	Front mudguard stay bolt washers	4	88, 99	
E5379	—	—	Front mudguard stay bolt washers	2	77	
13192	—	—	Front mudguard stay bolt packing washer	2	77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
FRONT MUDGUARD, STAYS AND FITTINGS—cont.						£ s. d.
13192	—	—	Front mudguard stay bolt packing washer	4	88, 99	
E3229	—	—	Front mudguard stay bolt nuts	4	88, 99	
E3229	—	—	Front mudguard stay bolt nuts	2	77	
18854	—	—	Front mudguard stay bolts (fork end)	2	77	
18854	—	—	Front mudguard stay bolts (fork end)	4	88, 99	
11940	—	—	Front stand bolt	2	77	
11796	—	—	Front stand bolt washers	4	88, 99, 77	
18709	—	—	Front mudguard centre stay bolts	2	88, 99, 77	
18711	—	—	Front mudguard centre stay bolt washer	2	88, 99, 77	
E5379	—	—	Front mudguard centre stay bolt washer	2	88, 99, 77	
11796	—	—	Front mudguard centre stay bolt washer	2	88, 99, 77	
E3229	—	—	Front mudguard centre stay bolt nuts	4	88, 99, 77	
T1085	—	—	Front mudguard centre stay studs (fork end)	4	88, 99, 77	
E5379	—	—	Front mudguard centre stay stud washers	4	88, 99, 77	
E3229	—	—	Front mudguard centre stay stud nuts	4	88, 99, 77	

REAR MUDGUARD AND FITTINGS

19363	—	—	Rear mudguard complete	1	77	
20159	L12-2 534	—	Rear mudguard complete	1	88, 99	
19361R	—	—	Rear mudguard tail portion	1	77, 88, 99	
20159F	—	—	Rear mudguard front portion	1	88, 99	
19363F	—	—	Rear mudguard front portion	1	77	
19486	L12-2 536L	—	Rear mudguard lifting handle L.H.	1	88, 99	
19484	L4 536LH	—	Rear mudguard lifting handle L.H.	1	77	
19485	L4 536RH	—	Rear mudguard lifting handle R.H.	1	77	
19487	L12-2 536R	—	Rear mudguard lifting handle R.H.	1	88, 99	
19432	—	—	Lifting handle and rear portion fixing bolts	3	88, 99, 77	
19433	—	—	Lifting handle and rear portion fixing bolt washers	3	88, 99, 77	
19434	—	—	Lifting handle to mudguard fixing bolts	2	88, 99, 77	
19435	—	—	Lifting handle to mudguard fixing bolt washers	2	88, 99, 77	
E3229	—	—	Lifting handle to mudguard fixing bolt nuts	2	88, 99, 77	
12342	—	—	Mudguard bottom fixing bolts	2	88, 99, 77	
E3229	—	—	Mudguard bottom fixing bolt nuts	2	88, 99, 77	
E5379	—	—	Mudguard bottom fixing bolt nut washers	2	88, 99, 77	
19429	—	—	Rubber grommets for mudguard	2	88, 99, 77	
14490	—	—	Clip for tail and stop light lead	1	88, 99, 77	

NUMBER PLATES

18706	K12 531	—	Front number plate	1	88, 99, 77	
18755	—	—	Front number plate rubber	1	88, 99, 77	
18708	—	—	Front number plate stanchion	2	88, 99, 77	
E3229	—	—	Front number plate stanchion nuts	2	88, 99, 77	
E5379	—	—	Front number plate stanchion washers	2	88, 99, 77	
18712	—	—	Front number plate fixing screws	2	88, 99, 77	
13053	—	—	Rear number plate fixing studs	2	88, 99, 77	
11796	—	—	Rear number plate fixing stud washers	2	88, 99, 77	
E3231	—	—	Rear number plate fixing stud nuts	2	88, 99, 77	
19343	L4 532	—	Rear number plate with cuff	1	88, 99, 77	
20965	—	—	Rear number plate plastic bead	1	88, 99, 77	

TAIL AND STOP LIGHT

53432B	—	—	Tail lamp and stop light with reflector	1	88, 99, 77	nett
573839	—	—	Stop and tail lamp lens	1	88, 99, 77	nett
575200	—	—	Stop and tail lamp window	1	88, 99, 77	nett
575219	—	—	Lens fixing nuts	2	88, 99, 77	nett
166014	—	—	Stop and tail lamp fixing nuts	2	88, 99, 77	nett

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
TAIL AND STOP LIGHT—cont.						
188327	—	—	Stop and tail lamp fixing nut washers ...	2	88, 99, 77	£ s. d.
20165	—	—	Stop lamp switch ...	1	88, 99	nett
17749	—	—	Stop lamp switch ...	1	77	nett
17008	—	—	Stop lamp switch bracket ...	1	77	nett
20129	—	—	Stop lamp switch bracket ...	1	88, 99	
E5278	—	—	Stop lamp switch fixing pins ...	2	88, 99, 77	
17904	—	—	Stop lamp switch fixing washers ...	2	88, 99, 77	
E3221	—	—	Stop lamp switch fixing nuts ...	2	88, 99, 77	
17005	—	—	Stop lamp switch spring ...	1	77	
19580	—	—	Stop lamp brake switch lead ...	1	77	nett
20248	—	—	Stop lamp brake switch lead ...	1	88, 99	nett
19582	—	—	Tail lamp extension lead ...	1	88, 99, 77	nett

HEADLAMP AND FITTINGS (all prices RETAIL NETT)

51954A	—	—	Head lamp complete ...	1	88, 99	
51876B	—	—	Head lamp complete ...	1	77	
36084F	—	—	Ammeter ...	1	88, 99, 77	
31626A	—	—	Switch ...	1	88, 99	
31340A	—	—	Switch ...	1	77	
351788	—	—	Switch handle ...	1	88, 99	
351567	—	—	Switch handle ...	1	77	
105751	—	—	Switch handle screw ...	1	88, 99	
101893	—	—	Switch handle screw ...	1	77	
516798	—	—	Light unit ...	1	88, 99, 77	
553248	—	—	Headlamp rim ...	1	88, 99, 77	
31563A	—	—	Dipper and horn switch ...	1	88, 99, 77	
18733	—	—	Dipper switch rubber ...	1	88, 99, 77	
18734	—	—	Dipper switch fixing screws ...	2	88, 99, 77	
112201	—	—	Headlamp fixing bolts ...	2	88, 99, 77	
137141	—	—	Headlamp fixing bolt washers ...	2	88, 99, 77	
517079	—	—	Headlamp panel ...	1	77	
106491	—	—	Headlamp panel fixing screws ...	3	77	
185026	—	—	Headlamp panel screw washers (3 in set)	1 set	77 per set	

BATTERY (price RETAIL NETT)

4084107	—	—	Battery ...	1	88, 99, 77	
---------	---	---	-------------	---	------------	--

TOOL BOX, TOOL TRAY AND FITTINGS

19281	L4 538	—	Tool box and battery box complete ...	1	77	
19190	L12-2/586	—	Battery box body complete ...	1	88, 99	
19189	—	—	Tool box and battery box lid ...	1	88, 99	
19241	—	—	Tool box and battery box lid ...	1	77	
20069A	—	—	Tool tray complete ...	1	88, 99	
19195	—	—	Tool box and battery box lid knob ...	2	88, 99	
19290	L4 539	—	Tool box and battery box lid knob ...	1	77	
E4764	—	—	Tool box and battery box lid knob circlip	1	77	
11796	—	—	Tool box and battery box lid knob washers ...	2	88, 99	
17735	—	—	Tool box and battery box lid knob split pin ...	2	88, 99	
19289	—	—	Battery box support bracket ...	1	77	
19086	—	—	Platform for battery ...	1	88, 99	
19093	—	—	Battery fixing U bolt ...	1	88, 99	
19249	—	—	Battery fixing U bolt ...	1	77	
19248	—	—	Battery fixing retaining strap ...	1	77	
19101	—	—	Battery fixing retaining strap ...	1	88, 99	
E3221	—	—	U bolt nuts ...	2	88, 99, 77	
17707	—	—	U bolt washers (spring) ...	2	88, 99, 77	
15689	—	—	Toolbox and battery box rubber grom-mets ...	2	88, 99, 77	
14481	—	—	Battery box top fixing bolt ...	1	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
-------------	-------------------	--------------	-------------	------	-------	---------------

TOOL BOX, TOOL TRAY AND FITTINGS—cont.

£ s. d.

E5379	—	—	Battery box top fixing bolt washer ...	3	88, 99	
E3229	—	—	Battery box top fixing bolt nuts ...	1	88, 99	
13053	—	—	Tool box top fixing stud ...	1	77	
E5456	—	—	Tool box top fixing stud washer ...	1	77	
E3223	—	—	Tool box top fixing stud nut ...	1	77	
18709	—	—	Tool box and battery box fixing bolt ...	1	77	
18711	—	—	Tool box and battery box fixing bolt washers ...	1	77	
E5379	—	—	Tool box and battery box fixing bolt washers ...	2	77	
E3229	—	—	Tool box and battery box fixing bolt nut ...	1	77	
19092	—	—	Tool box and battery box fixing bolt ...	1	77	
19092	—	—	Tool box and battery box fixing bolt ...	2	88, 99	
E5456	—	—	Tool box and battery box fixing bolt washers ...	2	88, 99, 77	
12342	—	—	Tooltray fixing bolts ...	4	88, 99	
E5379	—	—	Tooltray fixing bolt washers ...	8	88, 99	
E3229	—	—	Tooltray fixing bolt nuts ...	4	88, 99	

VOLTAGE CONTROL AND FITTINGS

37127M	—	—	Voltage control unit ...	1	88, 99, 77	nett
19991	—	—	Voltage control unit waterproof cover...	1	77	
12342	—	—	Voltage control unit fixing bolts ...	2	88, 99, 77	
E5379	—	—	Voltage control unit fixing bolt washers ...	2	88, 99, 77	
E3229	—	—	Voltage control unit fixing bolt nuts ...	2	88, 99, 77	

DUAL SEAT AND FITTINGS

19445	L4/540	—	Dual seat complete ...	1	77	
20123	H12-2/540	—	Dual seat complete ...	1	88, 99	
16765	—	—	Seat fixing wing nuts ...	2	88, 99	
8052	—	—	Seat fixing wing nut washers ...	2	88, 99	
18538	—	—	Seat sorbo strip ...	2	88, 99	
15857	—	—	Seat fixing strap rubber grommets ...	2	88, 99	
13053	—	—	Seat front fixing studs ...	2	77	
E5456	—	—	Seat front fixing stud washers ...	2	77	
E3223	—	—	Seat front fixing stud nuts ...	2	77	
19488	—	—	Seat rubber ...	2	77	

ELECTRIC HORN AND FITTINGS

70140A	—	—	Electric horn ...	1	88, 99, 77	nett
E3229	—	—	Electric horn fixing bolt nuts ...	2	88, 99	
E5379	—	—	Electric horn fixing bolt nut washers ...	2	88, 99	
20155	—	—	Electric horn fixing plate tapped ...	1	77	

SPEEDOMETER AND FITTINGS (all prices RETAIL NETT)

19364	L4/545	—	Speedometer head (120 m.p.h.) ...	1	88, 99, 77	
19367	L4/552	—	Speedometer cable complete ...	1	88, 99, 77	
L4/554	—	—	Speedometer cable inner ...	1	88, 99, 77	
L4/553	—	—	Speedometer cable outer ...	1	88, 99, 77	
19366	L4/564	—	Speedometer gearbox ...	1	88, 99, 77	

TOOL KIT

M15/563	—	—	Tool kit complete ...	1	77	
D12/563	—	—	Tool kit complete with tools ...	1	88, 99	
SPU1/49	B2/684	—	Headlug bearing and filler cap spanner ...	1	88, 99	
SPU1/30	B2/682	—	Fork column lock nut spanner ...	1	77	
SPU2/22	—	—	Fork filler plug and head adjuster nut spanner ...	1	77	
DWU/01	A2/567	—	Screw driver ...	1	88, 99, 77	
SPU2/02	A2/565	—	$\frac{1}{4}$ " x $\frac{3}{16}$ " spanner ...	2	77	
SPU2/02	A2/565	—	$\frac{1}{4}$ " x $\frac{3}{16}$ " spanner ...	1	88, 99	
SHU/29	A3/579	—	Exhaust pipe spanner ...	1	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
TOOL KIT cont.						
LTU/07	A2/573	—	Tyre levers...	2	88, 99, 77	£ s. d.
SBU2/88	—	—	Sparking plug spanner	1	88, 99, 77	
SBU2/76	—	—	$\frac{7}{16}$ " x $\frac{1}{2}$ " Box spanner	1	88, 99, 77	
TBU/01	A2/581	—	Tommy bar $\frac{5}{16}$ " x $6\frac{1}{2}$ "	1	88, 99, 77	
TBU/47	—	—	Tommy bar $\frac{7}{16}$ " x 8"	1	88, 99, 77	
SPU2/20	D12/568	—	Rocker adjuster spanner	1	88, 99, 77	
SPU2/04	A2/566	—	$\frac{5}{16}$ " x $\frac{3}{8}$ " open ended spanner	1	88, 99, 77	
SPU1/01	A2/578	—	Cable adjuster spanner	1	88, 99, 77	
19438	—	—	Allen key	1	88, 99, 77	
18672	—	—	Magneto spanner	1	88, 99, 77	
17756	—	—	Tyre inflator	1	77	
18240	—	—	Tyre inflator	1	88, 99	
18976	—	—	Shock absorber adjusting spanner	1	88, 99, 77	
20648	—	—	Box spanner for rear wheel nuts	1	88, 99, 77	
13685	B2/685	—	Fork pull through	1	88, 99, 77	

CABLE CLIPS

19091	—	—	Cable clip (size C) (speedo cable to frame)	1	88, 99
19091	—	—	Cable clip (size C) (speedo cable to frame)	4	77
17752	—	—	Cable clip (size S) (stop lamp and tail lamp leads to frame)	12	88, 99
19090	—	—	Cable clip (size F) (throttle, air and clutch cables to frame)	2	88, 99
19090	—	—	Cable clip (size F) (throttle, air and clutch cables to frame)	2	77
18489	—	—	Cable clip (size D) (throttle and air cables, handlebar end)	1	88, 99

TRANSFERS

17773	A2 868	—	Oil tank transfer (minium oil level)	1	88, 99, 77
17731	A2 867	—	Oil bath transfer	1	88, 99, 77
19958	—	—	Rear mudguard transfer	1	88
19559	—	—	Rear mudguard transfer	1	99
20293	—	—	Rear mudguard transfer	1	77
17755	—	—	Petrol tank panel transfer	1	77

AIR CLEANER AND FITTINGS

19667	—	—	Air cleaner	1	88, 99,
18684	K12-2, 1058	—	Air cleaner	1	77
19518	—	—	Air cleaner connecting hose	1	88, 99
19729	—	—	Air cleaner fixing clips	1	88, 99
18484	—	—	Air cleaner fixing clip	1	77
E3229	—	—	Air cleaner pin nuts	2	88, 99
E5379	—	—	Air cleaner pin nut washers	2	88, 99
18483	—	—	Air cleaner carburettor sleeve	1	77

LAPEL BADGES (this price RETAIL NETT)

341	—	—	Lapel badge	1	
-----	---	---	-------------	---	--

ENAMEL (this price RETAIL NETT)

Polychromatic Grey Touch-up Applicator 1

All prices subject to 15% increase unless stated as Nett

Please note we reserve the right to alter the above prices or specification of any parts at any time without notice.

British Only

MOTORCYCLES AND PARTS INC.

32451 PARK LANE

GARDEN CITY, MI 48135 USA

PHONE ORDER HOURS:

MONDAY THRU FRIDAY 10-6 EST

Fax or email 24 hours a day!

RETAIL: 734-421-0303
WHOLESALE: 734-525-1980
FAX: 734-422-9253
EMAIL: info@britishonly.com
WEBSITE: www.britishonly.com

THE BIGGEST!

ENGINE REBUILDING PARTS
GASKETS-SEALS-BEARINGS
BUSHINGS-PISTONS-RINGS
CLUTCHES-TUNE UP PARTS
SPEED EQUIPMENT

THE BEST!

STOCK AND CUSTOM PARTS
SEATS-HANDLEBARS-CHAINS
TIRES-TUBES-EXHAUST PIPES
MUFFLERS-GAS TANKS-FENDERS
RESTORATION PARTS

THE ONLY!

WORLD'S LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS
45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!
CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

V.I.P. Buyers Club
**SAVE 10% OR MORE
ON 17,000+ PARTS**



British Only E-Store
Bookstore
New Products
Scratch & Dent
Blue Light Specials

50,000+ PARTS
LISTED ONLINE
9,000+ PARTS
VIEWABLE ONLINE

CALL FOR OUR FREE 272 PAGE CATALOG!

OVERSEAS CUSTOMERS PLEASE SEND \$10.00 FOR AIR POST

1-800-BRT-ONLY

OR

1-800-278-6659

Visit our website!

www.britishonly.com

— HYDE

— AMAL

— LUCAS

— SMITHS

— ROWE

— HEPOLITE

— MORGO

— DUNLOP

— RENOLD

— MEGACYCLE

— JOE HUNT

— BOOKSTORE

— NORVIL

— MORGO

— BARNETT

— JP PISTONS

— ALPHA

50,000+ PARTS LISTED ONLINE
9,000+ PARTS VIEWABLE ONLINE

SPECIALIZING IN

TRIUMPH

Norton

BSA

PARTS
SHIPPED
WORLDWIDE!



British Only

MOTORCYCLES AND PARTS INC.

32451 PARK LANE

GARDEN CITY, MI 48135 USA

PHONE ORDER HOURS:
MONDAY THRU FRIDAY 10-6 EST

Fax or email 24 hours a day!

**CALL FOR OUR FREE
272 PAGE CATALOG!**

OVERSEAS CUSTOMERS PLEASE SEND \$10.00 FOR AIR POST

1-800-BRT-ONLY

OR

1-800-278-6659

Visit our website!

www.britishonly.com

RETAIL: 734-421-0303
WHOLESALE: 734-525-1980
FAX: 734-422-9253
EMAIL: info@britishonly.com
WEBSITE: www.britishonly.com

THE BIGGEST!

**ENGINE REBUILDING PARTS
GASKETS-SEALS-BEARINGS
BUSHINGS-PISTONS-RINGS
CLUTCHES-TUNE UP PARTS
SPEED EQUIPMENT**

THE BEST!

**STOCK AND CUSTOM PARTS
SEATS-HANDLEBARS-CHAINS
TIRES-TUBES-EXHAUST PIPES
MUFFLERS-GAS TANKS-FENDERS
RESTORATION PARTS**

THE ONLY!

— HYDE
— AMAL
— LUCAS
— SMITHS
— ROWE
— HEPOLITE
— MORGO
— DUNLOP
— RENOLD
— MEGACYCLE
— JOE HUNT
— BOOKSTORE
— NORVIL
— MORGO
— BARNETT
— JP PISTONS
— ALPHA

50,000+ PARTS LISTED ONLINE
9,000+ PARTS VIEWABLE ONLINE

SPECIALIZING IN

TRIUMPH

Norton

BSA

**PARTS
SHIPPED
WORLDWIDE!**



WORLD'S LARGEST SELECTION OF FACTORY ORIGINAL NEW AND USED PARTS
45,000 SQ. FT. OF MOTORCYCLE PARTS & ACCESSORIES FROM 1911 TO 1984 FOR ALL BRITISH MAKES!
CASH FOR ALL BRITISH BIKES, PARTS AND LITERATURE

V.I.P. Buyers Club
SAVE 10% OR MORE
ON 17,000+ PARTS



British Only E-Store

**Bookstore
New Products**

Scratch & Dent

Blue Light Specials

**50,000+ PARTS
LISTED ONLINE**

**9,000+ PARTS
VIEWABLE ONLINE**

----- Fold -----

NAME _____

ADDRESS _____

CITY _____

STATE _____ ZIP _____

USE
FIRST CLASS
LETTER
POSTAGE

British Only

MOTORCYCLES AND PARTS INC.

32451 PARK LANE
GARDEN CITY MI 48135 U.S.A.

----- Fold -----

MOTORCYCLES AND PARTS INC.

Web Address: <http://www.britishonly.com>
E-mail: info@britishonly.com

Year
Make
Model

[illegible]

Date _____ / _____ / _____ Customer # _____ Salesperson _____

Credit Card Used _____ Card# _____ Expires _____

Name _____

Address _____

City / State / Zip _____

Phone _____ / _____ Fax _____ / _____

Email _____

Signature_____

Subtotal	
Insurance	
Shipping	
Total	
Michigan Residents Add 6% Sales Tax	
Amount Enclosed	

042600

----- Fold -----

NAME _____

ADDRESS _____

CITY _____

STATE _____ ZIP _____

USE
FIRST CLASS
LETTER
POSTAGE

British Only

MOTORCYCLES AND PARTS INC.

32451 PARK LANE
GARDEN CITY MI 48135 U.S.A.

----- Fold -----

MOTORCYCLES AND PARTS INC.

Web Address: <http://www.britishonly.com>
E-mail: info@britishonly.com

Year
Make
Model

[illegible]

Date _____ / _____ / _____ Customer # _____ Salesperson _____

Credit Card Used _____ Card# _____ Expires _____

Name _____

Address _____

City / State / Zip _____

Phone _____ / _____ Fax _____ / _____

Email _____


Signature_____

Subtotal	
Insurance	
Shipping	
Total	
Michigan Residents Add 6% Sales Tax	
Amount Enclosed	

042600



SPARE PARTS LIST FOR 1957

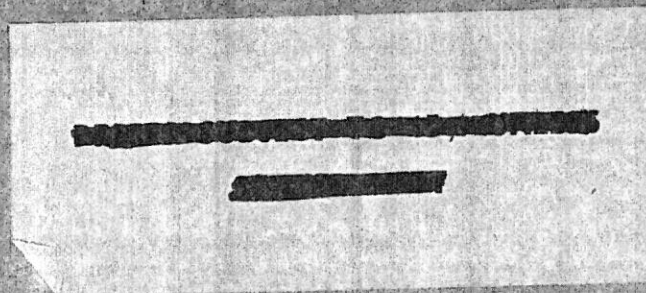

Models 77, 88 and 99

NORTON MOTORS LTD.

BRACEBRIDGE ST., BIRMINGHAM, 6, ENGLAND

Phone: Aston Cross 3711 (Private Branch Exchange)

Grams: "Nortomo. Birmingham"

56-00321

20-10370C



**SPARE PARTS
LIST FOR 1957**

Models 77, 88 and 99

NORTON MOTORS LTD.

BRACEBRIDGE ST., BIRMINGHAM, 6, ENGLAND

Phone: Aston Cross 3711 (Private Branch Exchange)

Grams: "Nortomo, Birmingham"

20-10370C

FOR ENAMELLED PARTS—PLEASE STATE COLOUR

INDEX

	Page		Page
Air cleaner and fittings	32	Headlamp and fittings (all prices Retail nett)	30
Amal carburetter	11	Kickstarter parts	19
Battery (price Retail nett)	30	Lapel badges (this price Retail nett) ...	32
Brake shoe linings and shoes	23	Magneto and drive parts (all prices Retail nett)	8
Cable clips	32	Norton road holder front forks and fittings	13
Centre stand and fittings	28	Number plates	29
Clutch	21	Oil pipes and fittings	18
Connecting rods and big end bearings ...	11	Oil pump parts	9
Control cable, adjusters and nipples ...	15	Oil tank and fittings	16
Crankcase, engine plate bolts, etc. ...	6	Parts common to front and rear hubs ...	23
Crankcase and fittings	5	Petrol tank and fittings	15
Crankcase pressure and breather fittings	5	Pillion footrests	25
Cylinder head, barrel, studs and nuts ...	9	Pistons and rings	9
Dual seat and fittings	31	Positive footchange	19
Dynamo drive parts and securing fittings...	8	Push rods and tappets	7
Electric horn and fittings	31	Rear brake pedal and fittings	25
Enamel (this price Retail nett)	32	Rear chain adjusters	27
Engine plates	25	Rear chainguard and fittings	24
Engine sprockets	27	Rear suspension	27
Engine steady stay and fittings	7	Rear wheel and fittings	23
Exhaust pipe, silencer and fittings...	13	Rear mudguard and fittings	29
Flywheels, crankshaft and main bearings ...	5	Rocker box fittings	7
Footrests and fittings	25	Side prop stand and fittings	28
Frame	27	Speedometer and fittings (all prices Retail nett)	31
Front and rear chains	27	Swinging arm and fittings	27
Front chaincase and fittings	24	Tail and stop lights	29
Front wheel and fittings	21	Timing gear fittings	7
Front mudguard, stays and fittings ...	28	Tool box, tool tray and fittings	30
Gearbox fixing bolts	18	Tool kit	31
Gearbox front chain adjuster	18	Transfers	32
Gearbox pinions, shafts and bearings ...	19	Valves, guides, springs, etc.	9
Gearbox shell	18	Voltage control and fittings	31
Handlebars and fittings	15	Wheel rims and spokes	24

INSTRUCTIONS FOR ORDERING SPARE PARTS

This Spare Parts List deals with replacement parts for Models 88, 99 and 77 of 1957 manufacture.

It is most essential that the Engine and Frame Number of the machine is stated. The Engine Number is to be found on the transmission side of the Crankcase directly below cylinder base. The frame number is stamped on the nearside of the frame gusset plate on 88 and 99 models and on the petrol tank front mounting lug on the Model 77. It is always advisable to order parts on a separate sheet, and not to include on the same sheet other matter of a different nature; this facilitates prompt despatch.

It is found in a number of instances that money orders and postal orders are sent in parcels containing patterns; this is inadvisable. We strongly recommend parts as patterns being despatched separately, and a covering letter sent containing the remittance for replacement parts.

RETURNING MACHINES FOR OVERHAULING

When returning machines or parts for repair or overhaul, these should be sent carriage paid, and with the sender's name and address in full securely attached. It is also advisable to state on the tally that a letter has been sent respecting the parts, and giving the date. All easily detached fittings should be removed, such as Lamps, Horns, Tool Bags, Speedometers, etc.; these are liable to be lost or damaged in transit, and the Company cannot accept any responsibility for them.

ESTIMATES FOR REPAIRING MACHINES

We are always prepared to give approximate estimates for the cost of repairs; it is quite impossible to give a firm quotation. Additional parts may be found necessary during the process of repair, unforeseen when preparing an estimate. Should our estimate for repair not be accepted, a charge may be made in accordance with work entailed in dismantling and re-assembling. When we give an estimate for cost of repairs, and this is curtailed by the owner, we cannot accept any responsibility for the performance of the machine; it is always preferable to accept our estimate in full.

PURCHASE OF SPARE PARTS


Norton Dealers throughout the British Isles generally carry a very comprehensive stock of Norton spare parts and it is recommended that owners should obtain any spare parts required through them.

The name of the nearest Norton dealer will be supplied on request and if any difficulty whatever is experienced in obtaining spare parts through a Norton Dealer, if we are advised, we shall be very pleased to investigate the matter.

It is our desire that replacement parts are available to Norton owners with the least possible delay.

Please note we reserve the right to alter the prices in the list at any time without notice.

PLATE T.A.

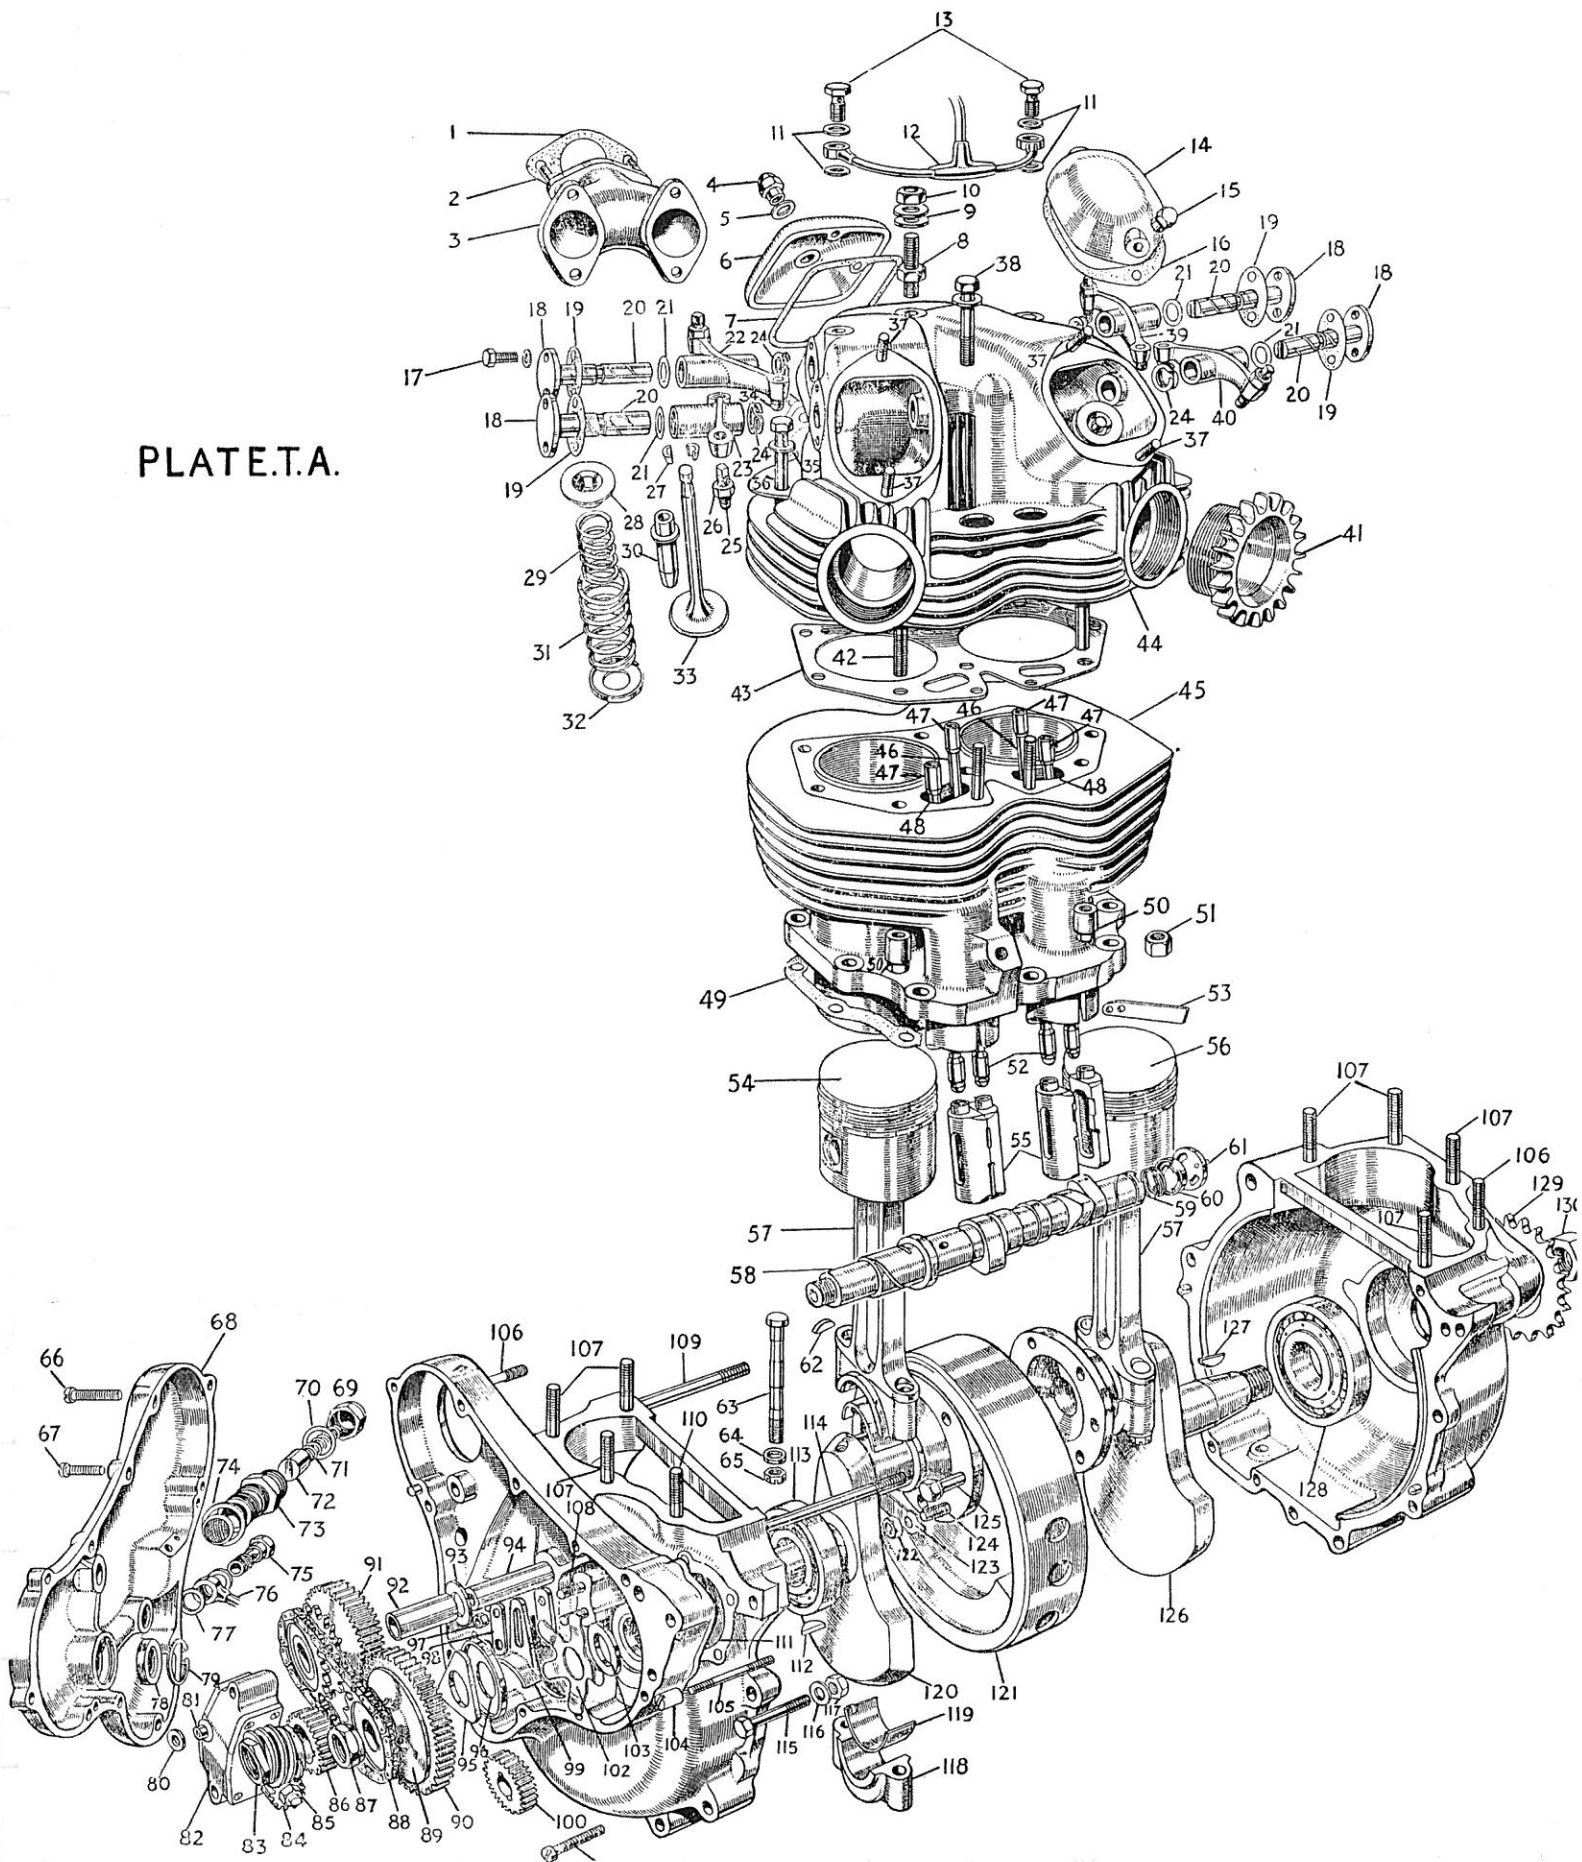

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
CRANKCASE AND FITTINGS						£ s. d.
50235	—	—	Crankcase with timing cover ...	1	88, 99, 77	
19257	—	TA68	Timing cover ...	1	88, 99, 77	
T2236	—	—	Crankcase timing cover paper washer ...	1	88, 99, 77	
19228	—	—	Timing cover badge ...	1	88, 99, 77	
50234	H12/704	—	Crankcase, driving side ...	1	88, 99, 77	
50177	H12/703	—	Crankcase, timing side ...	1	88, 99, 77	
NOTE.—Half crankcases and timing cover cannot be supplied separately. Therefore it is necessary to return the sound half for matching at the works.						
T2036	D12/18 TS	—	Crankcase camshaft bush timing side ...	1	88, 99, 77	
T2037	D12/18 DS	—	Crankcase camshaft bush driving side ...	1	88, 99, 77	
T2018	D12 2(L)	TA107	Crankcase cylinder base stud $\frac{3}{8}$ " dia. ...	6	88, 99, 77	
T2209	D12 2(S)	TA110	Crankcase cylinder base stud $\frac{5}{16}$ " dia. ...	2	88, 99, 77	
18943	—	—	Crankcase cylinder base stud $\frac{3}{8}$ " dia. (front centre) ...	1	88, 99, 77	
T2016	D12/3(L)	—	Crankcase cylinder base stud nut $\frac{3}{8}$ " dia. ...	7	88, 99, 77	
T2210	D12/3(S)	—	Crankcase cylinder base stud nut $\frac{5}{16}$ " dia. ...	2	88, 99, 77	
T2211	—	—	Crankcase cylinder base stud washer ...	2	88, 99, 77	
T2191	D12/912	—	Crankcase and magneto joint washer ...	1	88, 99, 77	
10940	—	TA66	Crankcase timing cover screws (long) ...	8	88, 99, 77	
11775	—	—	Crankcase timing cover washer ...	16	88, 99, 77	
E6980	—	TA67	Crankcase timing cover screws (short) ...	6	88, 99, 77	
T2124	D12/913	TA78	Timing cover mainshaft oil seal ...	1	88, 99, 77	
17841	D12/914	TA79	Timing cover mainshaft oil seal circlip ...	1	88, 99, 77	
E4591	—	—	Timing cover oilway plug ...	1	88, 99, 77	
16945	H12/16945	—	Crankcase oil sump filter body ...	1	88, 99, 77	
16949	H12/16949	—	Filter body copper and asbestos washer ...	1	88, 99, 77	
16946	H12/16946	—	Filter body gauze ...	1	88, 99, 77	
16947	H12/16947	—	Filter body gauze retaining plate ...	1	88, 99, 77	
16948	H12/16948	—	Filter body gauze retaining plate circlip ...	1	88, 99, 77	
15399	—	—	Name plate for drive side of crankcase ...	1	88, 99, 77	
17842	—	—	Screws for name plate ...	2	88, 99, 77	

CRANKCASE PRESSURE AND BREATHER FITTINGS

D12/915	—	—	Timing cover pressure release valve complete ...	1	88, 99, 77	
T2059	D12/916	TA73	Timing cover pressure release valve body ...	1	88, 99, 77	
T2060	D12/920	TA69	Timing cover pressure release valve body nut ...	1	88, 99, 77	
T2057	D12/921	TA70	Timing cover pressure release valve body nut washer ...	1	88, 99, 77	
T2054	D12/917	TA72	Timing cover pressure release valve piston ...	1	88, 99, 77	
T2061	D12/918	TA71	Timing cover pressure release valve spring ...	1	88, 99, 77	
T2056	D12/919	TA76	Timing cover pressure release valve body washer ...	1	88, 99, 77	
T2058	—	—	Timing cover pressure release valve union washer ...	1	88, 99, 77	
19382A	D12/708	—	Crankcase breather pipe with flange ...	1	88, 99, 77	
T2213	D12/923	—	Crankcase breather pipe securing bolt ...	1	88, 99, 77	
19383	—	—	Oil pipe rubber ...	1	88, 99, 77	
16902	—	—	Set pin for oil gauge hole ...	1	88, 99, 77	
T1084	—	—	Set pin washer ...	1	88, 99, 77	

FLYWHEELS, CRANKSHAFT AND MAIN BEARINGS

D12/24	—	—	Flywheel and crankshaft assembly with con rods ...	1	88	
L14/24	—	—	Flywheel and crankshaft assembly with con rods ...	1	99, 77	
18246	D12/924	TA126	Flywheel ...	1	88	
18744	L14/924	—	Flywheel ...	1	99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
FLYWHEELS, CRANKSHAFT AND MAIN BEARINGS—cont.						£ s. d.
18247	D12/705	TA120	Crankshaft, timing side	1	88	
18746	L14/705	—	Crankshaft, timing side	1	99, 77	
18248	D12/706	TA126	Crankshaft, driving side	1	88	
18745	L14/706	—	Crankshaft, driving side	1	99, 77	
T2033A	—	TA125	Flywheel and crankshaft bolt	3	88, 99, 77	
T2033	D12/925	—	Flywheel and crankshaft bolt	1	88, 99, 77	
T2086	D12/926	TA124	Flywheel and crankshaft stud	2	88, 99, 77	
T2031	D12/927	TA122	Flywheel and crankshaft bolt or stud nut	8	88, 99, 77	
T2105	D12/928	—	Dowel for flywheel	1	88, 99, 77	
T2032	D12/929	TA123	Retaining plate for dowel	2	88, 99, 77	
17822	D12/30	TA113	Mainshaft ball bearing, timing side ...	1	88, 99, 77	
					nett	
T2008	D12/930	TA96	Mainshaft ball bearing timing side sealing washer	1	88, 99, 77	
17824	D12/32	TA128	Mainshaft roller bearing, driving side ...	1	88, 99, 77	
					nett	
T2187	D12/931	—	Driving side shaft oil seal	1	88, 99, 77	
T2196A	—	—	Mainshaft packing shim	A.R.	88, 99, 77	
T2196B	—	—	Mainshaft packing shim	A.R.	88, 99, 77	

CRANKCASE AND ENGINE PLATE BOLTS, NUTS AND WASHERS

E4256	—	—	Stud, engine plate to frame front ...	1	77	
E5377	—	—	Washer, engine plate to frame ...	2	77	
E3223	—	—	Engine plate to frame nuts ...	1	77	
E3224	—	—	Nuts, engine plate to frame ...	2	77	
T2012	—	—	Crankcase to engine plate stud (bottom)	2	77	
E5376	—	—	Washer, crankcase to engine plate stud...	5	77	
E3224	—	—	Nuts, crankcase to engine plate stud ...	6	77	
E4262	—	—	Studs, crankcase to bottom frame tube ...	2	77	
17696	—	—	Washers, crankcase to bottom frame tube stud	4	77	
E3223	—	—	Nuts, crankcase to bottom frame tube stud	3	77	
E4268	—	—	Bolt, engine	2	77	
E5377	—	—	Washers, crankcase to engine plate ...	5	77	
E3224	—	—	Nuts, crankcase to engine plate studs ...	6	77	
E4268	—	—	Bolts, engine plate to frame ...	2	77	
E5377	—	—	Washers, engine plate to frame bolt ...	2	77	
T2231	—	—	Crankcase and prop stand stud ...	1	77	
E4262	—	—	Crankcase and prop stand stud ...	1	77	
T2012	—	—	Crankcase to engine plate stud (top) ...	1	88, 99	
E5376	—	—	Washer to engine plate stud ...	1	88, 99	
E3224	—	—	Nuts to engine plate stud ...	2	88, 99	
18649	—	—	Bolts, bottom fixing frame to engine plates	2	88, 99	
E5456	—	—	Washers, bottom fixing frame to engine plate bolts	4	88, 99	
T2017	—	—	Nuts, bottom fixing frame to engine plate bolts	2	88, 99	
E4261	—	—	Crankcase to engine plate bolt (bottom)	1	88, 99	
E3223	—	—	Crankcase to engine plate bolt nut ...	1	88, 99	
T2012	—	—	Crankcase to engine plate bolt stud ...	1	88, 99	
E5376	—	—	Crankcase to engine plate bolt washer...	2	88, 99	
E3224	—	—	Crankcase to engine plate bolt nuts ...	2	88, 99	
T2012	—	—	Crankcase to engine plate stud (top) ...	1	88, 99	
E5376	—	—	Crankcase to engine plate bolt washers...	2	88, 99	
E3224	—	—	Crankcase to engine plate bolt nuts ...	2	88, 99	
16317	—	—	Front and rear engine plate to frame bolts	6	88, 99	
E5376	—	—	Washers for bolts	12	88, 99	
E3224	—	—	Nuts for bolts	6	88, 99	
13870	—	—	Crankcase bolts (short)	1	88, 99, 77	
E3223	—	—	Crankcase bolt nuts	1	88, 99, 77	
E5456	—	—	Crankcase top washers	1	88, 99, 77	
T2013	—	—	Crankcase top studs (rear)	1	88, 99	
19077	—	—	Crankcase top studs (front)	1	88, 99	
E3224A	—	—	Crankcase top stud nuts (rear)	1	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
-------------	-------------------	--------------	-------------	------	-------	---------------

CRANKCASE AND ENGINE PLATE BOLTS, NUTS AND WASHERS—cont. £ s. d.

E3229	—	—	Crankcase top stud nuts (front) ...	1	88, 99	
E5376	—	—	Crankcase top stud washers (rear) ...	1	88, 99	
T2221	—	—	Crankcase top stud washers (front) ...	1	88, 99	
E3214	—	—	Crankcase top stud ...	1	88, 99	
E3231	—	—	Crankcase stop stud nuts ...	2	88, 99	
10940	—	—	Screws, T.S. to D.S. ...	2	88, 99, 77	
11775	—	—	Washers for screws ...	2	88, 99, 77	

ENGINE STEADY STAY AND FITTINGS

18637	H12-2/932	—	Head steady Plate ...	1	88, 99	
15315	—	—	Head steady plate ...	1	77	
18032	—	—	Head steady stay stud ...	1	88, 99, 77	
E3224	—	—	Head steady stay stud nut ...	1	88, 99, 77	
E5376	—	—	Head steady stay stud nut washer ...	1	88, 99, 77	
E3798	—	—	Steady stay fixing bolts ...	2	88, 99	
11796	—	—	Steady stay fixing bolt washers ...	2	88, 99	
E3223	—	—	Steady stay fixing bolt nuts ...	2	88, 99	
18202	—	—	Steady stay fixing bolt washers ...	2	88, 99	

TIMING GEAR FITTINGS

17413	D12/790	TA58	Camshaft ...	1	88, 99, 77	
T2043	D12/774	—	Camshaft washer ...	1	88, 99, 77	
T2078	D12/933	TA61	Camshaft breather stationary plate ...	1	88, 99, 77	
T2075	D12/934	TA60	Camshaft breather rotary plate ...	1	88, 99, 77	
T2108	D12/935	TA59	Camshaft breather spring ...	1	88, 99, 77	
T2035	D12/58	TA86	Half time pinion ...	1	88, 99, 77	
T2007	D12/936	TA95	Half time pinion backing plate ...	1	88, 99, 77	
E3683	—	TA112	Half time pinion driving key ...	1	88, 99, 77	
50008	D12/937	TA91	Intermediate gear with sprockets ...	1	88, 99, 77	
T2026	D12/938	TA92	Intermediate gear bush ...	1	88, 99, 77	
T2080	D12/939	TA93	Intermediate gear washer ...	1	88, 99, 77	
T2021	D12/940	TA94	Intermediate gear spindle ...	1	88, 99, 77	
17823	D12/941	—	Intermediate gear spindle circlip ...	1	88, 99, 77	
E3683	—	TA62	Cam shaft sprocket key ...	1	88, 99, 77	
T2044	D12/79	TA89	Cam shaft sprocket ...	1	88, 99, 77	
T2046	D12/942	TA87	Cam shaft sprocket nut ...	1	88, 99, 77	
T2043	D12/774	—	Cam shaft sprocket washer ...	1	88, 99, 77	

PUSH RODS AND TAPPETS

M12/82 In.	—	TA46	Push rod complete, inlet ...	2	88	
M12/82 Ex.	—	TA48	Push rod complete, exhaust ...	2	88	
M14/82 In.	—	TA46	Push rod complete, inlet ...	2	99, 77	
M14/82 Ex.	—	TA48	Push rod complete, exhaust ...	2	99, 77	
20130	—	—	Push rod only, inlet ...	2	88	
20131	—	—	Push rod only, exhaust ...	2	88	
20132	—	—	Push rod only, inlet ...	2	99, 77	
20133	—	—	Push rod only, exhaust ...	2	99, 77	
T2064	D12/86	TA47	Push rod top ...	4	88, 99, 77	
T2182	D12/83	TA52	Push rod ball end ...	4	88, 99, 77	
18784A	H12/75A	TA55	Tappets, right-hand ...	2	88, 99, 77	
18784B	H12/75B	TA55	Tappets, left-hand ...	2	88, 99, 77	
T2142	D12/943	TA53	Tappet location plates ...	2	88, 99, 77	
T2143	D12/944	—	Tappet location plate screws ...	4	88, 99, 77	

ROCKER BOX FITTINGS

18249	D12/99RH	TA22	Rocker, inlet, R.H. ...	1	88, 99, 77	
18250	D12/99LH	TA39	Rocker, inlet, L.H. ...	1	88, 99, 77	
18252	D12/100LH	TA40	Rocker, exhaust, L.H. ...	1	88, 99, 77	
18251	D12/100RH	TA23	Rocker, exhaust, R.H. ...	1	88, 99, 77	
T2074	D12/803	TA25	Rocker adjuster ...	4	88, 99, 77	
T232	D12/804	TA26	Rocker adjuster nuts ...	4	88, 99, 77	
T2063	D12/104	—	Rocker ball ends ...	4	88, 99, 77	
T2237	D12/97	TA20	Rocker shafts ...	4	88, 99, 77	
18102	D12/951	TA21	Rocker shaft thrust washer ...	4	88, 99, 77	
18103	D12/950	TA24	Rocker shaft spring ...	4	88, 99, 77	
T2083	D12/947	—	Rocker shaft washers ...	4	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
ROCKER BOX FITTINGS—cont.						
						£ s d.
T2240	D12/948	—	Rocker shaft joint washers ...	4	88, 99, 77	
T2238	D12/945	TA19	Rocker shaft locking plates ...	4	88, 99, 77	
T2239	D12/946	TA18	Rocker shaft retaining plate ...	4	88, 99, 77	
T2256	K12/949	—	Rocker shaft bolts ...	8	88, 99, 77	
18094	D12/93R	TA6	Rocker box rear cap ...	1	88, 99, 77	
T2084	D12/95R	TA7	Rocker box rear cap washer ...	1	88, 99, 77	
T2082	D12/956	TA5	Rocker box rear cap washer ...	1	88, 99, 77	
T2162	D12/955	TA1	Rocker box rear cap acorn nuts ...	1	88, 99, 77	
18093	D12/93F	TA14	Rocker box front caps ...	2	88, 99, 77	
T2088	D12/95F	TA16	Rocker box front joint washer ...	2	88, 99, 77	
T2252	K12/952	TA37	Rocker box front cap studs ...	4	88, 99, 77	
T2085	D12/953	TA15	Rocker box front cap nuts ...	4	88, 99, 77	
18033	K12/954	—	Rocker box rear cap studs ...	1	88, 99, 77	
13937	—	—	Rocker box rear cap dowel ...	1	88, 99, 77	
18380	K12/985	—	Inlet manifold fixing studs ...	4	88, 99, 77	

DYNAMO DRIVE PARTS AND SECURING FITTINGS

20167	—	—	Dynamo ...	1	88, 99, 77	
						nett
T2243	D12/1013	TA100	Dynamo steel driven pinion ...	1	88, 99, 77	
T2244	F12/957	TA90	Dynamo fibre gear wheel ...	1	88, 99, 77	
19280	—	TA105	Dynamo to crankcase securing pins ...	3	88, 99, 77	
T2184	—	TA111	Dynamo sealing washer ...	1	88, 99, 77	
T2027	D12/962	—	Dynamo fixing strap ...	1	88, 99, 77	
T2029	D12/963	—	Dynamo fixing strap dowel ...	1	88, 99, 77	
T2028	D12/964	—	Dynamo fixing strap roller ...	1	88, 99, 77	
T2030	D12/965	—	Dynamo fixing strap bolt ...	1	88, 99, 77	
T2039	D12/958	TA102	Friction spring for fibre gear wheel ...	1	88, 99, 77	
T2242	D12/960	—	Locating peg for friction spring ...	1	88, 99, 77	
T2224	D12/959	—	Plate for friction spring ...	1	88, 99, 77	
17806	D12/961	TA86	Dynamo chain, 38-link ...	1	88, 99, 77	
						nett
T2217	D12/968	TA99	Dynamo chain tensioner slipper ...	1	88, 99, 77	
T247	D12/969	TA108	Dynamo chain tensioner stud ...	2	88, 99, 77	
T2218	D12/971	TA98	Plate for chain tensioner (thick) ...	1	88, 99, 77	
T2218A	—	—	Plate for chain tensioner (thin) ...	1	88, 99, 77	
E3231	—	—	Chain tensioner stud nuts ...	2	88, 99, 77	
200737	—	—	Brushes for dynamo ...	1 set	88, 99, 77	
						per set nett

MAGNETO AND DRIVE PARTS (all prices RETAIL NETT)

20201	—	—	Magneto ...	1	88, 99	
						nett
18256	—	—	Magneto ...	1	77	
						nett
47508	—	—	Magneto sprocket with automatic advance and retard unit ...	1	88, 99, 77	
18257	D12/113	—	Magneto chain ...	1	88, 99, 77	
458368	—	—	Pick-up assembly, left-hand ...	1	88, 99, 77	
458367	—	—	Pick-up assembly, right-hand ...	1	88, 99, 77	
458638	—	—	Magneto contact breaker cover ...	1	88, 99, 77	
470534	—	—	Magneto contact breaker ...	1	88, 99, 77	
104244	—	—	Magneto contact breaker cover nuts ...	2	88, 99, 77	
470609	—	—	Magneto contact breaker points ...	1 set	88, 99, 77	
						per set
455191	—	—	Brush spring and holder (magneto to earth) ...	1	88, 99, 77	
455190	—	—	Brush spring (magneto to earth) ...	1	88, 99, 77	
T2245	—	TA106	Crankcase T.S. to magneto, studs ...	3	88, 99, 77	
E3231	—	—	Crankcase T.S. to magneto, stud nuts ...	3	88, 99, 77	
11796	—	—	Crankcase T.S. to magneto, stud washers ...	3	88, 99, 77	
18464	—	—	Sparking plug cover ...	2	88, 99, 77	
18465	—	—	Sparking plug cover with suppressor ...	2	88, 99, 77	
20347	—	—	Magneto cut-out lead and button ...	1	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
OIL PUMP PARTS						£ s. d.
15522	D12 128	TA82	Oil pump assembly	1	88, 99, 77	
15511A	A2 129	TA85	Oil pump spindle nut	1	88, 99, 77	
T2077	D12 130	TA84	Oil pump spindle gear wheel	1	88, 99, 77	
17697	A2/131	—	Oil pump spindle gear wheel key	1	88, 99, 77	
15515	A2 132	TA81	Body and timing cover connection bush	1	88, 99, 77	
T272	D12 133	TA80	Body and timing cover connection bush washer	1	88, 99, 77	
T2076	D12 134	TA83	Mainshaft pump driving worm	1	88, 99, 77	
E4440	—	—	Pump crankcase studs	2	88, 99, 77	
E3231	—	—	Pump crankcase stud nuts	2	88, 99, 77	
E4590	—	—	Grub screw oil stop	1	88, 99, 77	

VALVES, GUIDES, SPRINGS, ETC.


T2010	D12 142	—	Valve inlet	2	88, 99, 77	
T2204	D12 143	TA33	Valve exhaust	2	88, 99, 77	
T2011	K12 140	TA30	Valve guides	4	88, 99, 77	
T186	D12 148	TA32	Valve collars	4	88, 99, 77	
T2073	D12 147	TA28	Valve spring cups	4	88, 99, 77	
T187	D12 149	TA27	Valve cotters	4 pr.	88, 99, 77	
19302	K12 145	TA29	Valve springs (inner)	4	88, 99, 77	
19303	K12 146	TA31	Valve springs (outer)	4	88, 99, 77	
16339	H12 16339	—	Heat resisting washers	4	88, 99, 77	

CYLINDER HEAD, BARREL, STUDS AND NUTS

18244	H12 135	TA45	Cylinder barrel	1	88	
18743	L14 135	—	Cylinder barrel	1	99, 77	
50166	K12 136	TA44	Cylinder head	1	88, 99, 77	
T2141	D12 137	TA43	Cylinder head gasket	1	88, 99, 77	
T2093	D12 157	TA49	Cylinder base washer	1	88, 99, 77	
T2096	D12 972	TA36	Cylinder barrel and head bolts (long) ...	4	88, 99, 77	
T2097	D12 973	TA38	Cylinder barrel and head bolts (short)...	1	88, 99, 77	
E5376	D12 974	TA35	Cylinder barrel and head bolt washers ...	4	88, 99, 77	
T2161	D12 975	—	Cylinder head fixing studs	2	88, 99, 77	
T2017	D12 976	—	Cylinder head and barrel stud nuts $\frac{5}{16}$ " ...	2	88, 99, 77	
18756	K12 977	TA42	Cylinder head studs	3	88, 99, 77	
T2034	D12 978	—	Cylinder head stud nut (front)	2	88, 99, 77	
E3224	D12 979	—	Cylinder head stud nuts (rear)	1	88, 99, 77	
E5376	D12 974	—	Cylinder head stud washer	1	88, 99, 77	
20344	—	—	Carburetter to manifold studs	2	88, 99, 77	
E3231	—	—	Carburetter to manifold stud nuts	2	88, 99, 77	
T2221	—	—	Carburetter to manifold stud washers ...	2	88, 99, 77	
18242	D12 983	TA3	Cylinder head and carburetter manifold	1	88, 99, 77	
T2241	D12 984	—	Cylinder head and carburetter manifold fibre distance piece	1	88, 99, 77	
18380	K12 985	—	Studs, securing to manifold cyl. head ...	4	88, 99, 77	
T2220	D12 986	—	Securing manifold to cyl. head stud nuts	4	88, 99, 77	
T2224	D12 987	—	Securing manifold to cyl. head stud washers	4	88, 99, 77	

PISTONS AND RINGS

19785	—	TA54	Piston assembly, L.H.	1	88	
19786	—	TA56	Piston assembly, R.H.	1	88	
19406	L14 702LH	—	Piston assembly, L.H.	1	99, 77	
19407	L14 702RH	—	Piston assembly, R.H.	1	99, 77	
19789	D12 161	—	Piston ring (compression)	2	88	
L14 161	—	—	Piston ring (compression)	2	99, 77	
L14 162	—	—	Piston ring (scraper)	1	99, 77	
19790	D12 162	—	Piston ring (scraper)	1	88	
19791	D12 163	—	Gudgeon pin	1	88, 99, 77	
L14 164	—	—	Gudgeon pin circlip	4	88, 99, 77	

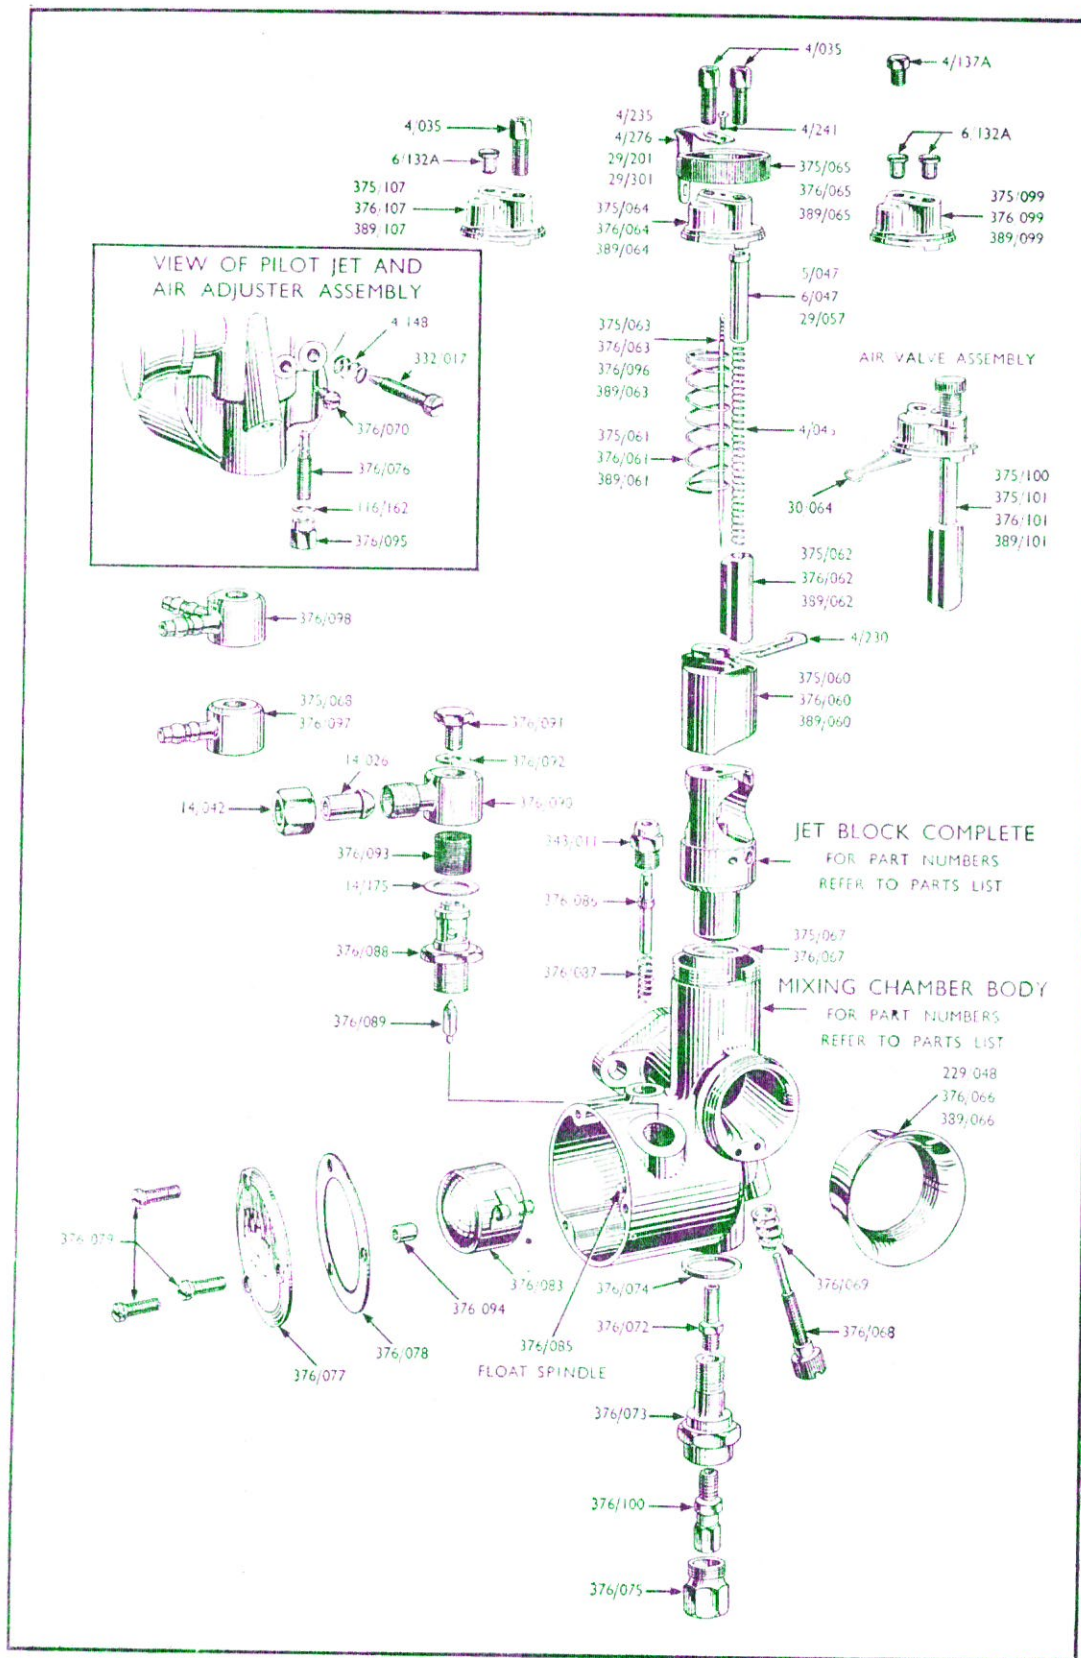

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
CONNECTING RODS AND BIG END BEARINGS						
50023	D12 158	TA57	Connecting rod with small end bush, big end bearing and bolts ...	2	88, 99, 77	
T2160	D12 159	—	Small end bush ...	2	88, 99, 77	
17828	D12 27	TA119	Big end bearing (2 halves) ...	2	88, 99, 77	
T2150	D12 989	TA63	Big end cap bolts ...	4	88, 99, 77	
T2152	D12 990	TA64	Big end cap bolt washers ...	4	88, 99, 77	
17827	—	TA65	Big end cap bolt nuts ...	4	88, 99, 77	

£ s. d.

AMAL CARBURETTER (all prices RETAIL NETT)

376 66	—	—	Carburetter complete with cables less twist grip ...	1	88	
376 67	—	—	Carburetter complete with cables less twist grip ...	1	99, 77	
376 1 ¹ / ₁₆	—	—	Mixing chamber body ...	1	99, 77	
376 1 ¹ / ₈	—	—	Mixing chamber body ...	1	88	
376 056	—	—	Jet block ...	1	88	
376 057	—	—	Jet block ...	1	99, 77	
376 070	—	—	Locating peg for jet block ...	1	88, 99, 77	
376 067	—	—	Washer ...	1	88, 99, 77	
376 064	—	—	Mixing chamber top ...	1	83, 99, 77	
376 065	—	—	Mixing chamber top cap ring ...	1	88, 99, 77	
4 235	—	—	Cap ring for top ...	1	83, 99, 77	
4 241	—	—	Fixing screw for cap spring ...	1	88, 99, 77	
4 035	—	—	Cable adjuster ...	1	88, 99, 77	
6 132A	—	—	Cable ferrule (top hat) ...	1	88, 99, 77	
4 137A	—	—	Plug screw ...	1	88, 99, 77	
376 060	—	—	Throttle valve ...	1	88, 99, 77	
376 061	—	—	Throttle valve spring ...	1	88, 99, 77	
376 063	—	—	Taper needle ...	1	88, 99, 77	
4 230	—	—	Taper needle clip ...	1	88, 99, 77	
376 062	—	—	Air valve ...	1	88, 99, 77	
6 047	—	—	Air valve guide ...	1	88, 99, 77	
4 046	—	—	Air valve spring ...	1	88, 99, 77	
376 101	—	—	Rod control air valve assembly ...	1	88, 99, 77	
30 064	—	—	Click spring for rod control air valve assembly ...	1	88, 99, 77	
376 072	—	—	Needle jet ...	1	88, 99, 77	
376 100	—	—	Main jet (specify size) ...	1	88, 99, 77	
376 073	—	—	Main jet holder ...	1	88, 99, 77	
376 074	—	—	Main jet holder washer ...	1	88, 99, 77	
376 075	—	—	Main jet cover nut ...	1	88, 99, 77	
376 076	—	—	Pilot jet ...	1	88, 99, 77	
376 095	—	—	Pilot jet cover nut ...	1	88, 99, 77	
116 162	—	—	Pilot jet cover nut washer ...	1	88, 99, 77	
332 C17	—	—	Air adjusting screw ...	1	88, 99, 77	
4 148	—	—	Air adjusting screw spring ...	1	88, 99, 77	
376 068	—	—	Throttle stop screw ...	1	88, 99, 77	
376 069	—	—	Throttle stop screw spring ...	1	88, 99, 77	
376 066	—	—	Air intake tube ...	1	88, 99, 77	
376 083	—	—	Float complete ...	1	88, 99, 77	
376 085	—	—	Float hinge spindle ...	1	88, 99, 77	
376 094	—	—	Float spindle bush... ..	1	88, 99, 77	
376 089	—	—	Float needle ...	1	88, 99, 77	
376 088	—	—	Float needle seating ...	1	88, 99, 77	
14 175	—	—	Float needle seating washer ...	1	88, 99, 77	
376 097	—	—	Banjo single ...	1	88, 99, 77	
14 175	—	—	Banjo washer ...	1	88, 99, 77	
376 091	—	—	Banjo bolt ...	1	88, 99, 77	
376 092	—	—	Banjo bolt washer... ..	1	88, 99, 77	
376 086	—	—	Tickler ...	1	88, 99, 77	
343 011	—	—	Tickler body ...	1	88, 99, 77	
376 087	—	—	Tickler spring ...	1	88, 99, 77	
376 077	—	—	Float chamber cover ...	1	88, 99, 77	
376 078	—	—	Float chamber cover joint ...	1	88, 99, 77	
376 079	—	—	Float chamber cover screws ...	1	88, 99, 77	
376 093	—	—	Filter gauze ...	1	88, 99, 77	
20000	—	—	Carburetter sealing ring ...	1	88, 99, 77	

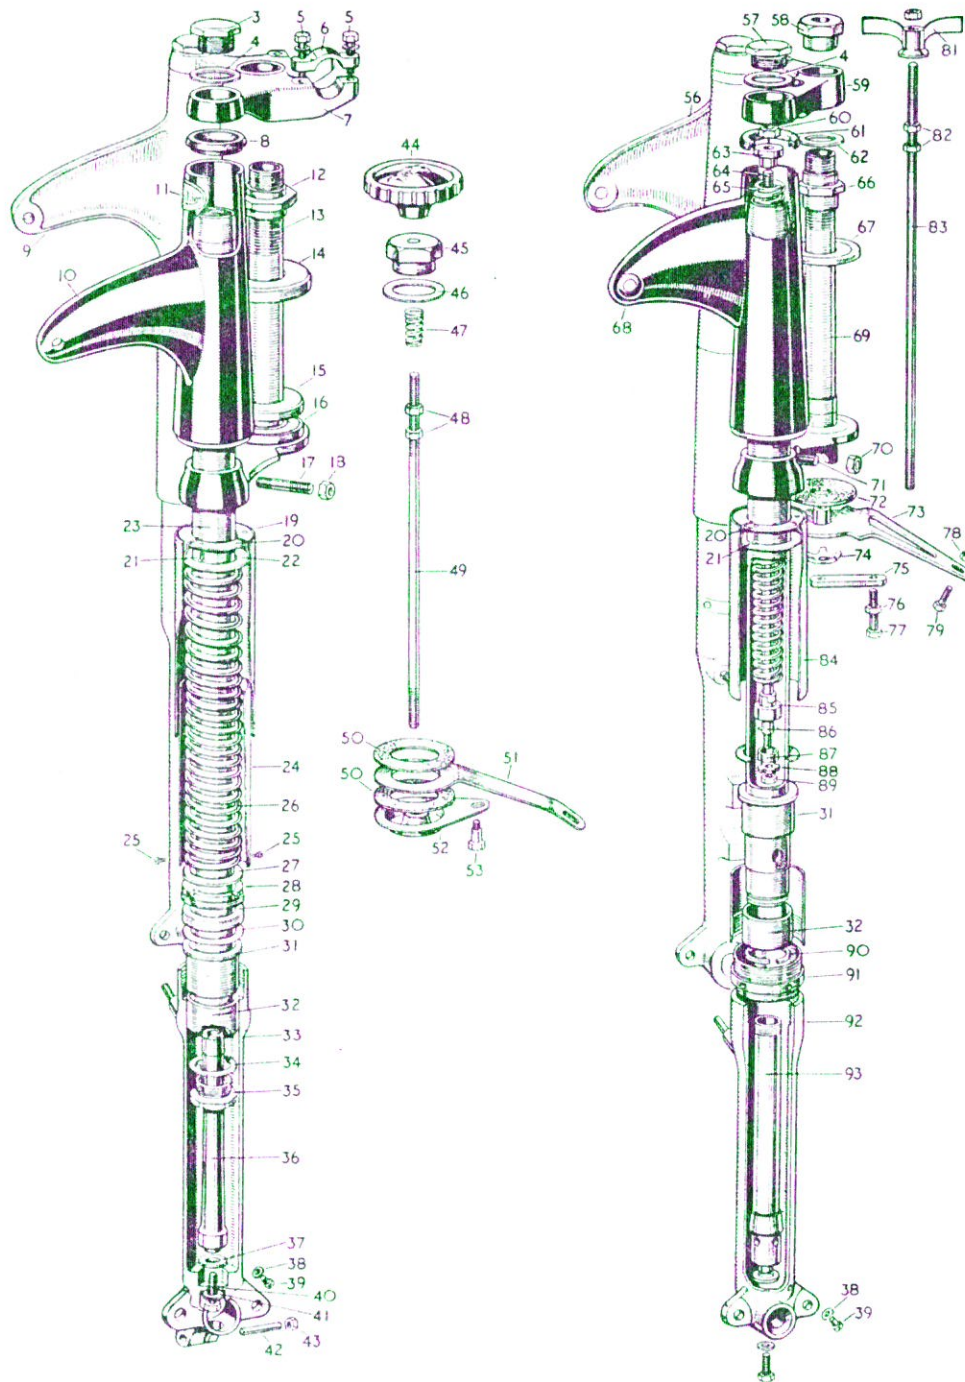


PLATE M J

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
EXHAUST PIPE, SILENCER AND FITTINGS						£ s. d.
19464	—	—	Exhaust pipe, L.H. ...	1	88	
19466	—	—	Exhaust pipe, L.H. ...	1	99	
20310	—	—	Exhaust pipe, L.H. ...	1	77	
19465	—	—	Exhaust pipe, R.H. ...	1	88	
19467	—	—	Exhaust pipe, R.H. ...	1	99	
20311	—	—	Exhaust pipe, R.H. ...	1	77	
18092	D12 167	—	Exhaust pipe locking ring ...	2	88, 99, 77	
T2166	D12 166	—	Exhaust pipe locking washer ...	2	88, 99, 77	
20110	—	—	Silencer, R.H. ...	1	88, 99, 77	
20111	—	—	Silencer, L.H. ...	1	88, 99, 77	
20064	—	—	Silencer fixing bracket, L.H. ...	1	88, 99	
19473	—	—	Silencer fixing bracket, R.H. ...	1	88, 99	
17075	—	—	Silencer fixing bolts ...	4	77	
E 5456	—	—	Silencer fixing bolt washers ...	4	77	
16255	H12 168	—	Silencer to exhaust pipe clips ...	2	88, 99, 77	
E3154	—	—	Silencer to exhaust pipe clip bolts ...	2	88, 99, 77	
E3231	—	—	Silencer to exhaust pipe clip bolt nuts ...	2	88, 99, 77	
20307	—	—	Silencer fixing brackets ...	2	77	

NORTON ROAD HOLDER FRONT FORKS AND FITTINGS

M12-2 170	—	—	Road-holder forks complete ...	1	88, 99	
M15 170	—	—	Road-holder forks complete ...	1	77	
18482	H12-2 605	—	Fork main tube ...	2	88, 99	
18467	B2 605	—	Fork main tube ...	2	77	
T1055	B2 606	MJ32	Fork main tube bottom bush ...	2	88, 99, 77	
T1048	B2 614	MJ35	Fork main tube top bush ...	2	88, 99, 77	
14298	E11M 1044	MJ90	Fork main tube circlips ...	2	88, 99	
19299	—	MJ92	Fork end (left-hand) ...	1	88, 99	
19310	—	MJ33	Fork end (left-hand) ...	1	77	
19298	—	—	Fork end (right-hand) ...	1	88, 99	
19309	—	—	Fork end (right-hand) ...	1	77	
16664	—	MJ42	Fork end hub spindle pinch stud ...	1	88, 99, 77	
13434	—	MJ43	Fork end hub spindle pinch stud nut ...	1	88, 99, 77	
T387	B2 612	MJ29	Fork end drain plug ...	2	88, 99, 77	
11775	B2 613	MJ38	Fork end drain plug washer ...	2	88, 99, 77	
T1090	B2 608	MJ34	Tab locking washers ...	2	77	
T1047	B2 607	MJ35	Main tube bush retaining washer ...	2	77	
17713	D3T 616	MJ29	Oil seals ...	2	88, 99, 77	
T1054	B2 615	—	Oil seal locking rings ...	2	77	
T1049	B2 617	MJ30	Oil seal paper washer ...	2	88, 99, 77	
50177	F11M 615	MJ91	Main tube lock ring with cup ...	2	88, 99	
18491	B2 625	MJ24	Bottom cover tubes ...	2	77	
19816	—	MJ25	Bottom cover tube screws ...	4	77	
18809	E2 620	MJ22	Fork spring ...	2	77	
18813	F11M2 620	MJ65	Fork spring ...	2	88, 99	
16880	—	—	Fork spring locating bushes ...	2	88, 99	
T595	B2 621	MJ27	Fork spring bottom leather washer ...	2	77	
T594	B2 619	MJ22	Fork spring top leather washer ...	2	77	
18490	B2 622	MJ19	Spring top cover tube ...	2	77	
19307	L12-2 622	MJ84	Spring top cover tube ...	2	88, 99	
T831	B2 623	MJ20	Spring top cover tube securing plate ...	2	88, 99	
T702	B2 624	MJ21	Spring top cover tube securing plate screws ...	6	88, 99	
13197	B2 627	MJ36	Oil damper pegs ...	2	77	
16001	F11M 627	MJ93	Oil damper tubes ...	2	88, 99	
15801	F11M 1049	MJ64	Oil damper rods ...	2	88, 99	
17075	C2 630	MJ40	Oil damper peg bolts ...	2	77	
14275	F11M2 630	—	Oil damper tube bolts ...	2	88, 99	
T814	B2 628	MJ37	Oil damper peg washers ...	2	88, 99, 77	
T1009	C2 629	MJ41	Oil damper peg bolt washer ...	2	88, 99, 77	
14119	E11M 1048	MJ86	Piston locating pegs ...	2	88, 99	
14118B	E11M 1046	MJ87	Oil damper valve cup ...	2	88, 99	
14117	E11M 1047	MJ88	Oil damper valve cup slotted ring ...	2	88, 99	
E3231	—	—	Oil damper rod bottom nuts ...	2	88, 99	
14605	E11M 1045	MJ85	Oil damper tube cap ...	2	88, 99	
E3224A	—	MJ60	Oil damper rod nuts (top) ...	2	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
NORTON ROAD HOLDER FRONT FORKS AND FITTINGS—cont.						£ s. d.
50259	—	MJ13	Crown lug complete with column ...	1	88, 99	
50001	B2 172	—	Crown lug complete with column ...	1	77	
13457	B2 642	MJ17	Pinch stud for crown lug ...	1	77	
16164	F11M2 642	—	Pinch stud for crown lug... ...	1	88, 99	
16187	F11M2 643	—	Pinch stud nuts ...	2	88, 99	
13459	B2 643	—	Pinch stud nuts ...	2	77	
15628	F11M2 644	MJ67	Fork head clip ball race cover ...	1	88, 99	
15630	F11M2 645	MJ58	Fork head race adjuster nut ...	1	88, 99	
19275	L12-2 635	MJ68	Top cover tube, complete with lamp bracket, L.H. ...	1	88, 99	
19276	L12-2 636	MJ56	Top cover tube, complete with lamp bracket, R.H. ...	1	88, 99	
19340	L4 635	MJ10	Top cover tube, complete with lamp bracket, L.H. ...	1	77	
19339	L4 636	MJ9	Top cover tube, complete with lamp bracket, R.H. ...	1	77	
15398	B2 637	MJ11	Top cover tube name plate ...	2	88, 99, 77	
T1081	B2 638	—	Top cover tube name plate rivets ...	4	77	
18810	—	—	Top cover tube name plate rivets ...	4	per set 88, 99	
19272	—	—	Lamp bracket distance pieces ...	2	per set 88, 99	
T597	F11M2 639	MJ61	Main tube top cover rubber ring ...	2	88, 99	
T1079	B2 639	—	Main tube top cover rubber ring ...	2	77	
T347	B2 207	MJ50	Steering damper friction washer ...	1	77	
T838	B2 206	MJ51	Steering damper anchor plate ...	1	77	
5002	B2 208	MJ52	Steering damper friction plate ...	1	77	
19537	—	—	Bolt for friction plate and cable clip ...	1	77	
19530	—	—	Cable clip for brake cable ...	1	77	
11796	—	—	Washer between cable clip and friction plate bolt ...	1	77	
12342	—	—	Bolt for anchor plate to frame ...	1	77	
E5379	—	—	Washer for anchor plate to frame bolt ...	1	77	
16725	—	MJ16	Headrace (bottom) ...	1	77	
T358	—	MJ15	Headrace (top) ...	1	77	
17714	A2 521	—	Headrace ball bearings (top or bottom)...	34	77	
14365	B2 644	—	Headrace cover ...	1	per set 77	
T355	B2 645	—	Fork head race adjuster nut ...	1	77	
19015	L4 174	MJ7	Head clip ...	1	77	
T695	B2 646	—	Fork crown and column lock nut washer ...	1	77	
T352A	B2 205	—	Fork crown and column lock nut ...	1	77	
19019	L12-2 174	MJ59	Head clip ...	1	88, 99	
15627	—	—	Fork crown and column lock nut washer ...	1	88, 99	
19490	L12-2 205	—	Fork crown and column lock nut ...	1	88, 99	
T830	B2 203	MJ49	Steering damper rod ...	1	77	
E3231	B2 640	MJ48	Steering damper rod nuts ...	2	77	
E4563	B2 202	MJ47	Steering damper rod spring ...	1	77	
E4643	B2 201	MJ81	Steering damper adjuster ...	1	77	
T816	B2 633	MJ3	Fork main tube filler and retaining plug... ..	2	77	
16998	H12-2 633	MJ57	Fork main tube filler and retaining plug... ..	2	88, 99	
T320	B2 634	MJ54	Fork main tube filler and retaining plug washer ...	2	88, 99, 77	
18769	H12-2 206	MJ74	Front fork stop and anchor plate ...	1	88, 99	
16008	H12-2 207	MJ72	Front fork stop and anchor plate friction disc ...	1	88, 99	
12343	—	—	Front fork stop and anchor plate bolt ...	1	88, 99	
E3229	—	—	Front fork stop and anchor plate bolt nut ...	1	88, 99	
E5379	—	—	Front fork stop and anchor plate bolt washer ...	1	88, 99	
15686	—	—	Front fork stop and anchor plate distance piece ...	1	88, 99	
19021A	L4 175	MJ6	Caps for handlebar top clip ...	2	88, 99, 77	
19437	L4 176	MJ3	Handlebar top slip securing screws ...	4	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
HANDLEBARS AND FITTINGS						£ s. d.
19396	L4 211	—	Handlebar bend	1	77	
19405	L12-2 211	—	Handlebar bend	1	88, 99	
19410	—	—	Front brake lever and air control lever, complete	1	88, 99, 77	
19414	—	—	Throttle grip (plastic)	1	88, 99, 77	
20267	—	—	Dummy grip	1	88, 99, 77	
M122 216	—	—	Air lever complete	1	88, 99, 77	
M122 217	—	—	Air lever only	1	88, 99, 77	
M122 218	—	—	Air lever body	1	88, 99, 77	
M122 219	—	—	Air lever cap screw	1	88, 99, 77	
M122 220	—	—	Air lever cap	1	88, 99, 77	
A2 221	—	—	Air lever cap spring washer	1	88, 99, 77	
M122 223	—	—	Air lever clip screw	2	88, 99, 77	
M12-2 224	—	—	Front brake control lever, complete	1	88, 99, 77	
M12-2 225	—	—	Front brake control lever only	1	88, 99, 77	
M12-2 226	—	—	Clutch lever complete	1	88, 99, 77	
M12-2 227	—	—	Clutch lever only	1	88, 99, 77	
M12-2 228RH	—	—	Front brake lever body	1	88, 99, 77	
M122 226LH	—	—	Clutch lever body	1	88, 99, 77	
A2 222	—	—	Clutch lever body clip	1	88, 99, 77	
A2 223	—	—	Clutch lever body clip pins	2	88, 99, 77	
M122 229	—	—	Clutch or front brake lever pivot pin	2	88, 99, 77	
M122 230	—	—	Clutch or front brake pivot pin nut	2	88, 99, 77	
M12-2 238	—	—	Twist grip top half clip	1	88, 99, 77	
M12-2 239	—	—	Twist grip bottom half clip	1	88, 99, 77	
A2 240	—	—	Twist grip clip fixing pins	2	88, 99, 77	
M12-2 241	—	—	Twist grip control barrel	1	88, 99, 77	
A2 242	—	—	Twist grip control barrel adjusting screw	1	88, 99, 77	
A2 236	—	—	Twist grip control barrel adjuster nut	1	88, 99, 77	
M12-2 243	—	—	Twist grip control barrel adjuster spring	1	88, 99, 77	
M12-2 244	—	—	Twist grip cable stop	1	88, 99, 77	
M12-2 237	—	—	Twist grip complete	1	88, 99, 77	

CONTROL CABLE, ADJUSTERS AND NIPPLES

19328	—	—	Clutch cable	1	88, 99	
19827	—	—	Clutch cable	1	77	
A2 267	—	—	Clutch cable inner	1	77	
M12-2 267	—	—	Clutch cable inner	1	88, 99	
M12-2 266	—	—	Clutch cable outer	1	88, 99	
M15 266	—	—	Clutch cable outer	1	77	
20295	B2 268	—	Front brake cable inner and outer	1	88, 99, 77	
B2 270	—	—	Front brake cable inner	1	88, 99, 77	
B2 269	—	—	Front brake cable outer	1	88, 99, 77	
20276	—	—	Air control cable complete	1	88, 99, 77	
M12- 260	—	—	Air control cable inner	1	88, 99, 77	
M12-2 261	—	—	Air control cable outer	1	88, 99, 77	
20277	—	—	Throttle control cable complete	1	88, 99, 77	
18881	A2 247	—	Front brake cable adjuster	1	88, 99, 77	
18889	A2 248	—	Clutch cable adjuster	1	88, 99, 77	
A2 249	—	—	Air or throttle cable nipple (handlebar end)	1	88, 99, 77	
19987	A2 253	—	Clutch cable nipple (gear box end)	1	88, 99, 77	
14759	A2 709	—	Front brake U clip	1	88, 99, 77	
A2 427	—	—	Front brake U clip pin	1	88, 99, 77	
A2 195	—	—	Front brake U clip cotter pin	1	88, 99, 77	


PETROL TANK AND FITTINGS

200072	—	—	Petrol Tank	1	88, 99	
20154	—	—	Petrol tank	1	77	
18524	K12 280	—	Petrol Tank filler cap	1	88, 99, 77	
16256	H12-2 1070	—	Petrol Tank fixing strap	1	88, 99	
16238	H12-2 1071	—	Petrol tank fixing strap rubber	1	88, 99	
16372	H12-2 1072	—	Petrol tank fixing strap roller (front)	1	88, 99	
16257	H12-2 1073	—	Fulcrum pin for strap	1	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
PETROL TANK AND FITTINGS—cont.						
£ s. d.						
18291	A2 281	—	Fulcrum pin split pin	2	88, 99	
16365	H12-2/1074	—	Petrol tank strap roller (tool tray end)...	1	88, 99	
18747	—	—	Roller bracket	1	88, 99	
16413	—	—	Roller bracket pins	2	88, 99	
17013	—	—	Petrol tank strap roller fixing bolt ...	1	88, 99	
E5380	—	—	Petrol tank strap roller fixing bolt washer	2	88, 99	
E3223	—	—	Petrol tank strap roller fixing bolt nut ...	1	88, 99	
16237	H12-2 289	—	Petrol tank mounting rubbers	6	88, 99	
20262	—	—	Petrol tank side panels, L.H.	1	88, 99	
20261	—	—	Petrol tank side panels, R.H.	1	88, 99	
20231	—	—	Petrol tank side panel fixing screws ...	4	88, 99	
20233	—	—	Petrol tank side panel plastic bead ...	2	88, 99	
18727	L12-2/283	—	Petrol pipe complete	1	88, 99	
16294	H12-2 285	—	Petrol tap	1	88, 99	
13786	—	—	Petrol tap washer... ..	1	88, 99	
E5264	—	—	Petrol tap wash	1	88, 99	
E6745	A2 277	—	Petrol tank attachment bolt	4	77	
E6744	A2 276	—	Petrol tank platform rubber washer ...	4	77	
E6743	A2 278	—	Petrol tank attachment bolt rubber washer	4	77	
E6742	A2 279	—	Petrol tank attachment bolt rubber washer steel cup	4	77	
10914	A2 275	—	Petrol tank platform packing washer (steel)	4	77	
20197	—	—	Petrol tank side panel, L.H.	1	77	
20196	—	—	Petrol tank side panel, R.H.	1	77	
20231	—	—	Petrol tank side panel fixing pins ...	4	77	
20232	—	—	Petrol tank side panel plastic bead ...	2	77	
E3073	A2 289	—	Petrol tank top tube packing	2	77	
20309	—	—	Petrol pipe assembly	1	77	
19388A	—	—	Petrol pipe rubber (short)	1	77	
19388B	—	—	Petrol pipe rubber (long)	2	77	
19439	—	—	Petrol pipe T piece	1	77	
19325	L4 285	—	Petrol tap with filter and banjo	2	77	
18700	—	—	Petrol tap washer	2	77	
11208 3	L4 287	—	Nut for petrol tap	2	77	
18678	—	—	Petrol tank badge	2	88, 99, 77	
20230	—	—	Petrol tank badge screws	4	88, 99, 77	
18786	—	—	Petrol tank badge washers	4	88, 99, 77	
20222	—	—	Petrol tank knee grip, L.H.	1	88, 99, 77	
20223	—	—	Petrol tank knee grip, R.H.	1	88, 99, 77	

OIL TANK AND FITTINGS

19208E	—	—	Oil tank complete	1	88, 99	
20290	—	—	Oil tank complete	1	77	
18526	K12 291	—	Oil tank filler cap	1	88, 99, 77	
12342	—	—	Oil tank top fixing bolt	1	88, 99, 77	
E5379	—	—	Oil tank top fixing bolt washer	2	88, 99, 77	
17698	—	—	Oil tank top fixing bolt washer	1	88, 99	
E3229	—	—	Oil tank top fixing bolt nut	1	88, 99	
19678	—	—	Oil tank fixing bolt	1	77	
E5456	—	—	Oil tank fixing bolt washer	1	77	
E6453	—	—	Oil tank bottom fixing studs	2	88, 99, 77	
E3223	—	—	Oil tank bottom fixing stud nuts	2	88, 99, 77	
14867	E2 1050	—	Oil tank bottom fixing plate	1	77	
19201	L12-2 1075	—	Oil tank and battery box platform ...	1	88, 99	
19212	L12 1076	—	Oil tank and battery box platform rubber mat	1	88, 99	
14481	—	—	Oil tank platform fixing bolts	4	88, 99	
E3229	—	—	Oil tank platform fixing bolt nuts ...	4	88, 99	
E5379	—	—	Oil tank platform fixing bolt washers ...	8	88, 99	
17014	L12-2/298	—	Oil tank breather pipe	1	88, 99, 77	
19380	L4 1055	—	Oil tank return pipe adapter	1	88, 99, 77	
13786	E3 1056	—	Oil tank return pipe adapter washers ...	2	88, 99, 77	
13765	—	—	Oil tank drain plug	1	88, 99, 77	

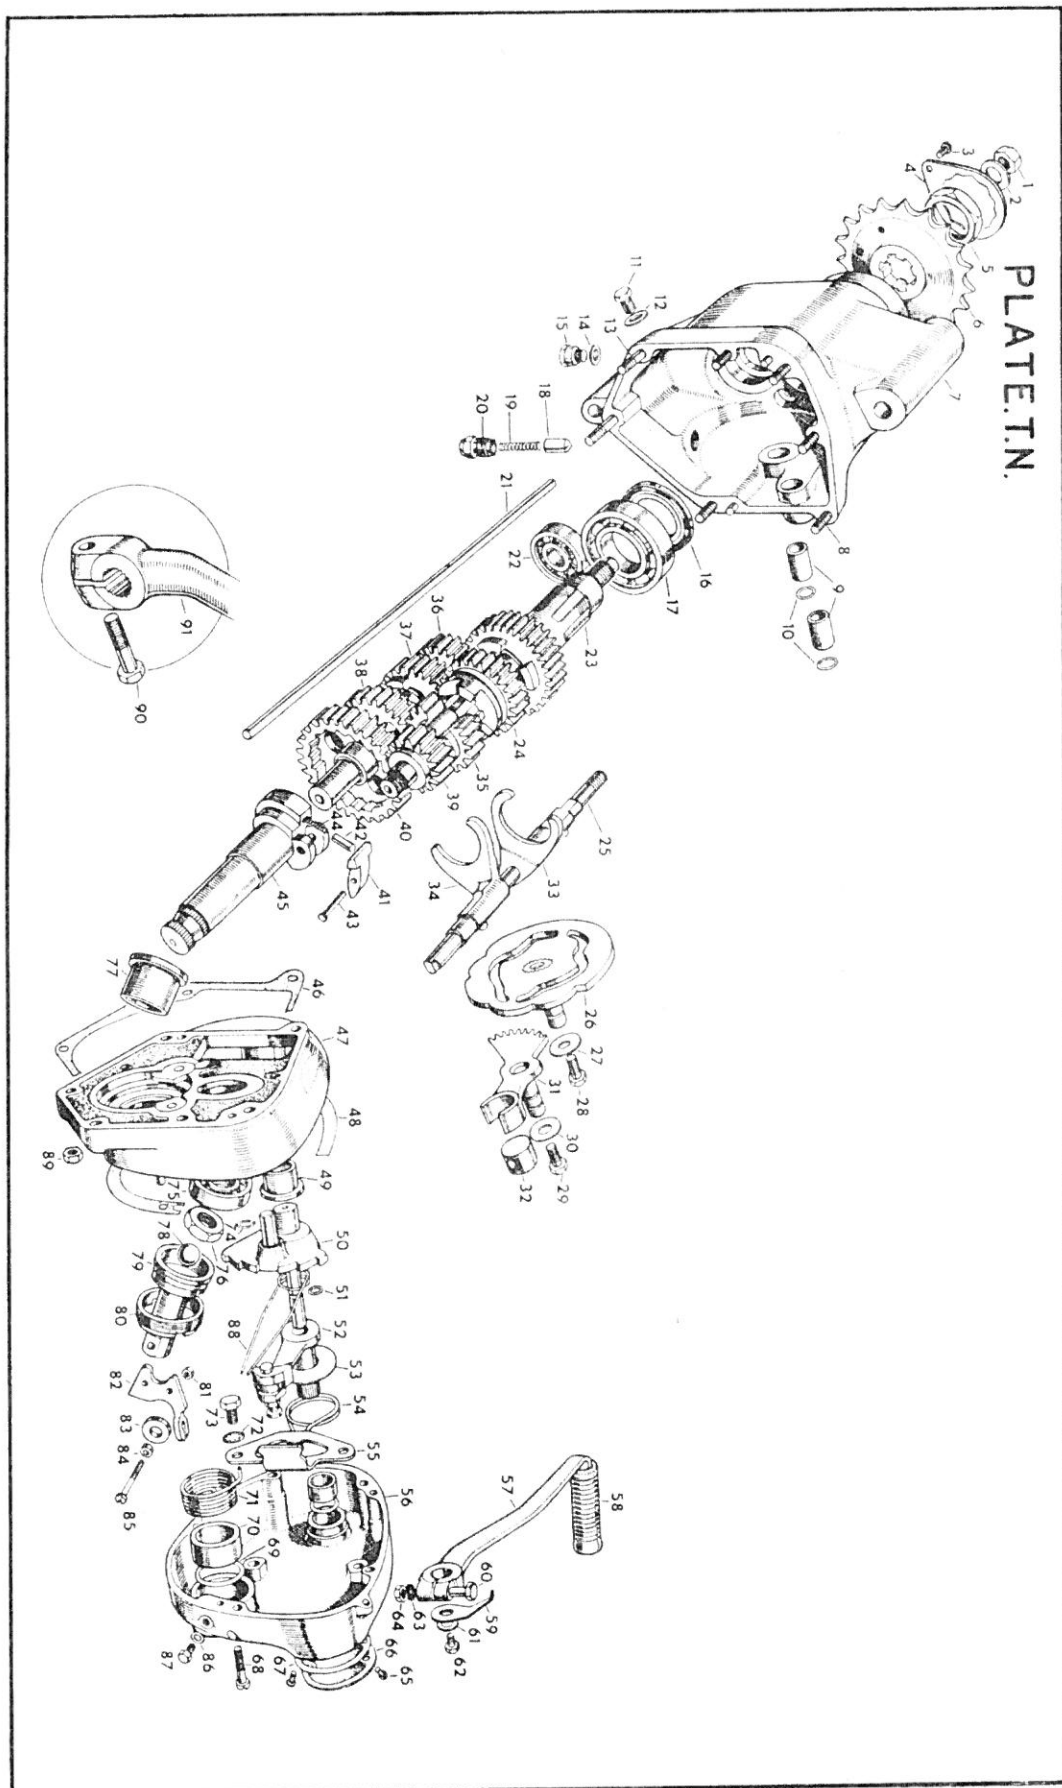

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
OIL TANK AND FITTINGS—cont.						
13833	—	—	Oil tank drain plug washer ...	1	88, 99, 77	£ s. d.
19379	L4292	—	Oil tank filter union with gauze ...	1	88, 99, 77	
E6640	A2 293	—	Oil tank filter union washer ...	1	88, 99, 77	

OIL PIPES AND FITTINGS

20316	—	—	Junction box with oil pipes ...	1	77	
19457	D12 993	—	Junction box with oil pipes ...	1	88, 99	
T2100	D12 995	—	Junction box washer ...	1	88, 99, 77	
T2106	D12 994	—	Junction box dowel ...	1	88, 99, 77	
T2006	—	—	Junction box stud ...	1	88, 99, 77	
E5377	D12 997	—	Junction box stud washer ...	1	88, 99, 77	
T2101	D12 996	—	Junction box stud nut ...	1	88, 99, 77	
19542	L4 295 6	—	Oil pipes, feed and return ...	2	88, 99, 77	
19425	L12-2 699	TA12	Rocker box oil feed pipe... ..	1	88, 99	
18716	—	—	Rocker box oil feed pipe... ..	1	77	
18101	D12 700	TA13	Rocker box banjo bolts ...	2	88, 99, 77	
T1084	D12 701	TA11	Rocker box banjo bolt washers ...	4	88, 99, 77	

GEARBOX SHELL

040097	—	TN7	Gearbox shell assembly ...	1	88, 99, 77	
040056	—	—	Gearbox bush ...	2	88, 99, 77	
000577	—	—	Gearbox dowel pins ...	2	88, 99, 77	
040064	—	TN8	Gearbox studs (short) ...	2	88, 99, 77	
000271	—	TN13	Gearbox studs (long) ...	5	88, 99, 77	
000004	—	—	Gearbox stud nuts ...	7	88, 99, 77	
040030	—	TN46	Gearbox shell gasket ...	1	88, 99, 77	
040403	—	TN47	Gearbox inner cover ...	1	88, 99, 77	
040072	—	TN77	Gearbox inner cover K S ...	1	88, 99, 77	
040042	—	—	Gearbox inner cover K S stop ...	1	88, 99, 77	
040071	—	—	Gearbox inner cover K S cam ...	1	88, 99, 77	
040041	—	—	Kickstarter cam and stop rivets... ..	2	88, 99, 77	
040061	—	TN49	Inner bush for gear change ...	1	88, 99, 77	
000577	—	—	Dowel pins... ..	2	88, 99, 77	
040063	—	—	Bush for gear change ...	1	88, 99, 77	
040058	—	TN70	Bush for kickstarter ...	1	88, 99, 77	
040133	—	TN56	Gearbox outer cover ...	1	88, 99, 77	
040055	—	TN48	Outer cover gasket ...	1	88, 99, 77	
000482	—	—	Outer cover screws ...	5	88, 99, 77	
040138	—	TN11	Drain plug ...	1	88, 99, 77	
000200	—	TN12	Drain plug washer ...	1	88, 99, 77	
040053	—	TN66	Inspection cover ...	1	88, 99, 77	
040057	—	TN67	Inspection cover washer ...	1	88, 99, 77	
000450	—	TN65	Inspection cover pins ...	2	88, 99, 77	
000348	—	TN87	Oil level plug ...	1	88, 99, 77	
000203	—	TN86	Oil level plug washer ...	1	88, 99, 77	

GEARBOX FIXING BOLTS

14367	D12 310	MJ25	Gearbox top bolt ...	1	88, 99, 77	
15170	D12 313	MJ17	Gearbox top bolt nut ...	1	88, 99, 77	
16410	H12-2/312	—	Gearbox bottom stud less nut ...	1	88, 99	
18495	A2 312	—	Gearbox bottom bolt less nut ...	1	77	
E4533	A2 311	—	Gearbox bottom bolt nut ...	1	77	
11809	—	MJ28	Gearbox bottom bolt washer ...	1	88, 99, 77	
E3227	—	MJ27	Gearbox bottom bolt nut ...	1	88, 99	

GEARBOX FRONT CHAIN ADJUSTER

H2/314	—	MJ16	Gearbox front chain adjuster eye bolt and nut ...	1	88, 99, 77	
E3231	—	MJ18	Gearbox front chain adjuster nuts ...	2	88, 99, 77	
16997	H2 1008	—	Gearbox front chain adjuster bolt only... ..	1	88, 99, 77	

FART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
GEARBOX PINIONS, SHAFTS AND BEARINGS						£ s. d.
040128	---	---	Gearbox complete less clutch ...	1	88, 99, 77	
040098	---	TN17	Ballrace, mainshaft (large) ...	1	88, 99, 77	
040099	---	TN75	Ballrace, mainshaft (small) ...	1	88, 99, 77	
040100	---	TN22	Ballrace, layshaft ...	1	88, 99, 77	
040131	---	---	Axle sprocket spacer ...	1	88, 99, 77	
040132	---	TN16	Sleeve gear oil seal ...	1	88, 99, 77	
040116	---	TN23	Sleeve gear assembly ...	1	88, 99, 77	
040062	---	---	Sleeve gear bushes ...	2	88, 99, 77	
040010	---	TN6	Axle sprocket ...	1	88, 99, 77	
040076	---	TN4	Axle sprocket locking plate ...	1	88, 99, 77	
000450	---	TN3	Axle sprocket locking plate screw ...	1	88, 99, 77	
040070	---	TN1	Axle sprocket nut ...	1	88, 99, 77	
040108	---	TN26	Cam plate assembly ...	1	88, 99, 77	
040018	---	---	Cam plate bare ...	1	88, 99, 77	
040015	---	---	Cam plate spindle ...	1	88, 99, 77	
040109	---	TN31	Quadrant assembly ...	1	88, 99, 77	
040129	---	---	Quadrant O ring ...	1	88, 99, 77	
000174	---	TN27	Washer for cam and quadrant ...	2	88, 99, 77	
040136	---	TN28-30	Screw for cam and quadrant ...	2	88, 99, 77	
040022	---	TN34	Selector fork ...	2	88, 99, 77	
040035	---	TN23	Selector fork shaft ...	1	88, 99, 77	
040001	---	---	Mainshaft ...	1	88, 99, 77	
040023	---	TN74	Mainshaft nut ...	1	88, 99, 77	
040012	---	TN24	Mainshaft, 3rd gear ...	1	88, 99, 77	
040021	---	TN35	Mainshaft, 2nd gear ...	1	88, 99, 77	
040048	---	---	Mainshaft, 2nd gear bush ...	1	88, 99, 77	
040026	---	TN39	Mainshaft, bottom gear ...	1	88, 99, 77	
040025	---	---	Layshaft ...	1	88, 99, 77	
040020	---	TN36	Layshaft pinion ...	1	88, 99, 77	
040016	---	TN37	Layshaft, 3rd gear ...	1	88, 99, 77	
040047	---	---	Layshaft, 3rd gear bush ...	1	88, 99, 77	
040019	---	TN38	Layshaft, 2nd gear ...	1	88, 99, 77	
040115	---	TN40	Layshaft, bottom gear ...	1	88, 99, 77	
040046	---	---	Layshaft, bottom gear bush ...	1	88, 99, 77	
040078	---	TN32	Roller for knuckle pin ...	1	88, 99, 77	
040036	---	TN20	Index plunger bush ...	1	88, 99, 77	
040045	---	TN19	Index plunger spring ...	1	88, 99, 77	
040034	---	TN18	Index plunger ...	1	88, 99, 77	


KICKSTARTER PARTS

040114	---	TN45	Kickstarter axle assembly ...	1	88, 99, 77	
040032	---	TN77	Kickstarter axle assembly bush ...	1	88, 99, 77	
040017	---	TN41	Kickstarter pawl ...	1	88, 99, 77	
040033	---	TN43	Kickstarter pawl pin ...	1	88, 99, 77	
040044	---	TN44	Kickstarter pawl spring ...	1	88, 99, 77	
040069	---	TN42	Kickstarter pawl plunger ...	1	88, 99, 77	
040269	---	---	Kickstarter crank, folding type ...	1	88, 99, 77	
041315	---	---	Pedal for folding kickstarter crank ...	1	88, 99, 77	
041817	---	---	Securing bolt for pedal ...	1	88, 99, 77	
041318	---	---	Spring for folding pedal ...	1	88, 99, 77	
040101	---	TN91	Kickstarter crank ...	1	88, 99, 77	
040102	---	TN90	Kickstarter crank bolt ...	1	88, 99, 77	
040043	---	TN71	Kickstarter return spring ...	1	88, 99, 77	
040005	---	TN69	Kickstarter O ring ...	1	88, 99, 77	
N8C81	---	---	Kickstarter rubber ...	1	88, 99, 77	

POSITIVE FOOTCHANGE

040004	---	TN57	Footchange lever ...	1	88, 99, 77	
040086	---	TN58	Footchange lever rubber ...	1	88, 99, 77	
040105	---	TN60	Footchange lever bolt ...	1	88, 99, 77	
000191	---	TN63	Footchange lever bolt washer ...	1	88, 99, 77	
000005	---	TN64	Footchange lever bolt nut ...	1	88, 99, 77	
040051	---	TN59	Footchange gear indicator ...	1	88, 99, 77	
040137	---	TN62	Footchange gear indicator screw ...	1	88, 99, 77	
000012	---	TN61	Footchange gear indicator washer ...	1	88, 99, 77	
040111	---	TN50	Footchange ratchet plate with spindle ...	1	88, 99, 77	

PLATE MQ

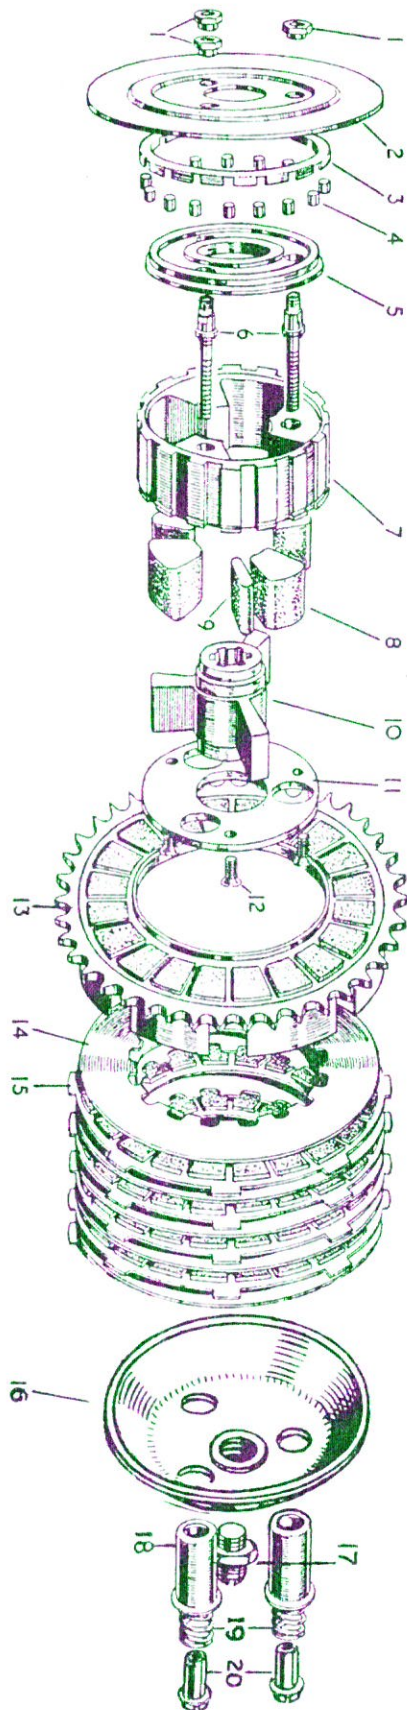

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
POSITIVE FOOTCHANGE—cont.						£ s. d.
040066	—	—	Footchange ratchet plate spindle ...	1	88, 99, 77	
040052	—	TN55	Footchange stop plate ...	1	88, 99, 77	
041400	—	TN73	Footchange stop plate screw ...	2	88, 99, 77	
014117	—	TN72	Footchange stop plate spring washer ...	2	88, 99, 77	
040079	—	—	O ring for ratchet spindle ...	1	88, 99, 77	
04006	—	—	O ring for footchange ...	1	88, 99, 77	
040038	—	TN88	Footchange pawl return spring ...	1	88, 99, 77	
040110	—	TN52	Footchange pawl carrier assembly ...	1	88, 99, 77	
040002	—	—	Footchange pawl carrier only ...	1	88, 99, 77	
040024	—	—	Footchange pawl ...	1	88, 99, 77	
040067	—	—	Footchange pawl carrier pin ...	1	88, 99, 77	
040049	—	—	Footchange pawl circlip ...	1	88, 99, 77	
040075	—	TN54	Footchange pawl return spring ...	1	88, 99, 77	
040135	—	TN53	Footchange pawl return spring washer ...	1	88, 99, 77	
040061	—	—	Footchange inner bush ...	1	88, 99, 77	


CLUTCH

040390	—	—	Clutch complete ...	1	88, 99, 77	
040031	—	TN78	Clutch operating ball ...	1	88, 99, 77	
040059	—	TN79	Clutch operating body ...	1	88, 99, 77	
040003	—	TN80	Clutch operating body locking ring ...	1	88, 99, 77	
040029	—	TN82	Clutch operating lever ...	1	88, 99, 77	
040060	—	TN83	Clutch operating roller ...	1	88, 99, 77	
040065	—	TN84	Clutch roller sleeve ...	1	88, 99, 77	
000457	—	TN85	Clutch roller screw (2BA) ...	1	88, 99, 71	
011846	—	TN81	Clutch roller screw nut ...	1	88, 99, 77	
040084	—	TN.21	Clutch rod ...	1	88, 99, 77	
040353	—	MQ2	Clutch back plate ...	1	88, 99, 77	
040367	A2 382	MQ3	Clutch roller cage ...	1	88, 99, 77	
000075	A2 383	MQ4	Clutch rollers (15 per set) ...	1 set	88, 99, 77	
040351	—	MQ5	Clutch race plate ...	1	88, 99, 77	
040384	—	MQ6	Clutch spring stud ...	3	88, 99, 77	
040356	A2 402	MQ1	Clutch spring stud nut ...	3	88, 99, 77	
040366	—	MQ7	Clutch body only ...	1	88, 99, 77	
040386	A2 388	MQ8	Clutch shock absorber rubbers (large)...	3	88, 99, 77	
040387	A2 389	MQ9	Clutch shock absorber rubbers (small)...	3	88, 99, 77	
040362	—	MQ11	Clutch shock absorber cover plate ...	1	88, 99, 77	
040363	—	MQ12	Clutch shock absorber cover plate pins...	3	88, 99, 77	
040354	—	MQ10	Clutch body centre ...	1	88, 99, 77	
040392	—	MQ13	Clutch sprocket and inserts ...	1	88, 99, 77	
040371	—	—	Clutch sprocket inserts (thick) ...	18	88, 99, 77	
			per doz.			
040391	—	MQ15	Clutch friction plate and inserts ...	4	88, 99, 77	
040370	—	—	Clutch friction plate inserts (thin) ...	80	88, 99, 77	
			per doz.			
040355	—	MQ14	Clutch plate (plain) ...	4	88, 99, 77	
040365	—	MQ16	Clutch pressure plate ...	1	88, 99, 77	
040360	—	MQ7	Clutch adjuster ...	1	88, 99, 77	
040376	—	—	Clutch adjuster lock nut ...	1	88, 99, 00	
040388	—	MQ18	Clutch spring cup ...	3	88, 99, 77	
040385	—	MQ19	Clutch spring ...	3	88, 99, 77	
040389	—	MQ20	Clutch spring adjuster nut ...	3	88, 99, 77	
040373	E6254	—	Main axle nut ...	1	88, 99, 77	
040374	E6266	—	Main axle nut washer ...	1	88, 99, 77	

FRONT WHEEL AND FITTINGS

M12-2/714	—	—	Front wheel complete with bearings and brake less tyre ...	1	88, 99	
K12-2/714	—	—	Front wheel complete with bearings and brake less tyre ...	1	77	
K12-2/428	—	—	Front wheel with hub shell only ...	1	77	
M12-2/428	—	—	Front wheel with hub shell only ...	1	88, 99	
13716	—	KR21	Front wheel hub shell with brake drum ...	1	77	
19664	—	—	Front wheel hub shell with brake drum ...	1	88, 99	
18214	—	—	Front wheel brake drum to hub studs ...	3	77	
E6183	—	KR19	Front wheel brake drum to hub stud nuts ...	3	77	

PLATE KR

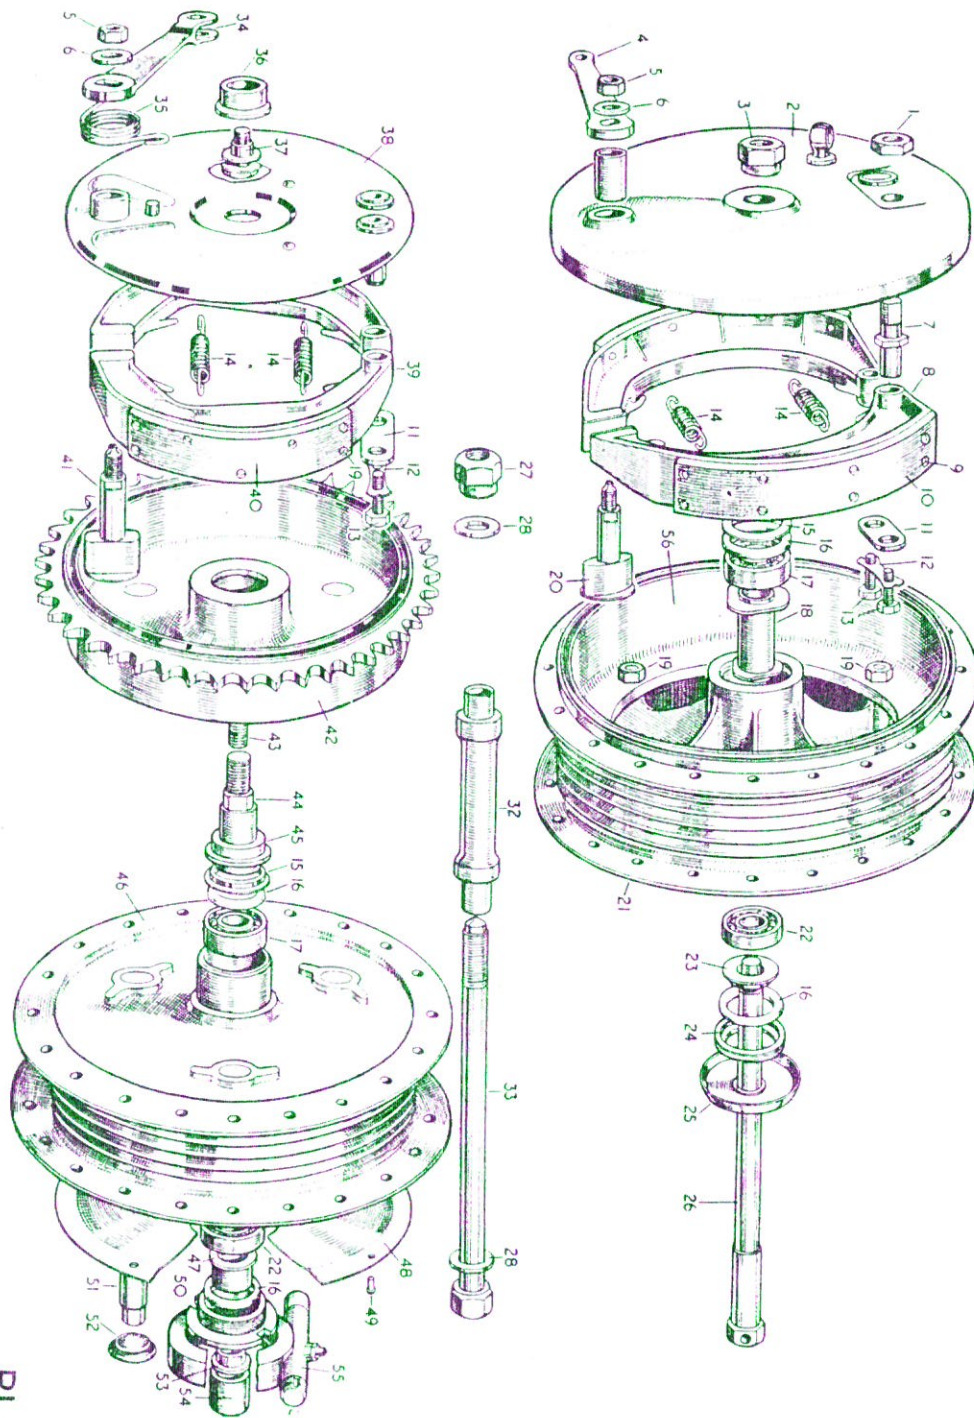

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
FRONT WHEEL AND FITTINGS—cont.						£ s. d.
16783	J2 441	KR23	Front wheel hub bearing distance piece...	1	88, 99, 77	
E6888	A2 440	KR24	Front wheel hub bearing locking ring ...	1	88, 99, 77	
19719	—	KR15	Front wheel hub bearing oil retaining washer ...	1	88, 99, 77	
19646	—	KR18	Front wheel hub bearing distance tube ...	1	88, 99, 77	
50036	C2 656	—	Front wheel hub bearing distance tube...	1	77	
18551	K12-2 442	KR25	Front wheel hub bearing dust cap ...	1	88, 99, 77	
20249	B2 452	KR26	Front wheel hub spindle ...	1	88, 99, 77	
E4768	B2 454	KR3	Front wheel hub spindle nut ...	1	88, 99, 77	
50257	—	KR2	Front wheel brake plate ...	1	88, 99	
50127	J2 457	—	Front wheel brake plate ...	1	77	
50249	—	—	Front wheel brake shoe cam and washer	1	88, 99	
50121	J2 448F	—	Front wheel brake shoe cam and washer	1	77	
19653	—	KR7	Front wheel brake plate pivot pin ...	1	88, 99, 77	
13079	B2 658	KR1	Front wheel brake plate pivot pin nut...	1	88, 99, 77	
20052	—	KR4	Front wheel brake cam lever ...	1	88, 99	
16781	J2 459	—	Front wheel brake cam lever ...	1	77	
E3255	—	—	Front wheel brake cam lever pin ...	1	88, 99, 77	
18942	—	—	Front wheel brake cam lever nut ...	1	88, 99, 77	
E5455	—	—	Front wheel brake cam lever pin washer	1	88, 99, 77	
17735	A2 195	—	Front wheel brake cam lever split cotter	1	88, 99, 77	
E5944A	—	—	Front wheel brake plate packing washer	1	88, 99, 77	

PARTS COMMON TO FRONT AND REAR HUBS

17719	A2 435	KR22	Hub bearing (nearside front, offside rear)	2	88, 99, 77	
						nett
17721	A2 436	KR17	Hub bearing (offside front, nearside rear)	2	88, 99, 77	
						nett
E6885	A2 437	KR16	Hub bearing felt washer ...	4	88, 99, 77	
E6889	A2 438	KR15	Hub bearing pen steel washer ...	2	88, 99, 77	
E5832	A2 445	KR14	Brake shoe return spring ...	4	88, 99, 77	
14454	—	KR11	Brake shoe pivot pin retaining plate ...	2	88, 99, 77	
14506	—	KR12	Brake shoe picot pin retaining plate tab washer ...	2	88, 99, 77	
14455	—	KR13	Brake plate bolts ...	2	88, 99, 77	

BRAKE SHOE LININGS AND SHOES

18502	T2 443F	KR8	Hub brake shoe and linings (front) ...	2	88, 99, 77	
19584	H2 443R	KR39	Hub brake shoe and linings (rear) ...	2	88, 99, 77	
16547	H2 444R	KR40	Hub brake shoes linings (R) ...	1 pr.	88, 99, 77	
						per pair nett
16782	J2 444F	KR10	Hub brake shoe linings (F) ...	1 pr.	88, 99, 77	
						per pair nett
E5061	A2 445	KR9	Hub brake shoe lining rivets (per set 14)	2 set	88, 99, 77	
						per set

REAR WHEEL AND FITTINGS

M12-2 715	—	—	Rear wheel complete with bearings and brakes less tyre ...	1	88, 99, 77	
M12-2 649	—	—	Rear wheel with hub shell only ...	1	88, 99, 77	
19689	—	KR46	Rear hub only ...	1	88, 99, 77	
18348	—	KR48	Rear hub diaphragm ...	1	88, 99, 77	
18396	—	KR49	Rear hub diaphragm drive screws ...	3	88, 99, 77	
18731A	—	KR52	Rear hub rubber grommets ...	3	88, 99, 77	
50245	—	KR42	Rear hub brake drum with studs 43T ...	1	88, 99, 77	
18233	K12-2 451	KR51	Rear hub brake drum stud sleeve nuts ...	3	88, 99, 77	
18234	K12-2 441	KR47	Rear hub bearing distance piece ...	1	88, 99, 77	
18232	K12-2 440	KR50	Rear hub bearing locking ring ...	1	88, 99, 77	
19714	—	KR45	Rear hub felt washer cup retaining washer	1	88, 99, 77	
18231	K12-2 434	KR32	Rear hub inner sleeve ...	1	88, 99, 77	
E4760	K12-2 464	KR43	Rear hub brake drum attachment piece...	1	88, 99, 77	
13270	B2 660	KR53	Speedometer drive distance piece ...	1	88, 99, 77	
18235	K122 461	KR54	Hub spindle distance piece ...	1	88, 99, 77	
19265	A2 460	KR33	Hub spindle ...	1	88, 99, 77	
19266	B2 659	KR28	Hub spindle washers ...	2	88, 99, 77	
19267	A2 454	KR29	Hub spindle nut ...	1	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
REAR WHEEL AND FITTINGS—cont.						£ s. d.
19852	—	KR38	Rear brake plate	1	88, 99	
50069	A2 462	—	Rear brake plate	1	77	
50011	—	KR41	Rear brake shoe cam with washer ...	1	88, 99, 77	
18338	—	—	Rear brake drum stud locating ...	1	88, 99, 77	
18339	—	—	Rear brake drum stud non-locating ...	2	88, 99, 77	
13684	H12 470	KR35	Brake lever return spring ...	1	77	
18177	H12 469	KR34	Brake cam lever	1	77	
19765	—	—	Brake cam lever	1	88, 99	
E5455	—	KR6	Brake cam lever washer	1	88, 99, 77	
18942	—	KR5	Brake cam lever nut	1	88, 99, 77	
19268	A2 465	KR36	Brake plate distance piece	1	88, 99, 77	
15704	A2 466	—	Rear brake torque arm	1	77	
15703	—	—	Bolt to frame	1	77	
E3224A	—	—	Nut to plate	1	77	
E5375	—	—	Washer	1	77	
18923	—	—	Nut	1	77	
T5276	—	—	Brake plate washers	AR	88, 99, 77	

WHEEL RIMS AND SPOKES

18350	K12-2 432	—	Wheel Rim	2	88, 99, 77	
20063	—	—	Spokes (long head) (per set) ...	20	88, 99, 77	
					per set	
20061	—	—	Spokes (short head) (per set) ...	20	88, 99, 77	
					per set	
17717	A2 431	—	Nipples (per set)	40	88, 99, 77	
					per set	
17724	—	—	Security Bolts (rear)	1	88, 99	

FRONT CHAINCASE AND FITTINGS

20224A	—	—	Front chaincase inner, complete ...	1	77	
19655	—	—	Front chaincase inner, complete ...	1	88, 99	
15639	H12 485	—	Front chaincase outer	1	88, 99, 77	
14855	D12 492	—	Crankcase spigot washer	1	88, 99, 77	
E6354	—	—	Crankcase to chaincase bolt	1	88, 99, 77	
E6202	A2 490	—	Chaincase locking washer	1	88, 99, 77	
14371	D12 491	—	Chaincase support stud	1	77	
E3231	—	—	Chaincase support stud nut	1	77	
E3223	—	—	Chaincase support stud nut	1	77	
E5456	—	—	Chaincase support stud washer ...	1	77	
10914	A2 275	—	Chaincase support stud washer ...	1	88, 99, 77	
13185	A2 486	—	Chaincase sealing washer	1	88, 99, 77	
E6207	A2 494	—	Chaincase footrest tube felt washer ...	1	88, 99, 77	
E3336	—	—	Chaincase oil drain plug	1	88, 99, 77	
E5264	—	—	Chaincase oil drain plug washer ...	1	88, 99, 77	
14837	A2 487	—	Chaincase inspection cover	1	88, 99, 77	
E6085	A2 488	—	Chaincase inspection cover washer ...	1	88, 99, 77	
E6055	A2 495	MZ47	Chaincase attachment nut	1	88, 99, 77	
E6056	A2 496	MZ46	Chaincase attachment nut washer ...	1	88, 99, 77	

REAR CHAINGUARD AND FITTINGS

19846	—	—	Rear chainguard	1	88, 99	
16810	H12 497	—	Rear chainguard	1	77	
12342	—	—	Rear chainguard front fixing bolts ...	2	88, 99	
12342	—	—	Rear chainguard front fixing bolt ...	1	77	
E5379	—	—	Rear chainguard front fixing bolt washers ...	4	88, 99	
E5379	—	—	Rear chainguard front fixing bolt washers ...	2	77	
E3229	—	—	Rear chainguard front fixing bolt nut ...	1	77	
E3229	—	—	Rear chainguard front fixing bolt nuts ...	2	88, 99	
15817	—	—	Rear chainguard rear fixing bolt ...	1	88, 99, 77	
E5379	—	—	Rear chainguard rear fixing bolt washers ...	2	88, 99, 77	
E3229	—	—	Rear chainguard rear fixing bolt nut ...	1	88, 99, 77	
15186	—	—	Rear chainguard distance piece ...	1	88, 99	
16879	—	—	Rear chainguard distance piece ...	1	77	
18285	—	—	Rear chainguard grommet	1	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
REAR BRAKE PEDAL AND FITTINGS						£ s. d.
19995	—	MZ62	Rear brake pedal	1	88, 99	
20308	—	—	Rear brake pedal	1	77	
19996	—	MZ69	Rear brake pedal spindle... ..	1	88, 99	
14374	D12/502	—	Rear brake pedal spindle... ..	1	77	
E5456	—	—	Rear brake pedal spindle washer	1	77	
E3223	—	—	Rear brake pedal spindle nut	1	77	
15820	H12/504	MZ66	Rear brake pedal jaw joint	1	88, 99	
E3227	—	MZ67	Rear brake spindle nut	1	88, 99	
11809	—	MZ68	Rear brake spindle washer	1	88, 99	
19997	—	—	Rear brake spindle distance piece	1	88, 99	
19976	—	MZ74	Rear brake spindle stop	1	77	
E3808	—	MZ72	Rear brake pedal adjusting screw	1	77	
13145	—	—	Rear brake pedal adjusting screw lock nut	1	77	
19929	—	—	Rear brake pedal return spring	1	88, 99	
19978	—	MZ63	Rear brake pedal grease nipple	1	88, 99	
17727	A2/500	—	Rear brake pedal grease nipple	1	77	
18929	—	—	Rear brake lever roller	1	88, 99, 77	
15819	H12-2/503	MZ73	Rear brake rod	1	88, 99	
16847	H12/503	—	Rear brake rod	1	77	
20134	—	MZ66	Rear brake rod jaw joint assembly	1	88, 99	
E3255	—	MZ64	Rear brake rod jaw joint pin	1	77	
17043	H12/506	—	Rear brake rod jaw joint pin	1	88, 99, 77	
17735	A2/195	MZ65	Rear brake rod jaw joint split pin	1	88, 99, 77	
15821	H12/505	MZ75	Rear brake rod adjuster	1	88, 99, 77	
FOOTRESTS AND FITTINGS						
18772	D12/513RH	MZ52	Footrest hanger right-hand	1	88, 99, 77	
18149	A2/513LH	MZ16	Footrest hanger left-hand	1	88, 99, 77	
19984	—	—	Footrest hanger spindle	2	88, 99, 77	
19983	—	MZ24	Footrest rubber	2	88, 99, 77	
15641	—	—	Distance piece	1	88, 99	
E5377	—	MZ40	Footrest rod washer	2	88, 99, 77	
E3238	—	MZ51	Footrest rod plain nut	1	88, 99, 77	
E3220	—	MZ39	Footrest rod domed nut	1	88, 99, 77	
14366	D12/510	MZ38	Footrest rod	1	88, 99	
18268	H12-2/1078	MZ50	Footrest tube serrated end, right-hand	1	88, 99	
15640	H12-2/1077	MZ49	Footrest tube serrated end, left-hand	1	88, 99	
PILLION FOOTRESTS						
H12/584	—	—	Pillion footrest complete (per pair)	1	88, 99, 77	
18254	H12/1086	MZ54	Pillion footrest bar	1	88, 99, 77	
16244	H12/1087	MZ57	Pillion footrest lug	1	88, 99, 77	
16841	—	—	Pillion footrest and silencer fixing studs	2	77	
16842	—	—	Pillion footrest and silencer fixing stud, L.H.	1	88, 99	
16246	—	—	Pillion footrest and silencer fixing stud, R.H.	1	88, 99	
16248	—	MZ55	Pillion footrest bar pins	2	88, 99, 77	
16250	—	—	Pillion footrest bar pin spring washers	2	88, 99, 77	
E5376	—	MZ59	Pillion footrest lug fixing washers	2	88, 99, 77	
E3224	—	MZ60	Pillion footrest lug fixing nuts	2	88, 99, 77	
16249	M12/583	MZ53	Pillion footrest rubbers	2	88, 99, 77	
16247	—	—	Pillion footrest bar pin lock nuts... ..	2	88, 99, 77	
ENGINE PLATES						
16816A	—	—	Rear engine plate R.H. with footrest tube	1	77	
14854A	—	—	Rear engine plate L.H. with footrest tube	1	77	
50229	L12-2/517	MZ22	Rear engine plate R.H.	1	88, 99	
19177	L12-2/516	MZ24	Rear engine plate L.H.	1	88, 99	
19100	—	—	Rear engine plate cover	1	88, 99	
15621	H12-2/522	MZ6	Front engine plates	2	88, 99	
14341	D12/522	—	Front engine plates	2	77	
19255	H12-2/491	—	Centre stand spring anchor stud	1	88, 99	
E5456	—	—	Centre stand spring anchor stud washer	1	88, 99	
E3223	—	—	Centre stand spring anchor stud nut	1	88, 99	
E6354	—	—	Rear engine plate bolt R.H.	1	88, 99	
E5456	—	—	Rear engine plate bolt washer R.H.	1	88, 99	
E3223	—	—	Rear engine plate bolt nut R.H.	1	88, 99	

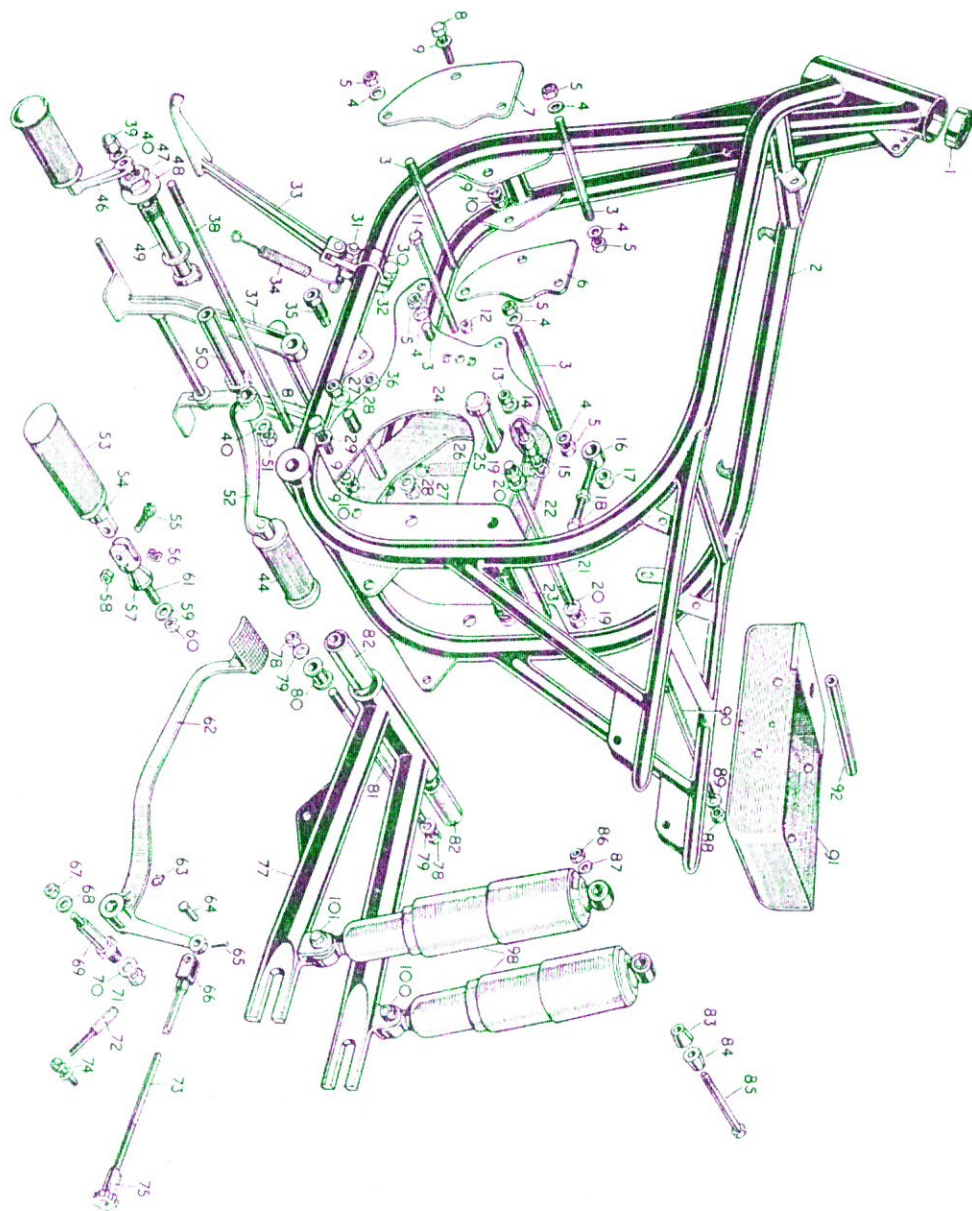


PLATE MZ

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
-------------	-------------------	--------------	-------------	------	-------	---------------

£ s. d.

ENGINE SPROCKETS

T2180D	D12 473/20T	TA129	Engine sprocket 20T	1	88	
T2180E	D12 473/21T	—	Engine sprocket 21T	1	99, 77	
E3682	A2/474	—	Engine sprocket key	1	88, 99, 77	
E4210	—	TA130	Engine sprocket nut	1	88, 99, 77	

FRONT AND REAR CHAINS

18265	—	—	Front chain 75L	1	88	nett
17835	—	—	Front chain 76L	1	99	nett
17730	—	—	Front chain 77L	1	77	nett
17729	—	—	Rear chain 90L	1	77	nett
18095	—	—	Rear chain 98L	1	88	nett
18563	—	—	Rear chain 97L	1	99	nett
A2 480	—	—	Front chain crank link	1	88, 99, 77	nett
A2 479	—	—	Front chain spring link	1	88, 99, 77	nett
A2 481	—	—	Rear chain spring link	1	88, 99, 77	nett
A2 482	—	—	Rear chain crank link	1	88, 99, 77	nett

REAR CHAIN ADJUSTERS

19264	—	—	Fork end rear wheel adjuster	2	88, 99, 77	
E3229	—	—	Fork end rear wheel adjuster lock nuts...	2	88, 99, 77	

FRAME

20060	—	MZ2	Frame complete	1	88, 99	
20237	—	—	Frame complete	1	77	
17727	A2/500	—	Frame head lug grease nipple	1	77	
E3744	—	—	Frame head race bearings	2	77	
18263	125AC	—	Frame head lug bearings (top and bottom)	2	88, 99	nett
15631	—	—	Frame head lug bearing felt washers ...	2	88, 99	
17429	—	—	Frame head lug bearing washers	2	88, 99	
16825	H12/1091	—	Frame bridge piece assembly	1	77	
17075	—	—	Frame bridge piece fixing screws	2	77	
15893	—	MZ21	Rod for rear engine cross tube	1	88, 99	
E5377	—	MZ20	Rear engine cross tube rod washers ...	2	88, 99	
13459	—	MZ19	Rear engine cross tube rod nuts	2	88, 99	
15844	H12-2/1091	MZ23	Rear mudguard and engine plate support tube	1	88, 99	
19351	—	—	Fork lock stop bolt	2	77	
16247	—	—	Fork lock stop bolt nut	1	77	

SWINGING ARM AND FITTINGS

L12-2/1088	—	MZ72	Swinging arm with bushes and bolt ...	1	88, 99	
M15/1088	—	—	Swinging arm with bushes and bolt ...	1	77	
20083	—	MZ82	Swinging arm silent bloc bearing	2	88, 99, 77	
20126	—	—	Gusset plate cover	1	88, 99	
15894	—	MZ81	Swinging arm rod	1	88, 99	
16809	—	—	Swinging arm rod	1	77	
11809	—	MZ79	Swinging arm rod washer	2	88, 99	
11809	—	—	Swinging arm rod washer	1	77	
16840	—	—	Swinging arm rod nut	1	77	
15356	—	MZ78	Swinging arm rod nut	2	88, 99	
18578	H12-2/1090	—	Silent bloc bearing spacer tube	1	88, 99	
16790	H12/1090	—	Silent bloc bearing spacer tube	1	77	

REAR SUSPENSION

20184	—	MZ98	Rear shock absorber units	2	88, 99, 77	nett
18704	—	MZ101	Rear shock absorber bolts	2	88, 99, 77	
11796	—	—	Rear shock absorber bolt washers ...	4	88, 99, 77	
E3223	—	MZ100	Rear shock absorber bolt nuts	2	77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
REAR SUSPENSION—cont.						£ s d.
19421	—	—	Rear shock absorber and mudguard fixing bolts	2	77	
19504	—	MZ85	Rear shock absorber and mudguard fixing bolts	2	88, 99	
18537	—	MZ84	Rear shock absorber and mudguard fixing distance piece	2	88, 99	
19420	—	—	Rear shock absorber and mudguard fixing distance piece	2	77	
E5456	—	MZ87	Rear shock absorber and mudguard fixing bolt washers	2	88, 99, 77	
E3223	—	MZ86	Rear shock absorber and mudguard fixing bolt nuts... ..	2	88, 99, 77	
CENTRE STAND AND FITTINGS						
17175	H12-2/524	MZ37	Centre stand complete	1	88, 99	
16813	H12/524	—	Centre stand complete	1	77	
11466	—	—	Centre stand bolts	2	77	
16763	—	MZ35	Centre stand bolts	2	88, 99	
16764	—	MZ36	Centre stand bolt nuts	2	88, 99	
16411	H12-2/527	MZ26	Centre stand spring	1	88, 99	
16937	H2/527	—	Centre stand spring	1	77	
14392	H12/1082	—	Centre stand spring slip	1	88, 99, 77	
E3135	—	—	Centre stand spring clip bolt	1	88, 99, 77	
E3223	—	—	Centre stand spring clip bolt nut	1	88, 99, 77	
E5456	—	—	Centre stand spring clip bolt washer	2	88, 99, 77	
17591	—	—	Centre stand rubber stop	1	88, 99	
E5278	—	—	Centre stand rubber stop pin	1	88, 99	
SIDE PROP STAND AND FITTINGS						
18750	H12-2/1014	MZ23	Side prop stand	1	88, 99	
14791	H12/1014	—	Side prop stand	1	77	
18275	—	MZ30	Side prop stand clip lug front	1	88, 99	
18605	—	MZ32	Side prop stand clip lug rear	1	88, 99	
16373	—	MZ31	Side prop stand clip lug and spring fixing stud	1	88, 99	
16374	—	—	Side prop stand clip lug fixing stud	1	88, 99	
16174	—	—	Side prop stand leg fulcrum pin... ..	1	88, 99	
16176	H12-2/1015	MZ34	Side prop stand spring	1	88, 99	
11824	—	—	Side prop stand clip lug and spring fixing stud nut	1	88, 99	
E3224	—	—	Side prop stand clip lug stud nut	1	88, 99	
14783	E2/1015	—	Side prop stand spring	1	77	
E6706	—	—	Side prop stand head bolt	1	77	
12079	—	—	Side prop stand head bolt lock nut	1	77	
50071	—	—	Side prop stand fixing plate	1	77	
FRONT MUDGUARD STAYS AND FITTINGS						
19286	L4/529	—	Front mudguard complete with number plate stanchions and brake cable guide	1	77	
19362	L12-2/529	—	Front mudguard complete with number plate stanchions and brake cable guide	1	88, 99	
19291	L12/530	—	Front mudguard stays	4	88, 99	
19287	L4/530	—	Front mudguard stays	2	77	
19285	L4/544	—	Front stand	1	77	
E3262	—	—	Front stand fixing stud	1	77	
E3223	—	—	Front stand fixing stud nut	1	77	
E5456	—	—	Front stand fixing stud washer	2	77	
E3218	—	—	Front stand nut	1	77	
19283	L4/680	—	Front mudguard centre stay	1	77	
19282	L12-2/680	—	Front mudguard centre stay	1	88, 99	
18710	—	—	Front mudguard stay bolts	4	88, 99	
18710	—	—	Front mudguard stay bolts	2	77	
18711	—	—	Front mudguard stay bolt washers	2	77	
18711	—	—	Front mudguard stay bolt washers	4	88, 99	
E5379	—	—	Front mudguard stay bolt washers	4	88, 99	
E5379	—	—	Front mudguard stay bolt washers	2	77	
13192	—	—	Front mudguard stay bolt packing washer	2	77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
FRONT MUDGUARD, STAYS AND FITTINGS—cont.						£ s. d.
13192	—	—	Front mudguard stay bolt packing washer	4	88, 99	
E3229	—	—	Front mudguard stay bolt nuts	4	66, 99	
E3229	—	—	Front mudguard stay bolt nuts	2	77	
18854	—	—	Front mudguard stay bolts (fork end)	2	77	
18854	—	—	Front mudguard stay bolts (fork end)	4	88, 99	
11940	—	—	Front stand bolt	2	77	
11796	—	—	Front stand bolt washers	4	88, 99, 77	
18709	—	—	Front mudguard centre stay bolts	2	88, 99, 77	
18711	—	—	Front mudguard centre stay bolt washer	2	88, 99, 77	
E5379	—	—	Front mudguard centre stay bolt washer	2	88, 99, 77	
11796	—	—	Front mudguard centre stay bolt washer	2	88, 99, 77	
E3229	—	—	Front mudguard centre stay bolt nuts	4	88, 99, 77	
T1085	—	—	Front mudguard centre stay studs (fork end)	4	88, 99, 77	
E5379	—	—	Front mudguard centre stay stud washers	4	88, 99, 77	
E3229	—	—	Front mudguard centre stay stud nuts	4	88, 99, 77	
REAR MUDGUARD AND FITTINGS						
19363	—	—	Rear mudguard complete	1	77	
20159	L12-2 534	—	Rear mudguard complete	1	88, 99	
19361R	—	—	Rear mudguard tail portion	1	77, 88, 99	
20159F	—	—	Rear mudguard front portion	1	88, 99	
19363F	—	—	Rear mudguard front portion	1	77	
19486	L12-2 536L	—	Rear mudguard lifting handle L.H.	1	88, 99	
19484	L4 536LH	—	Rear mudguard lifting handle L.H.	1	77	
19485	L4 536RH	—	Rear mudguard lifting handle R.H.	1	77	
19487	L12-2 536R	—	Rear mudguard lifting handle R.H.	1	88, 99	
19432	—	—	Lifting handle and rear portion fixing bolts	3	88, 99, 77	
19433	—	—	Lifting handle and rear portion fixing bolt washers	3	88, 99, 77	
19434	—	—	Lifting handle to mudguard fixing bolts	2	88, 99, 77	
19435	—	—	Lifting handle to mudguard fixing bolt washers	2	88, 99, 77	
E3229	—	—	Lifting handle to mudguard fixing bolt nuts	2	88, 99, 77	
12342	—	—	Mudguard bottom fixing bolts	2	88, 99, 77	
E3229	—	—	Mudguard bottom fixing bolt nuts	2	88, 99, 77	
E5379	—	—	Mudguard bottom fixing bolt nut washers	2	88, 99, 77	
19429	—	—	Rubber grommets for mudguard	2	88, 99, 77	
14490	—	—	Clip for tail and stop light lead	1	88, 99, 77	
NUMBER PLATES						
18706	K12 531	—	Front number plate	1	88, 99, 77	
18755	—	—	Front number plate rubber	1	88, 99, 77	
18708	—	—	Front number plate stanchion	2	88, 99, 77	
E3229	—	—	Front number plate stanchion nuts	2	88, 99, 77	
E5379	—	—	Front number plate stanchion washers	2	88, 99, 77	
18712	—	—	Front number plate fixing screws	2	88, 99, 77	
13053	—	—	Rear number plate fixing studs	2	88, 99, 77	
11796	—	—	Rear number plate fixing stud washers	2	88, 99, 77	
E3231	—	—	Rear number plate fixing stud nuts	2	88, 99, 77	
19343	L4 532	—	Rear number plate with cuff	1	88, 99, 77	
20965	—	—	Rear number plate plastic bead	1	88, 99, 77	
TAIL AND STOP LIGHT						
53432B	—	—	Tail lamp and stop light with reflector	1	88, 99, 77	nett
573839	—	—	Stop and tail lamp lens	1	88, 99, 77	nett
575200	—	—	Stop and tail lamp window	1	88, 99, 77	nett
575219	—	—	Lens fixing nuts	2	88, 99, 77	nett
166014	—	—	Stop and tail lamp fixing nuts	2	88, 99, 77	nett

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
TAIL AND STOP LIGHT—cont.						£ s. d.
188327	—	—	Stop and tail lamp fixing nut washers ...	2	88, 99, 77	
20165	—	—	Stop lamp switch ...	1	88, 99	nett
17749	—	—	Stop lamp switch ...	1	77	nett
17008	—	—	Stop lamp switch bracket ...	1	77	nett
20129	—	—	Stop lamp switch bracket ...	1	88, 99	
E5278	—	—	Stop lamp switch fixing pins ...	2	88, 99, 77	
17904	—	—	Stop lamp switch fixing washers ...	2	88, 99, 77	
E3221	—	—	Stop lamp switch fixing nuts ...	2	88, 99, 77	
17005	—	—	Stop lamp switch spring ...	1	77	
19580	—	—	Stop lamp brake switch lead ...	1	77	nett
20248	—	—	Stop lamp brake switch lead ...	1	88, 99	nett
19582	—	—	Tail lamp extension lead ...	1	88, 99, 77	nett

HEADLAMP AND FITTINGS (all prices RETAIL NETT)

51954A	—	—	Head lamp complete ...	1	88, 99	
51876B	—	—	Head lamp complete ...	1	77	
36084F	—	—	Ammeter ...	1	88, 99, 77	
31626A	—	—	Switch ...	1	88, 99	
31340A	—	—	Switch ...	1	77	
351788	—	—	Switch handle ...	1	88, 99	
351567	—	—	Switch handle ...	1	77	
105751	—	—	Switch handle screw ...	1	88, 99	
101893	—	—	Switch handle screw ...	1	77	
516798	—	—	Light unit ...	1	88, 99, 77	
553248	—	—	Headlamp rim ...	1	88, 99, 77	
31563A	—	—	Dipper and horn switch ...	1	88, 99, 77	
18733	—	—	Dipper switch rubber ...	1	88, 99, 77	
18734	—	—	Dipper switch fixing screws ...	2	88, 99, 77	
112201	—	—	Headlamp fixing bolts ...	2	88, 99, 77	
137141	—	—	Headlamp fixing bolt washers ...	2	88, 99, 77	
517079	—	—	Headlamp panel ...	1	77	
106491	—	—	Headlamp panel fixing screws ...	3	77	
185026	—	—	Headlamp panel screw washers (3 in set)	1 set	77 per set	

BATTERY (price RETAIL NETT)

4084107	—	—	Battery ...	1	88, 99, 77	
---------	---	---	-------------	---	------------	--

TOOL BOX, TOOL TRAY AND FITTINGS

19281	L4 538	—	Tool box and battery box complete ...	1	77	
19190	L12-2/586	—	Battery box body complete ...	1	88, 99	
19189	—	—	Tool box and battery box lid ...	1	88, 99	
19241	—	—	Tool box and battery box lid ...	1	77	
20069A	—	—	Tool tray complete ...	1	88, 99	
19195	—	—	Tool box and battery box lid knob ...	2	88, 99	
19290	L4 539	—	Tool box and battery box lid knob ...	1	77	
E4764	—	—	Tool box and battery box lid knob circlip	1	77	
11796	—	—	Tool box and battery box lid knob washers ...	2	88, 99	
17735	—	—	Tool box and battery box lid knob split pin ...	2	88, 99	
19289	—	—	Battery box support bracket ...	1	77	
19086	—	—	Platform for battery ...	1	88, 99	
19093	—	—	Battery fixing U bolt ...	1	88, 99	
19249	—	—	Battery fixing U bolt ...	1	77	
19248	—	—	Battery fixing retaining strap ...	1	77	
19101	—	—	Battery fixing retaining strap ...	1	88, 99	
E3221	—	—	U bolt nuts ...	2	88, 99, 77	
17707	—	—	U bolt washers (spring) ...	2	88, 99, 77	
15689	—	—	Toolbox and battery box rubber grommets ...	2	88, 99, 77	
14481	—	—	Battery box top fixing bolt ...	1	88, 99	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
TOOL BOX, TOOL TRAY AND FITTINGS—cont.						£ s. d.
E5379	—	—	Battery box top fixing bolt washer ...	3	88, 99	
E3229	—	—	Battery box top fixing bolt nuts ...	1	88, 99	
13053	—	—	Tool box top fixing stud ...	1	77	
E5456	—	—	Tool box top fixing stud washer ...	1	77	
E3223	—	—	Tool box top fixing stud nut ...	1	77	
18709	—	—	Tool box and battery box fixing bolt ...	1	77	
18711	—	—	Tool box and battery box fixing bolt washers ...	1	77	
E5379	—	—	Tool box and battery box fixing bolt washers ...	2	77	
E3229	—	—	Tool box and battery box fixing bolt nut ...	1	77	
19092	—	—	Tool box and battery box fixing bolt ...	1	77	
19092	—	—	Tool box and battery box fixing bolt ...	2	88, 99	
E5456	—	—	Tool box and battery box fixing bolt washers ...	2	88, 99, 77	
12342	—	—	Tooltray fixing bolts ...	4	88, 99	
E5379	—	—	Tooltray fixing bolt washers ...	8	88, 99	
E3229	—	—	Tooltray fixing bolt nuts ...	4	88, 99	

VOLTAGE CONTROL AND FITTINGS

37127M	—	—	Voltage control unit ...	1	88, 99, 77	nett
19991	—	—	Voltage control unit waterproof cover...	1	77	
12342	—	—	Voltage control unit fixing bolts ...	2	88, 99, 77	
E5379	—	—	Voltage control unit fixing bolt washers ...	2	88, 99, 77	
E3229	—	—	Voltage control unit fixing bolt nuts ...	2	88, 99, 77	

DUAL SEAT AND FITTINGS

19445	L4 540	—	Dual seat complete ...	1	77	
20123	H12-2/540	—	Dual seat complete ...	1	88, 99	
16765	—	—	Seat fixing wing nuts ...	2	88, 99	
8052	—	—	Seat fixing wing nut washers ...	2	88, 99	
18538	—	—	Seat sorbo strip ...	2	88, 99	
15857	—	—	Seat fixing strap rubber grommets ...	2	88, 99	
13053	—	—	Seat front fixing studs ...	2	77	
E5456	—	—	Seat front fixing stud washers ...	2	77	
E3223	—	—	Seat front fixing stud nuts ...	2	77	
19488	—	—	Seat rubber ...	2	77	

ELECTRIC HORN AND FITTINGS

70140A	—	—	Electric horn ...	1	88, 99, 77	nett
E3229	—	—	Electric horn fixing bolt nuts ...	2	88, 99	
E5379	—	—	Electric horn fixing bolt nut washers ...	2	88, 99	
20155	—	—	Electric horn fixing plate tapped ...	1	77	

SPEEDOMETER AND FITTINGS (all prices RETAIL NETT)

19364	L4 545	—	Speedometer head (120 m.p.h.) ...	1	88, 99, 77	
19367	L4 552	—	Speedometer cable complete ...	1	88, 99, 77	
L4 554	—	—	Speedometer cable inner ...	1	88, 99, 77	
L4 553	—	—	Speedometer cable outer ...	1	88, 99, 77	
19366	L4 564	—	Speedometer gearbox ...	1	88, 99, 77	

TOOL KIT

M15/563	—	—	Tool kit complete ...	1	77	
D12/563	—	—	Tool kit complete with tools ...	1	88, 99	
SPU1/49	B2 684	—	Headlug bearing and filler cap spanner ...	1	88, 99	
SPU1/30	B2 682	—	Fork column lock nut spanner ...	1	77	
SPU2/22	—	—	Fork filler plug and head adjuster nut spanner ...	1	77	
DWU 01	A2 567	—	Screw driver ...	1	88, 99, 77	
SPU2 02	A2 565	—	$\frac{1}{4}$ " x $\frac{3}{16}$ " spanner ...	2	77	
SPU2 02	A2 565	—	$\frac{1}{4}$ " x $\frac{3}{16}$ " spanner ...	1	88, 99	
SHU 29	A3 579	—	Exhaust pipe spanner ...	1	88, 99, 77	

PART No.	SUPERSEDED No.	PLATE No.	DESCRIPTION	QTY.	MODEL	PRICE EACH
TOOL KIT cont.						£ s. d.
LTU 07	A2/573	—	Tyre levers...	2	88, 99, 77	
SBU2 88	—	—	Sparking splug spanner	1	88, 99, 77	
SBU2/76	—	—	$\frac{7}{16}$ " x $\frac{1}{2}$ " Box spanner	1	88, 99, 77	
TBU 01	A2/581	—	Tommy bar $\frac{5}{16}$ " x $6\frac{1}{2}$ "	1	88, 99, 77	
TBU 47	—	—	Tommy bar $\frac{7}{16}$ " x 8"	1	88, 99, 77	
SPU2 20	D12/568	—	Rocker adjuster spanner	1	88, 99, 77	
SPU2 04	A2/566	—	$\frac{5}{16}$ " x $\frac{3}{8}$ " open ended spanner	1	88, 99, 77	
SPU1 01	A2 578	—	Cable adjuster spanner	1	88, 99, 77	
19438	—	—	Allen key	1	88, 99, 77	
18672	—	—	Magneto spanner	1	88, 99, 77	
17756	—	—	Tyre inflator	1	77	
18240	—	—	Tyre inflator	1	88, 99	
18976	—	—	Shock absorber adjusting spanner	1	88, 99, 77	
20648	—	—	Box spanner for rear wheel nuts	1	88, 99, 77	
13685	B2 685	—	Fork pull through	1	88, 99, 77	
CABLE CLIPS						
19091	—	—	Cable clip (size C) (speedo cable to frame)	1	88, 99	
19091	—	—	Cable clip (size C) (speedo cable to frame)	4	77	
17752	—	—	Cable clip (size S) (stop lamp and tail lamp leads to frame)	12	88, 99	
19090	—	—	Cable clip (size F) (throttle, air and clutch cables to frame)	2	88, 99	
19090	—	—	Cable clip (size F) (throttle, air and clutch cables to frame)	2	77	
18489	—	—	Cable clip (size D) (throttle and air cables, handlebar end)	1	88, 99	
TRANSFERS						
17773	A2 868	—	Oil tank transfer (minium oil level)	1	88, 99, 77	
17731	A2 867	—	Oil bath transfer	1	88, 99, 77	
19958	—	—	Rear mudguard transfer	1	88	
19559	—	—	Rear mudguard transfer	1	99	
20293	—	—	Rear mudguard transfer	1	77	
17755	—	—	Petrol tank panel transfer	1	77	
AIR CLEANER AND FITTINGS						
19667	—	—	Air cleaner	1	88, 99,	
18684	K12-2 1058	—	Air cleaner	1	77	
19518	—	—	Air cleaner connecting hose	1	88, 99	
19729	—	—	Air cleaner fixing clips	1	88, 99	
18484	—	—	Air cleaner fixing clip	1	77	
E3229	—	—	Air cleaner pin nuts	2	88, 99	
E5379	—	—	Air cleaner pin nut washers	2	88, 99	
18483	—	—	Air cleaner carburetter sleeve	1	77	
LAPEL BADGES (this price RETAIL NETT)						
341	—	—	Lapel badge	1		
ENAMEL (this price RETAIL NETT)						
			Polychromatic Grey Touch-up Applicator	1		

All prices subject to 15% increase unless stated as Nett

Please note we reserve the right to alter the above prices or specification of any parts at any time without notice.

